





SOFT, DRY CLOTH

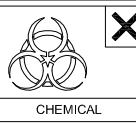

CHEMICAL

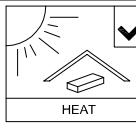

HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION

MODEL : TV 834132

DESCRIPTION : TV CABINET

HARDWARE

A



WOOD DOWEL  
8 X 25  
1X24

B



CB SCREW  
M3.5X16MM  
1X58

C



NAIL 5/8  
1X30

D



L KEY  
1X1

E



MINIFIX  
5654+5546  
18 SETS

F



M502  
L BRACKET  
1X1

G



HANDLE 5540  
-96MM  
1X4

H



HANDLE  
SCREW  
M4X19MM  
1X8

I



HINGES 2/8  
8 SETS

J




CSK CAP  
WOOD  
M6X50MM  
1X2

K




MIRROR  
BRACKET  
1X24


## PART LIST

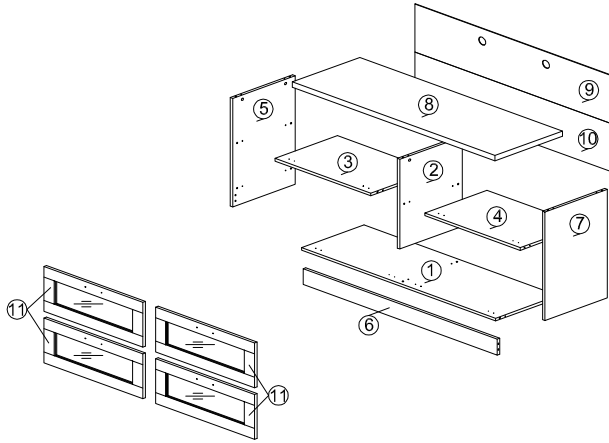


## STEP 1

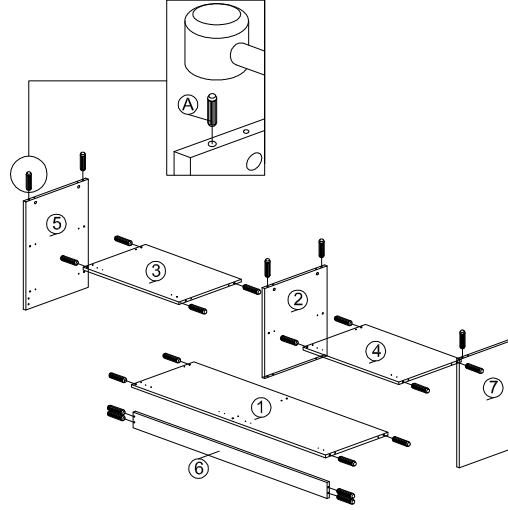


## STEP 2

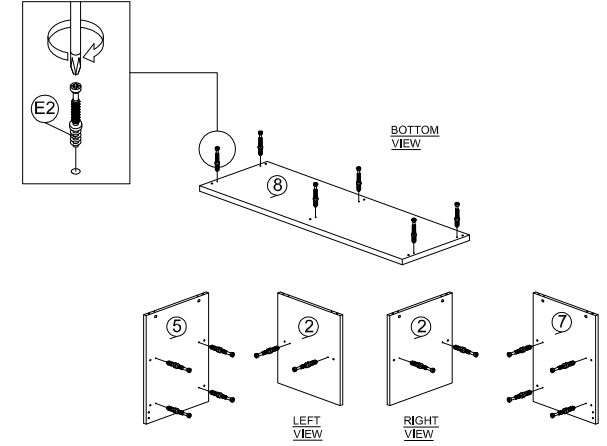


## STEP 3

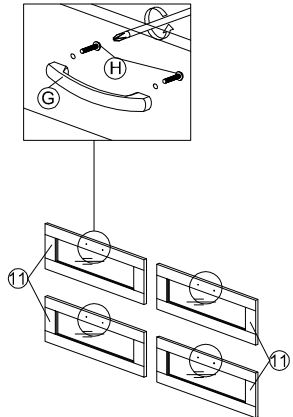


## STEP 4

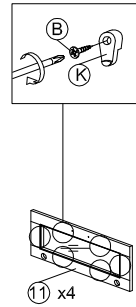


## STEP 5

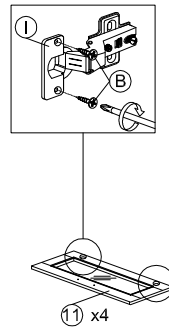

## STEP 6

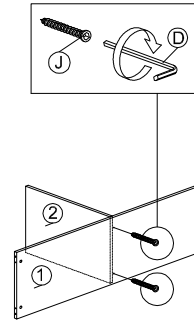


## STEP 7

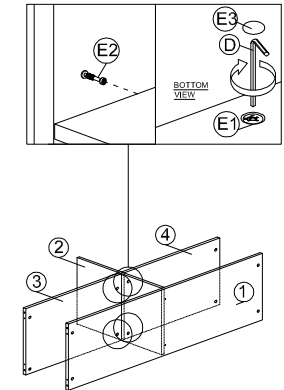




SOFT, DRY CLOTH

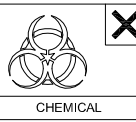

CHEMICAL

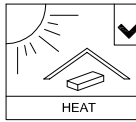

HEAT



KEEP DRY



HANDLE WITH CARE




DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION


MODEL : TV 834132

DESCRIPTION : TV CABINET


## STEP 8

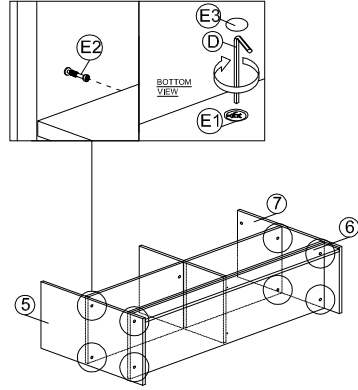


## STEP 9

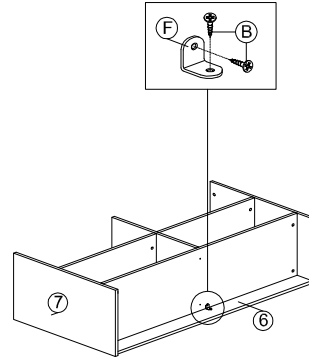


## STEP 10

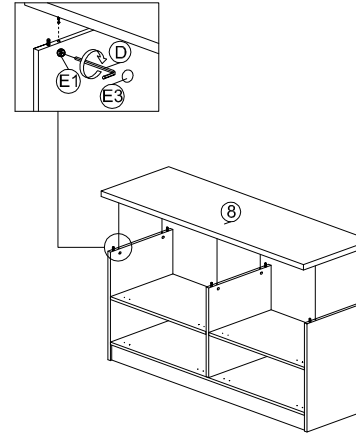

## STEP 11

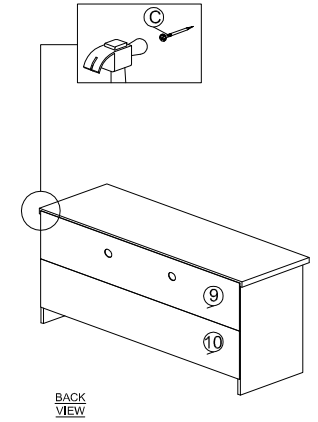

## STEP 12

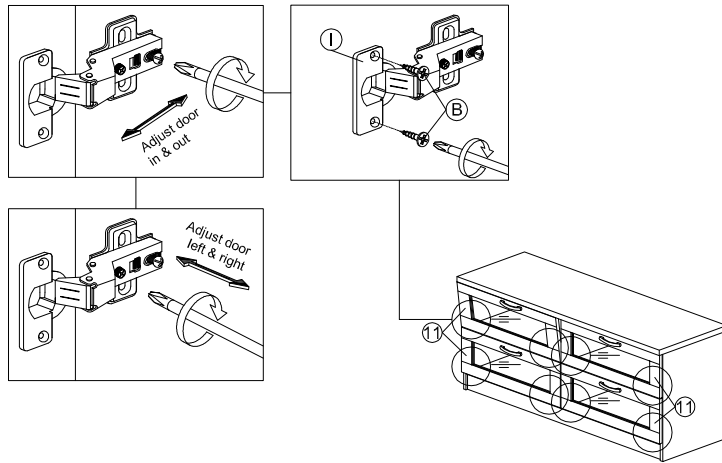

## COMPLETED

