

➣ MODEL: CF 8147 (5') 1 pc Step 1 :Tighten the wooden leg (D) to the headboard (A) and footboard (B). (\Box) ASSEMBLY INSTRUCTION Step 2: Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it. $(\triangleright$

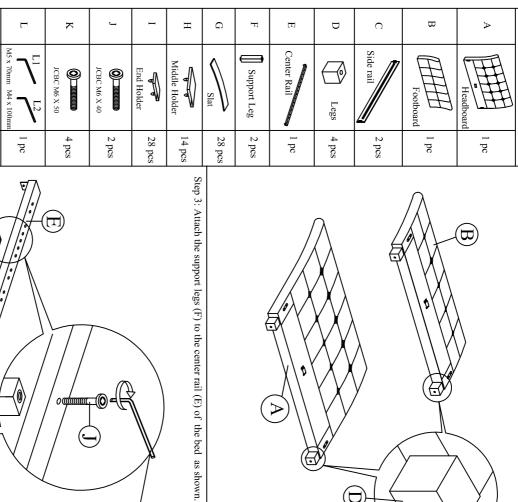

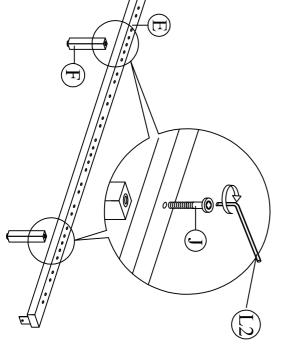

0

Stiffener Slat (3 Holes)

l pc


Z


CSK M4 x 32mm


3 pcs

 \leq

CSK M4 x 25mm

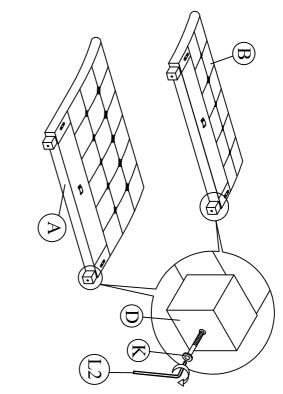

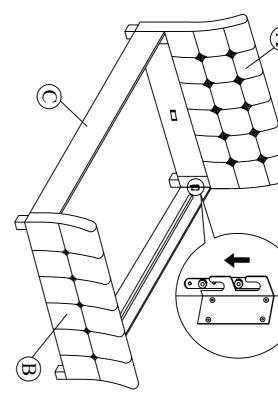

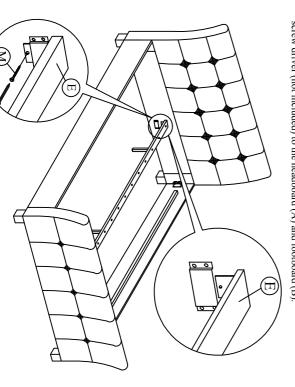

Step 4: Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (M) using screw driver (not included) to the headboard (A) and footboard (B).

Step 5: Affix the Stiffener Slat (O) to the side rail support wood and the center rail (E). Tighten all the 4 corner, follow by assembly of the slat holders with LVL slats as shown. (H)