ITEM NO: DINING TABLE


Read instruction carefully prior for assembly

Thank you for purchasing this product . Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment .

Remove all components from pack and place on soft surface to prevent scratch during assembly. Identify and count all parts as specified below It is recommended to use two people during the assembly process.

PAI	PARTS LIST:				
No.	Description	Description			
A	Table Top		1PC		
В	Leg		4PCS		
С	Leaf		1PC		

	HARDWARE LIST:				
No.	Description	Sketch	Size	Quantity	
H1	Lock Washer	ල	Ø 5/16"	8 Pcs	
H2	Flat Washer	0	Ø 5/16"	8 Pcs	
Н3	Hex Nut	@	Ø 5/16"	8 Pcs	
H4	Open Wrench	5/	10mm	1 Pc	

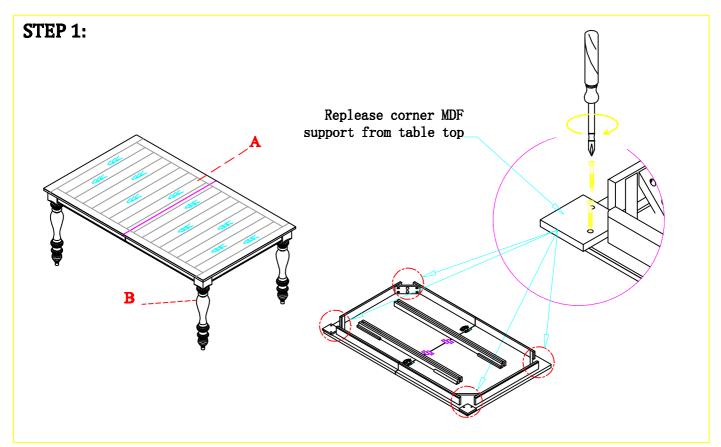


<u>STEP 1</u>: Turn Table top upside down and put on soft surface such as carpet or cloth and then take out wood protect on table top using by phillips screw driver (not included).

MADE IN VIETNAM

Page: 1/2


ITEM NO: DINING TABLE

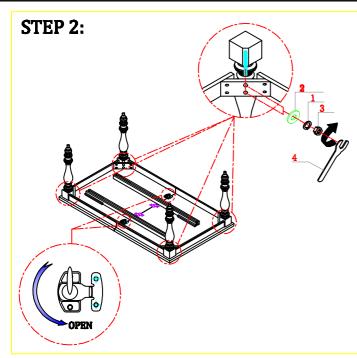



STEP 3:

Step 2: Attach Leg (B) to Table Top(A) using Flat Washer (2), Lock Washer (1), hex nut (3) by using open wrench (4) and Unlock the Table.

Step 3: Pull out Table Top each side .

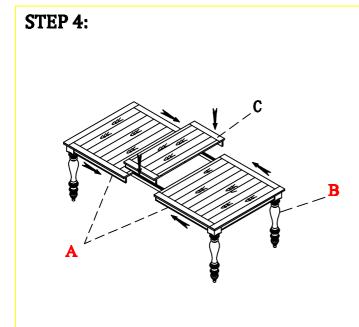



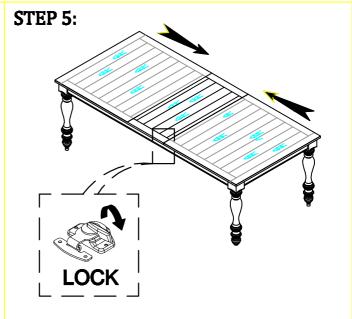

Step 5: Push two side tops that reach these leafs then lock them by using Sash lock.


ITEM NO: SIDE UPH CHAIR


Read instruction carefully prior to assembly.


Thank you for purchasing this quality product. Check carefully for small parts which may come loose during shipment. Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below.

HARDWARE LIST:						
No.	Description	Sketch	Size	Qty		
H1	Allen Bolt		Ø1/4 x 75mm	4 PCS		
H2	Allen Bolt		Ø1/4 x 38mm	2 PCS		
нз	Allen Bolt		Ø1/4 x 50mm	4 PCS		
Н4	Flat Washer		Ø5/16 x 18 mm	10 PCS		
Н5	Lock Washer	0	Ø5/16	10 PCS		
Н6	Allen Key		4 mm	1 PCS		

PART	PARTS LIST:				
No.	Description	Sketch	Quantity		
A	Chair Back		1 PC		
В	Seat cushion		1 PC		
С	Front Leg		2 PCS		

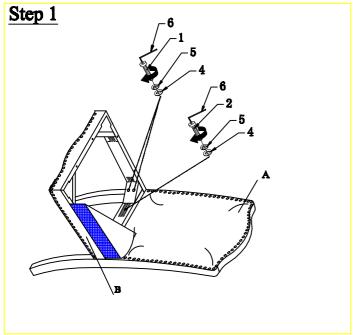

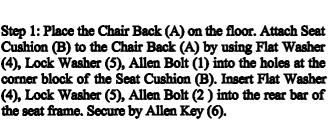

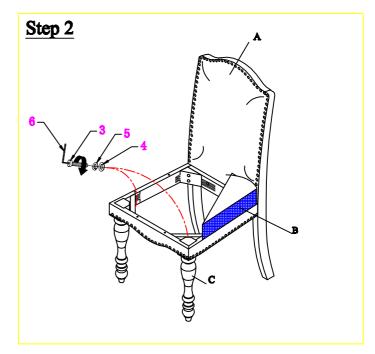

Step 2: Attach Front Leg (C) to the Seat Cushion (B) by inserting Flat Washer (4), Lock Washer (5), Allen Bolt (3) and secure with Allen Key (6) Assembly product is now completed.

MADE IN VIETNAM Page: 1/1

ITEM NO: SQUARE COUNTER PUB TABLE


Read instruction carefully prior for assembly

Thank you for purchasing this product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Remove all components from pack and place on soft surface to prevent scratch during assembly. Identify and count all parts as specified below It is recommended to use two people during the assembly process.

PAI	PARTS LIST:				
No.	Description	on.	Quantity		
A	Table Top		1PC		
В	Shelf panel	\Diamond	2PCS		
C	Leg	Gentle Constitution of the	4PCS		


]	HARDWARE LIST:				
No.	Description	Sketch	Size	Quantity	
H1	Lock Washer	ඔ	Ø5/16"	16 Pcs	
H2	Flat Washer	0	Ø5/16"	16 Pcs	
Н3	Hex Nut	6	Ø 5/16"	8 Pcs	
H4	Allen Bolt	(i)	Ø5/16 x 50mm	8 Pcs	
H5	Allen Key		4 mm	1 Pc	
Н6	Open Wrench	5/	10mm	1 Pc	

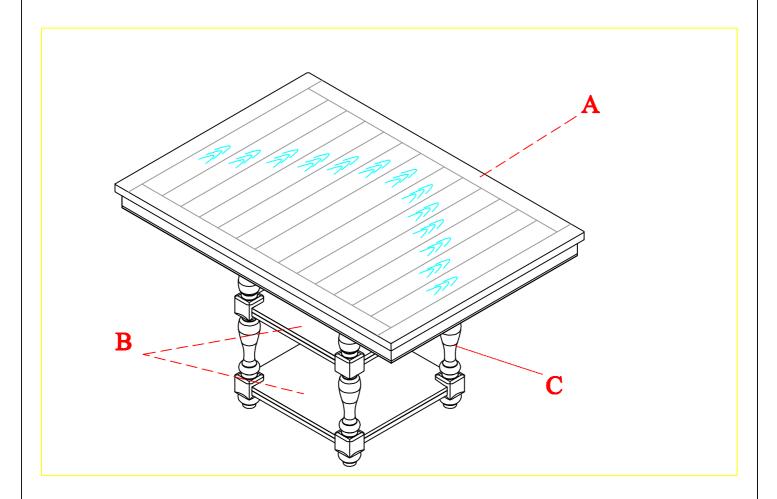

MADE IN VIETNAM

Page: 1/2

ITEM NO: SQUARE COUNTER PUB TABLE

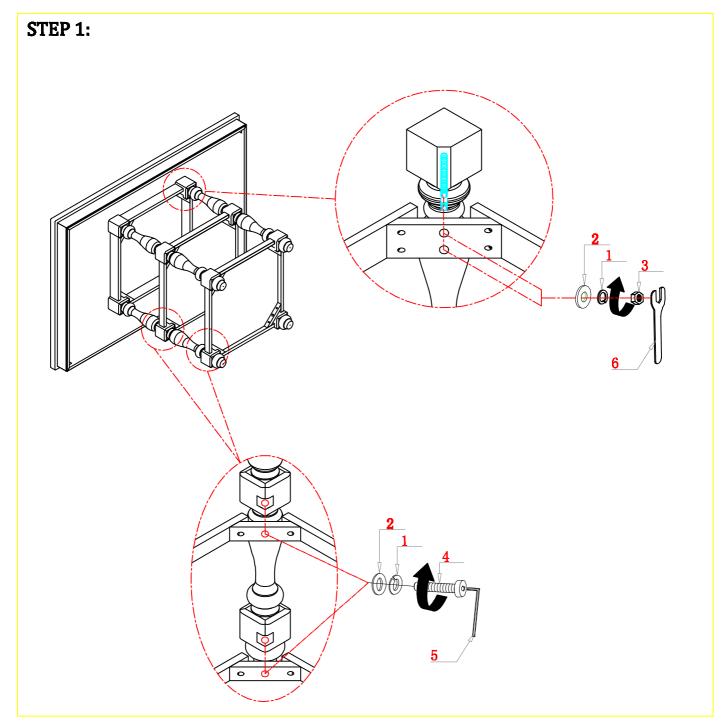

Step 1: Attach Leg (C) to Stretcher panel (B) and Table Top (A) using Flat Washer (2), Lock Washer (1), Allen Bolt (4) by Allen Key (5) For Stretcher panel (B) and hex nut (3) by open wrench (6) For Table Top.

MADE IN VIETNAM

Page: 2/2

ITEM NO: UPH COUNTER CHAIR


Read instruction carefully prior to assembly.

Thank you for purchasing this quality product. Check carefully for small parts which may come loose during shipment.Remove all components from pack and place top down on soft surface such as carpet or cloth to prevent scratching the finish. Identify and count all parts as specified below.

It is recommended to use one person during the assembly process.


TOOLS REQUIRED (NOT INCLUDED)				
Description	Sketch			
Screw Driver				

HAI	HARDWARE LIST:					
No.	Description	Sketch	Size	Qty		
H1	Allen Bolt		Ø1/4 x 75mm	4 PCS		
H2	Allen Bolt		Ø1/4 x 38mm	2 PCS		
Н3	Allen Bolt		Ø1/4 x 50mm	4 PCS		
H4	Flat Washer	0	Ø5/16 x 18 mm	10 PCS		
H5	Lock Washer	0	Ø5/16	10 PCS		
Н6	Pan Head Screw	#mmmmm#	Ø8 X 38 mm	6 PCS		
Н7	Allen Key		4 mm	1 PC		

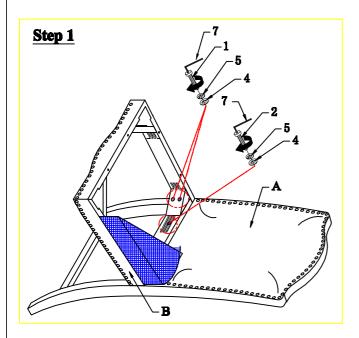

Step 1: Place the Chair Back (A) on the floor, Attach Seat Cushion (B) to the Chair Back (A) by using Flat Washer (4), Lock Washer (5), Allen Bolt (1) into the holes at the corner block of the Seat Cushion (B). Insert Flat Washer (4), Lock Washer (5), Allen Bolt (2) into the rear bar of the seat frame. Secure by Allen Key (7).

	PARTS INDENTIFICATION				
No.	Description	Sketch	Quantity		
A	Chair Back		1 PC		
В	Seat Cushion		1 PC		
С	Front Leg		2 PCS		
D	Side Stretcher	40 0)	2 PCS		
E	Front Stretcher		1 PC		

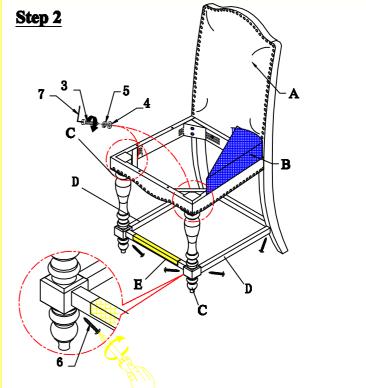

Step 2: Attach the front legs to seat Cushion using flat washer (4), lock washer (5) and Allen Bolt (3) by using Allen Key (7). Attach the front, left side, right side of Stretcher to Right, left of Front Leg and Chair back by securing the Pan Head Screw (6) with Phillips screw drivers (not included).

MADE IN VIETNAM Page: 1/1

ITEM NO: SERVER

Read instruction carefully prior for assembly


Thank you for purchasing this product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Remove all components from pack and place on soft surface to prevent scratch during assembly. Identify and count all parts as specified below

It is recommended to use two people during the assembly process.

PARTS LIST:						
No.	Description	Description				
A	Server		1 PC			
В	Front Bunfeet		2 PCS			
С	Back Bunfeet		2 PCS			


	TOOLS REQUIRED (NOT INCLUDED)				
	Description	Sketch			
	Screw Driver				
HA	ARDWARE LIST	Ť			
No.	Description	Sketch O'ty			
н	Tipping Restraint		0	1 SET	

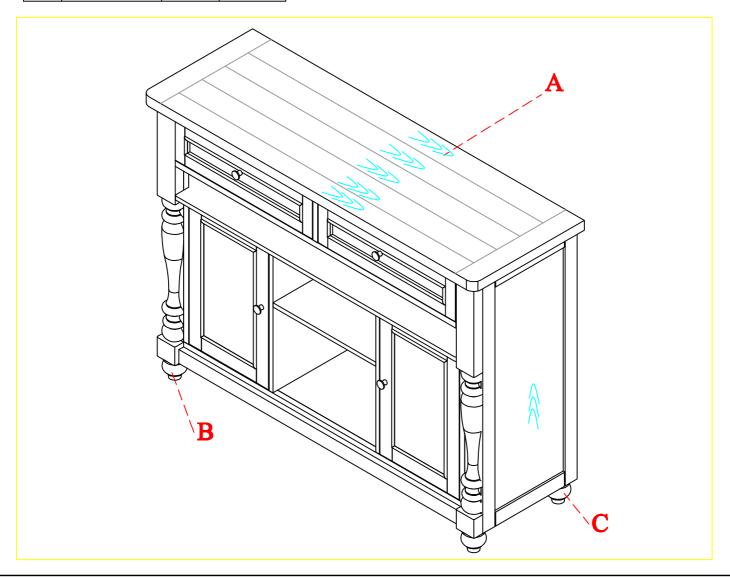


MADE IN VIETNAM

Page: 1/2

ITEM NO: SERVER

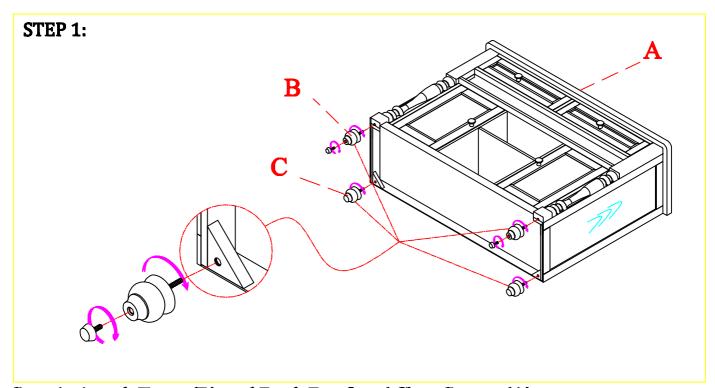

Step 1: Attach Front (B) and Back Bunfeet (C) to Server (A)

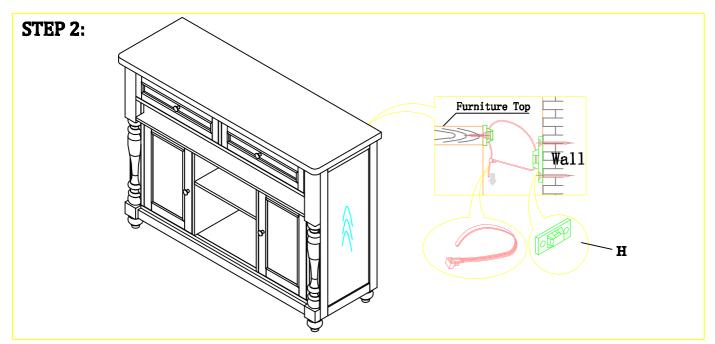

Step 2: Attach tipping restraint to Wall.

The tipping restraint must be attached at back of Server above and on the right.

MADE IN VIETNAM

Page: 2/2