



Assembly Instruction

Model : WI5052

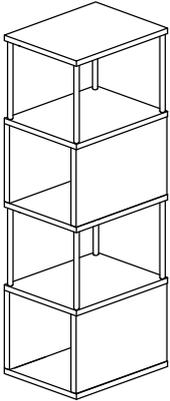


Hardware List			
No.	SHAPE	DESCRIPTION	Qty.
1		8x25mm Wood Dowel	16Pcs
2		15MM Titus Minifix	16Sets
3		15mm Minifix Cap	16Pcs
4		Ø16 x 336mm Steel	4Pcs
5		Ø16 x 302mm Steel	4Pcs
6		JCBC - Screw M6x40mm	8Pcs
7		L Key	1Pc

Dowel / Cam - Lock Installation

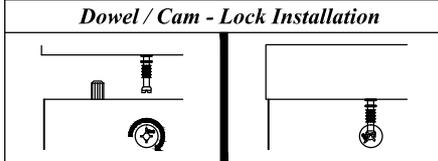


Part List

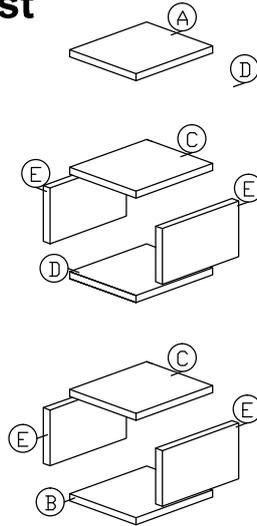


Step 1

*Install 16pcs Wood Dowel into all panels as shown.

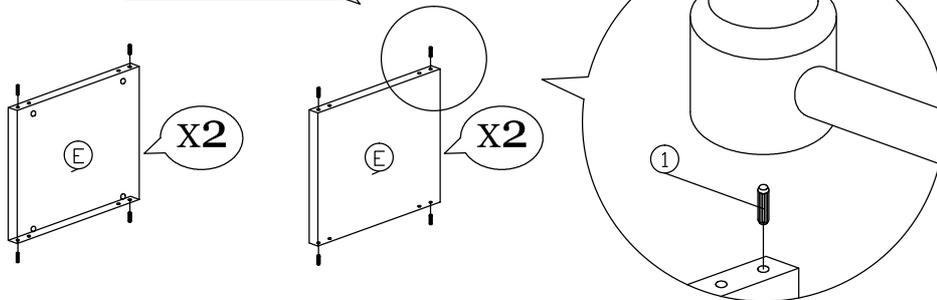


Step 2

*Install 16pcs minifix bolt to both to all panels as shown.

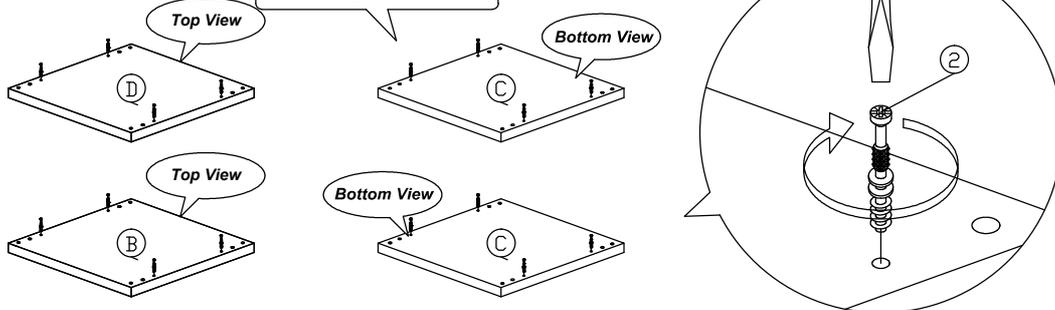


Step 3

*Install pipe as shown.

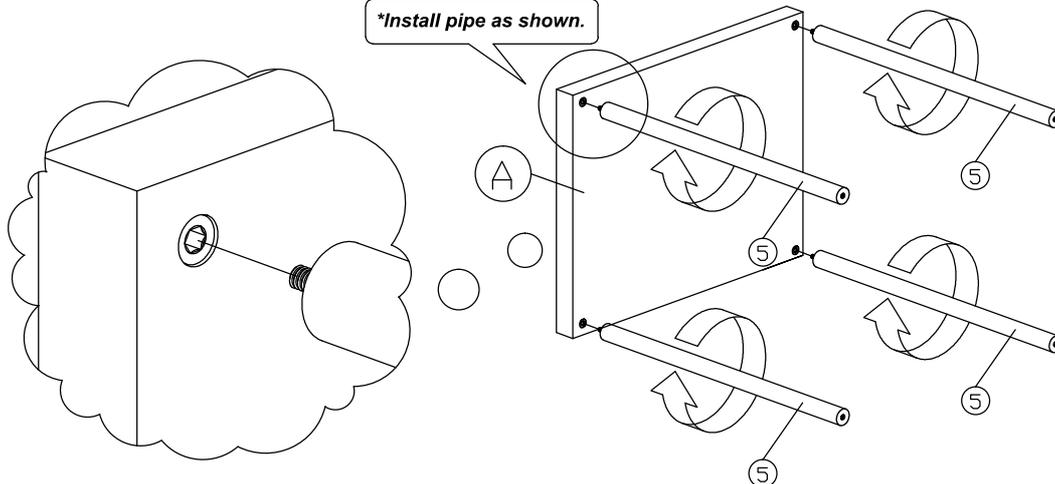


Assembly Instruction


Step 4

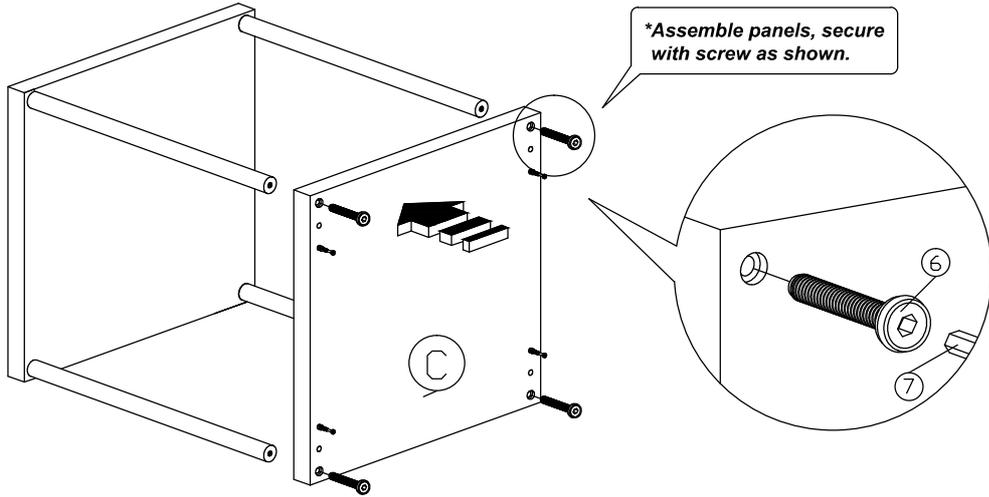

Step 5

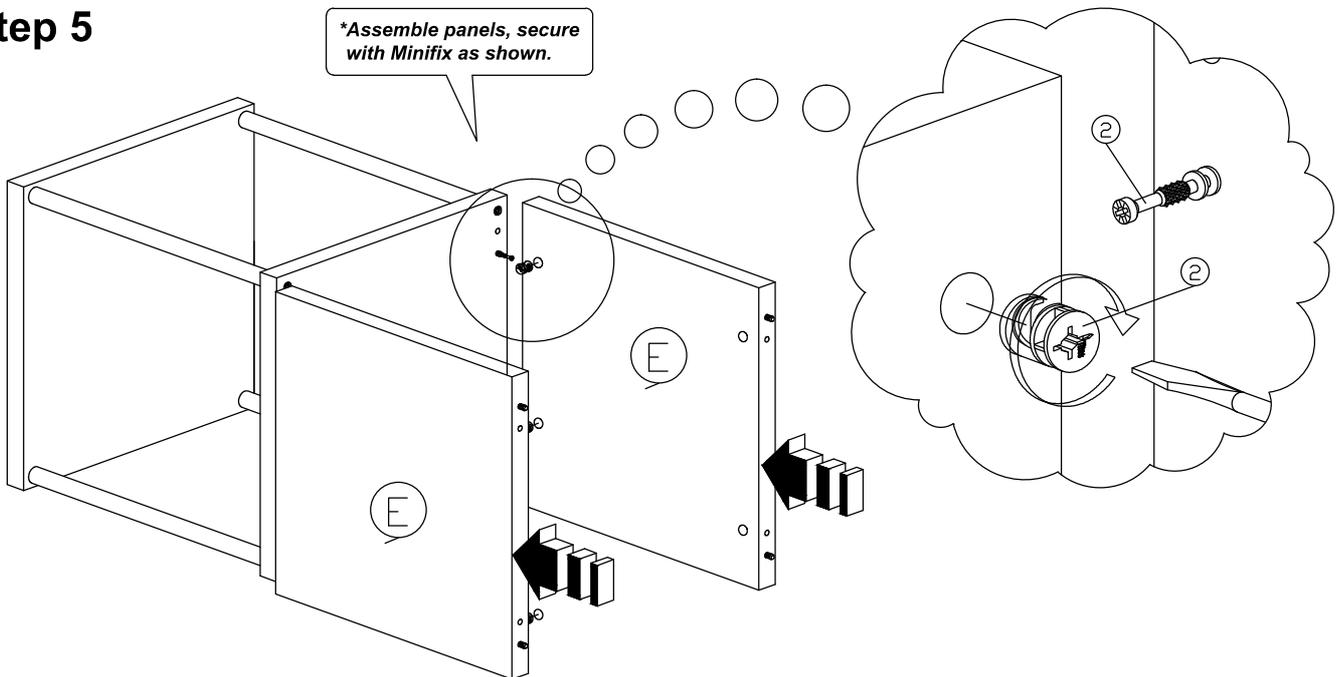


Step 6

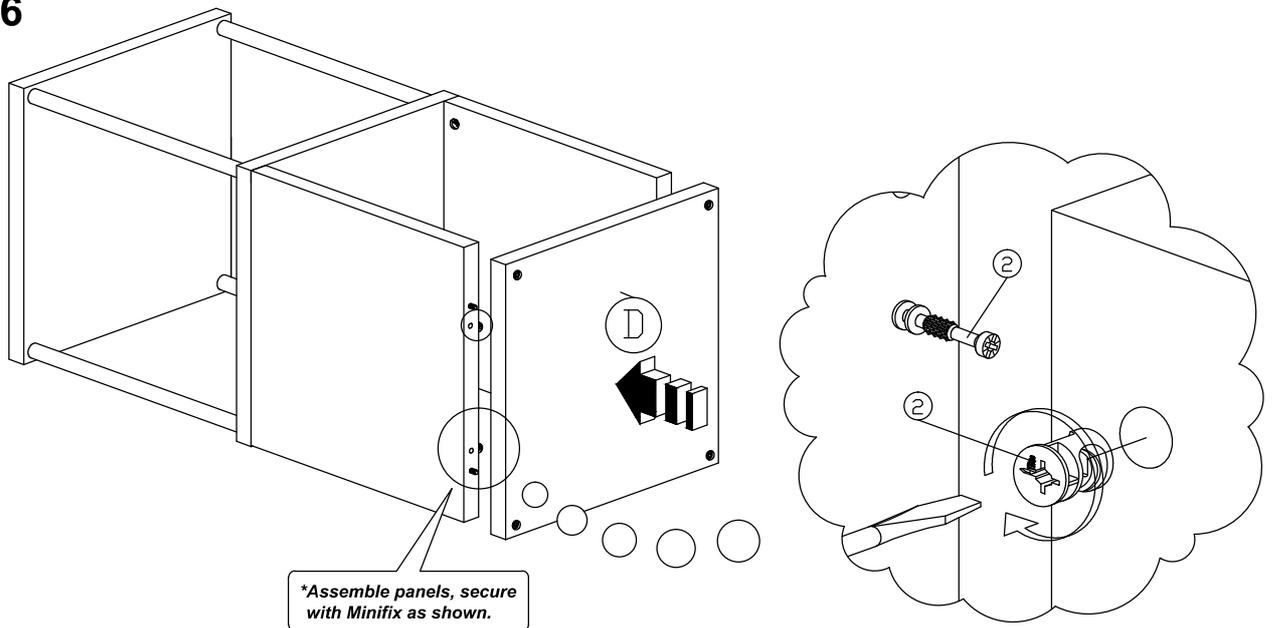


Assembly Instruction

Step 7

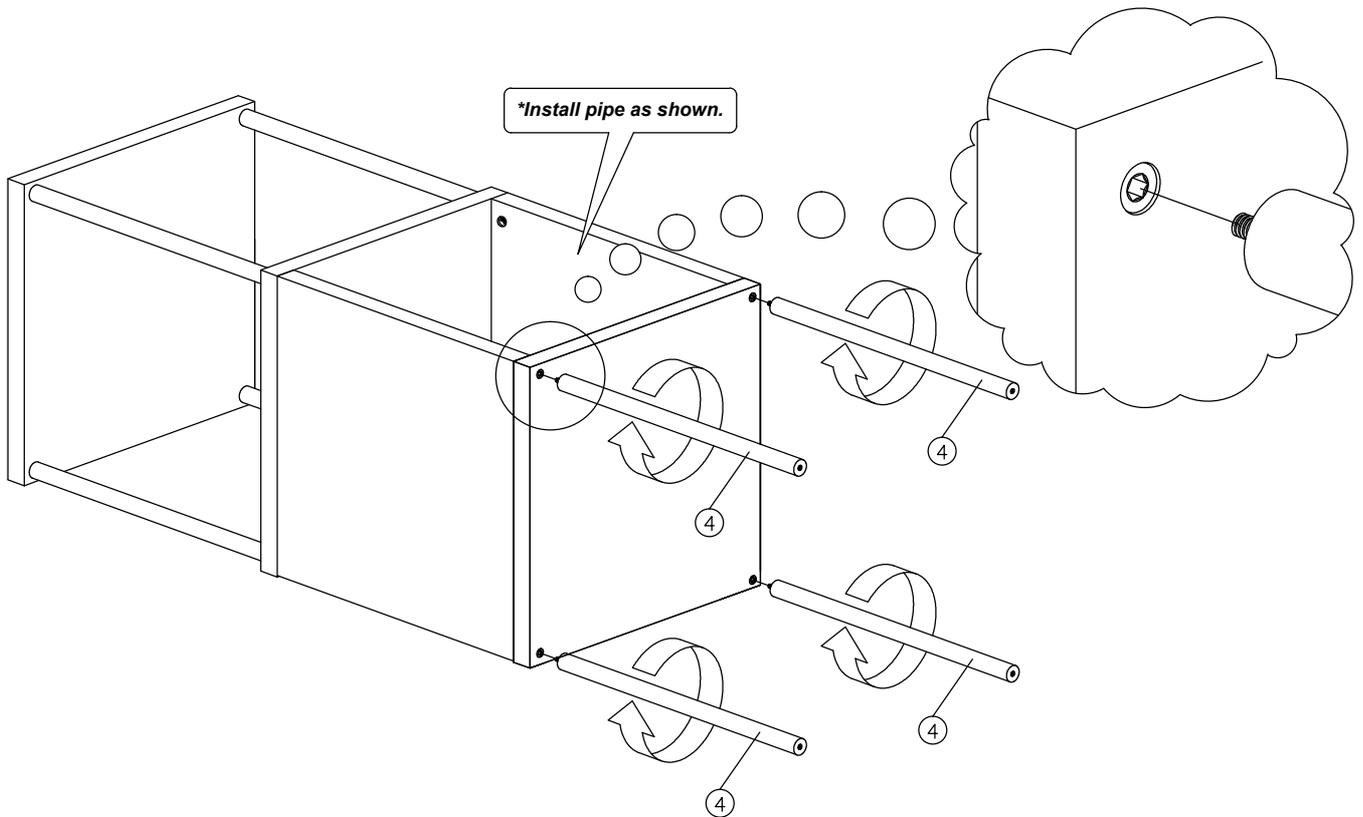


Step 8

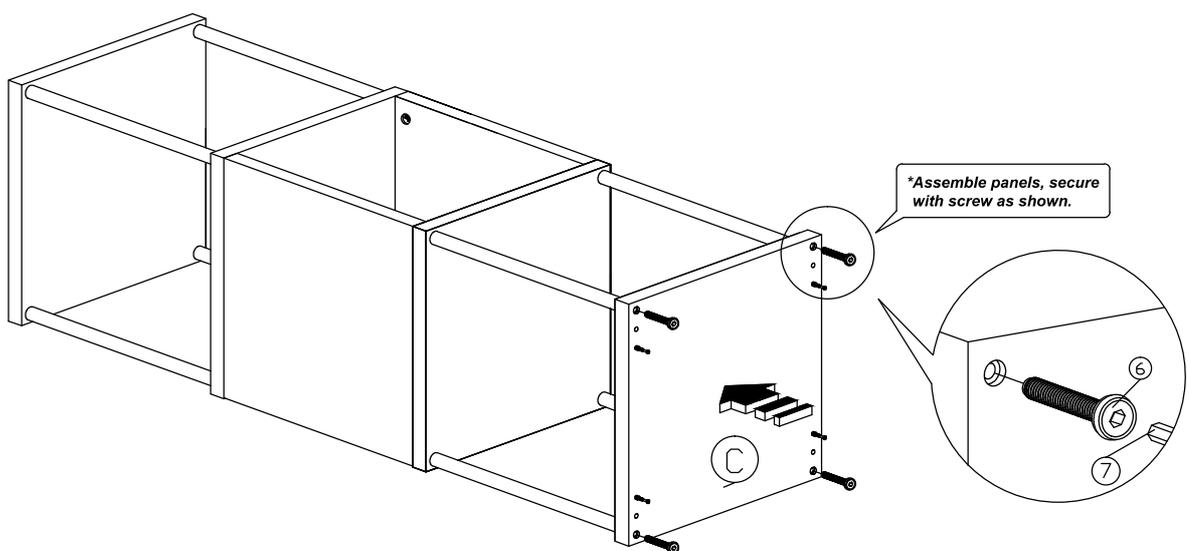


Assembly Instruction

Step 9

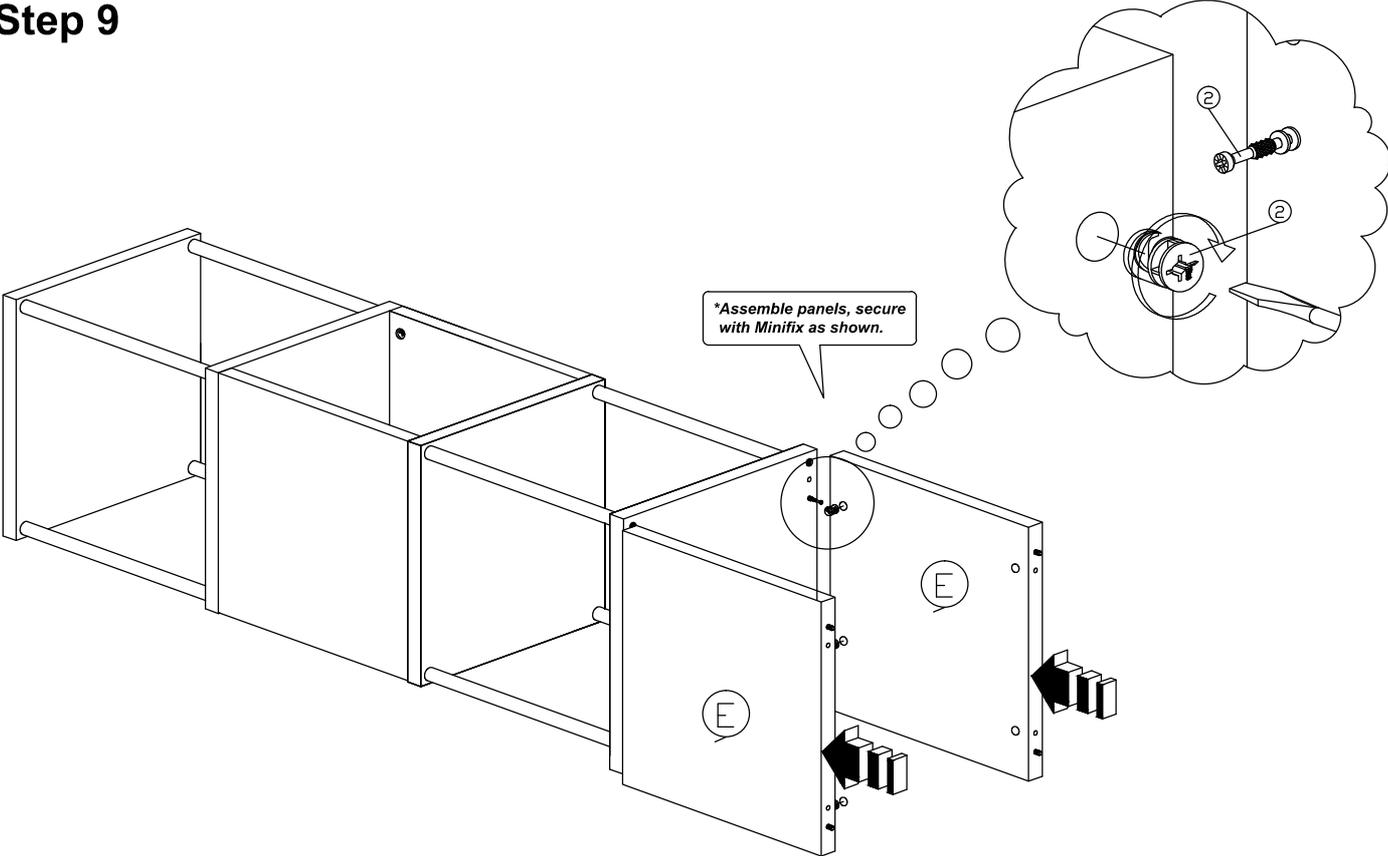


Step 10

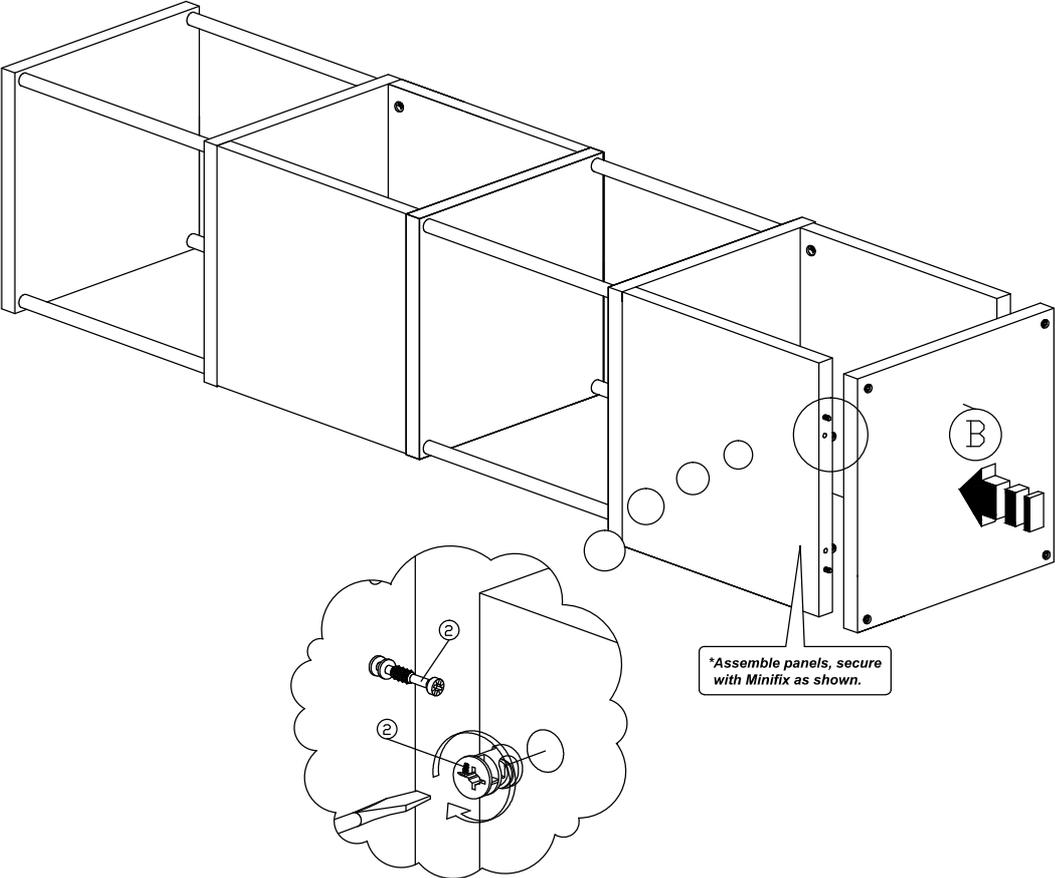

Assembly Instruction

Step 11

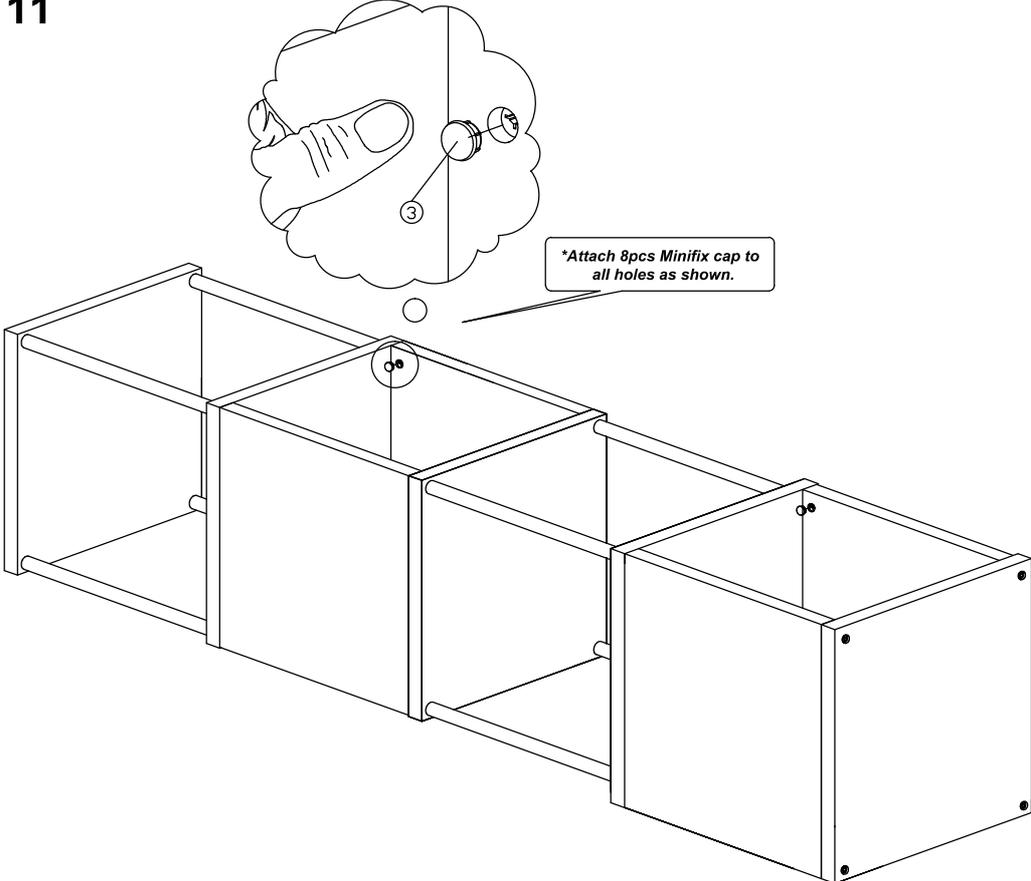

Complete

