





SOFT, DRY CLOTH

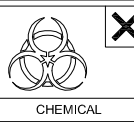

CHEMICAL

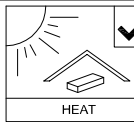

HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE

ASSEMBLY INSTRUCTION


MODEL : TV 838070

DESCRIPTION : TV CABINET


HARDWARE

A	B	C	D	E	F	G	H	I	J	K	L	M				
A1 WOOD DOWEL 8 X 25 1X24	A2 WOOD DOWEL 8 X 40 1X2	16MM CB SCREW M3.5X16MM 1X84	38MM CB SCREW M4X38MM 1X16	65MM CB SCREW M4X65MM 1X10	NAIL 5/8 1X50	L KEY 1X1	G1 MINIFIX 5654+5546 14 SETS	G2 QUICKFIT CAP 14 SETS	G3 14 SETS	METAL SHELF SUPPORT 1X16	MIRROR BRACKET 1X12	J1 K455 ROLLER 4 SETS	J2 4 SETS	L1 DRAWER SLIDE 14" 2 SETS	L2 2 SETS	M 38100 PVC LEG 1X8


PART LIST

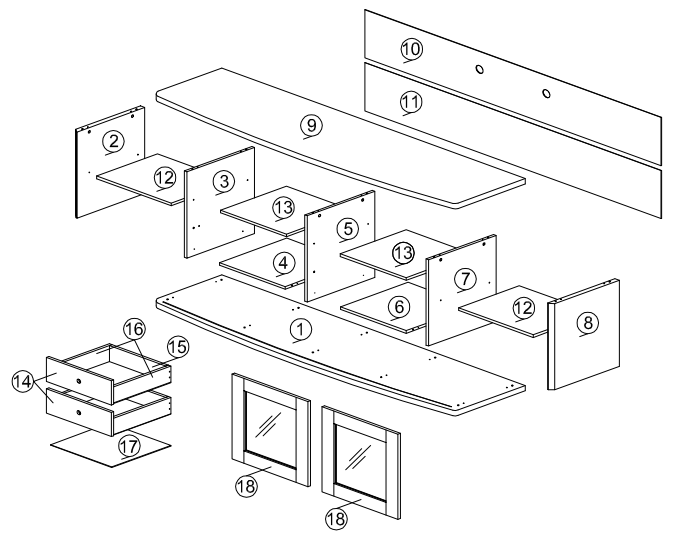


STEP 1

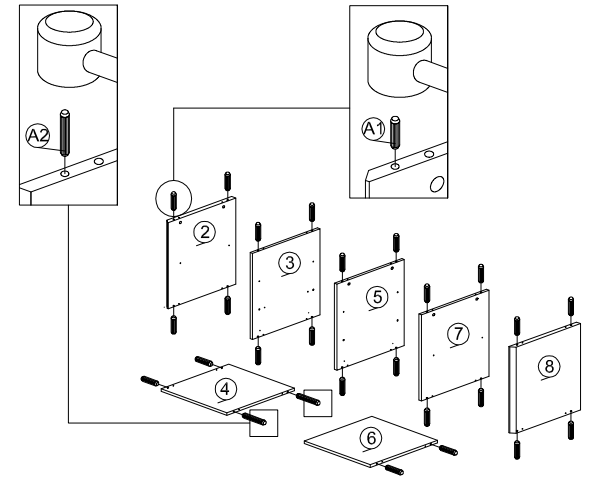


STEP 2

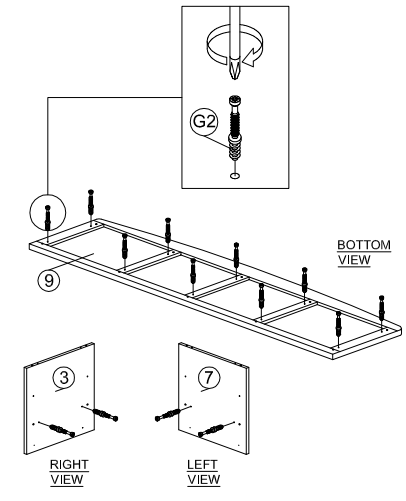


STEP 3

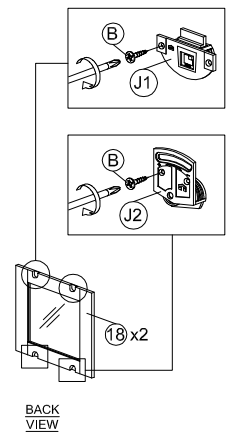


STEP 4

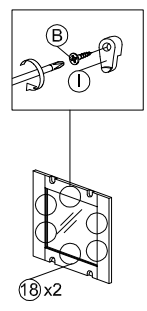


STEP 5

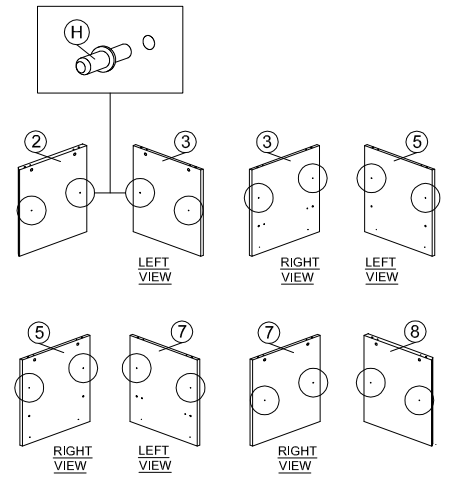


STEP 6

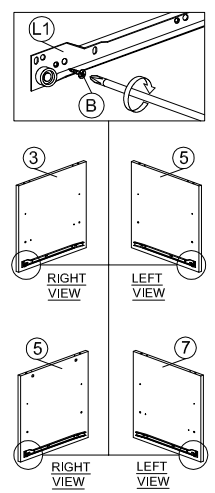


STEP 7

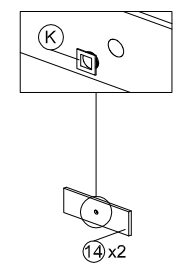


STEP 8

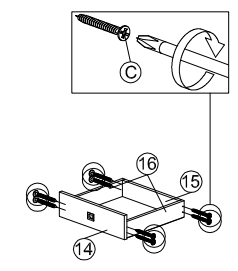

STEP 9

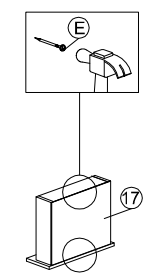


STEP 10

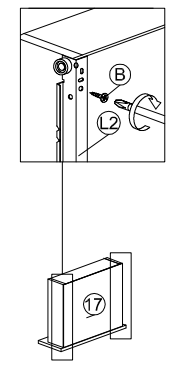




SOFT, DRY CLOTH

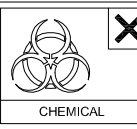


CHEMICAL

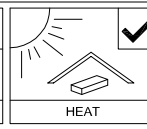

HEAT



KEEP DRY

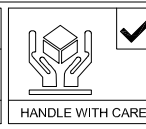

HANDLE WITH CARE




DO NOT USE KNIFE

ASSEMBLY INSTRUCTION


MODEL : TV 838070

DESCRIPTION : TV CABINET


STEP 11

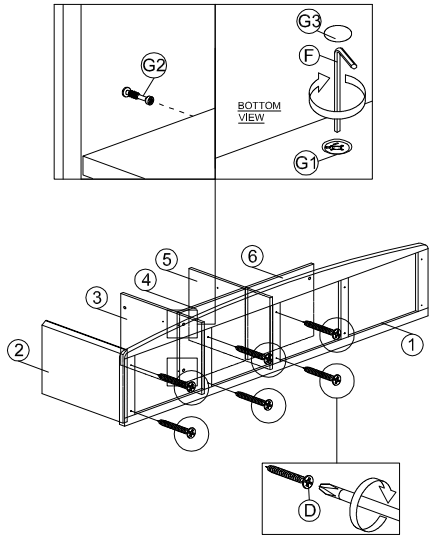


STEP 12

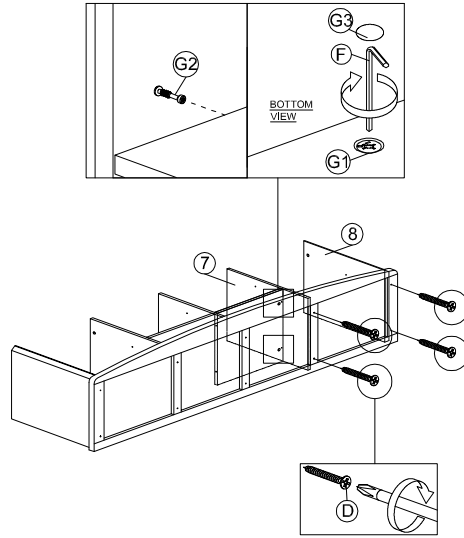


STEP 13

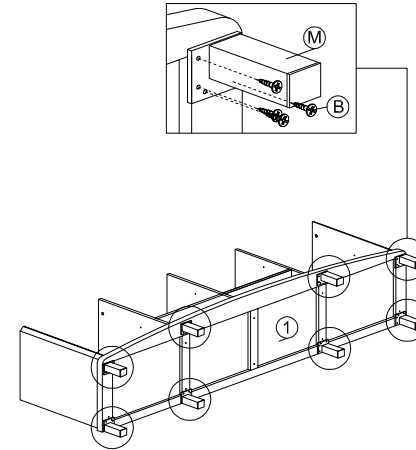


STEP 14

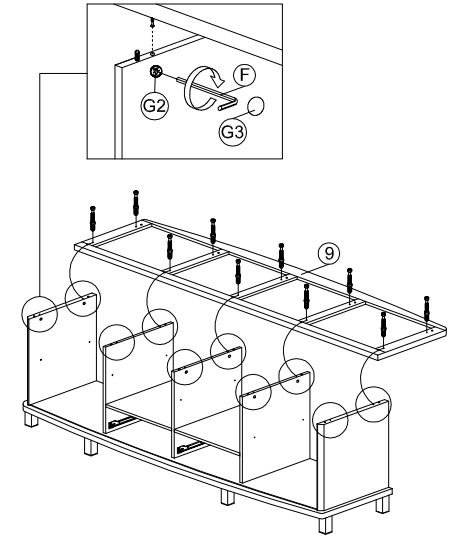


STEP 15

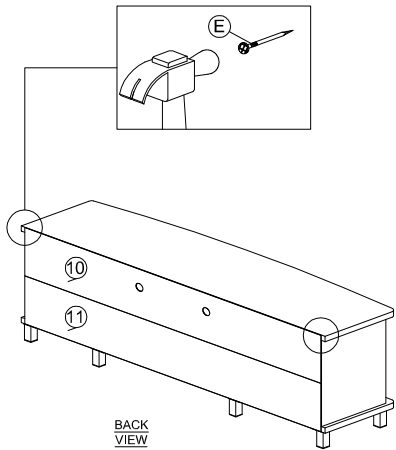

STEP 16

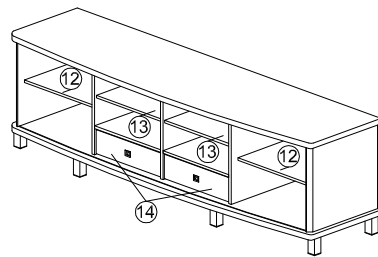

STEP 17

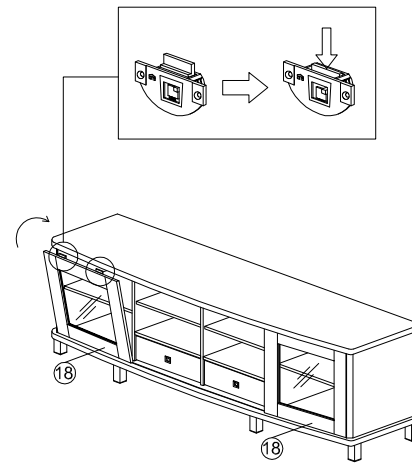

COMPLETED

