
ASSEMBLY INSTRUCTION

NO PARTLIST QTY 1 CHAIR BACK 1 PC 2 CUSHION SEAT 1 PC 3 LEG 2 PCS

NO	HARDWARE LIST	QTY
A	JCBC SCREWS M6 X 40mm	2 PCS
В	JCBC SCREWS M6 X 60mm	4 PCS
С	JCBC SCREWS M6 X 80mm	4 PCS
D	SPRING WASHERS	10 PCS
Е	flat washers	10 PCS
F	L KEY M4 X 65mm	1 PC


STEP 1

Insert leg (3) into cushion seat (2) as picture shown. Aligning the hole and securing with 1 Allen Bolt (B), 1 spring washer (D), 1 flat washer (E) by using L-key (F) per leg. Repeat the same step for the second leg installation.

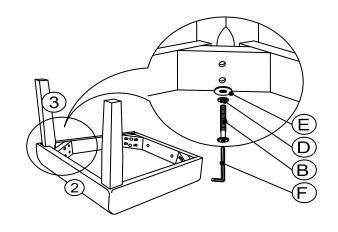


STEP 2


Put the cushion seat (2) onto the chair back (1) as picture shown. Aligning the holes & securing with 1 Allen Bolt (A), 1 spring washer (D), 1 flat washer (E) by using L-key (F) each holes.

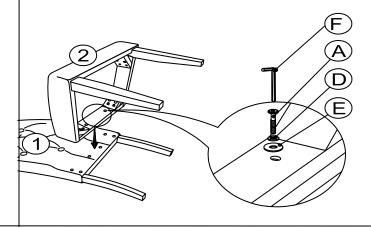

STEP 3

Securing each corner where the cushion seat is connected to the chair back by using 2 Allen Bolts (C), 2 spring washer (D), 2 flat washer (E) and L-key (F).

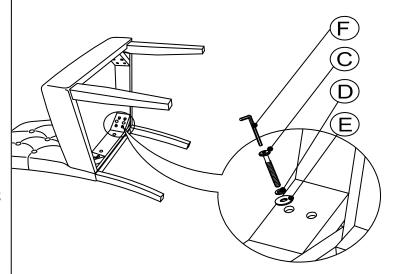


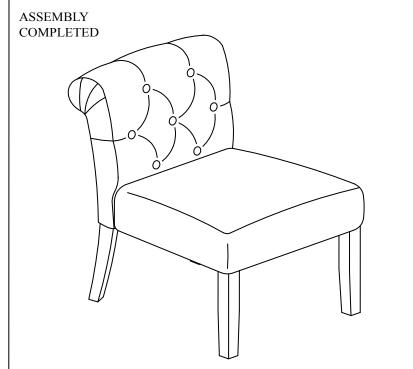

IMPORTANT NOTICE:

THE ABOVE PART LIST, HARDWARE & ASSEMBLY STEP IS FOR 1 PC ACCENT CHAIR ONLY. PLEASE REPEAT THE SAME STEP FOR THE ANOTHER ONE ACCENT CHAIR.


ASSEMBLY INSTRUCTION

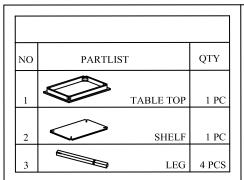

NO	HARDWARE LIST		QTY
Α	3	JCBC SCREWS M6 X 50mm	8 PCS
В	1	SPRING WASHERS	8 PCS
С	0	FLAT WASHERS	8 PCS
D	3	SCREW M4 x 32MM	4 PCS
Е		L KEY M4 X 65mm	1 PC

STEP 1

Insert the legs (3) to the table top (1) as picture shown. Aligning the hole and securing with 2 Allen Bolt (A), 2 Spring Washer (B), 2 Flat Washer (C) per each corner of the table by using L-Key (E). Ensuring the notched part of legs are inserting as below picture shown.

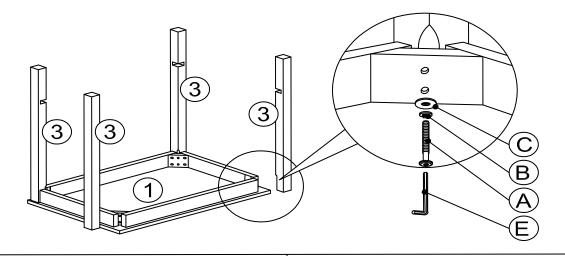

STEP 2

Place the shelf (2) into the notched part of legs (3) by securing the pre-drilled holes with 1 clipboard screw (D) per each corner using philips Head Screwdriver (NOT INCLUDED)

