





Full Bed

Assembly Instructions

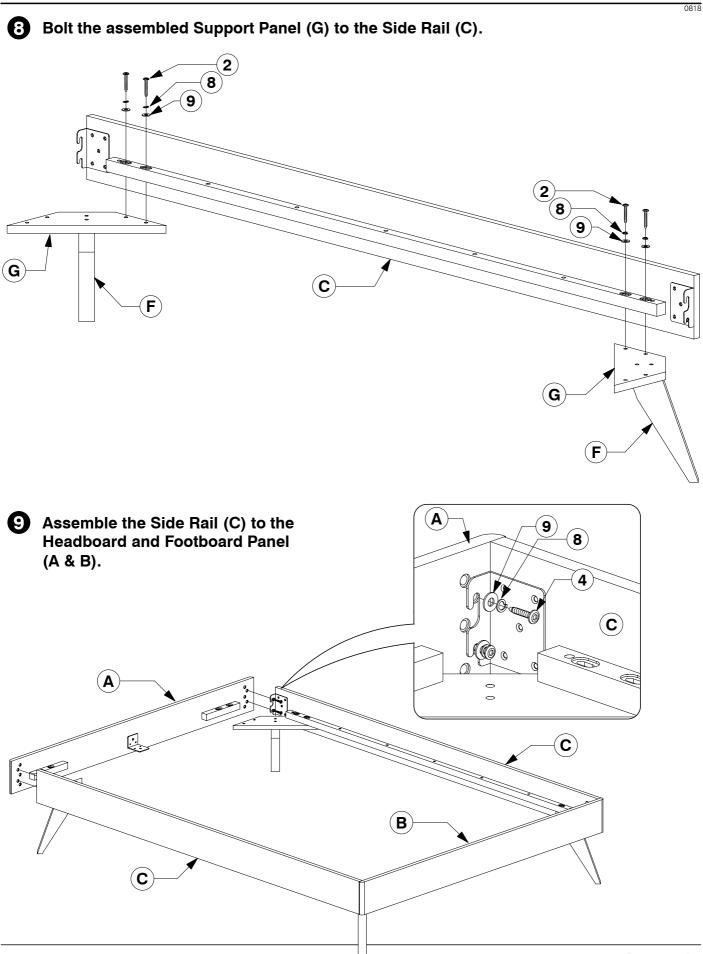

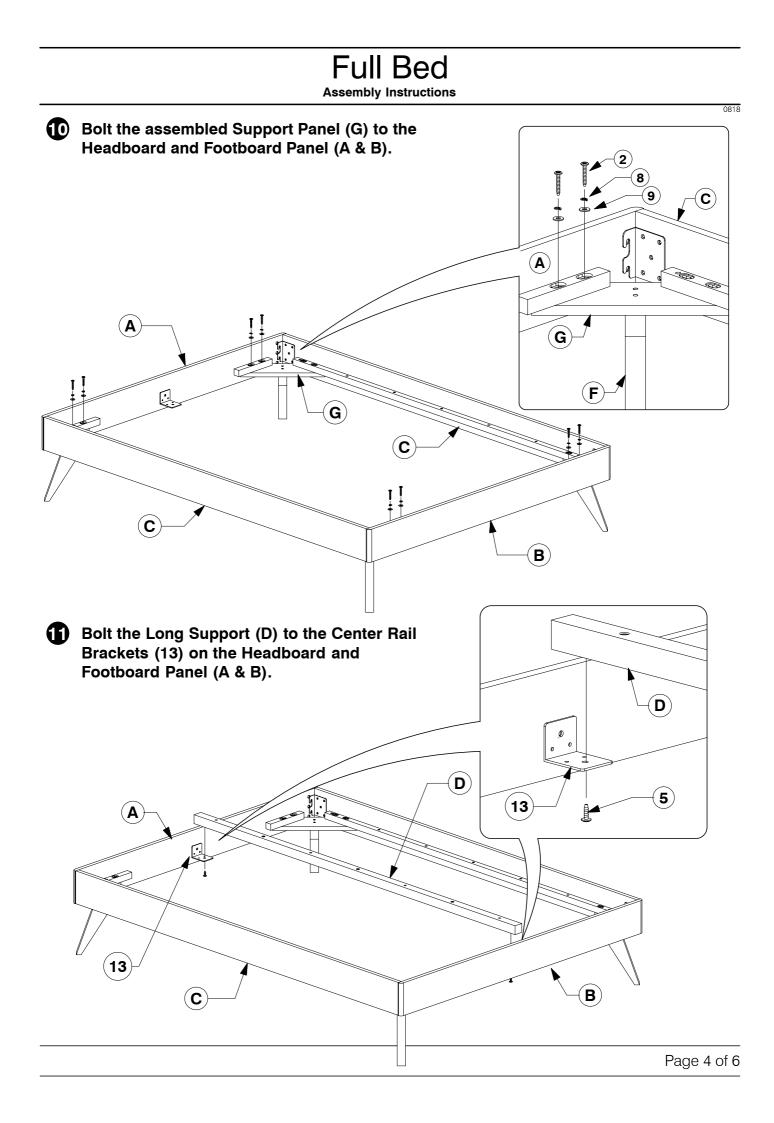

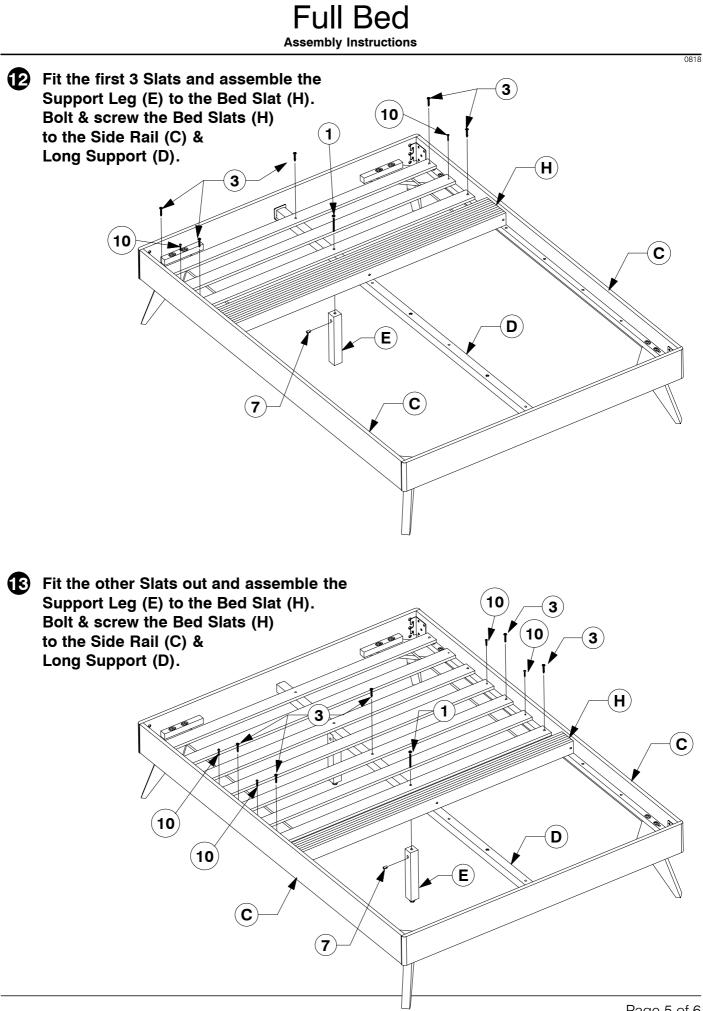

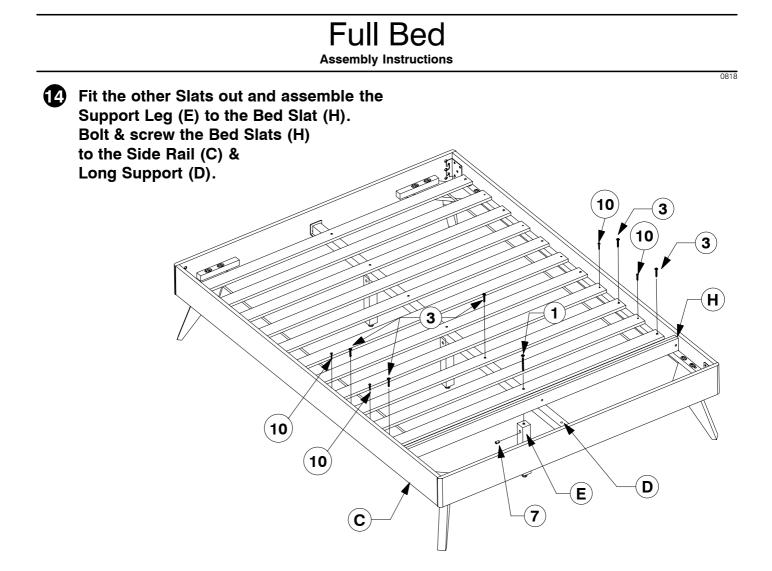

Bolt & screw the remaining Bed Slats (H) to the Side Rail (C).

