








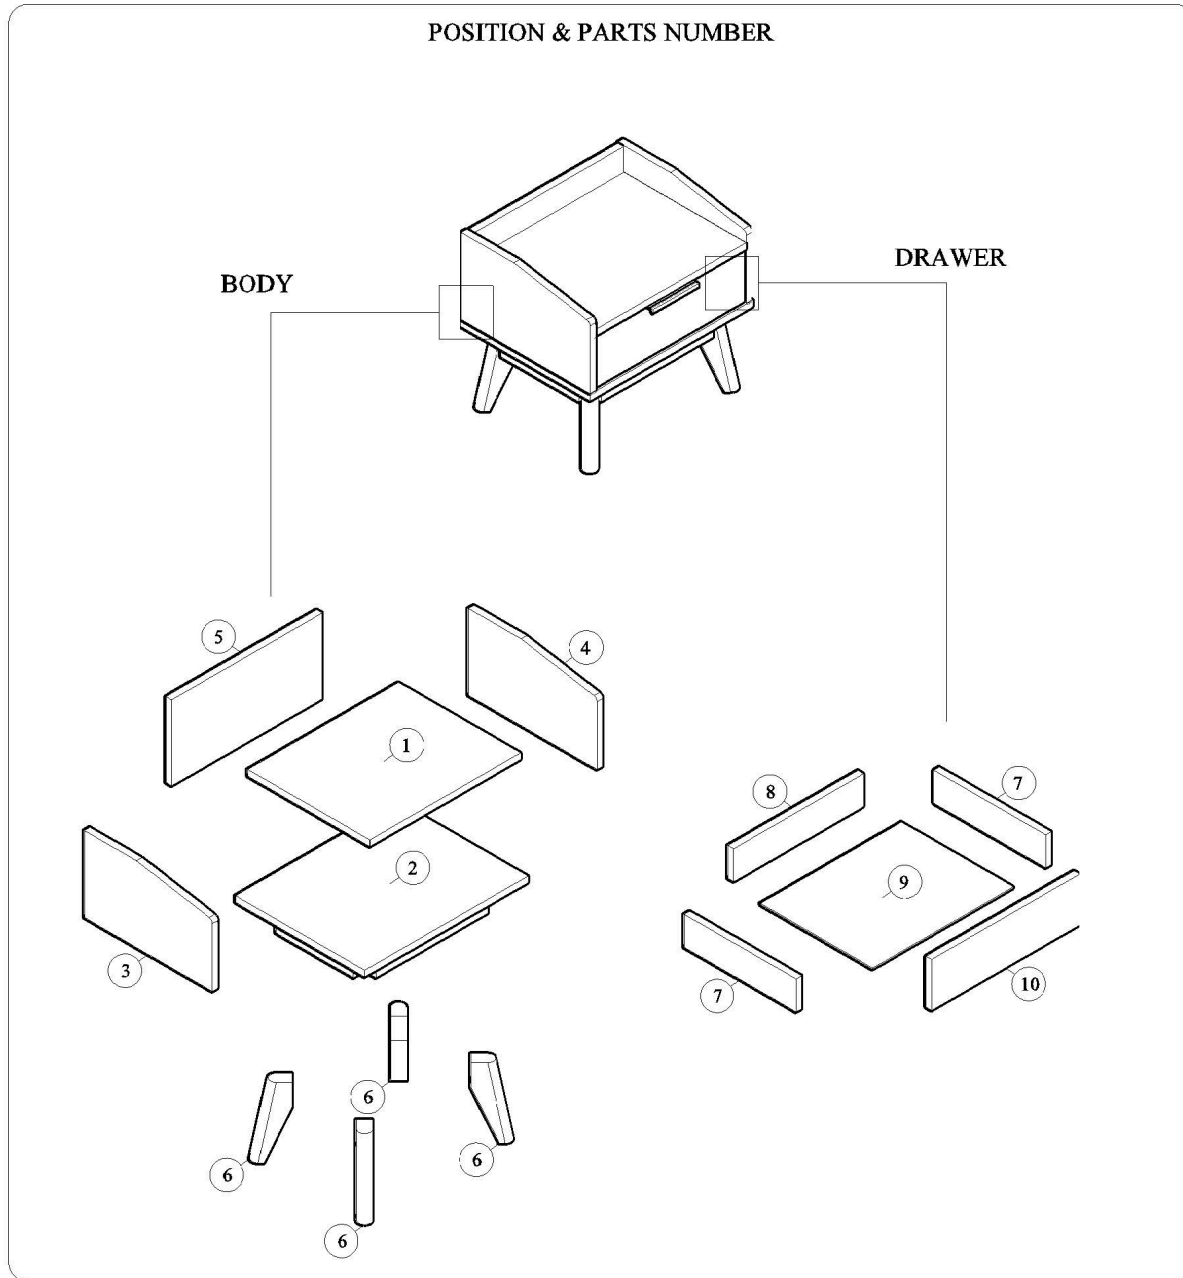


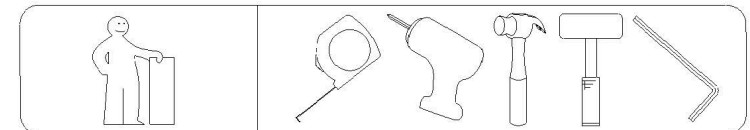



POSITION & PARTS NUMBER




	ACCESSORIES	QUANTITY
A	 WOOD DOWEL M8x30MM	10 PCS
B	 MINIFIX M5x24MM	2 PCS
C	 MINIFIX CASING	2 PCS
D	 SCREW M6x50MM	4 PCS
E	 SCREW M7x50MM	8 PCS
F	 SCREW M4x38MM	8 PCS
G	 POWER PIN	10 PCS
H	 WHITE LEG PIN	4 PCS
I	 DRAWER SLIDE 12" SCREW M3.5x12MM	1 SET 12 PCS
J	 CHROME HANDLE (GOLD) SCREW M3.5x12MM	1 PC 2 PCS
K	 ALLEN KEY	1 PC






START ASSEMBLY


STEP 1

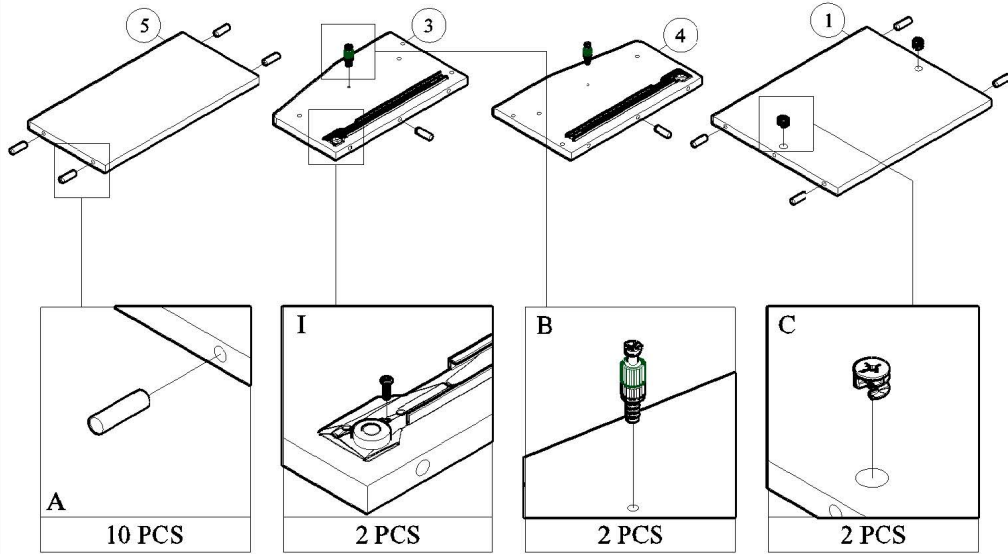


STEP 2

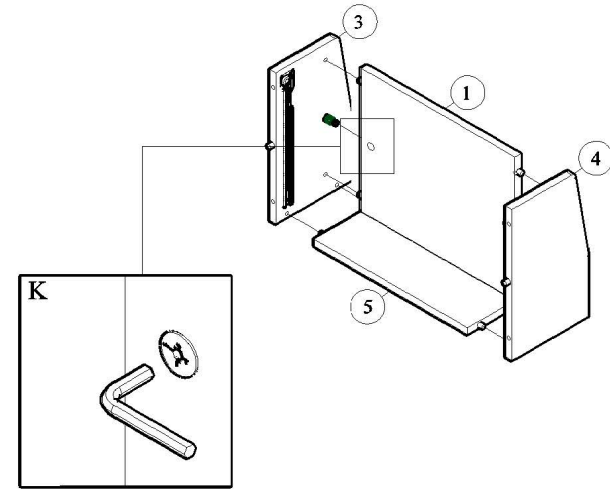


STEP 3

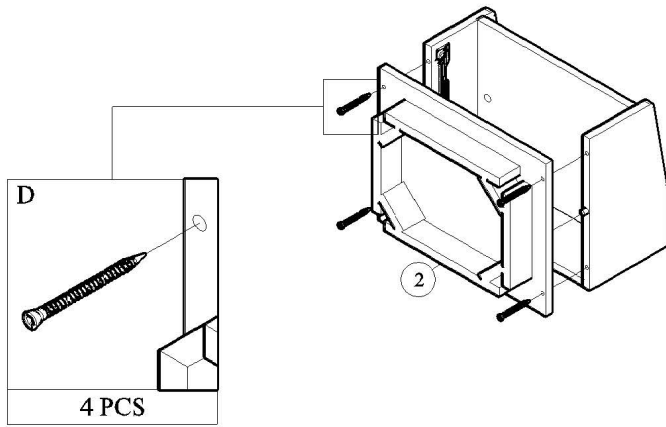


STEP 4

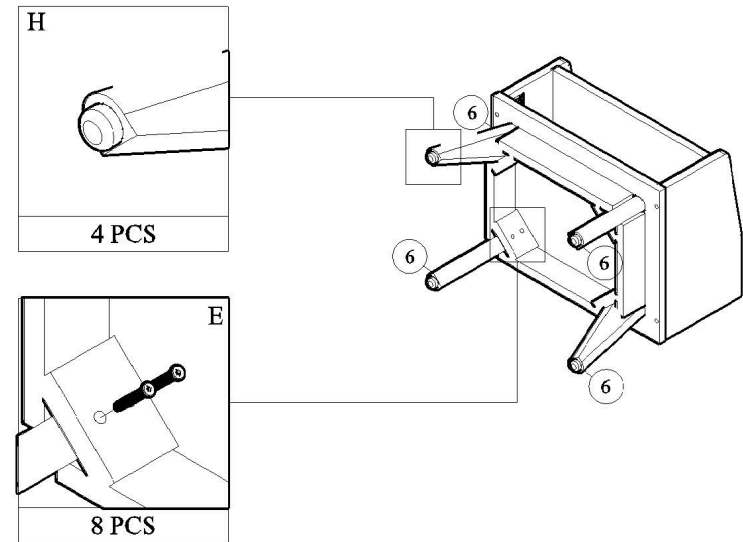


STEP 5

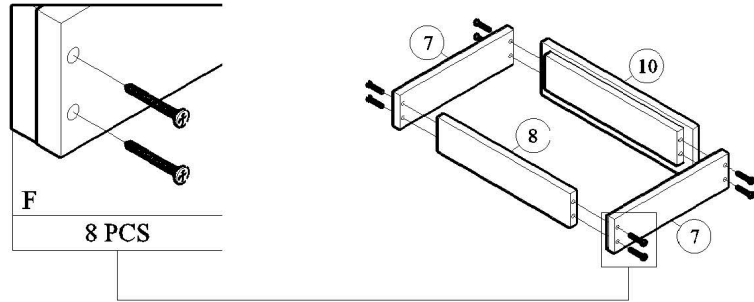


STEP 6

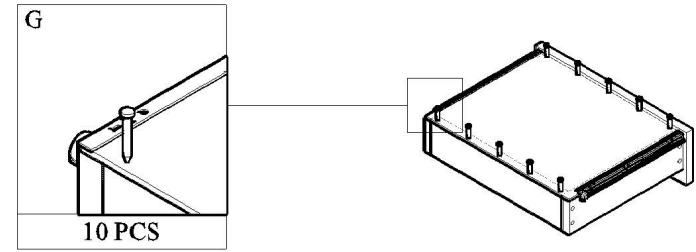


STEP 7

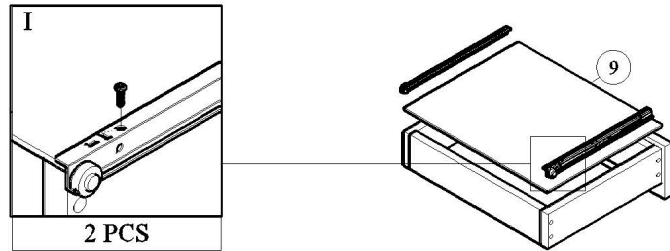

STEP 8

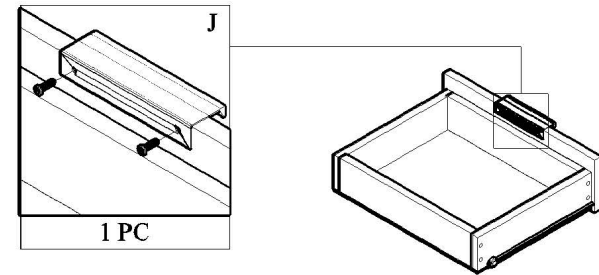

STEP 9

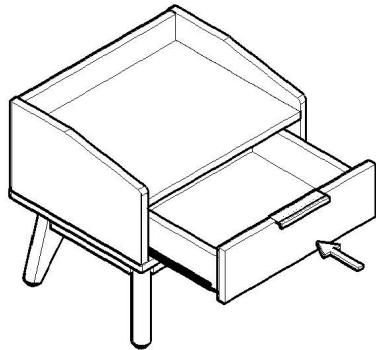

COMPLETED

