


DAYBED





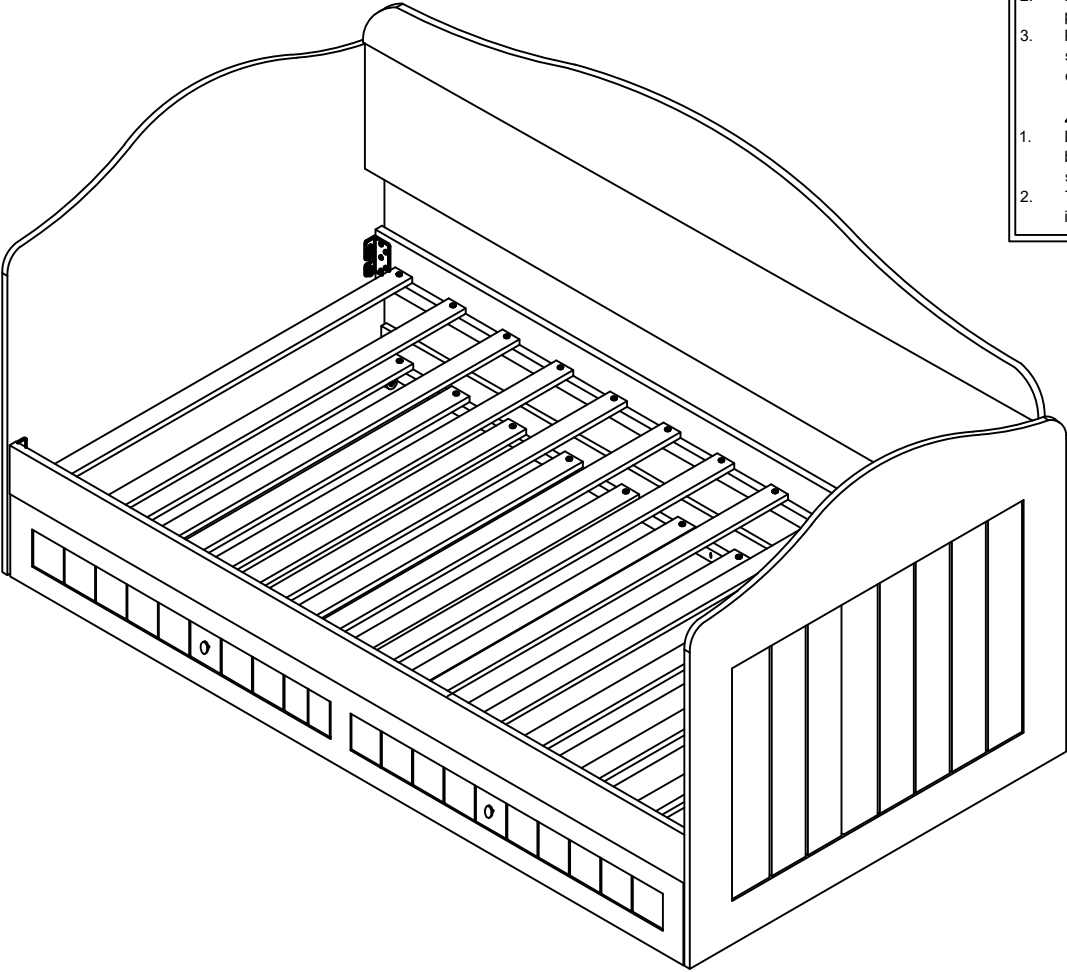



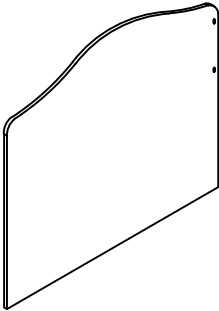
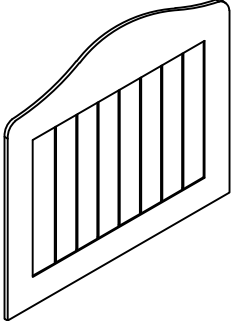
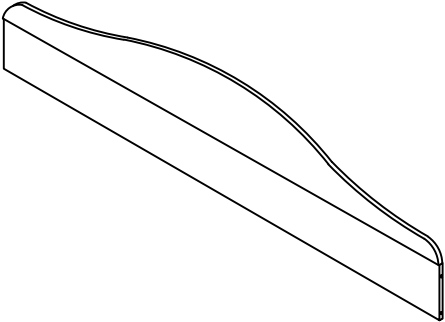
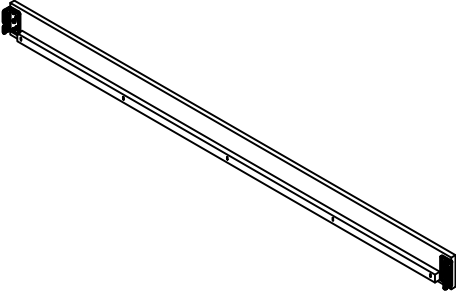
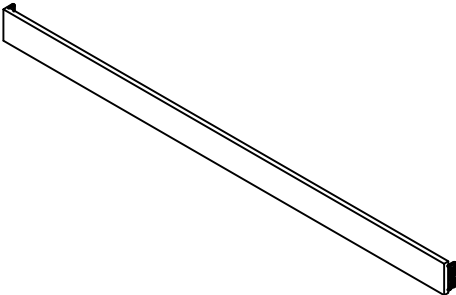
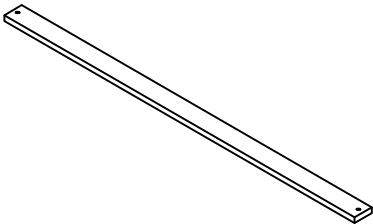
ASSEMBLY TIPS

1. Remove hardware from box and sort by size.
2. Please ensure that all hardware and parts are presented prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly.

⚠ WARNING!


1. Don't attempt to repair or modify part that are broken or defective. Please contact with the store immediately.
2. This product is for home use only and not intended for commercial establishment.

NO	HARDWARE LIST	QTY	NO	HARDWARE LIST	QTY
1	JCBB M8 x 16mm 	8	4	CSK M4 x 25 mm 	24
2	ALLEN KEY M5 	1	5	MINI FIX 	4
3	ALLEN KEY M4 	1	6	HOUSING 	4

DAYBED PART		
NO	LIST	QTY
A	<div>HEADBOARD PANEL</div> 	1
B	<div>FOOTBOARD PANEL</div> 	1
C	<div>BACK PANEL</div> 	1
D	<div>SIDE RAIL (Left)</div> 	1
E	<div>SIDE RAIL (Right)</div> 	1
F	<div>BED SLAT</div> 	12


ASSEMBLY INSTRUCTION

STEP 1

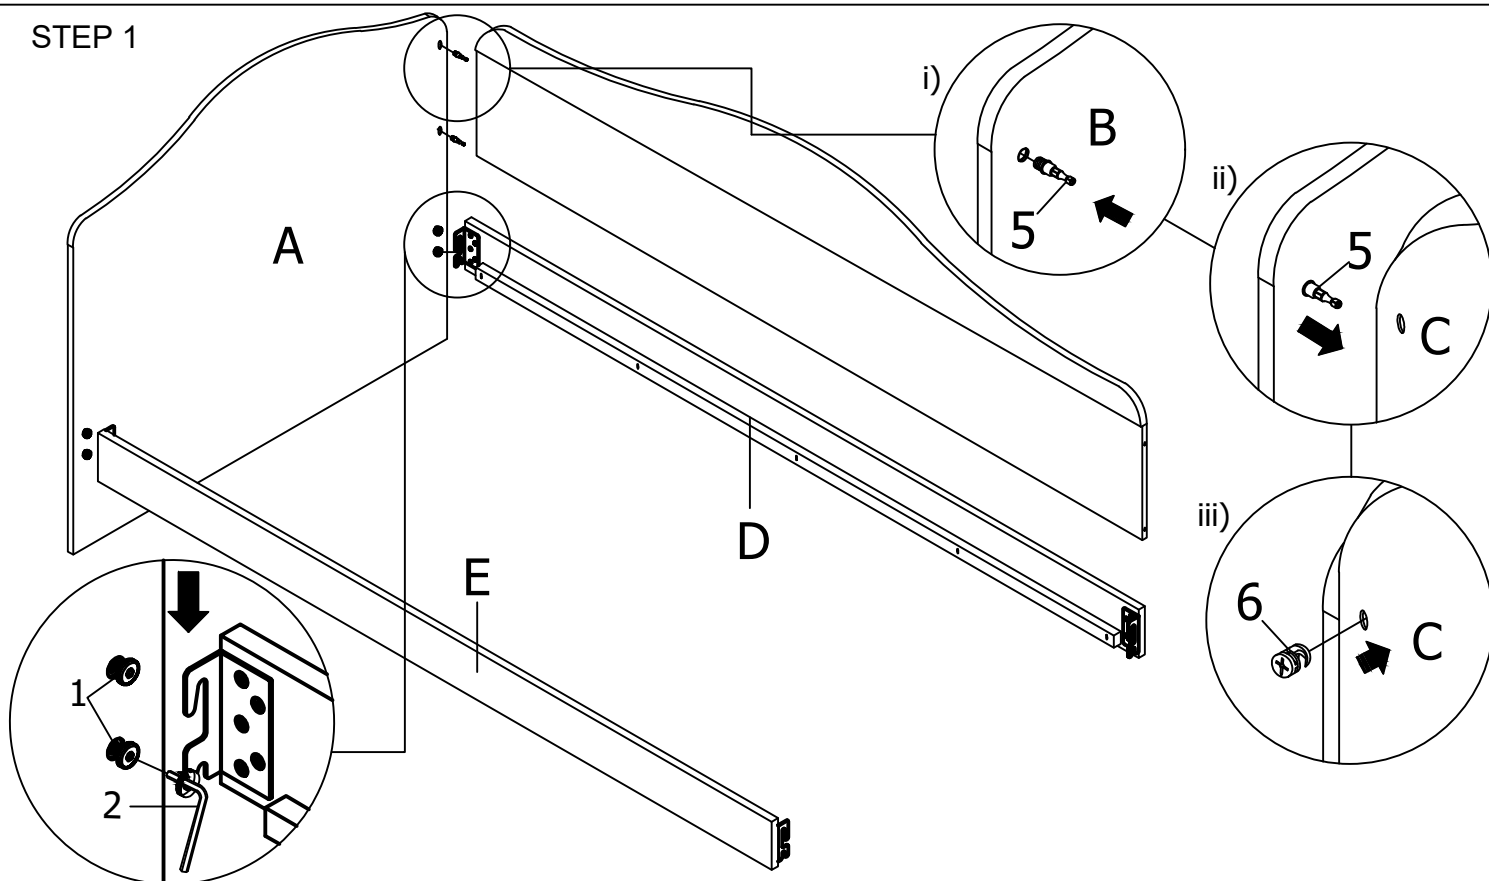

- Driving the Mini fix (5) into Headboard (A) and attach the Back panel (C) to Headboard (A) carefully. Insert the housing (6) into the hole of Back panel (C) then tightening securely.
- Attach the side rail (D&E) to the Headboard (A) by tightening the JCBB M8 x 16mm (1) securely.
- Only tighten when all the hardware are in position.


STEP 2

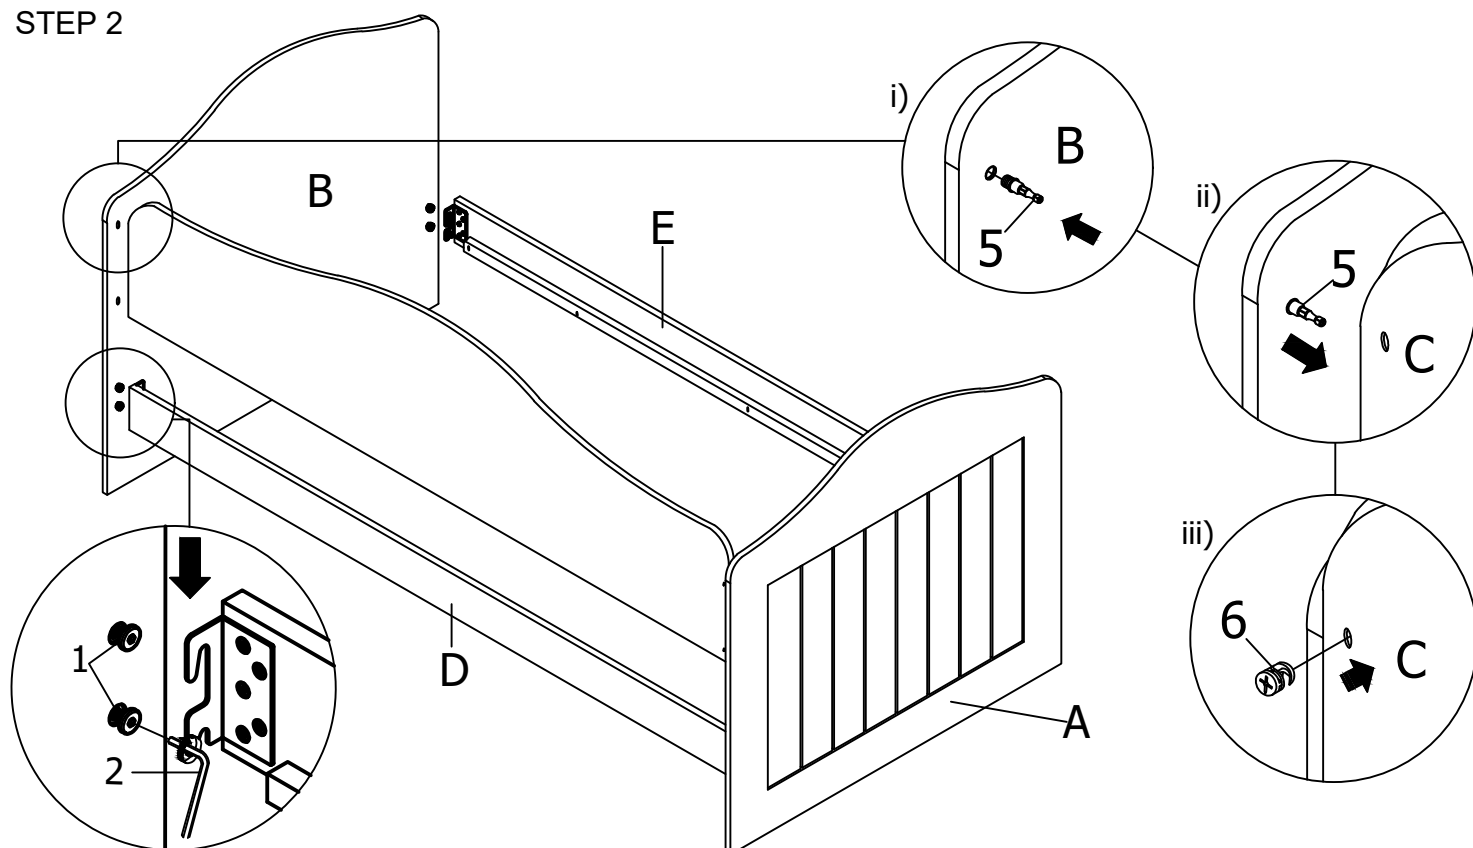

- Driving the Mini fix (5) into Footboard (B) and attach the Back panel (C) to Headboard (A) carefully. Insert the housing (6) into the hole of Back panel (C) then tightening securely.
- Attach the side rail (D&E) to the Headboard (A) by tightening the JCBB M8 x 16mm (1) securely.
- Only tighten when all the hardware are in position.


ASSEMBLY INSTRUCTION

STEP 3

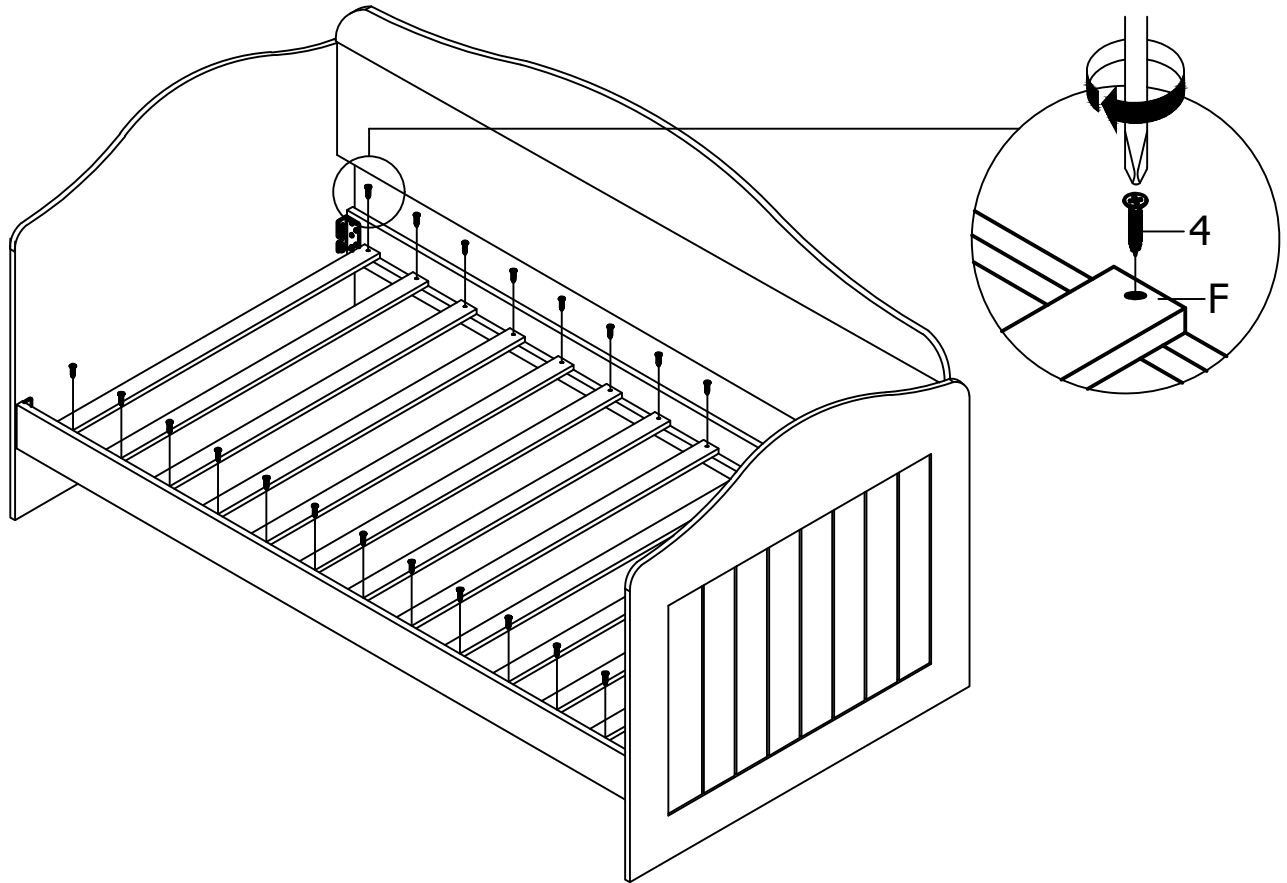

- Put the slats (F) in position and screw the CSK M4 X 25mm (4) with screw driver into the slat and bed.


STEP 4

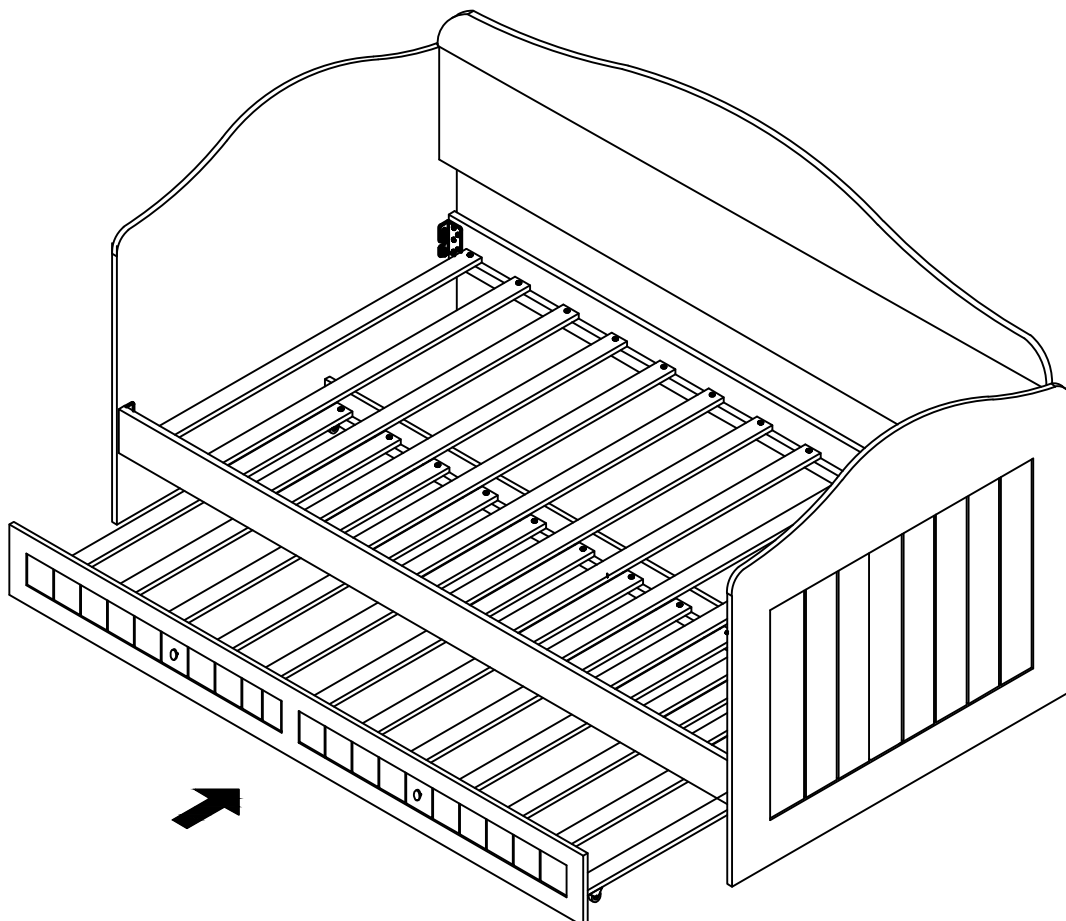

- Insert the Neves Trundle under the bed carefully.
- **REMARK: Please refer to Assembly Instruction for the Trundle Bed assemble.**

ASSEMBLY INSTRUCTION




ASSEMBLY COMPLETE

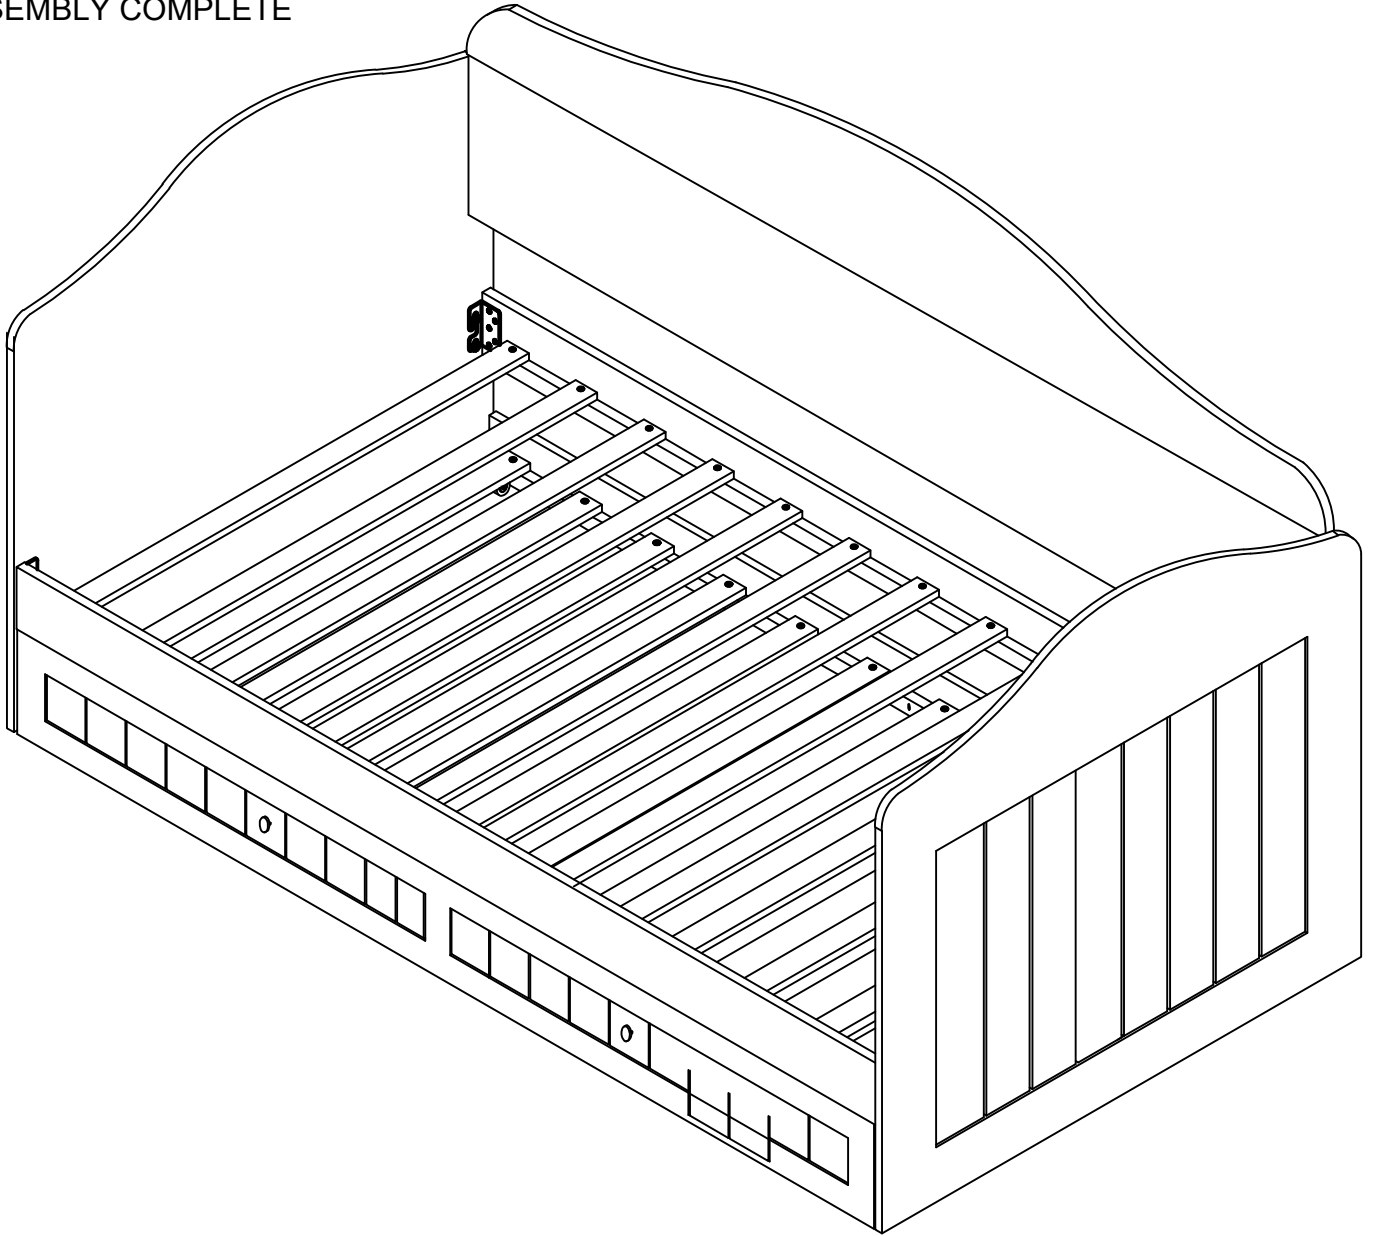





- Ensure all the screw and fixing are secured periodically.


ASSEMBLY INSTRUCTION

MODEL: NEVES TRUNDLE


NO	PART LIST	QTY
A	 SIDE RAIL (Front)	1 PCS
B	 SIDE RAIL (Back)	1 PCS
C	 BED SLAT	12 PCS

NO	HARDWARE LIST	QTY
1	 CSK M4 x 25mm	24 PCS
2	 CSK M3.5 x 12mm	8 PCS
3	 ROLLER	4 PCS
4	 HANDLE	2 PCS
5	 THMS M4 x 28mm	2 PCS


STEP 1

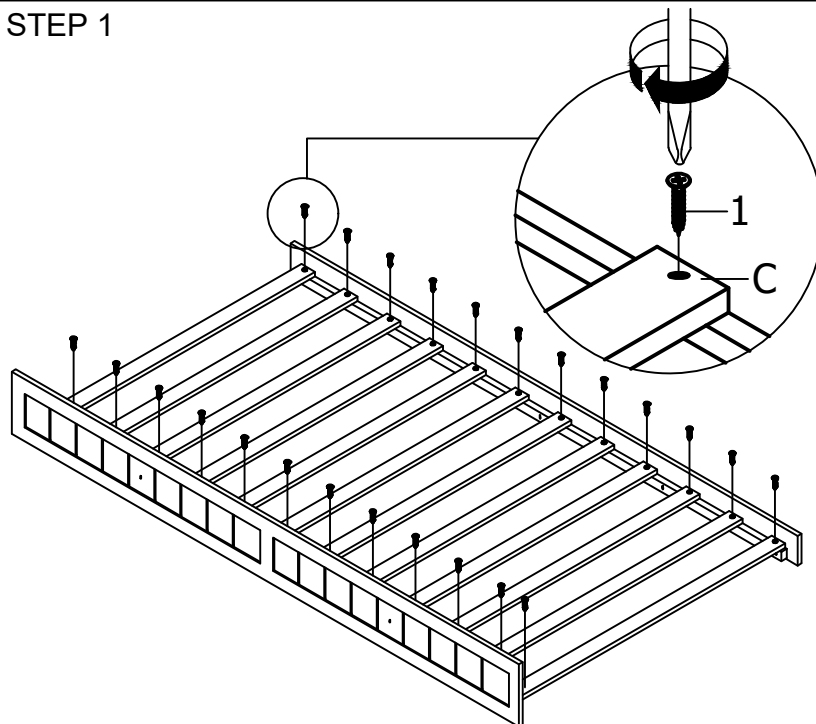

STEP 2

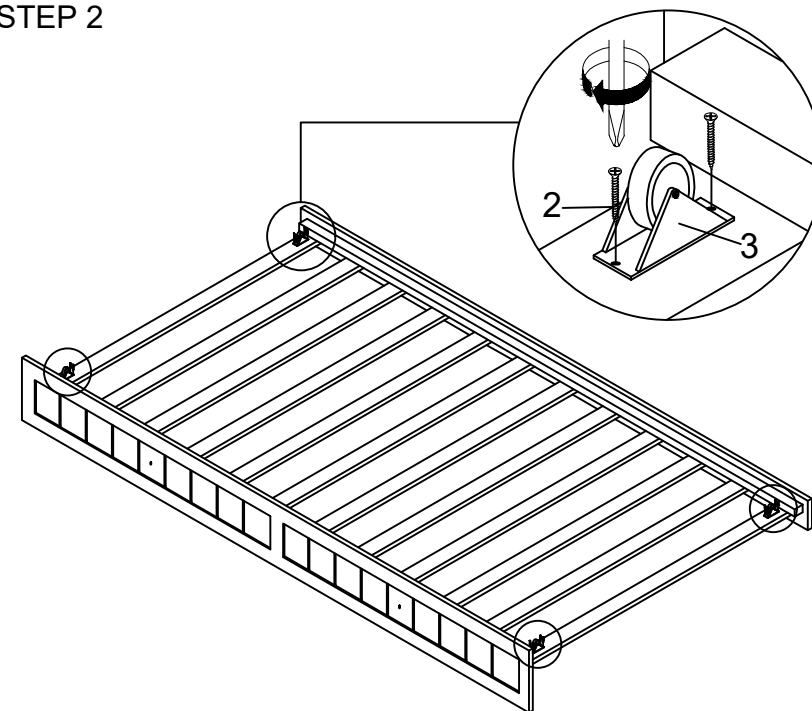

STEP 4

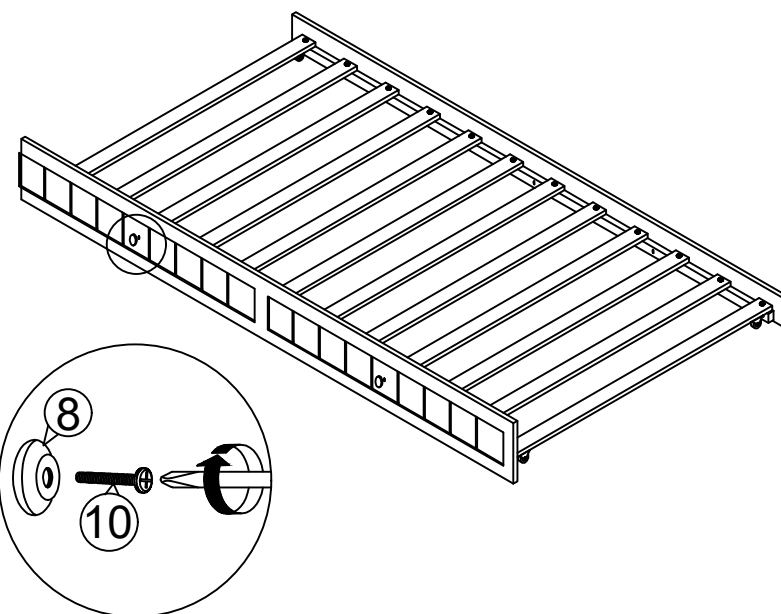

ASSEMBLY COMPLETE

