
ASSEMBLY INSTRUCTIONS

READ THE INSTRUCTION CAREFULLY. REMOVE ALL THE WRAPPING MATERIALS, STAPLES AND STRAPS FROM THE CARTON.
REFER TO THE HARDWARE AND FURNITURE PARTS LIST AS A GUIDANCE.
MAKE SURE YOU HAVE ALL THE PARTS BEFORE YOU START ASSEMBLING.
PLACE ALL THE WOODEN FURNITURE PARTS ON A CLEAN, FLAT AND SOFT SURFACE SUCH AS CARPET TO PREVENT FROM SCRATCHES.

PART LIST			
ITEM	DESCRIPTION	QTY	
Α	CUSHION BACK	1pc	
В	CUSHION SEAT	1pc	
С	ARM (L)	1pc	
D	ARM (R)	1pc	
Е	APRON	1pc	

HARDWARE LIST					
ITEM	DESCRIPTION		QTY		
1	JCBB Bolt M8 x 60mm		4pcs		
2	JCBB Bolt M8 x 80mm	~~~~~~~ ⊕	2pcs		
3	Wood Dowel M10 x 40mm		2pcs		
4	M8 Bran Nut	8	2pcs		
5	Wood Button Dia 18.5mm	0	6pcs		
6	M5 Allen Key (Ball Shape)		1pc		

CAUTION: KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.

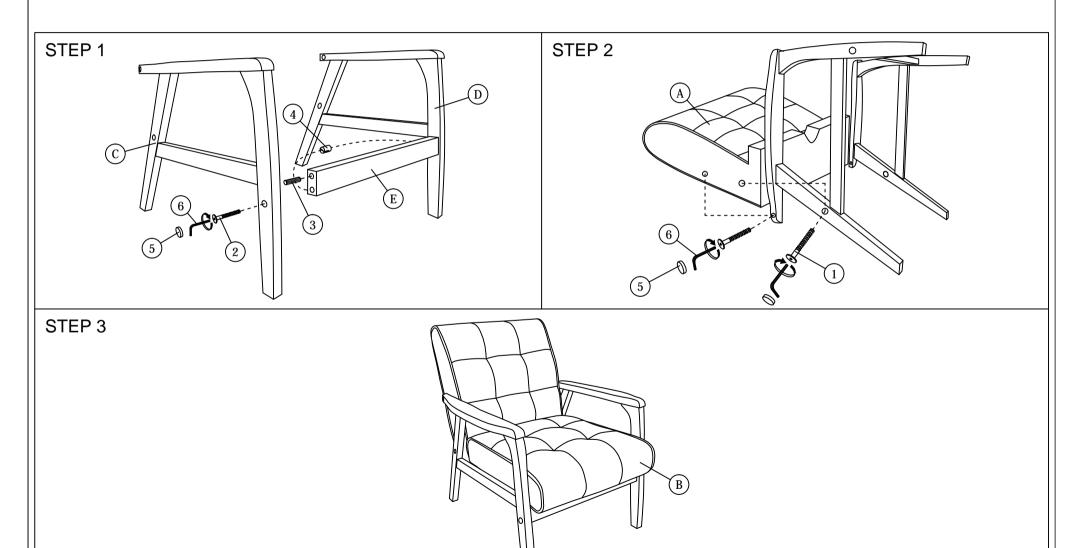

ASSEMBLY INSTRUCTIONS

READ THE INSTRUCTION CAREFULLY. REMOVE ALL THE WRAPPING MATERIALS, STAPLES AND STRAPS FROM THE CARTON.
REFER TO THE HARDWARE AND FURNITURE PARTS LIST AS A GUIDANCE.
MAKE SURE YOU HAVE ALL THE PARTS BEFORE YOU START ASSEMBLING.
PLACE ALL THE WOODEN FURNITURE PARTS ON A CLEAN, FLAT AND SOFT SURFACE SUCH AS CARPET TO PREVENT FROM SCRATCHES.

PART LIST				
ITEM	DESCRIPTION	QTY		
Α	CUSHION BACK	1pc		
В	CUSHION SEAT	1pc		
С	ARM (L)	1pc		
D	ARM (R)	1pc		
Е	APRON	1pc		

HARDWARE LIST					
ITEM	DESCRIPTION		QTY		
1	JCBB Bolt M8 x 60mm		4pcs		
2	JCBB Bolt M8 x 80mm	⊕	2pcs		
3	Wood Dowel M10 x 40mm		2pcs		
4	M8 Bran Nut	8	2pcs		
5	Wood Button Dia 18.5mm	0	6pcs		
6	M5 Allen Key (Ball Shape)	^	1pc		

