

97053 Full / Queen Headboard


Assembly Instructions

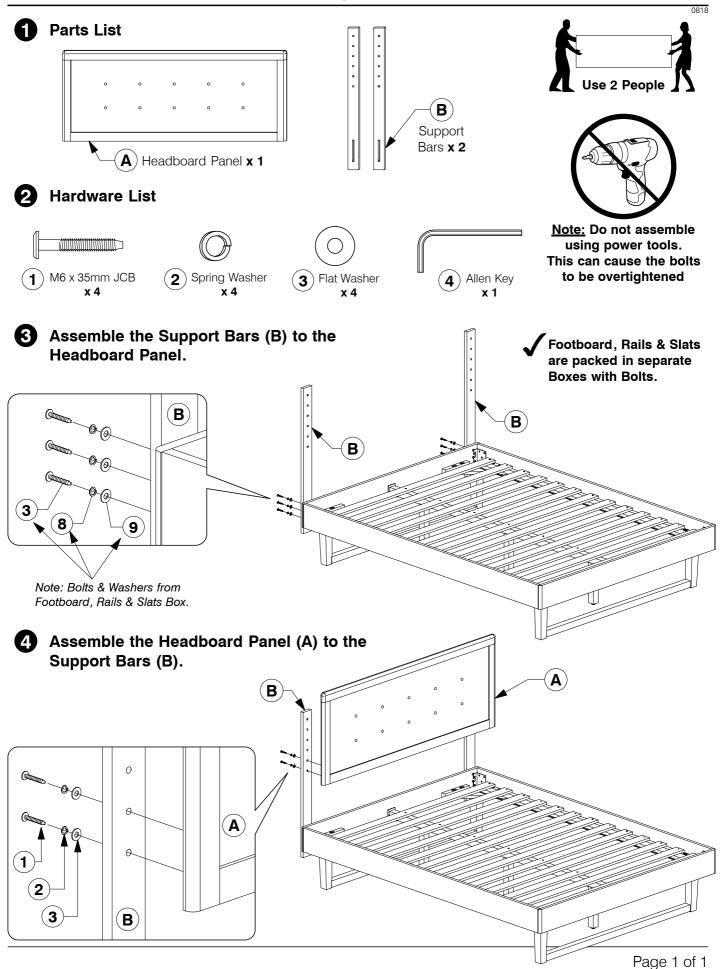


Assembly Instructions

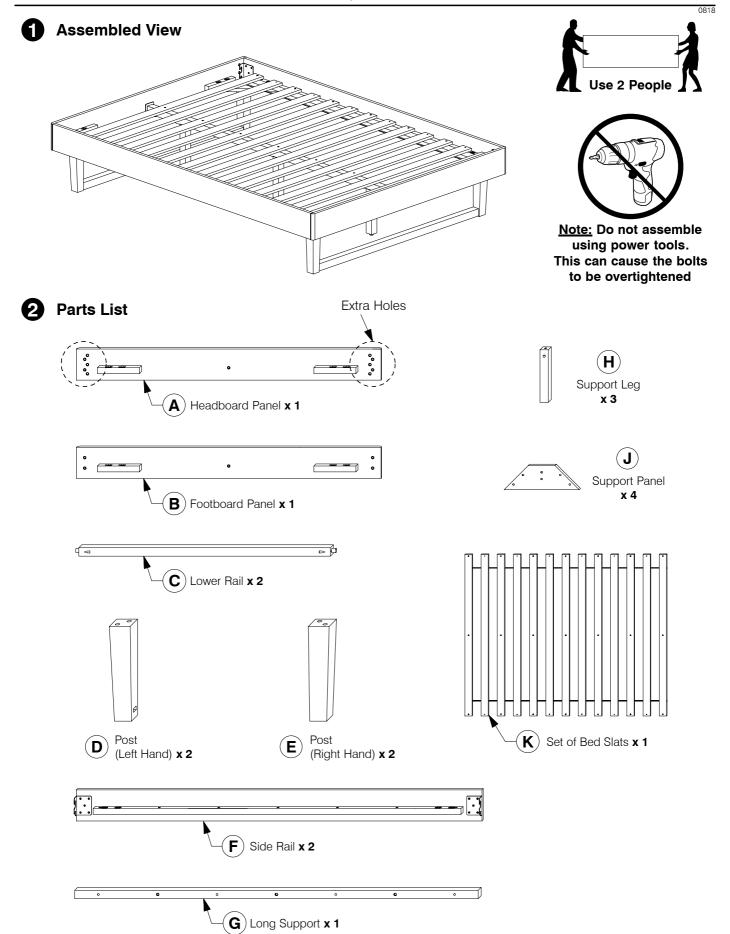

3 Hardware List

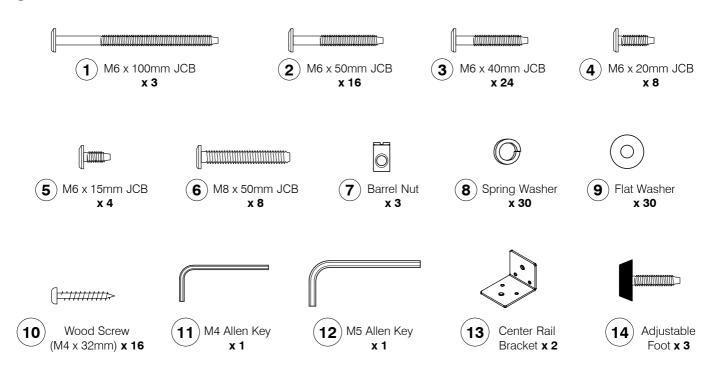


- Fix the Adjustable foot to the bottom of the Support Leg (H).
- Fit the Lower Rail (C) to the Post (D & E).

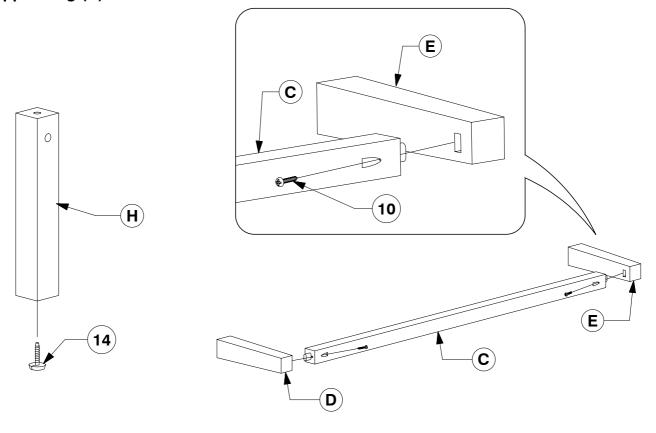


0818

6 Assemble the assembled Post (D & E) & Lower Rail (C) to the Support Panel (J).

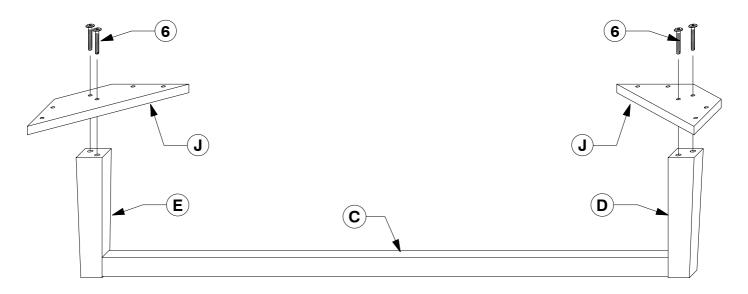


Fit the Center Rail Bracket to the Headboard Panel (A).

13

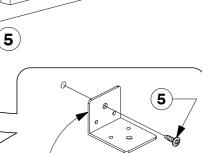


Short Tab of Metal Bracket (13) Extra Holes


8 Fit the Center Rail Bracket to the Footboard Panel (B).

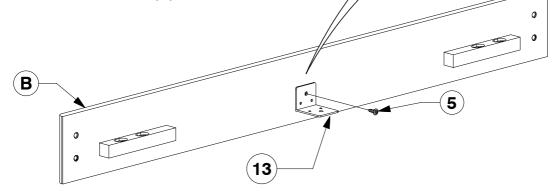

Assembly Instructions

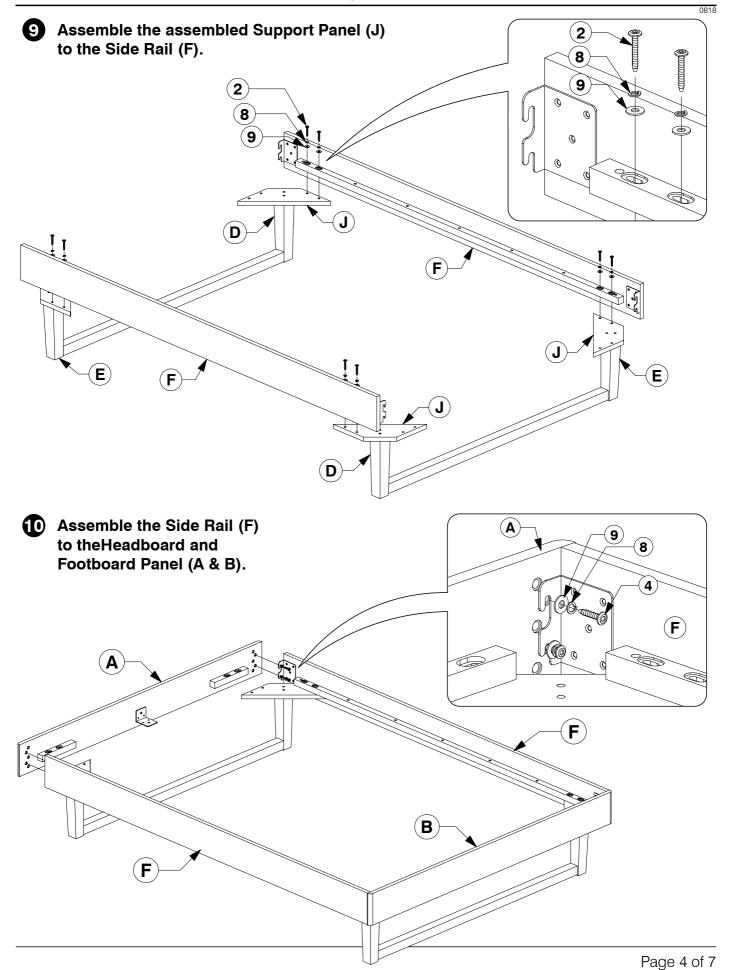


Assembly Instructions

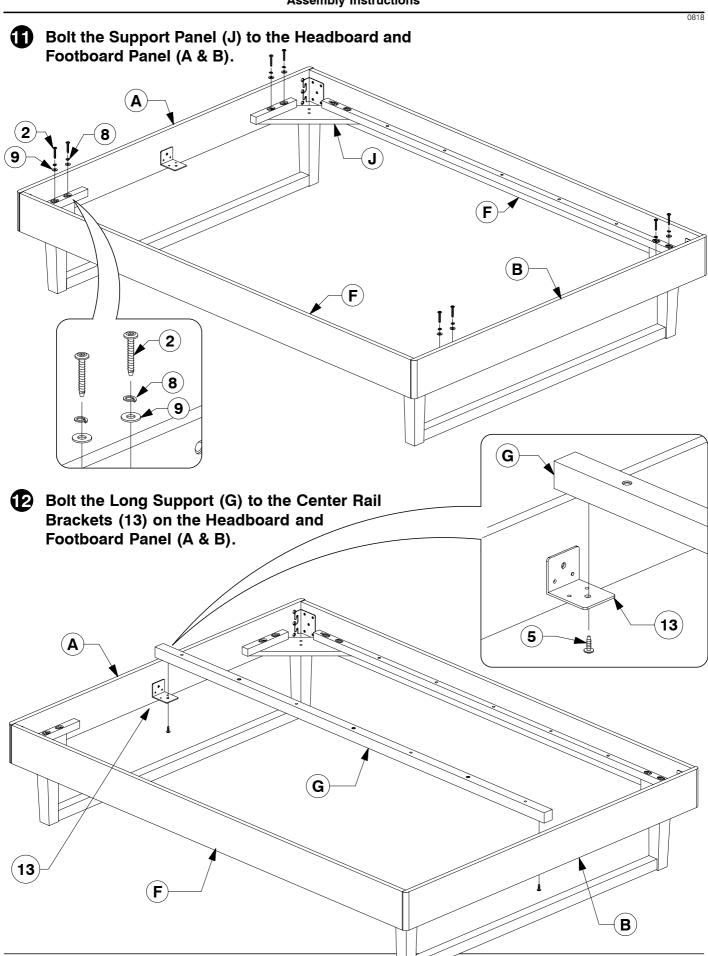

Page 5 of 7


Assembly Instructions

Fit the first 3 Slats and assemble the Support Leg (H) to the Bed Slat (K).
Bolt & screw the Bed Slats (K) to the Side Rail (F) & Long Support (G).

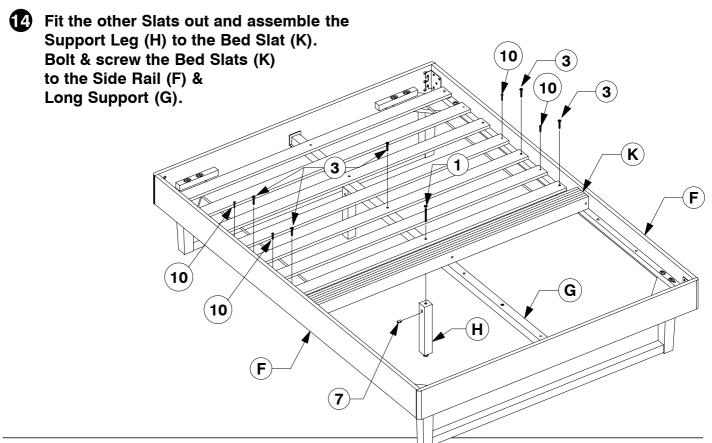

Assembly Instructions

Fit the other Slats out and assemble the Support Leg (H) to the Bed Slat (K).
Bolt & screw the Bed Slats (K) to the Side Rail (F) & Long Support (G).

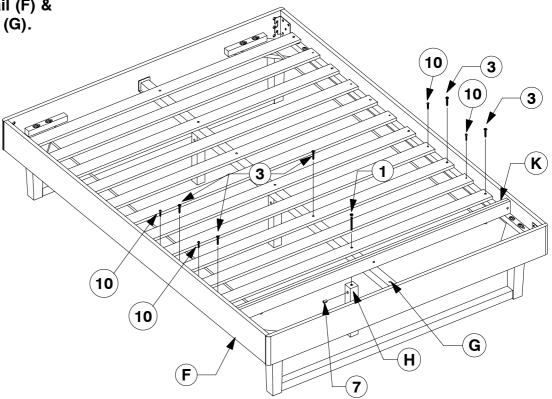

Bolt & screw the remaining Bed Slats (K) to the Side Rail (F).

