

97053 Full / Queen Headboard


Assembly Instructions

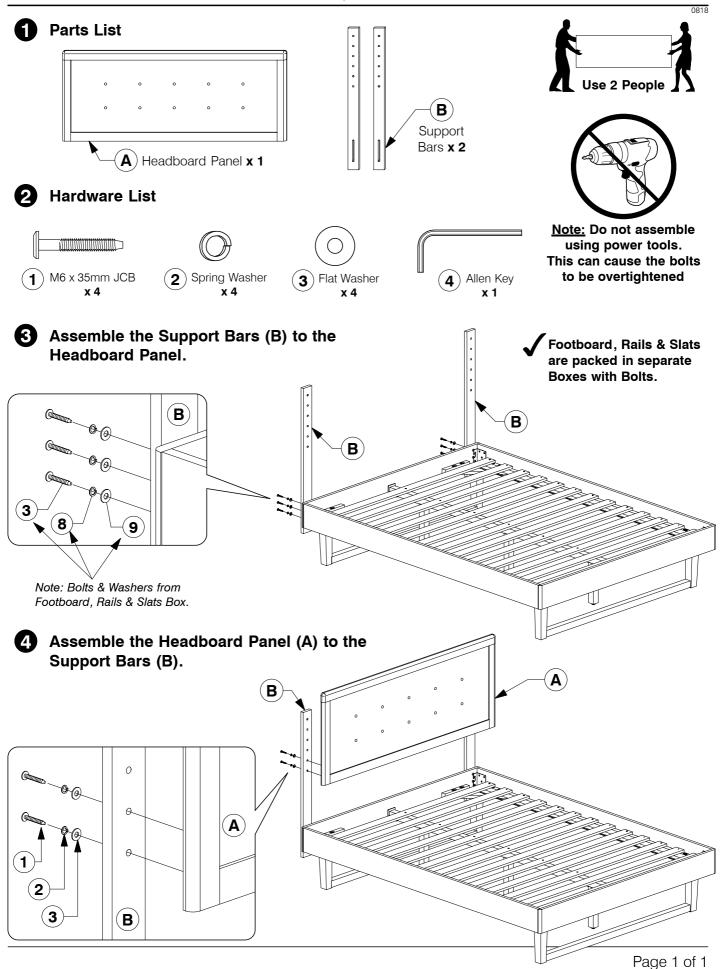

Assembly Instructions

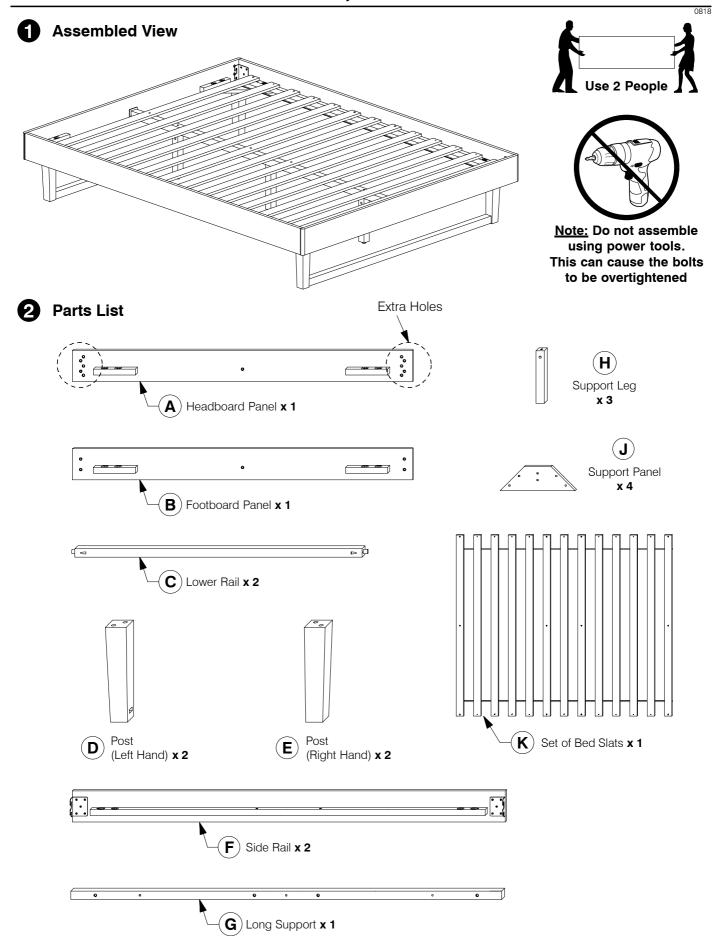


Assembly Instructions

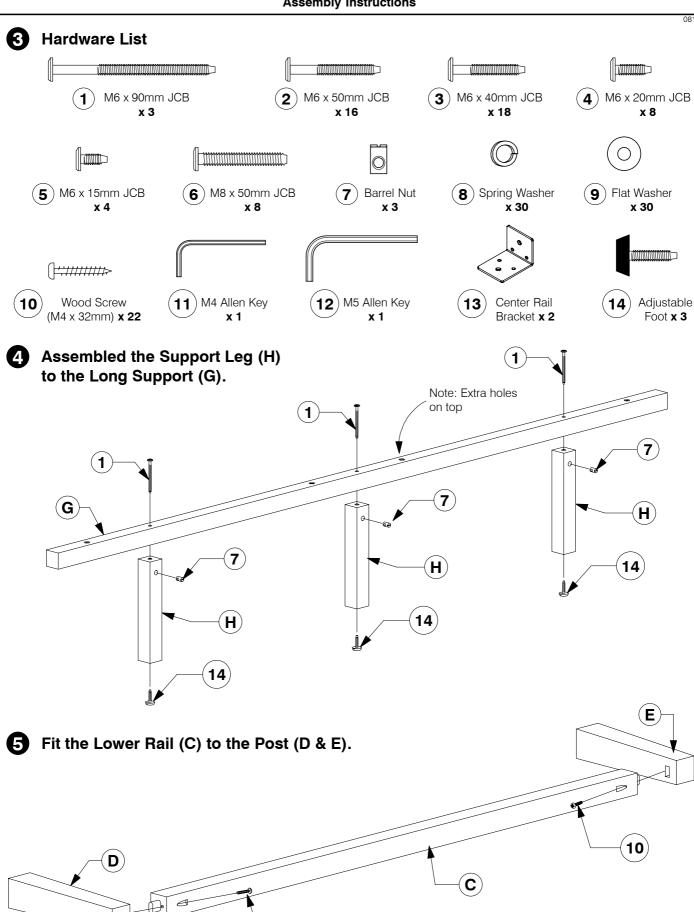


10

0818


6 Assemble the assembled Post (D & E) & Lower Rail (C) to the Support Panel (J).

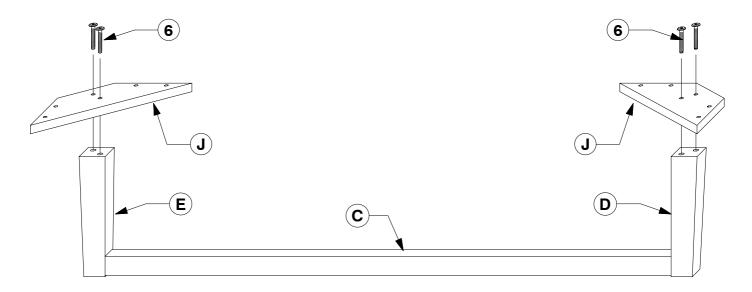


Fit the Center Rail Bracket to the Headboard Panel (A).

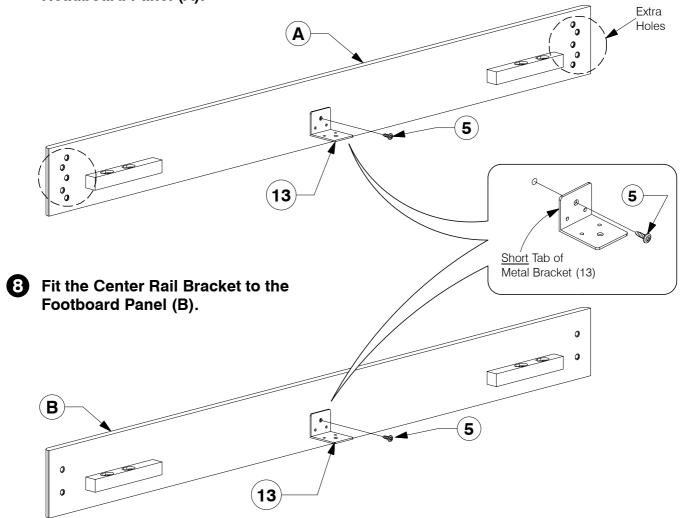

Assembly Instructions

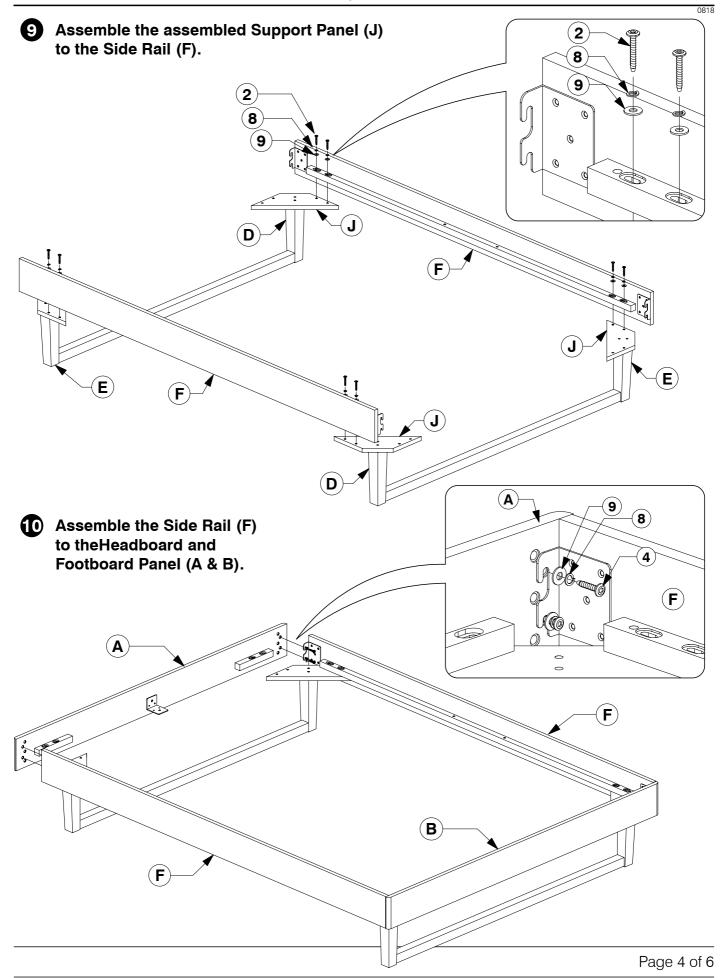


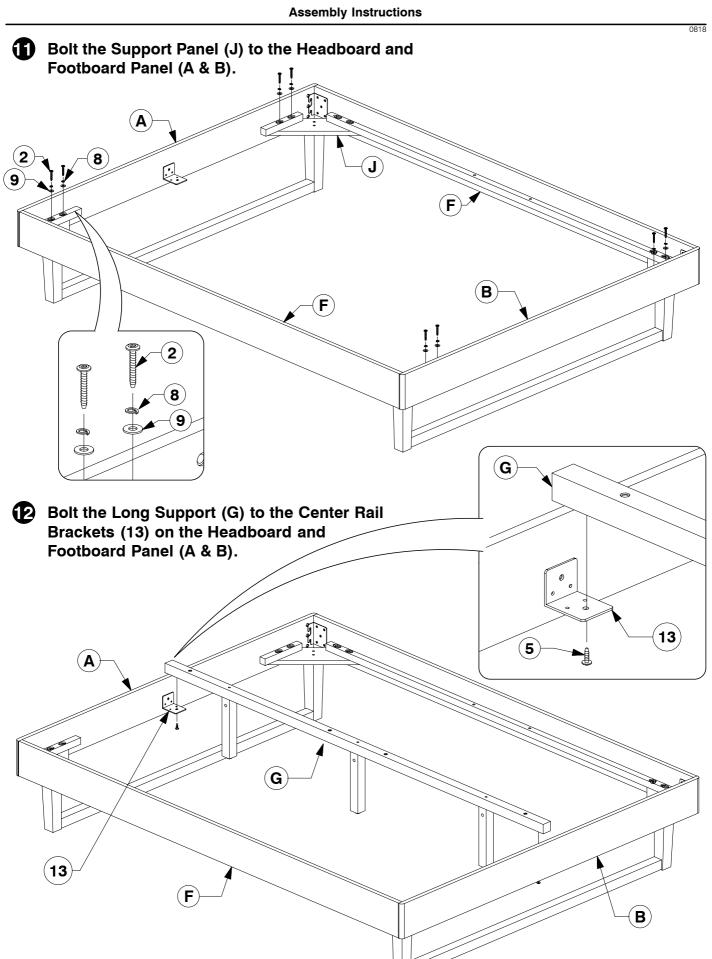

Page 5 of 6

1818

Bolt the Bed Slats (K) to the Side Rail (F).

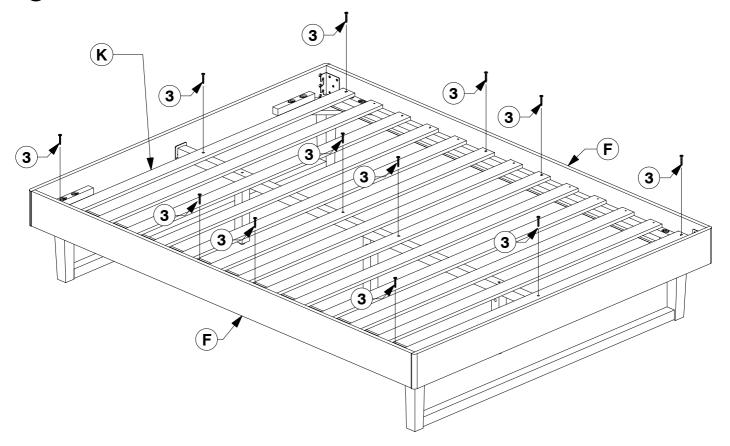

Screw the Bed Slats (K) to the Side Rail (F).

