
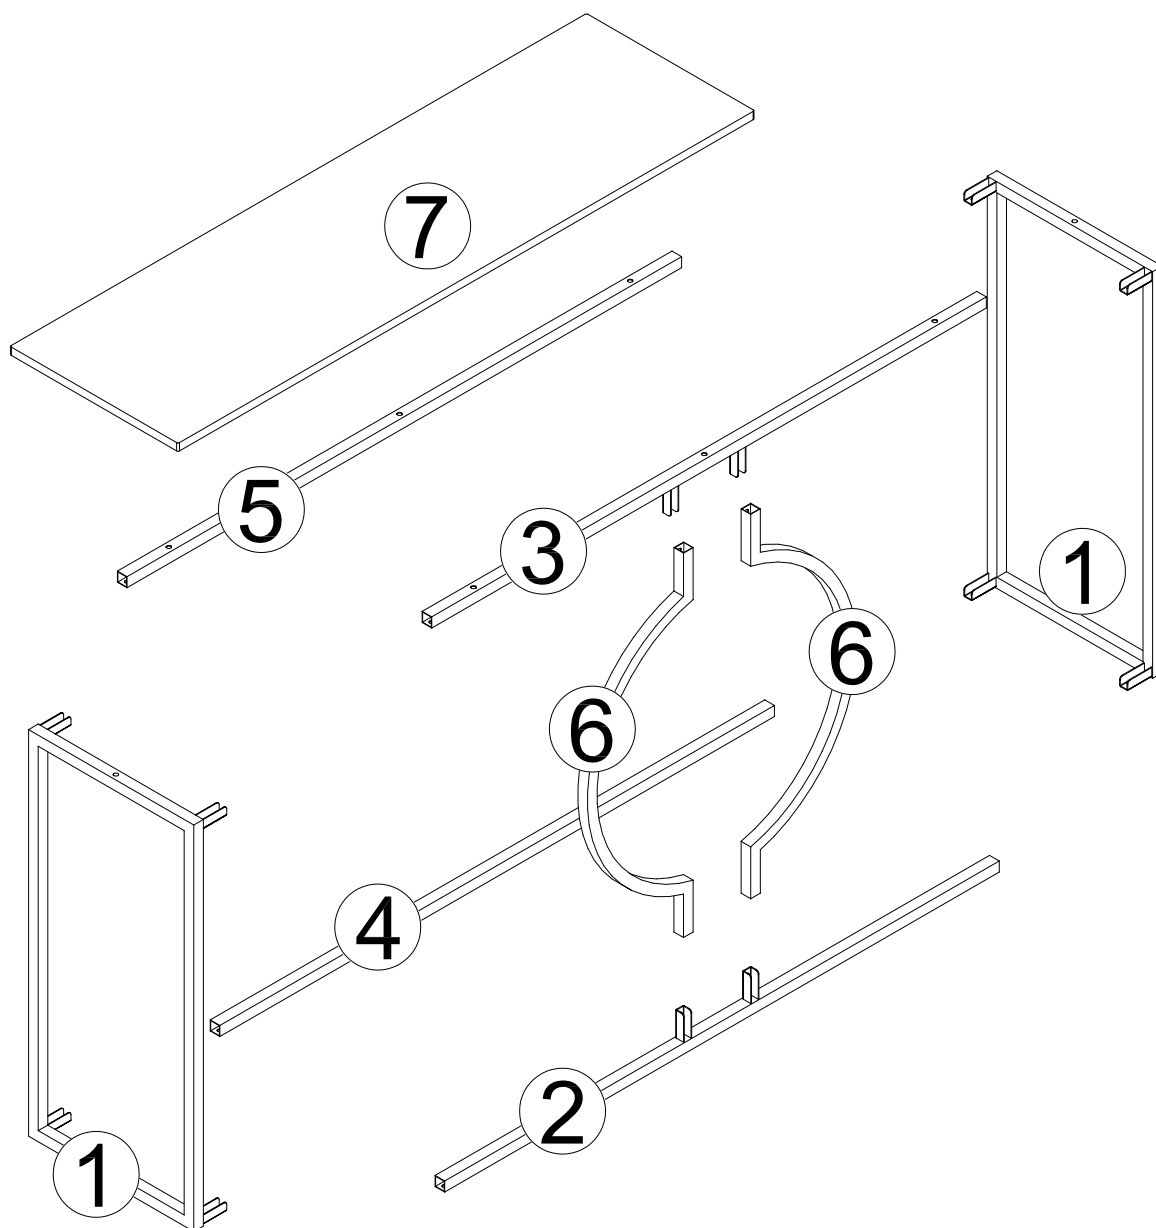



Assembling Instruction

ITEM#: WS-12218


Attention: Do not tighten the screws until all of them are in right positions

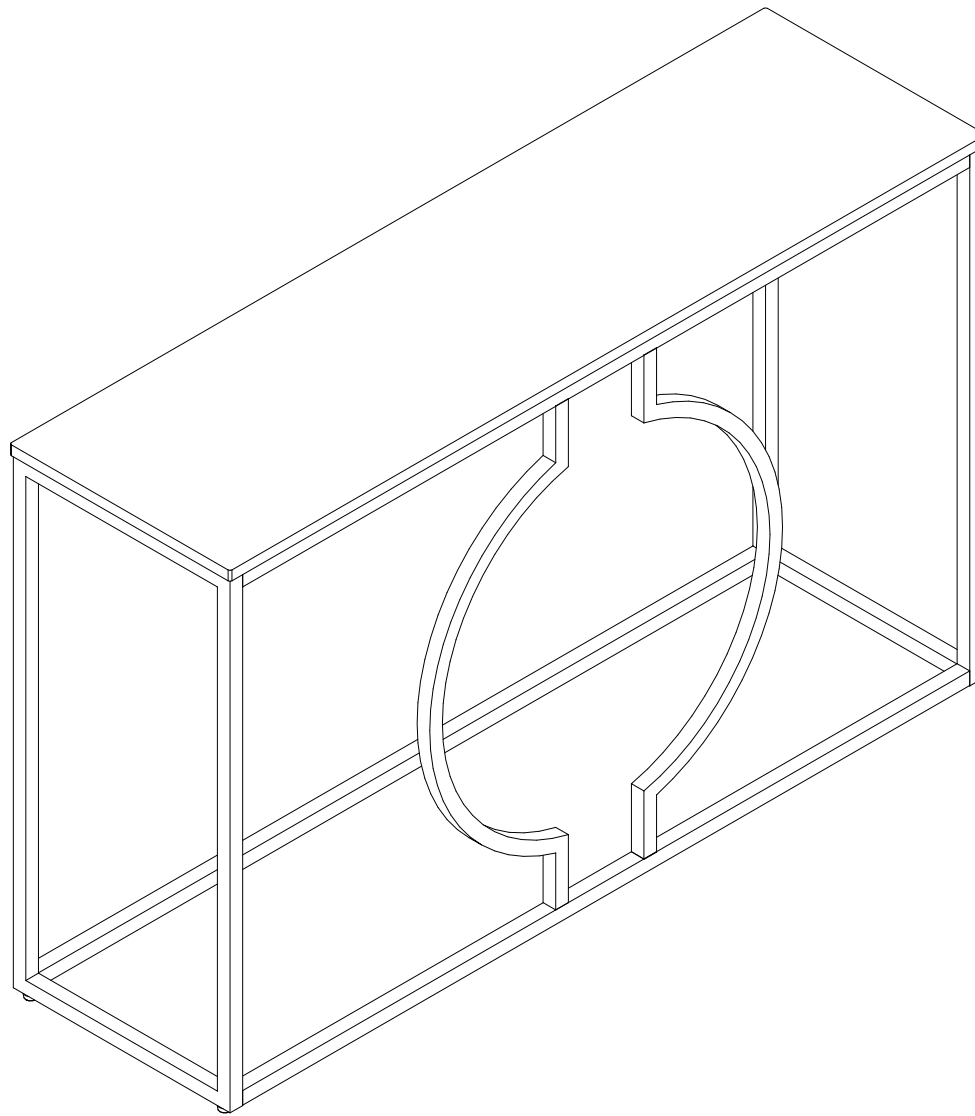

A x 4




B x 24




M6x12

C x 8



M6x30

D x 2




ST4x14

E x 2




Ø6

F x 1




4mm


1

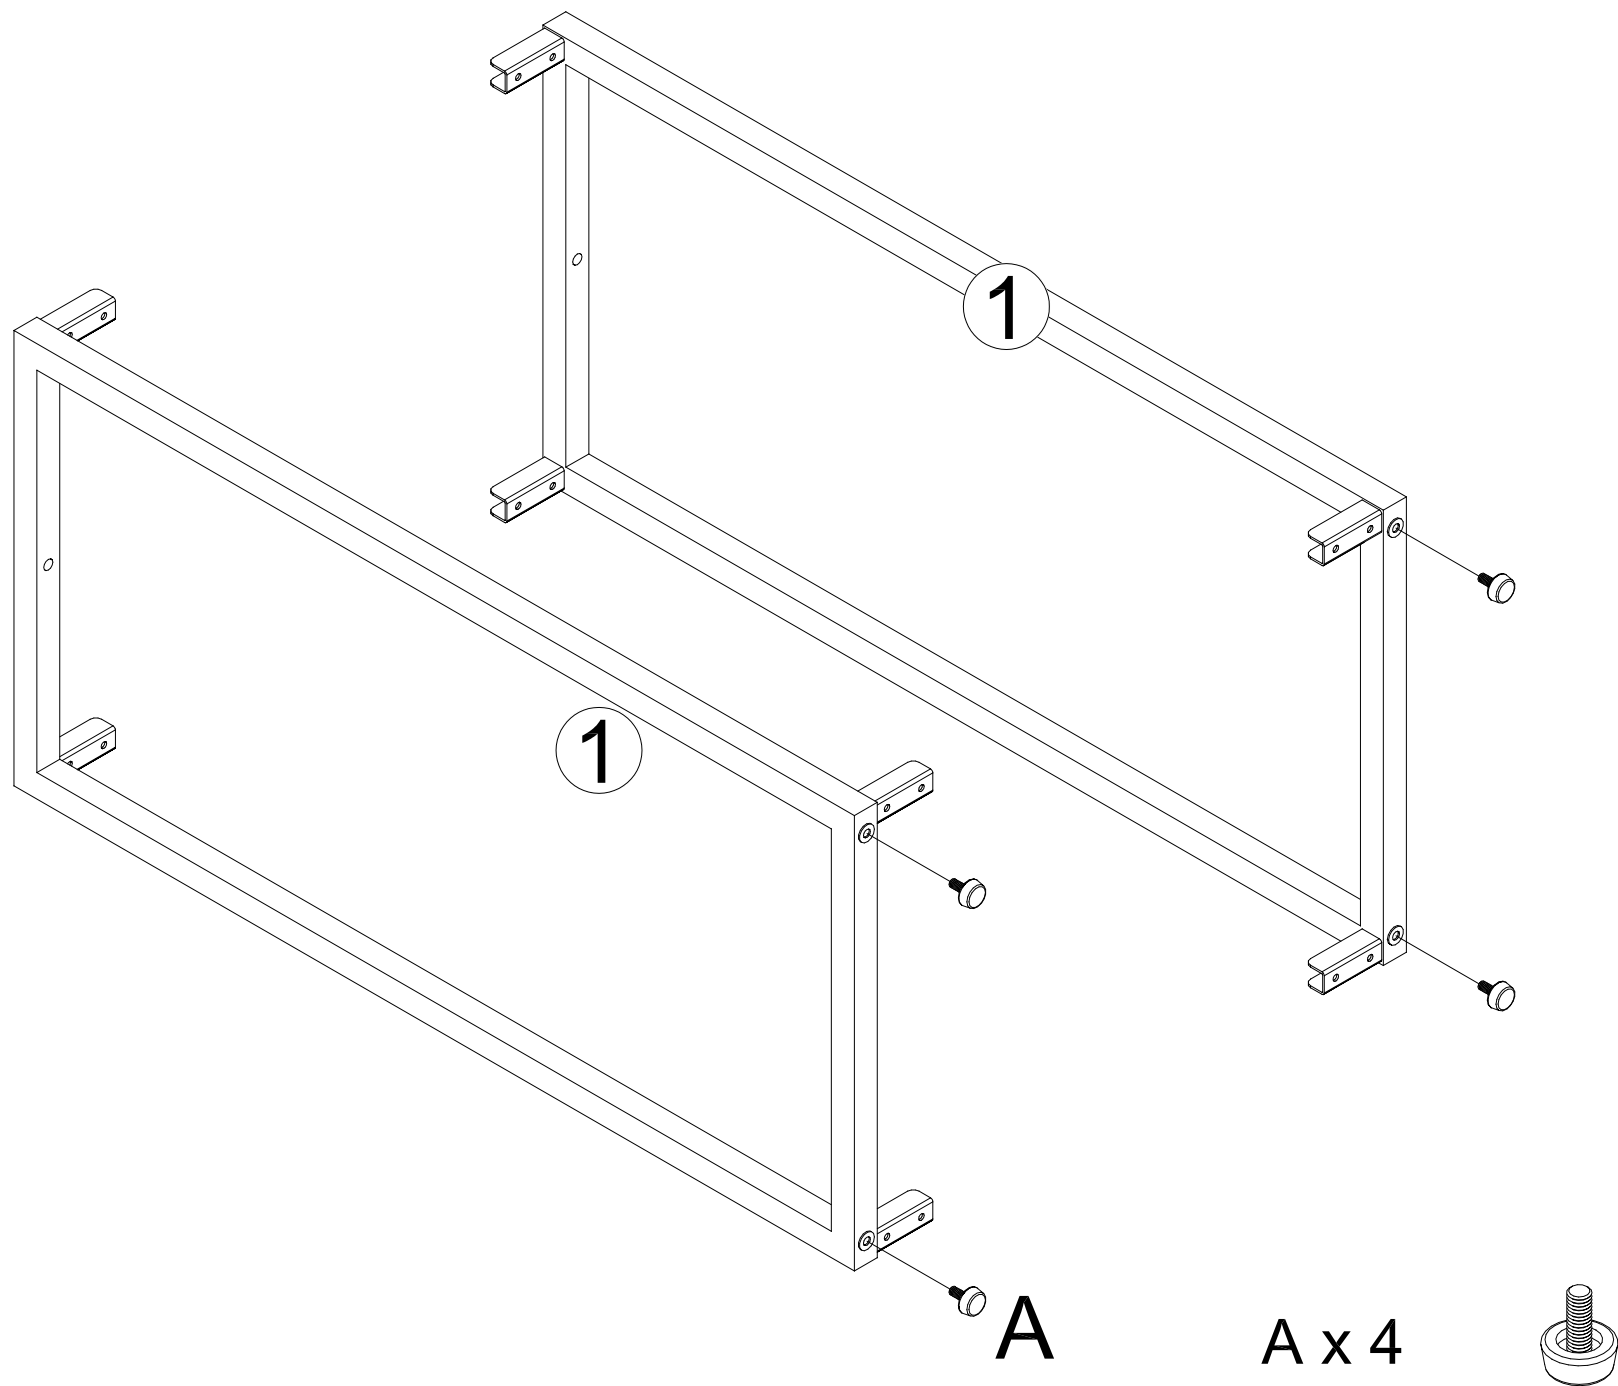

2

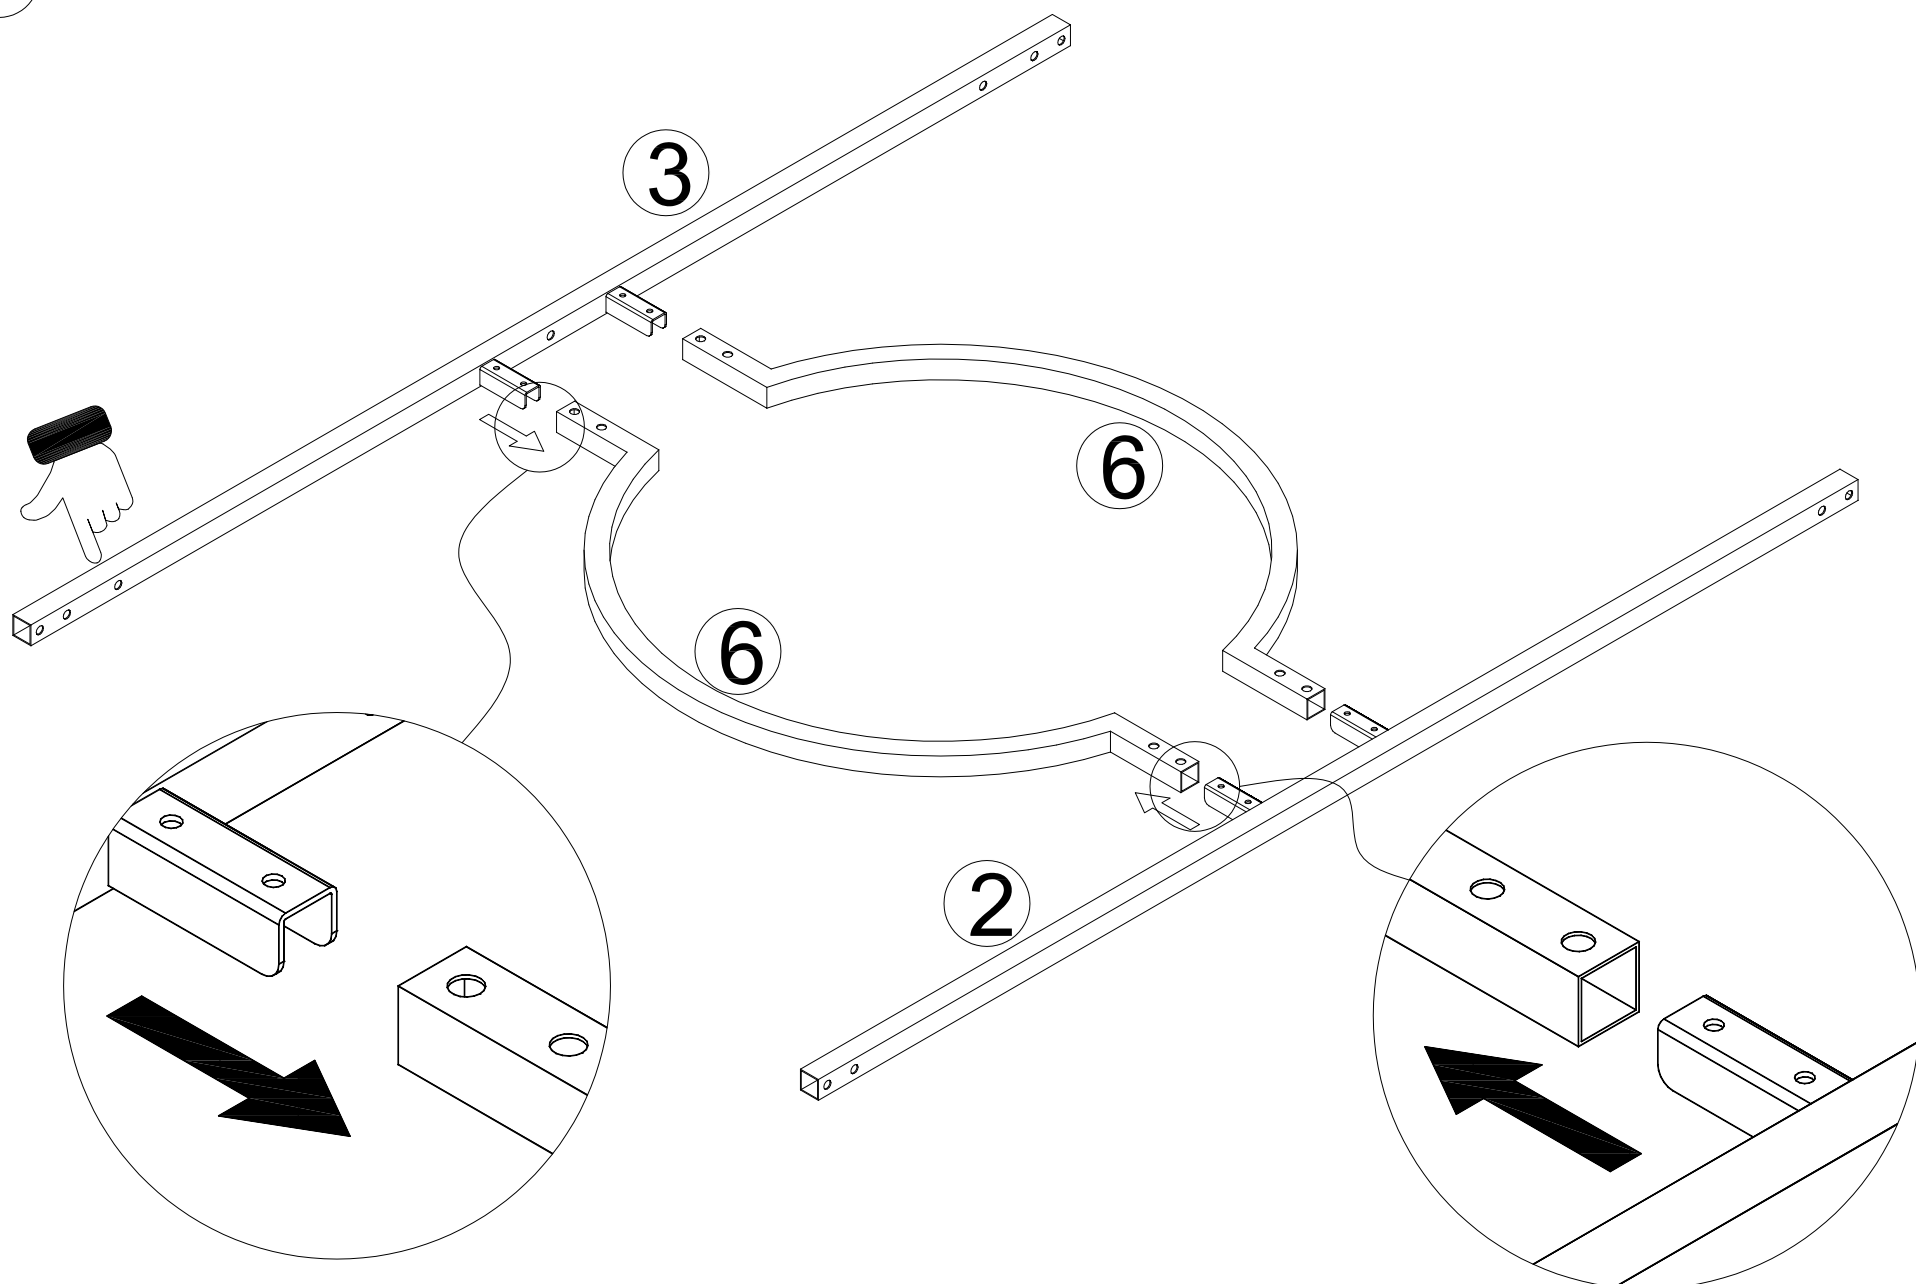


3

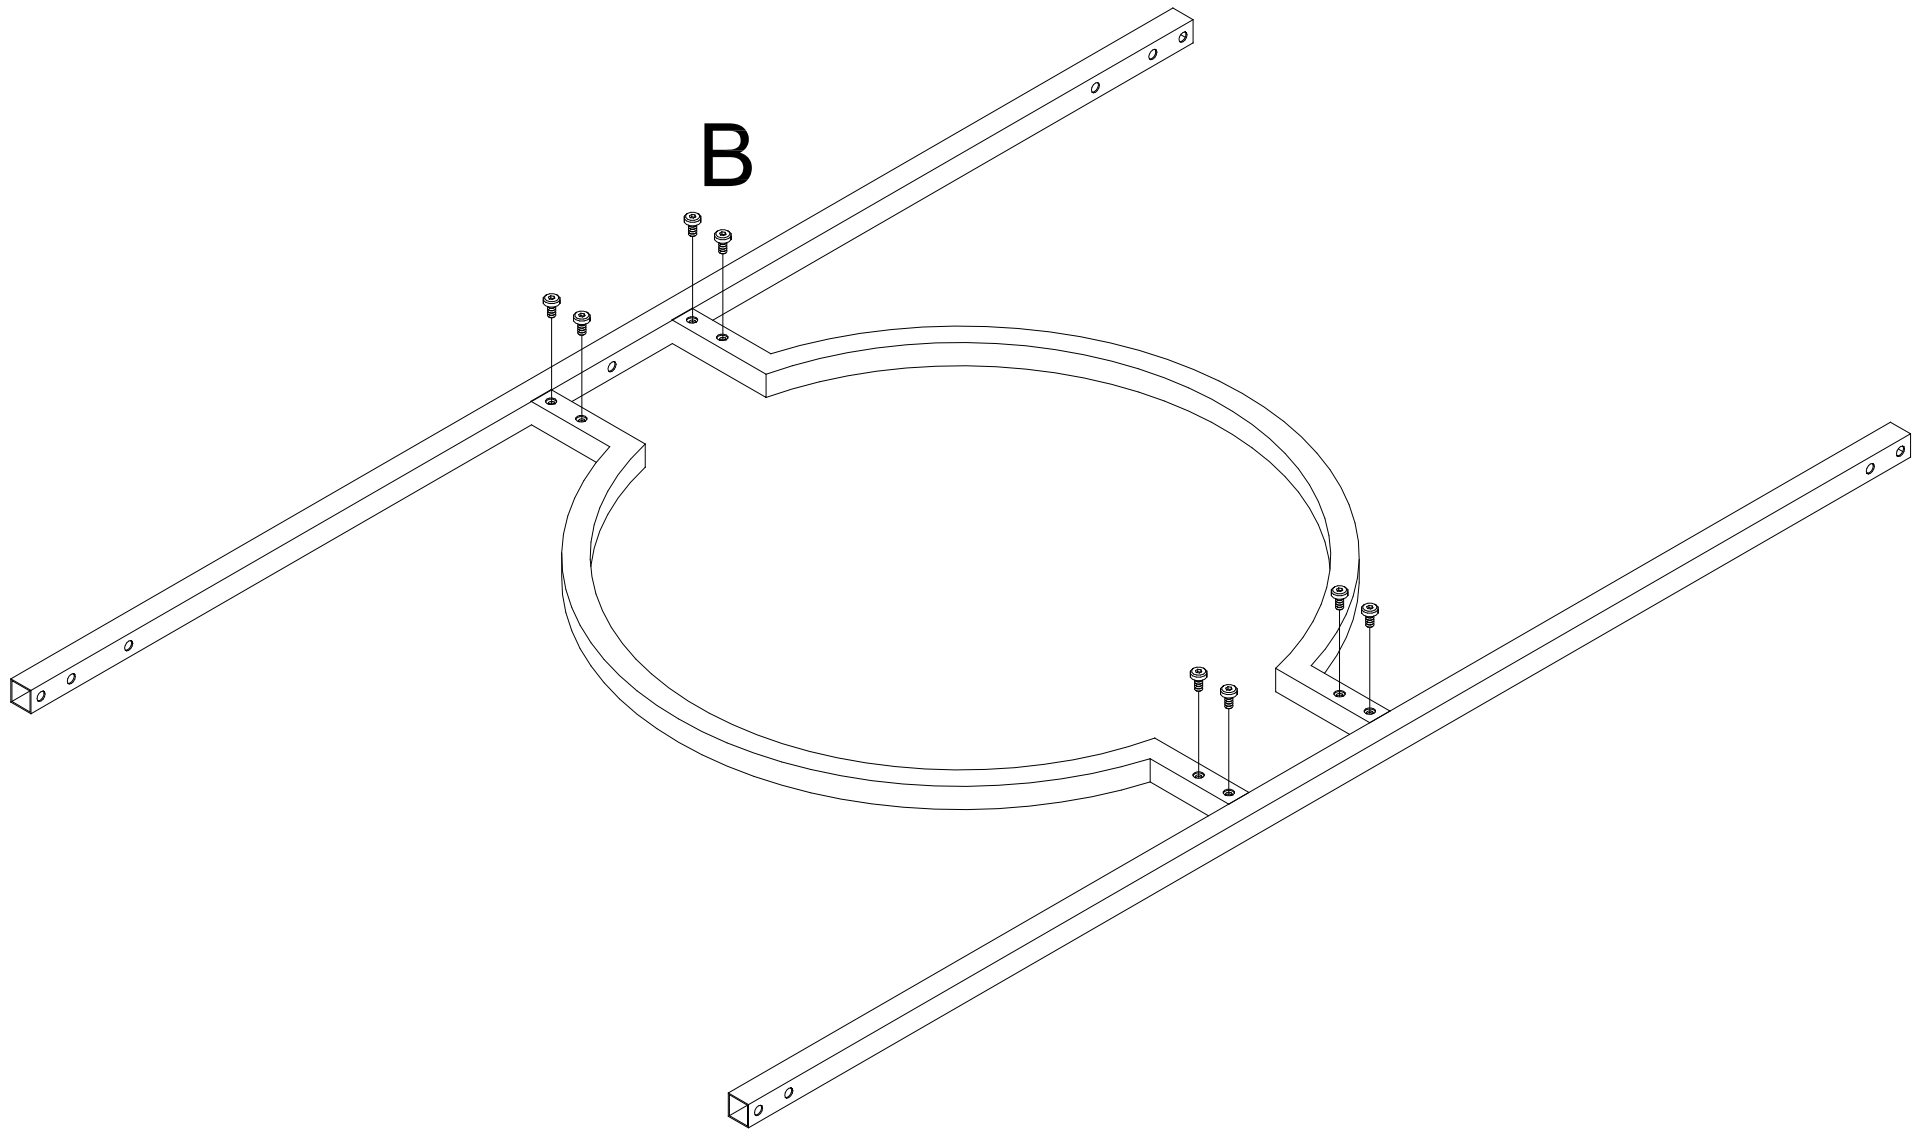


B x 8 


4

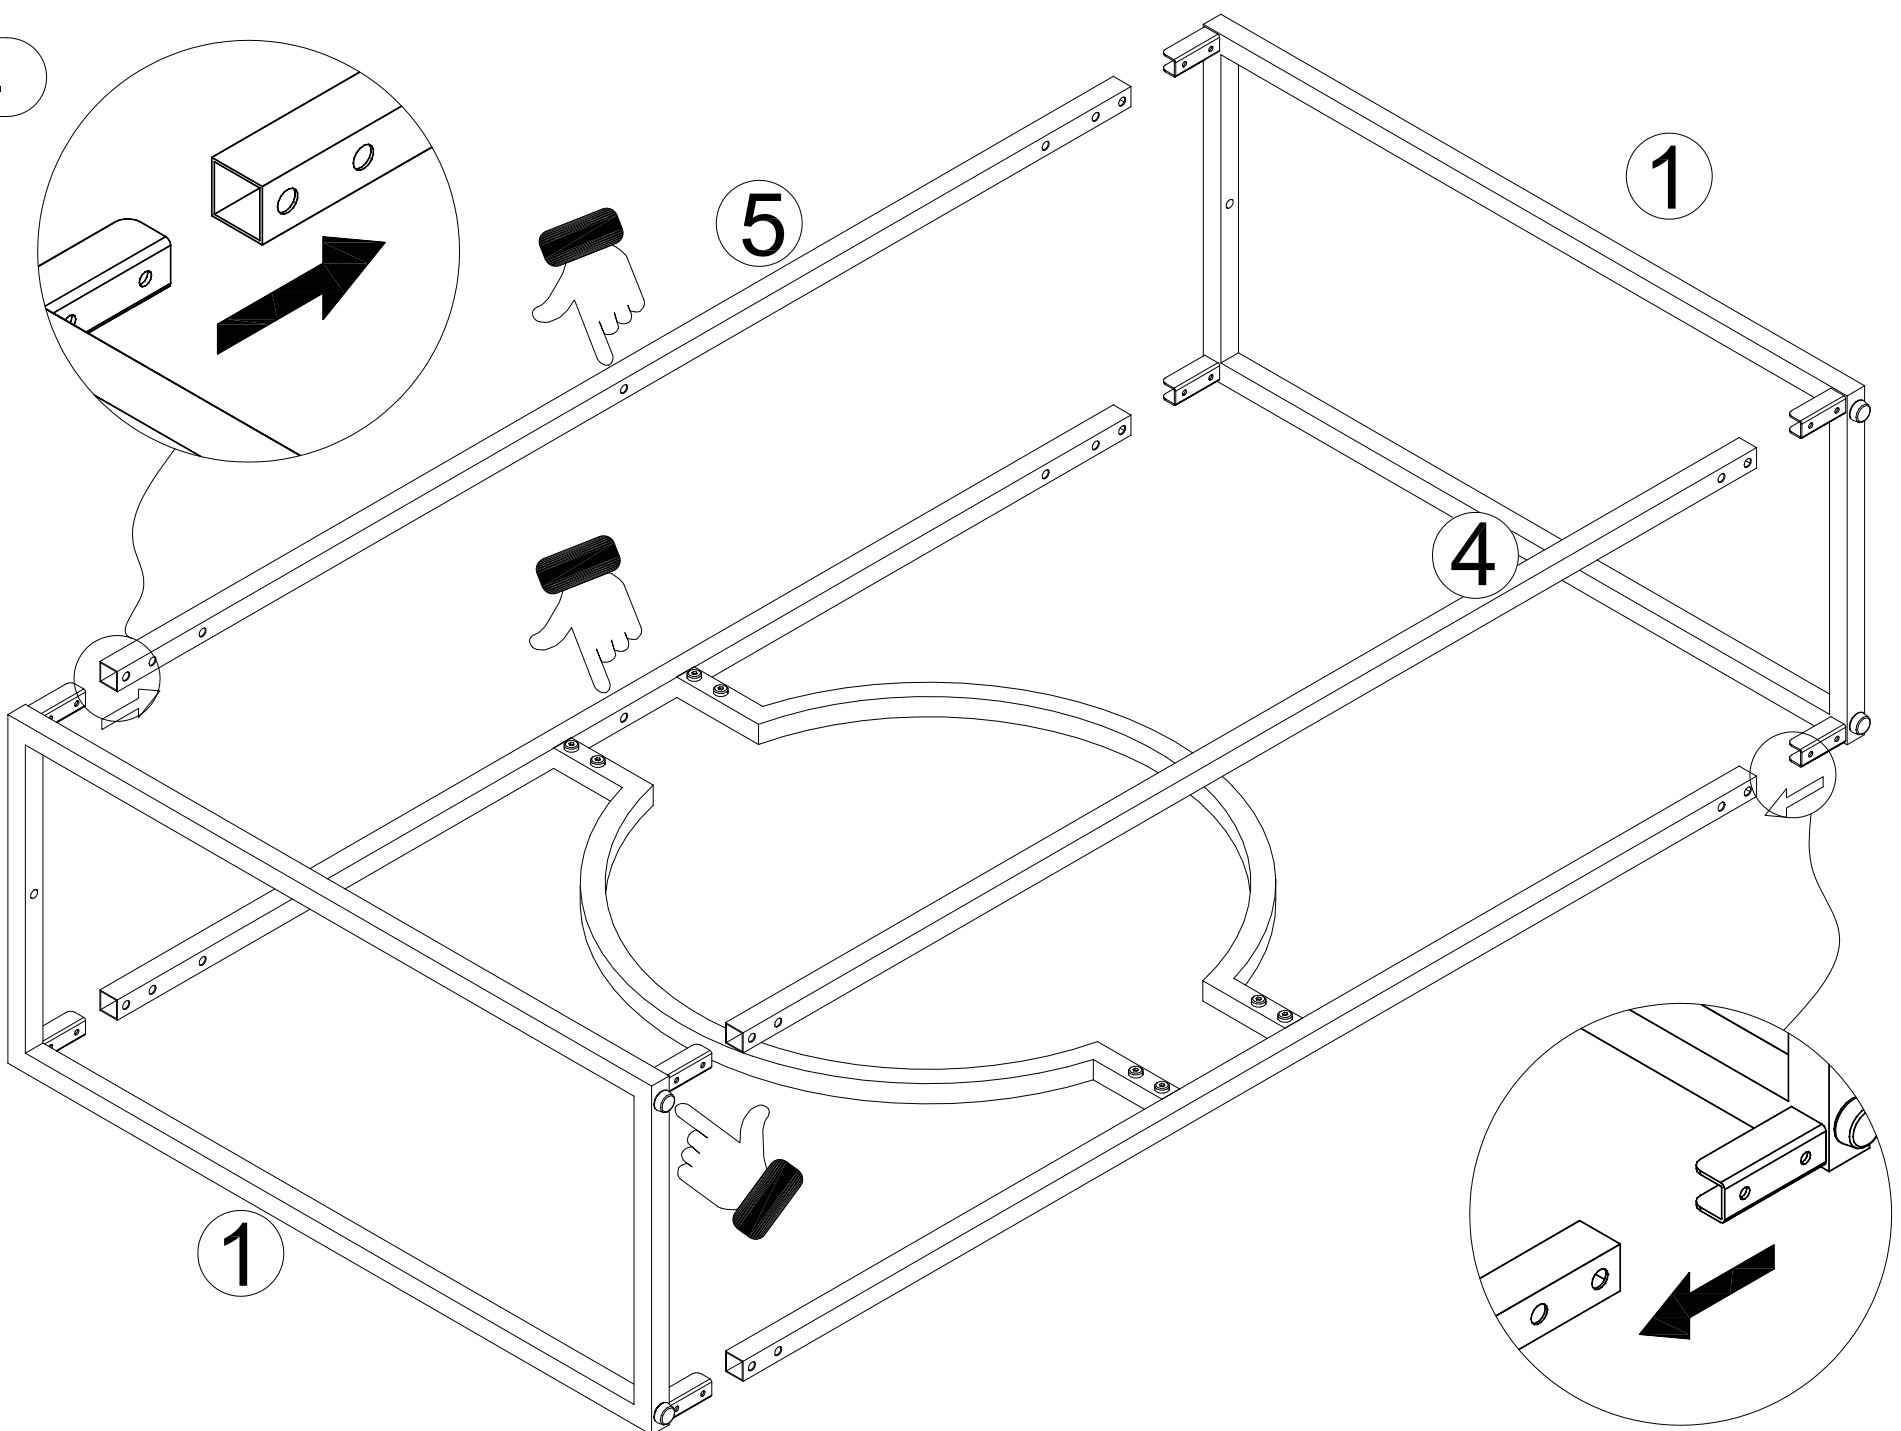



5

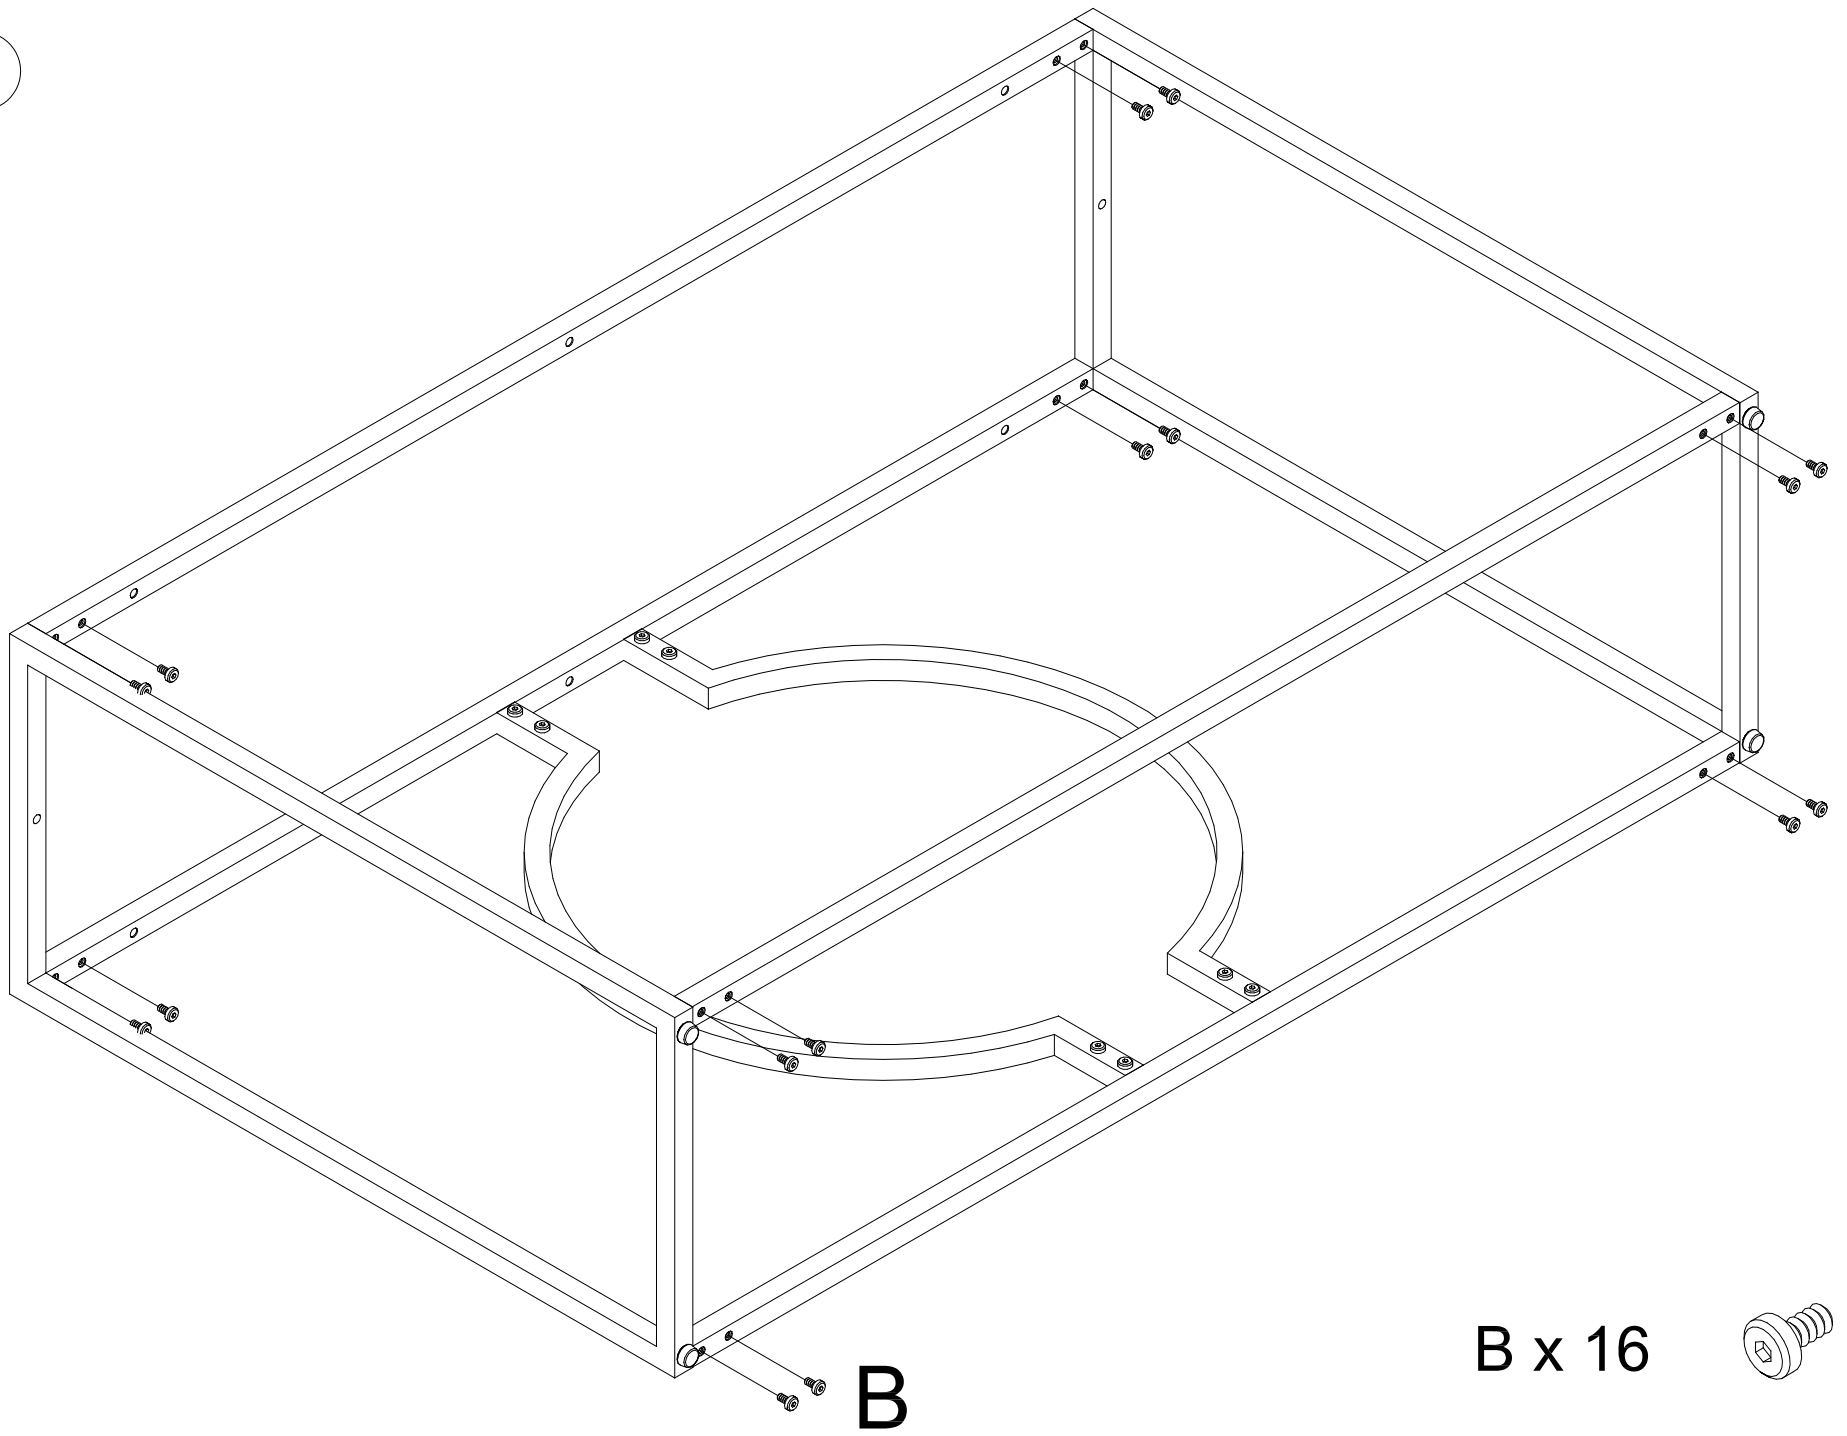

6

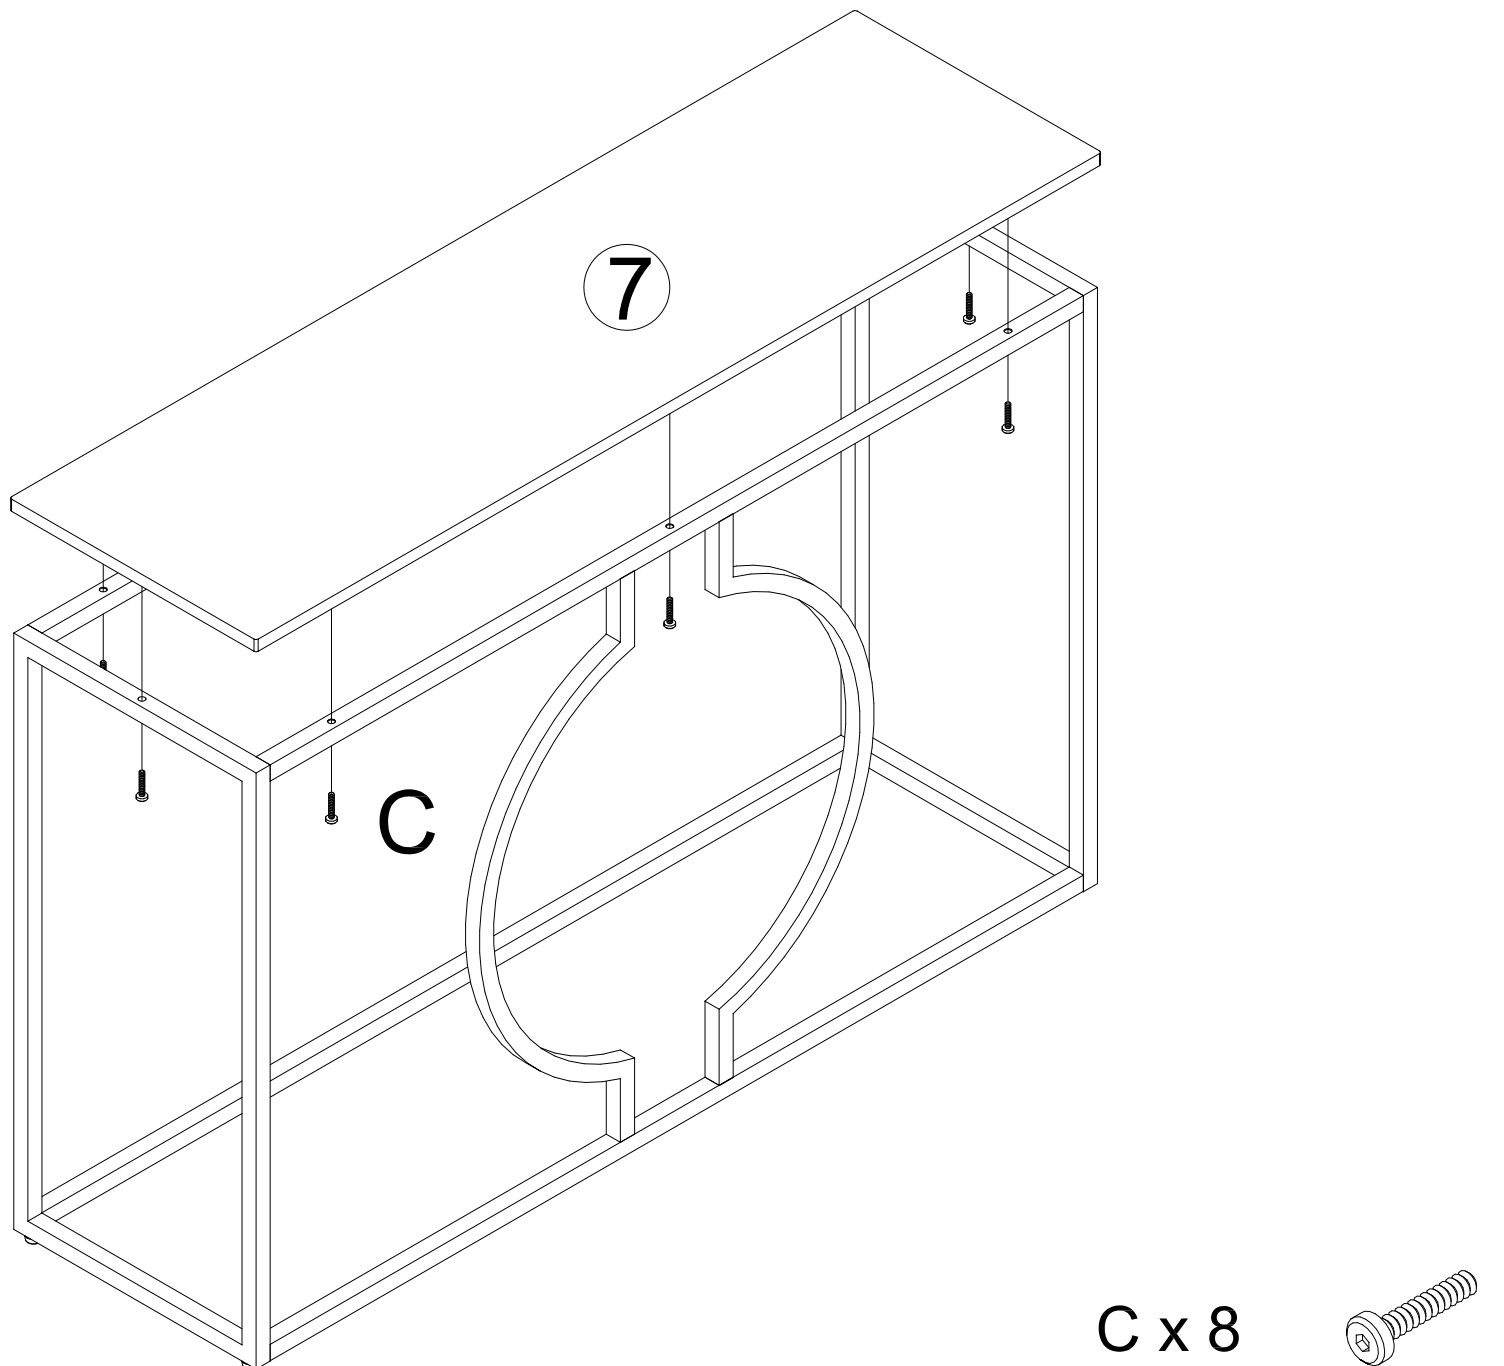

7

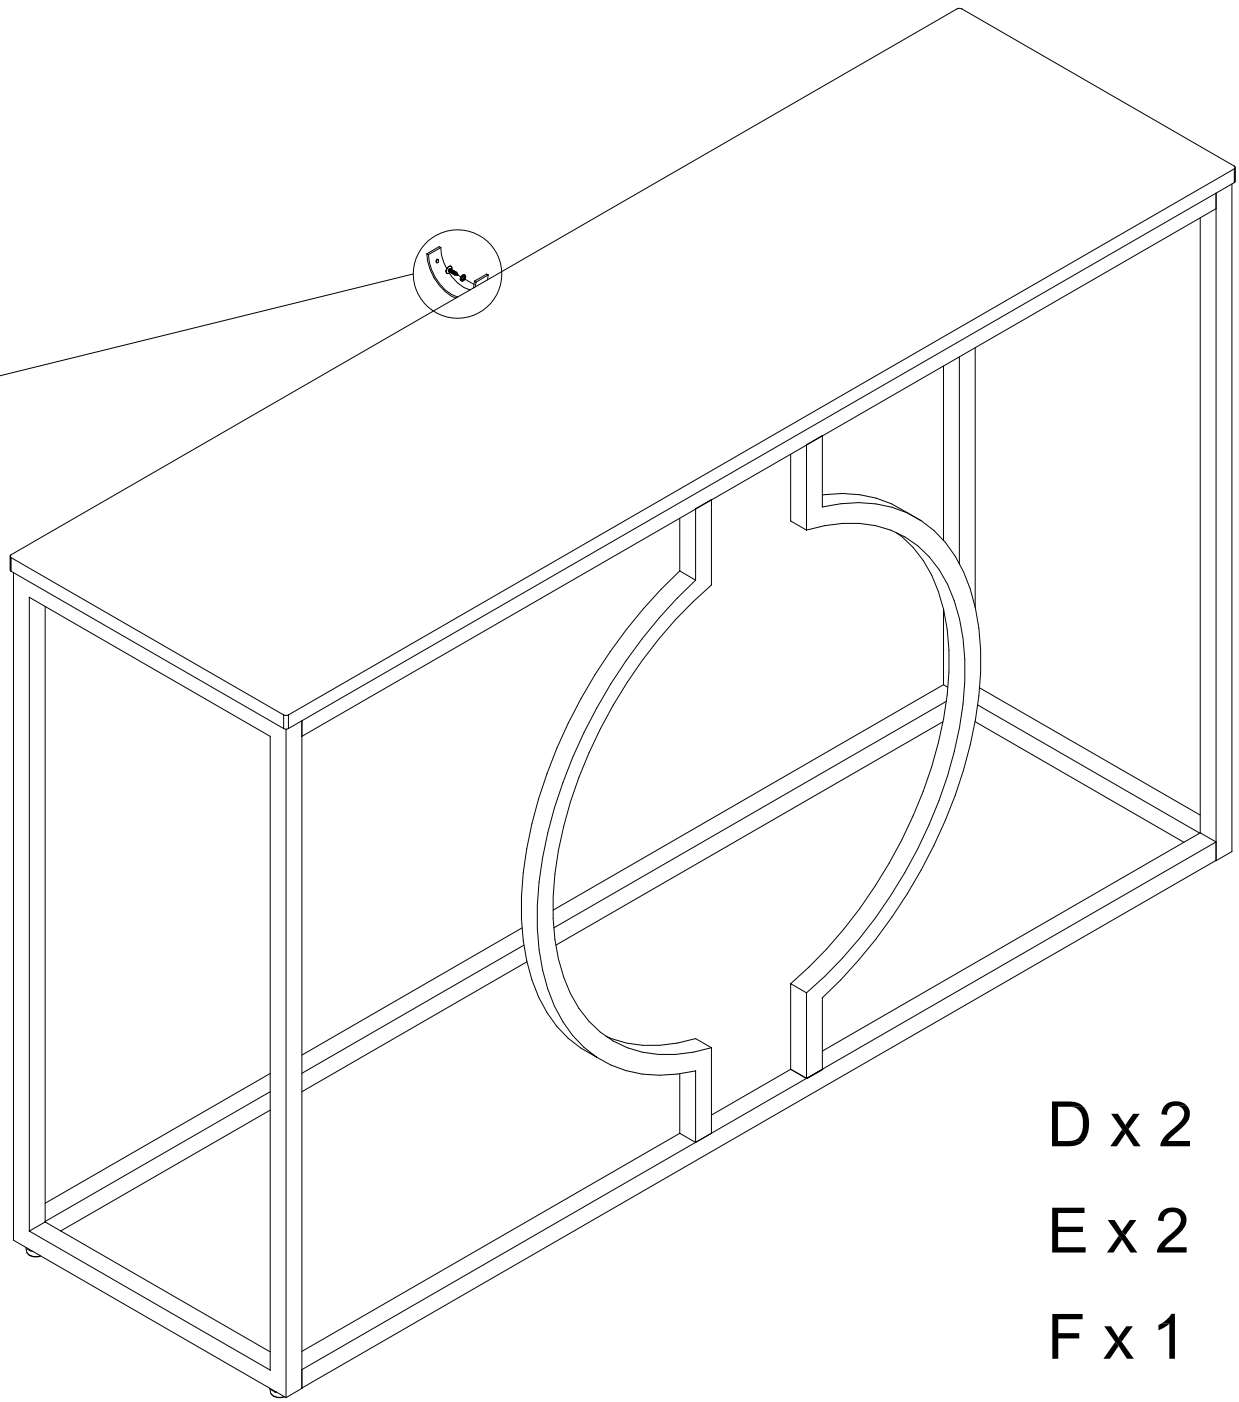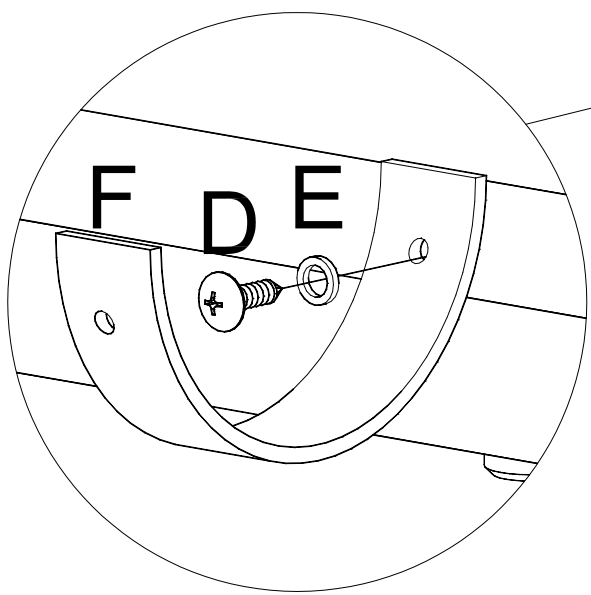

D x 2



E x 2



F x 1

