
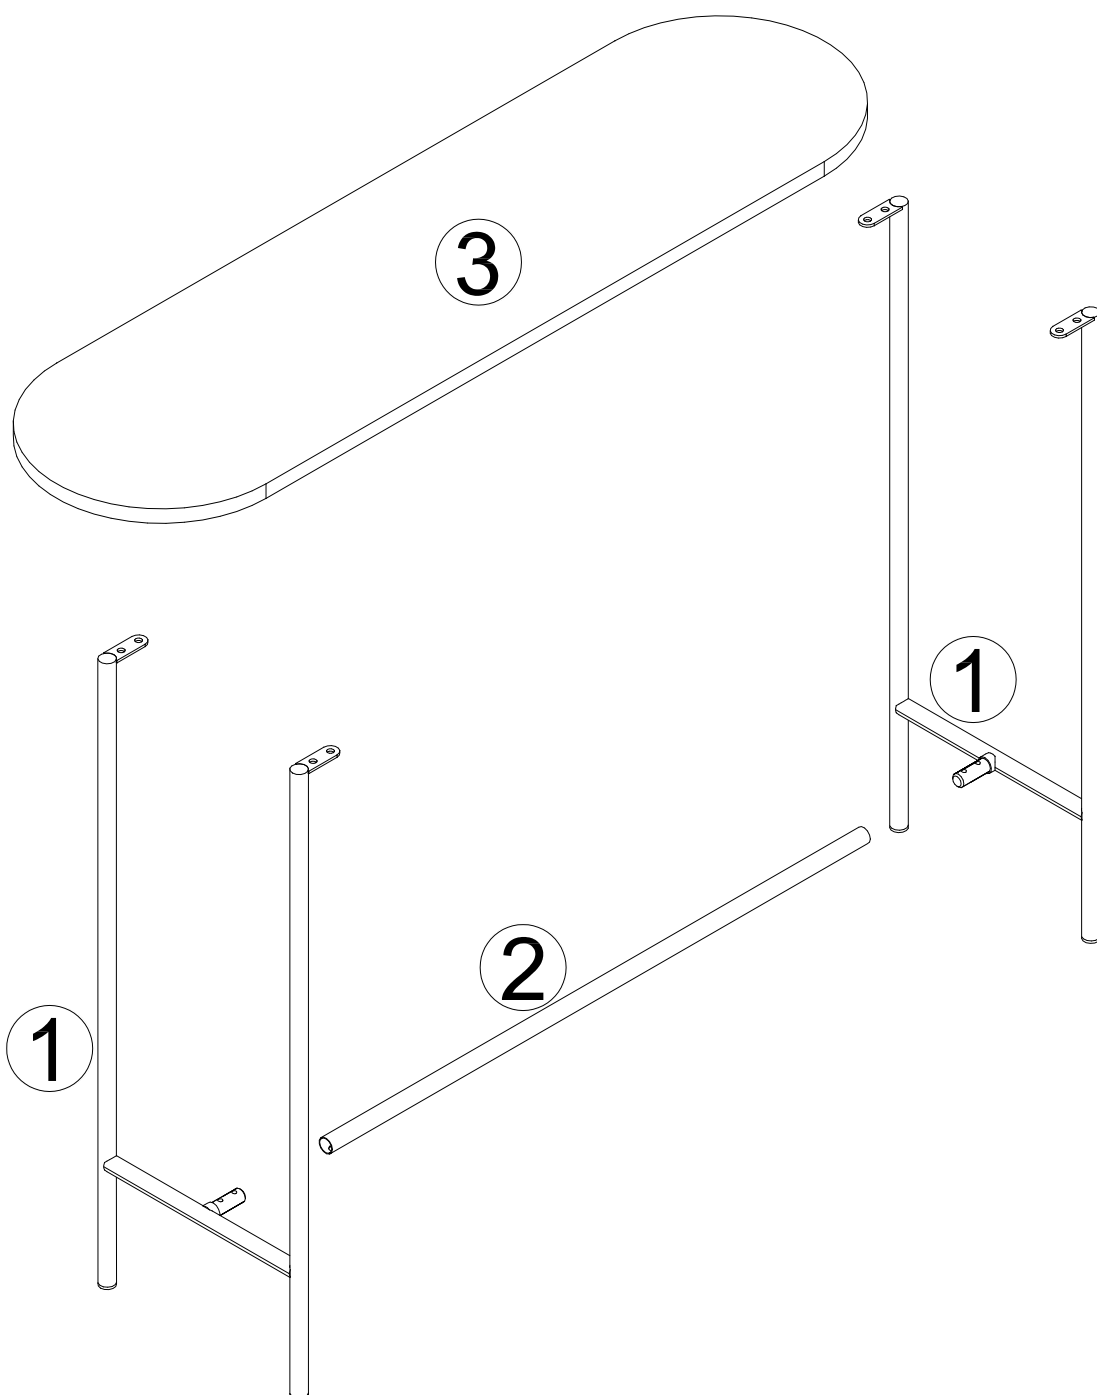



# Assembling Instruction

ITEM#: WS-12220


Attention: Do not tighten the screws until all of them are in right positions

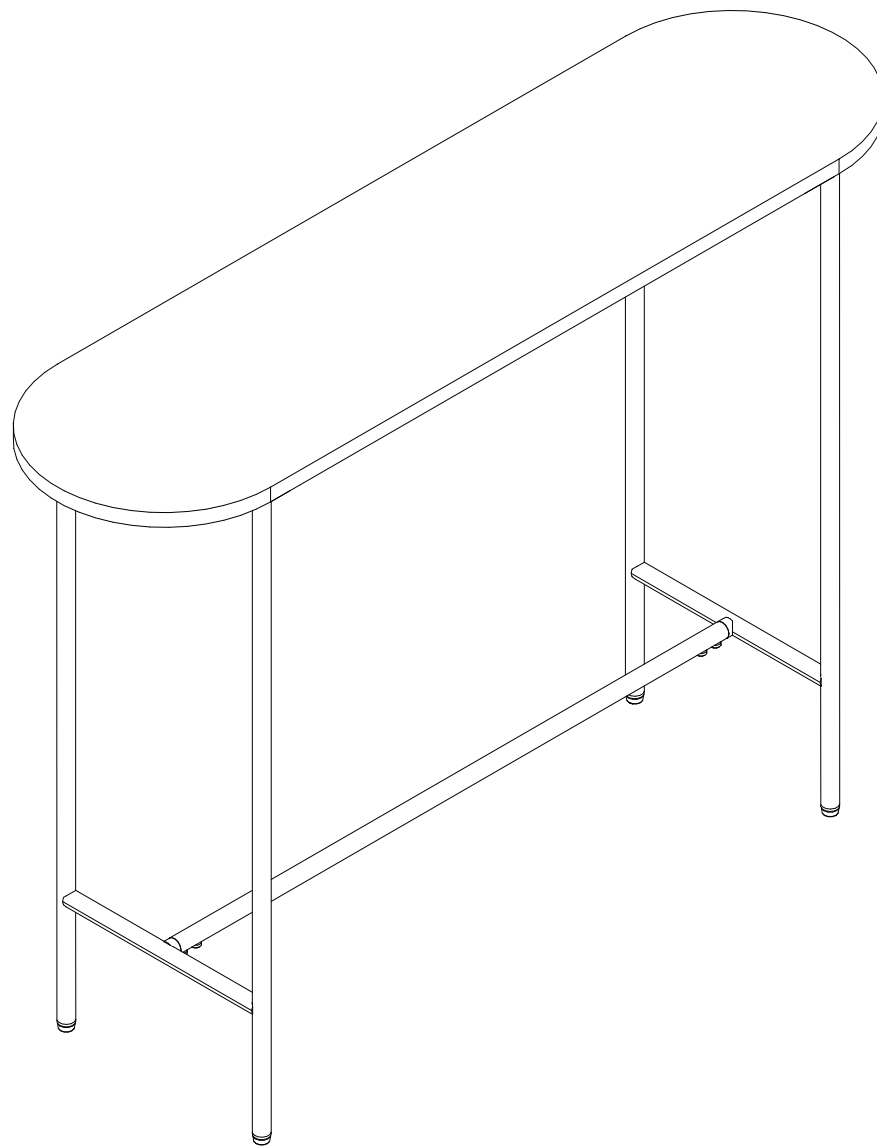

A x 4



B x 12



M6x12

C x 2




ST4x14

D x 2




Ø6

E x 1




4mm


1

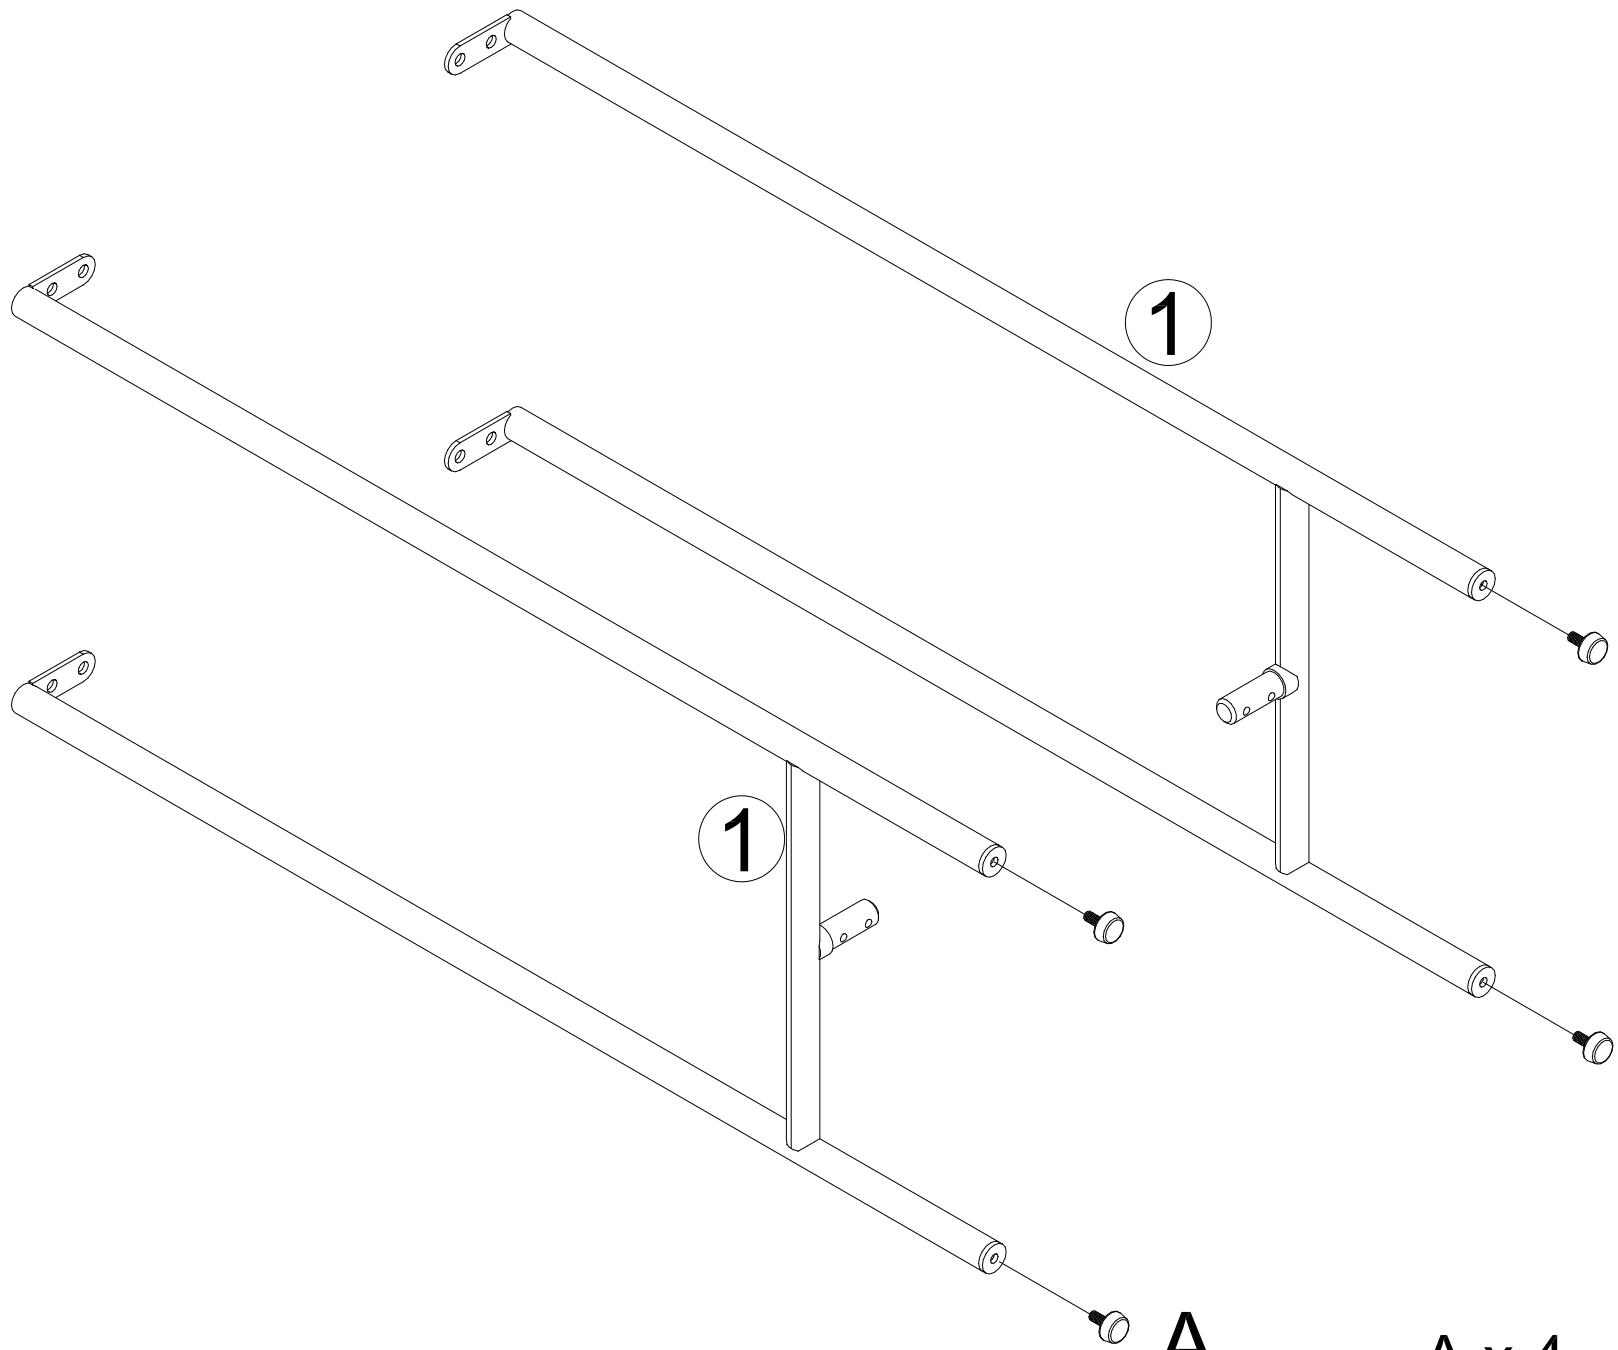


2

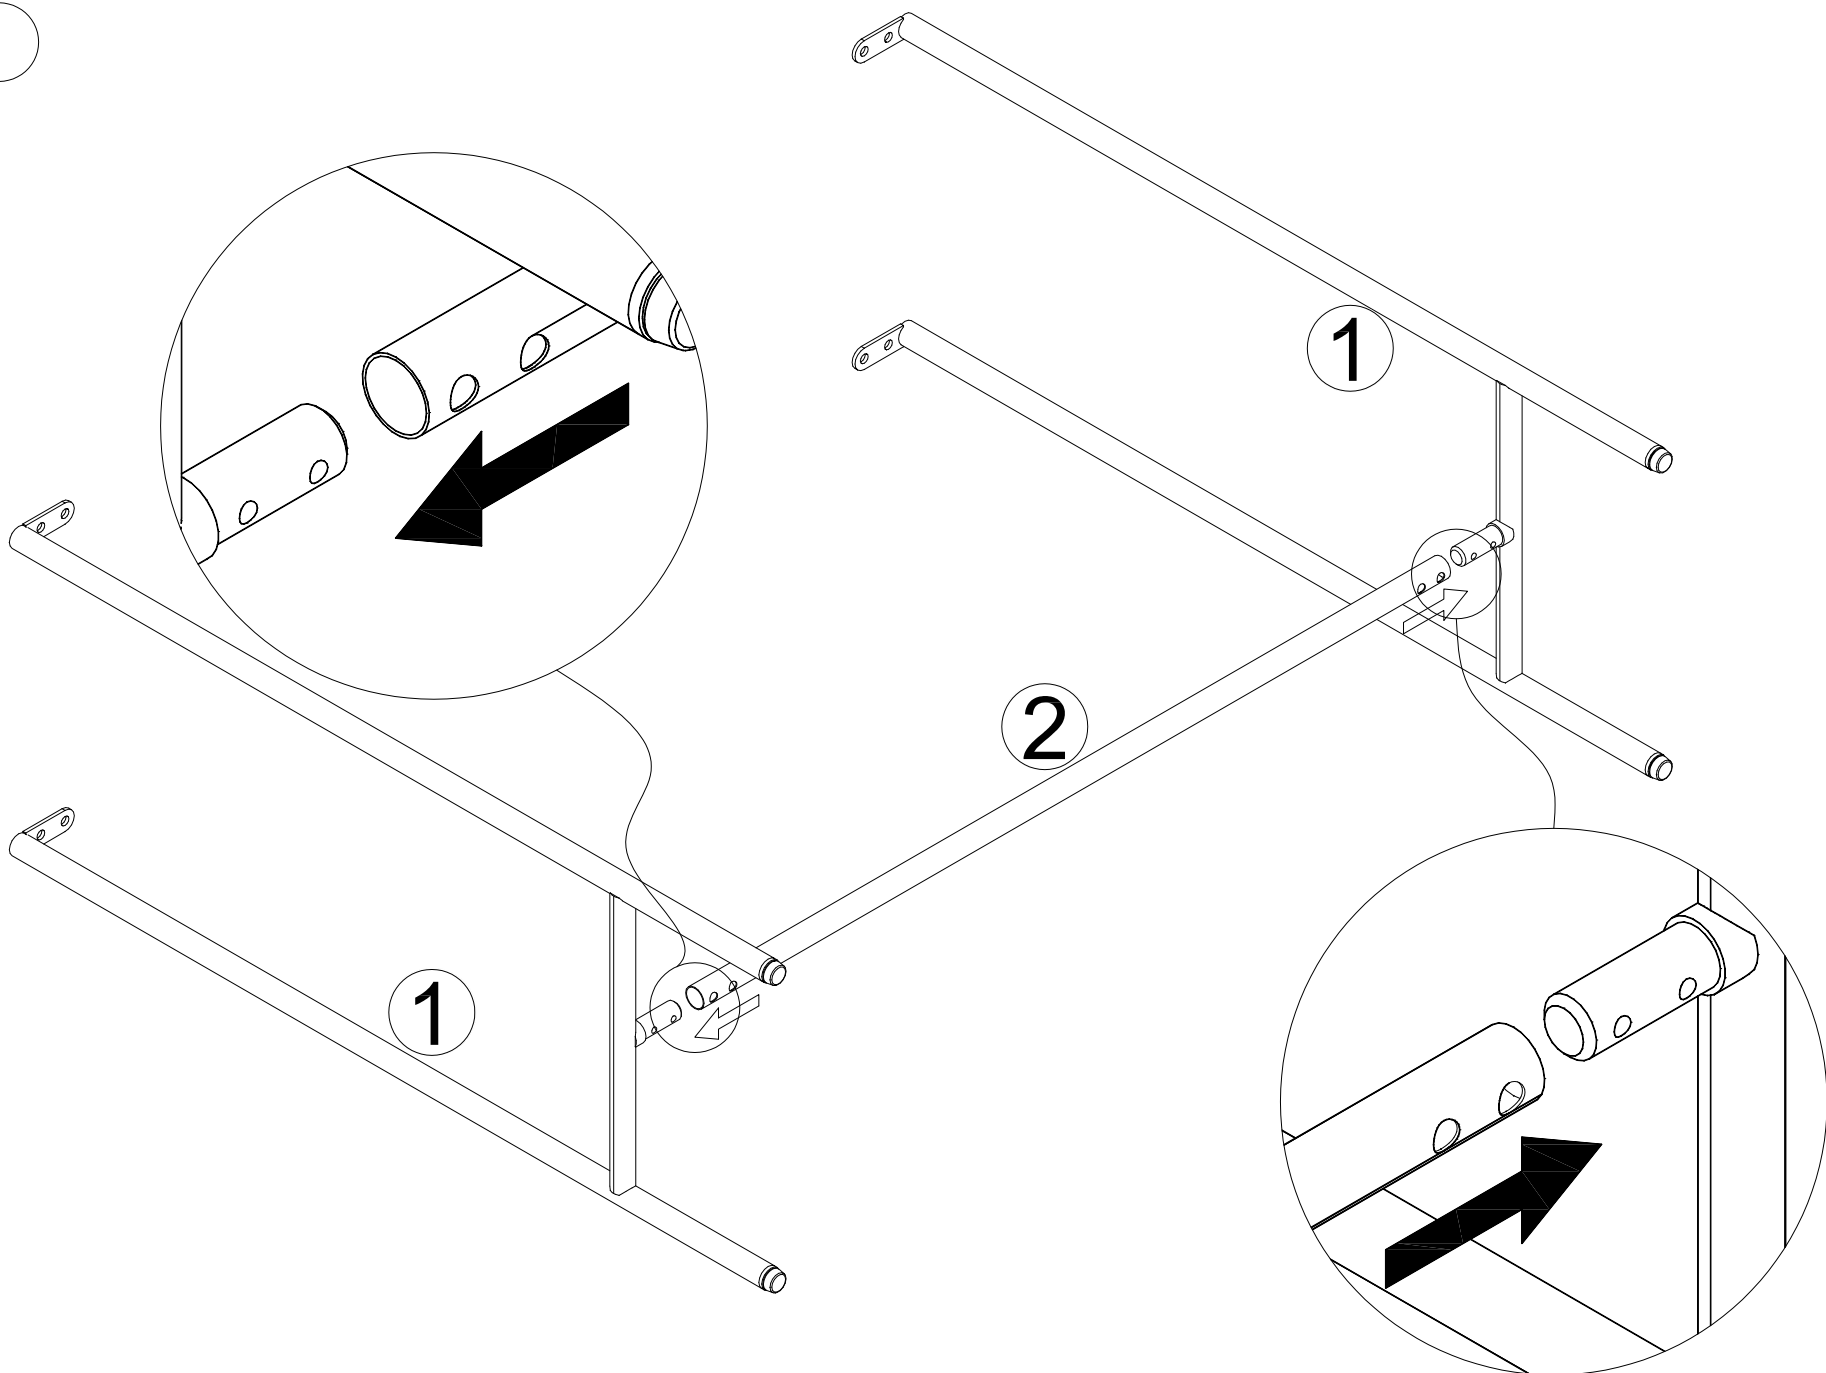


3

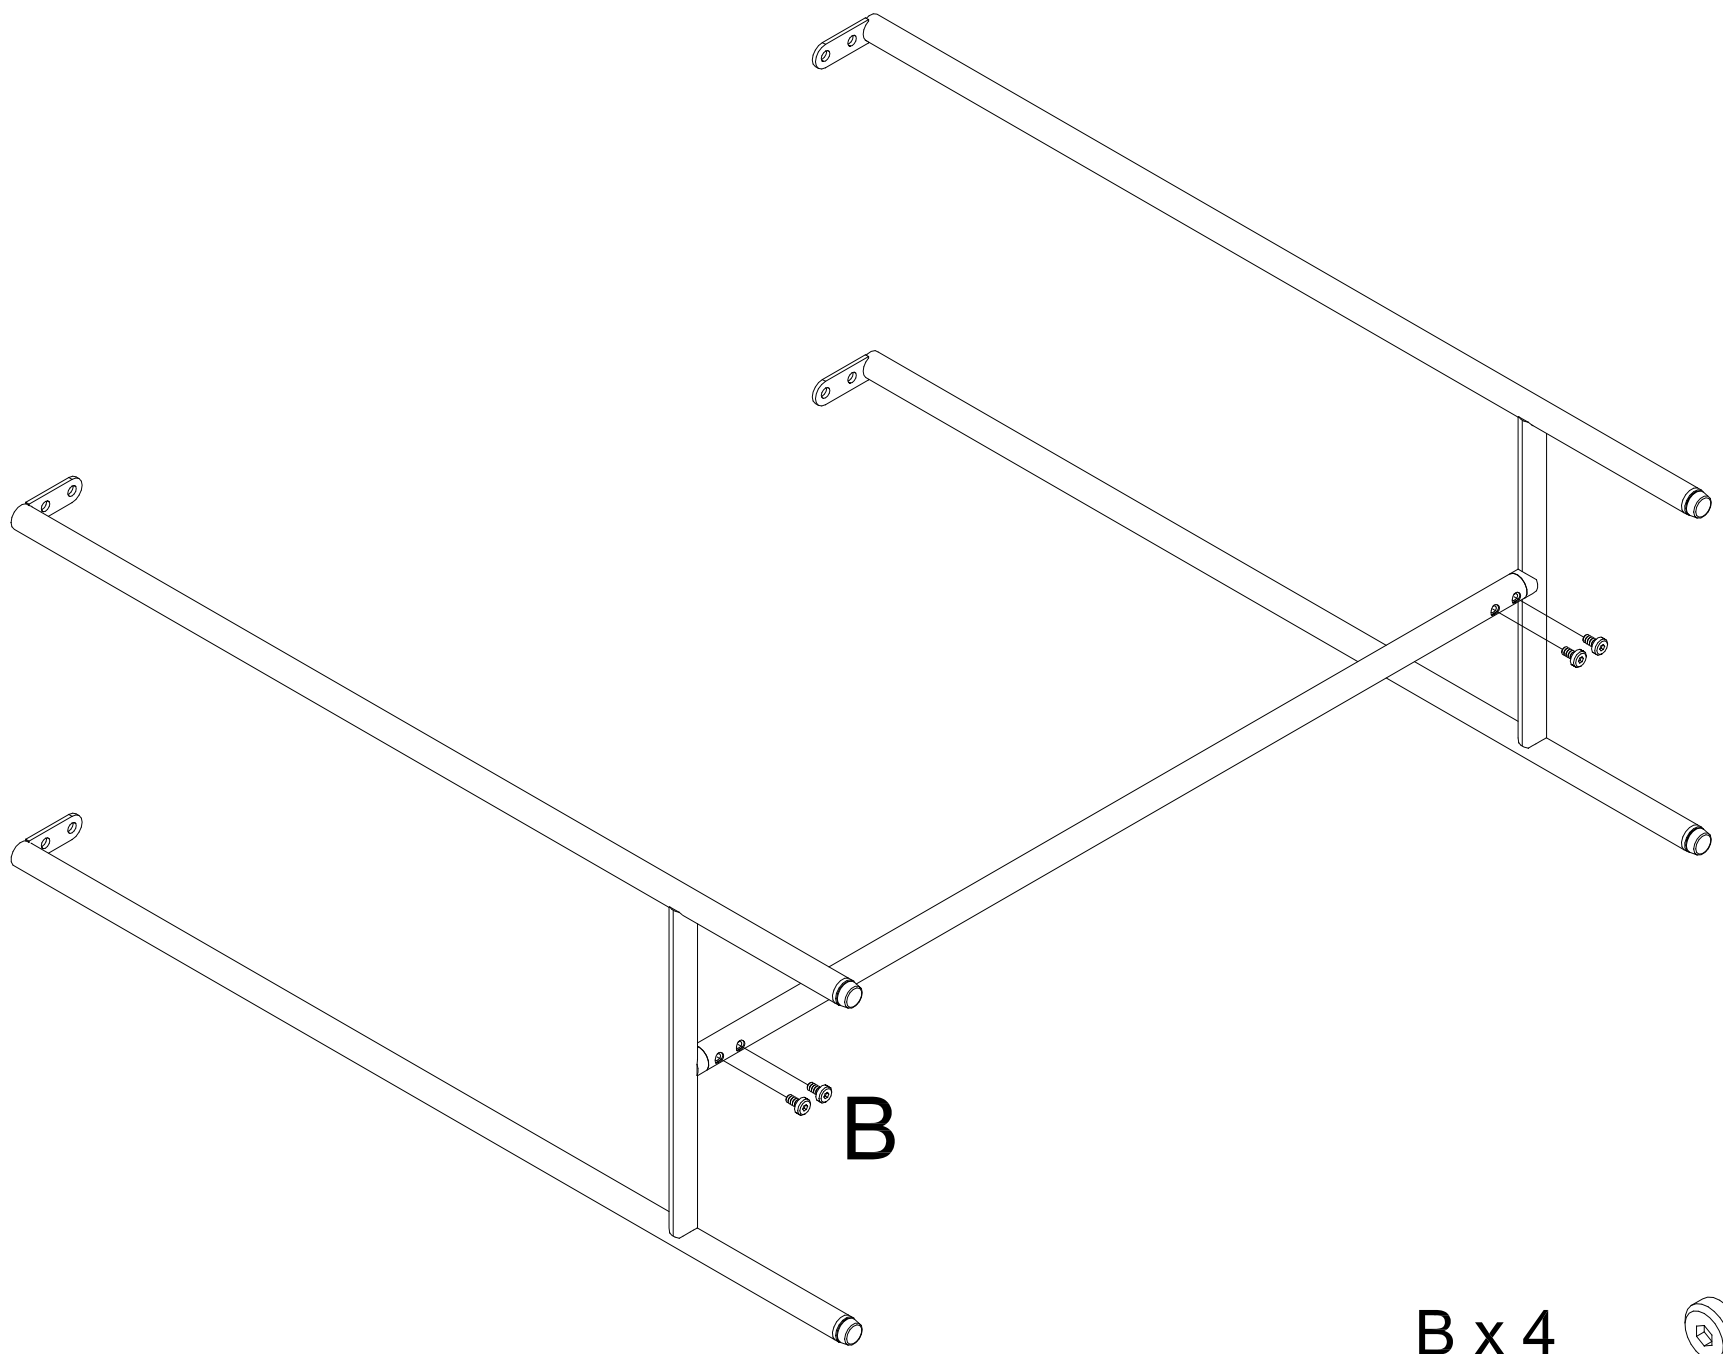


B x 4



4

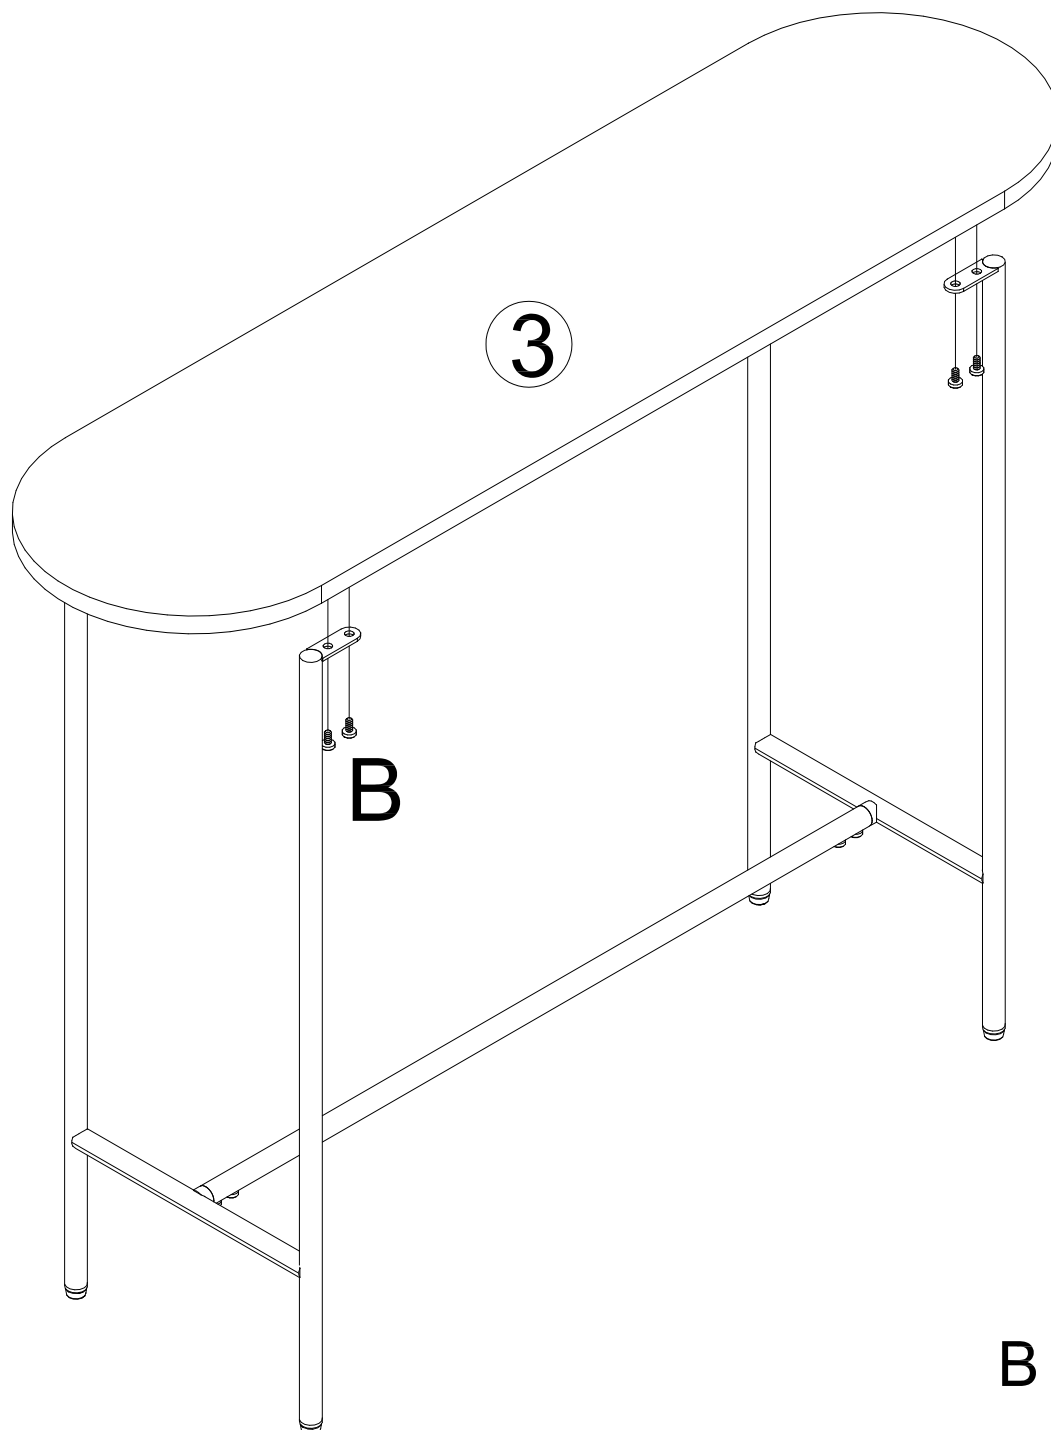


B x 8



3 / 4

5

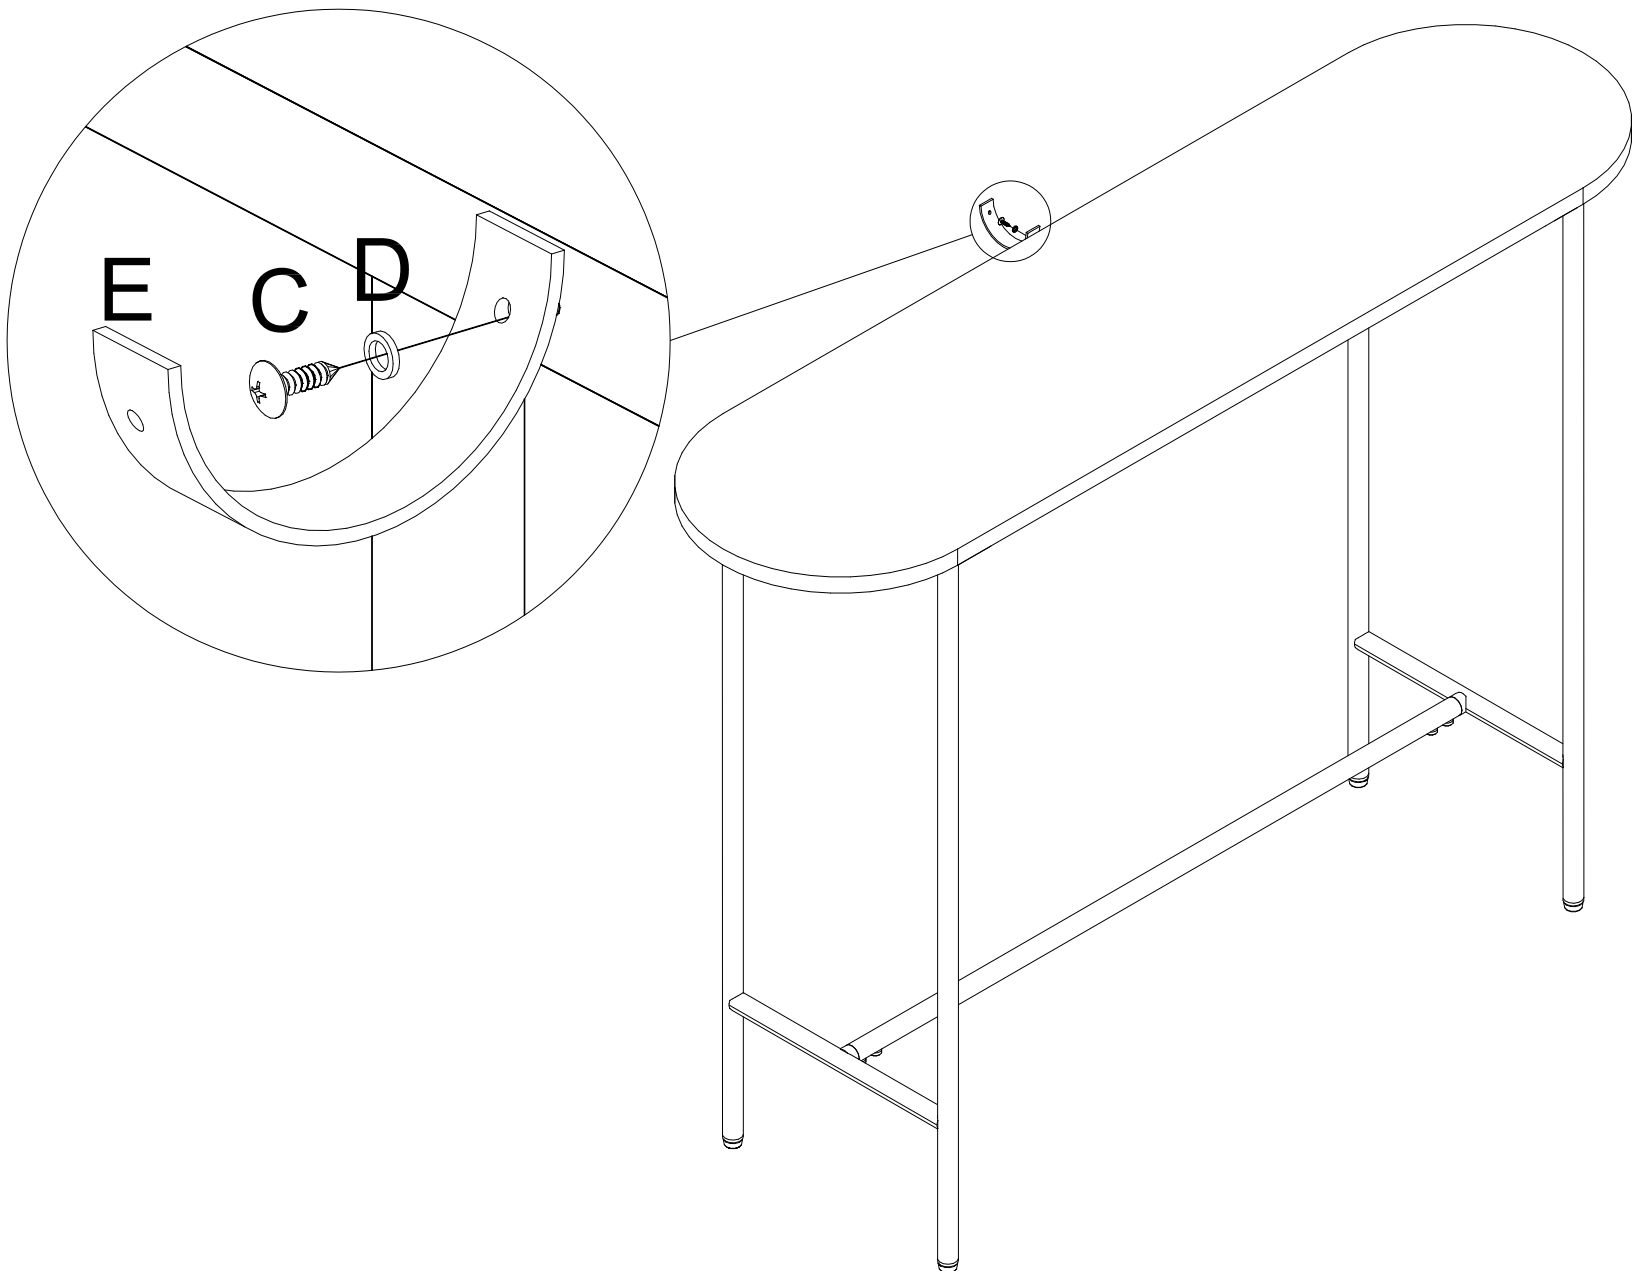

C x 2



D x 2



E x 1

