


# 0067 Queen Bed

## Assembly Instructions

WI-1220


### 1 Assembled View

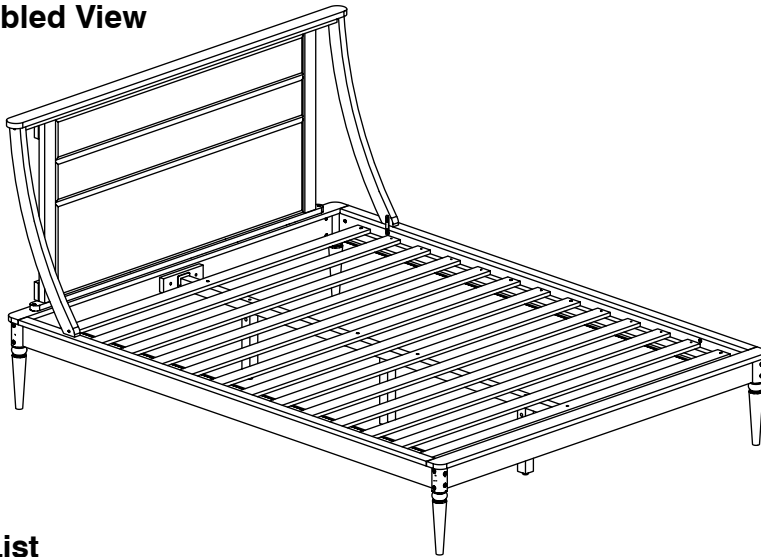

**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### 2 Parts List


#### Parts in Box A:




**A** Headboard Top x 1



**B** Headboard Top Rail x 1




**C** Headboard Bottom Rail x 1

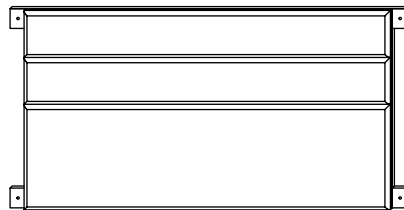

**D**  
Headboard Frame  
x 1




**E**  
Headboard Support x 2

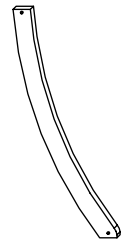


**F**  
Headboard Side Bar x 2

#### Parts in Box B:



**G** Headboard Panel x 1

Extra Holes



**L** Head / Footboard Support x 2



**H** Footboard Panel x 1




**M**  
Post  
(Left Hand) x 2




**N**  
Post  
(Right Hand) x 2




**O**  
Support Leg x 3



**J** Side Rail x 2



**K** Long Support x 1

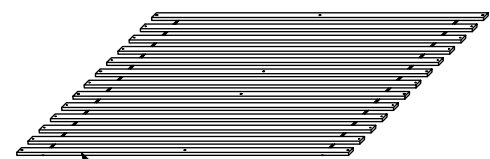


**P** Set of Bed Slats x 1

# 0067 Queen Bed


## Assembly Instructions

WI-1220

### 3 Hardware List

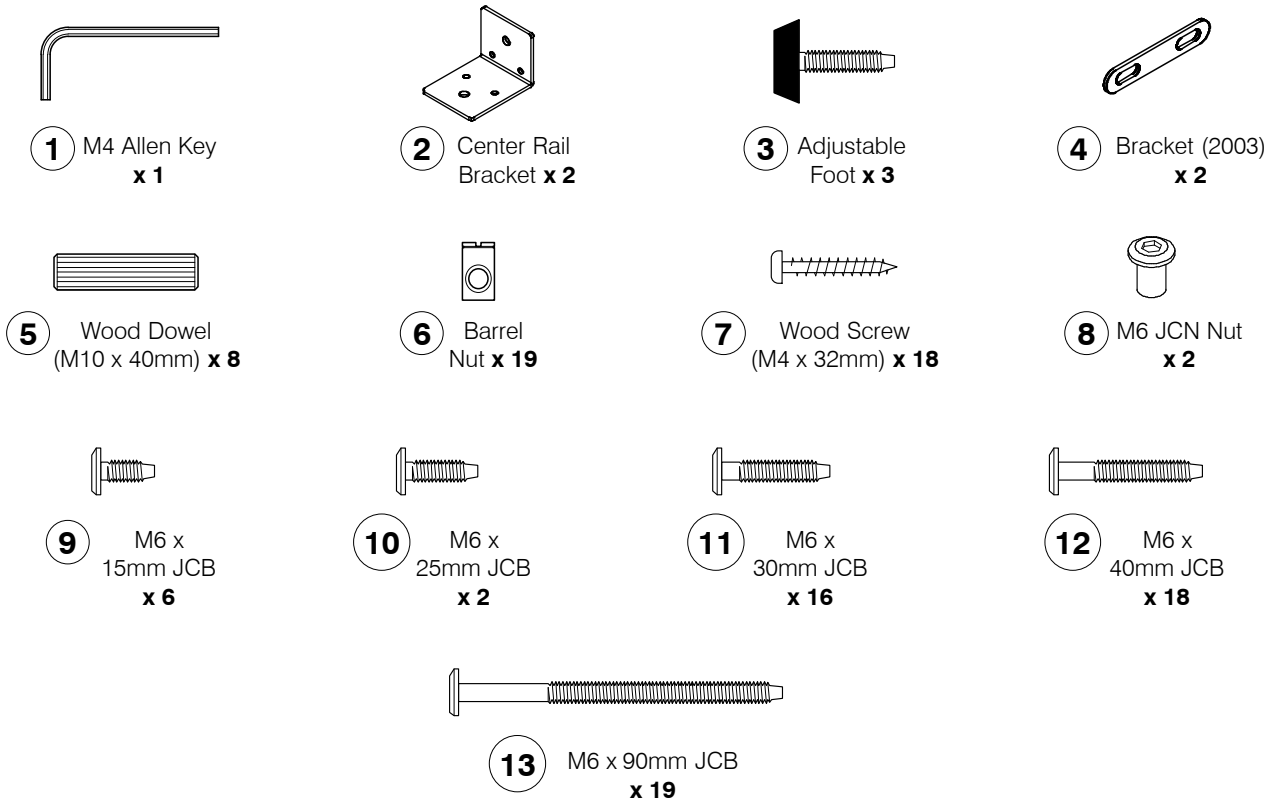

### 4 Assemble the Support Leg (O) to the Long Support (K).

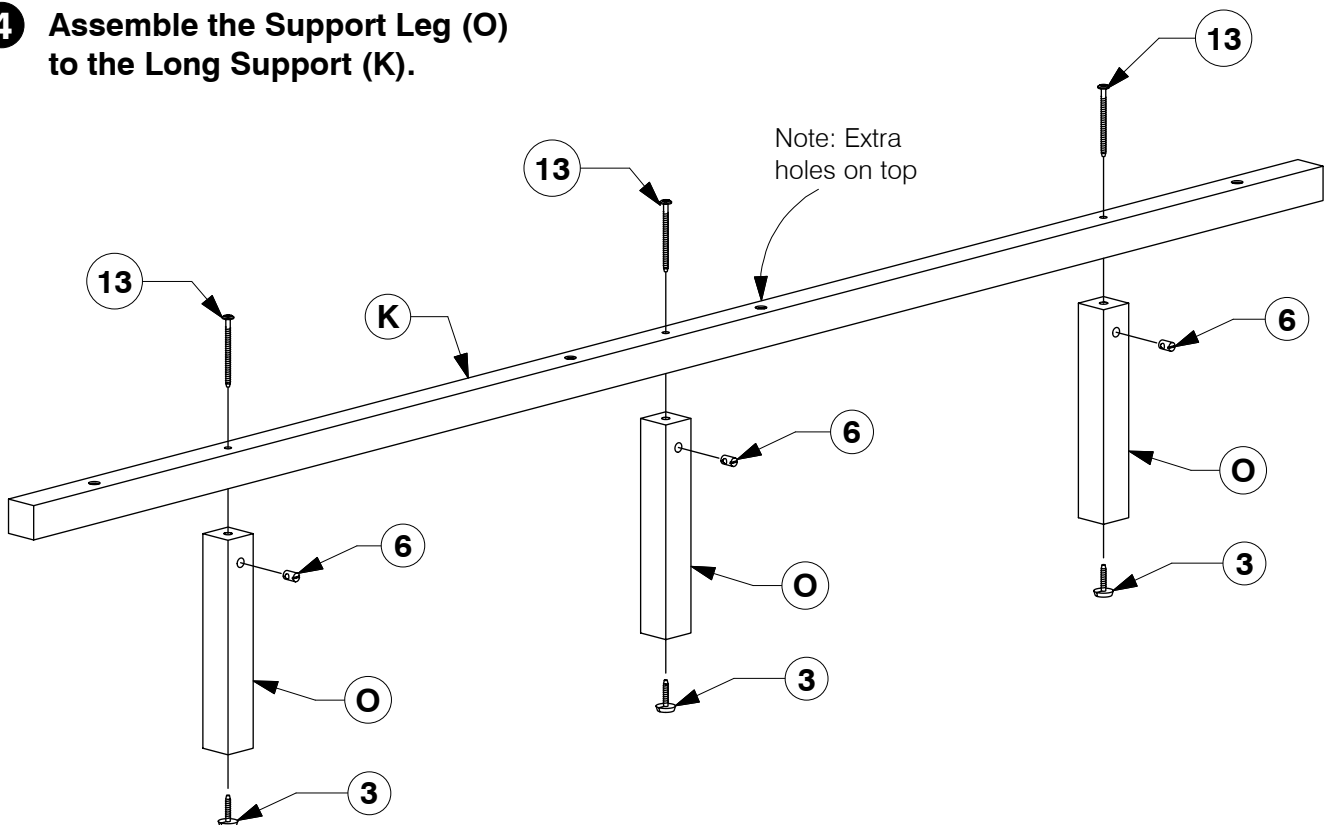


# 0067 Queen Bed

## Assembly Instructions


WI-1220

- 5** Fit the Center Rail Bracket to the Head / Footboard Support (L).

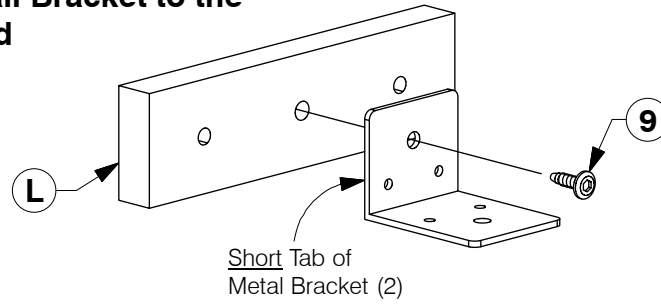


x2

- 6** Assemble the Post (M & N) and Head / Footboard Support (L) to the Headboard Panel (G).

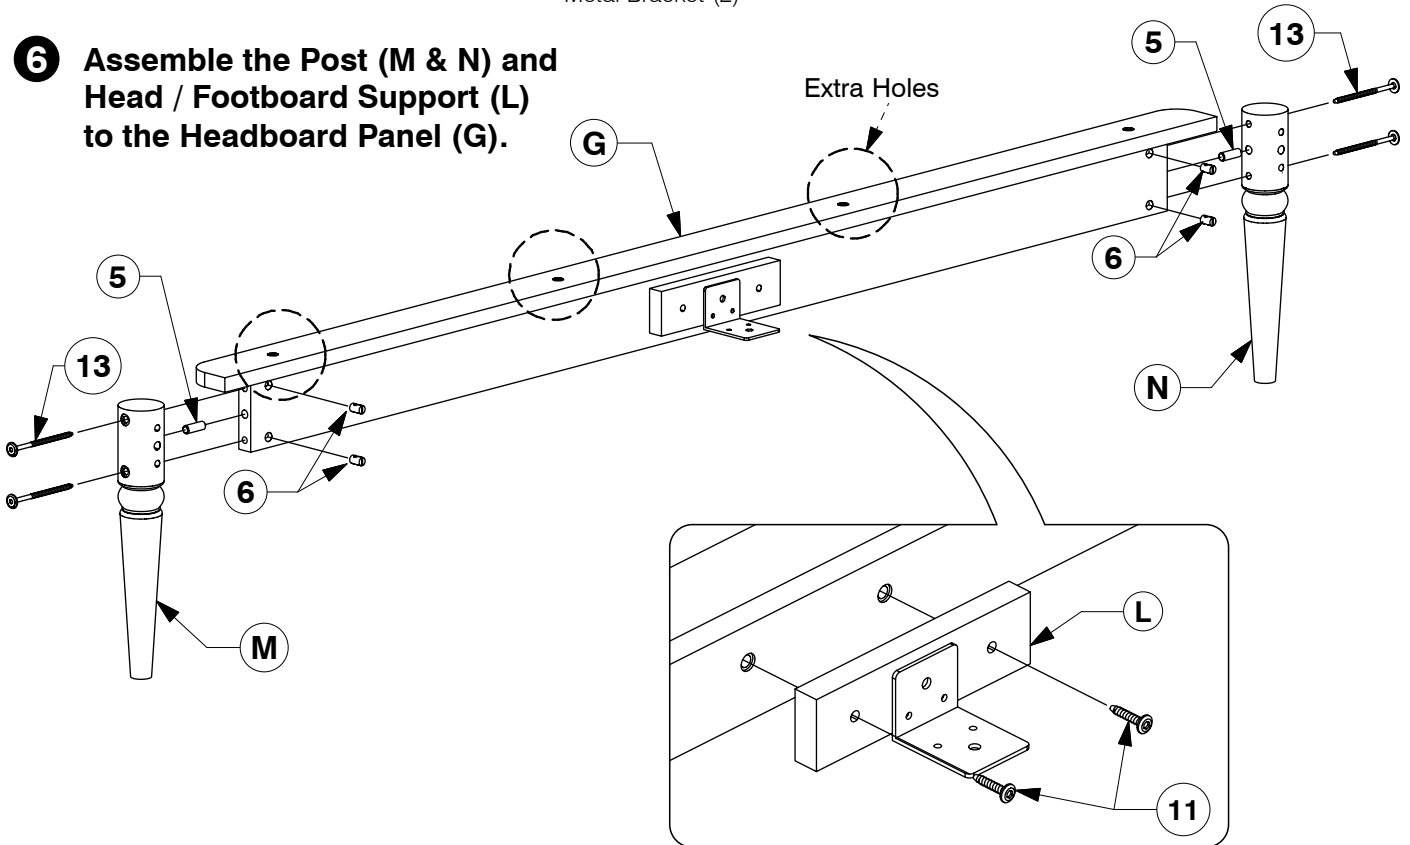

- 7** Assemble the Post (M & N) and Head / Footboard Support (L) to the Footboard Panel (H).

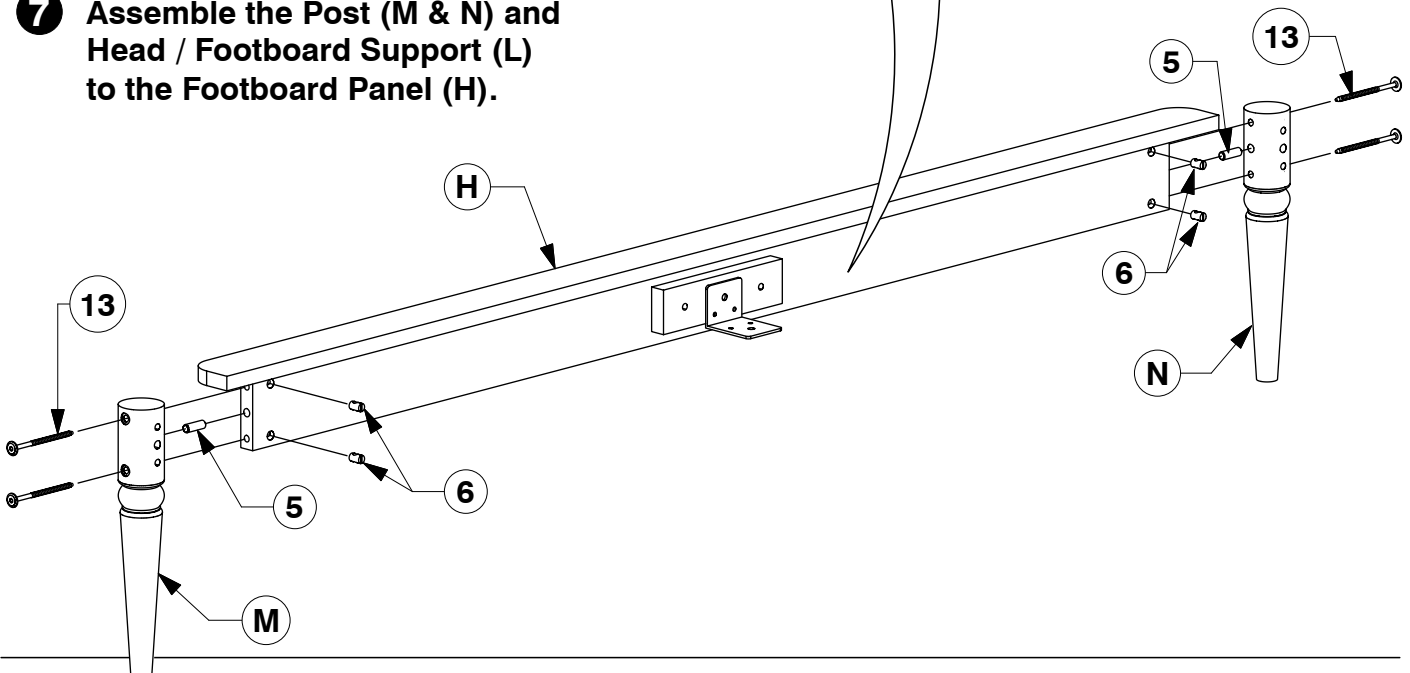


# 0067 Queen Bed


## Assembly Instructions

WI-1220

- 8** Assemble the Side Rail (J) to the Head & Footboard Panel (G & H).

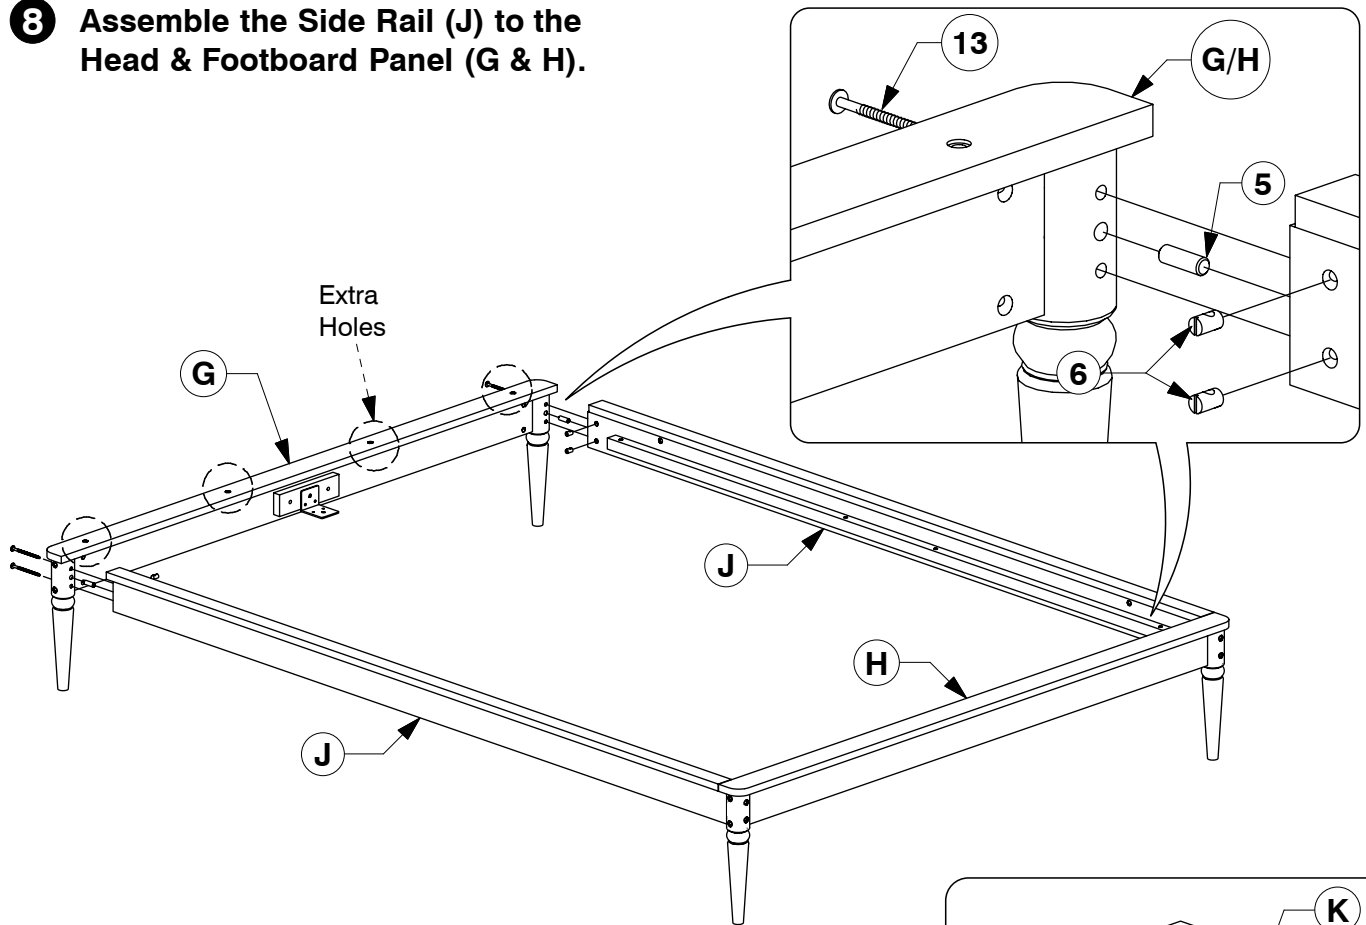

- 9** Bolt the Long Support (K) to the Center Rail Brackets on the Head & Footboard Panel (G & H).

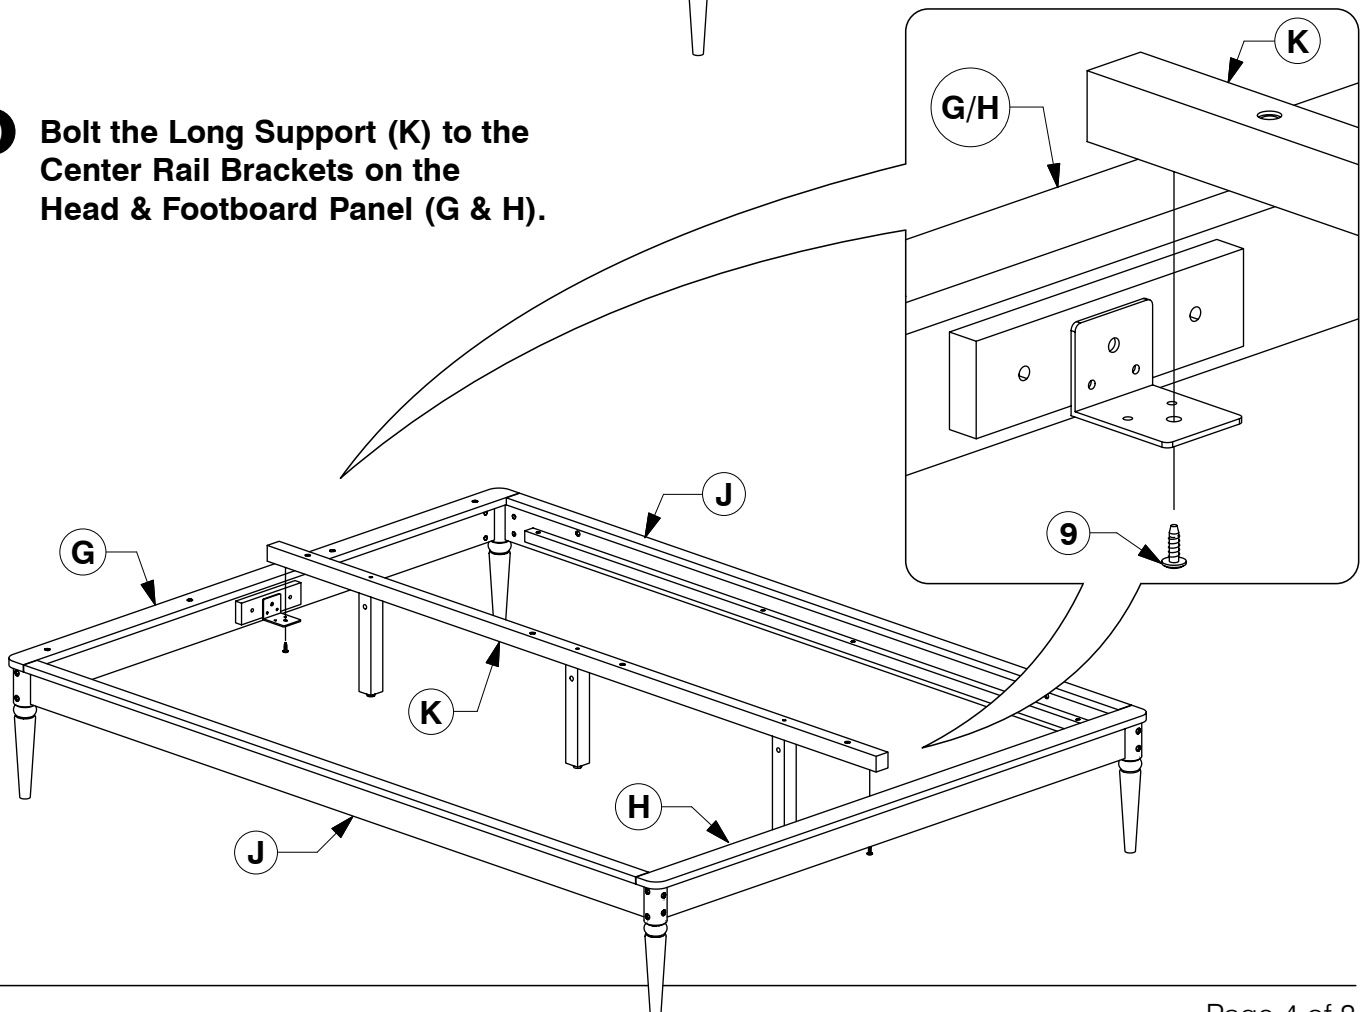


# 0067 Queen Bed


## Assembly Instructions

WI-1220

- 10** Bolt the Bed Slats (P) to the Side Rail (J).

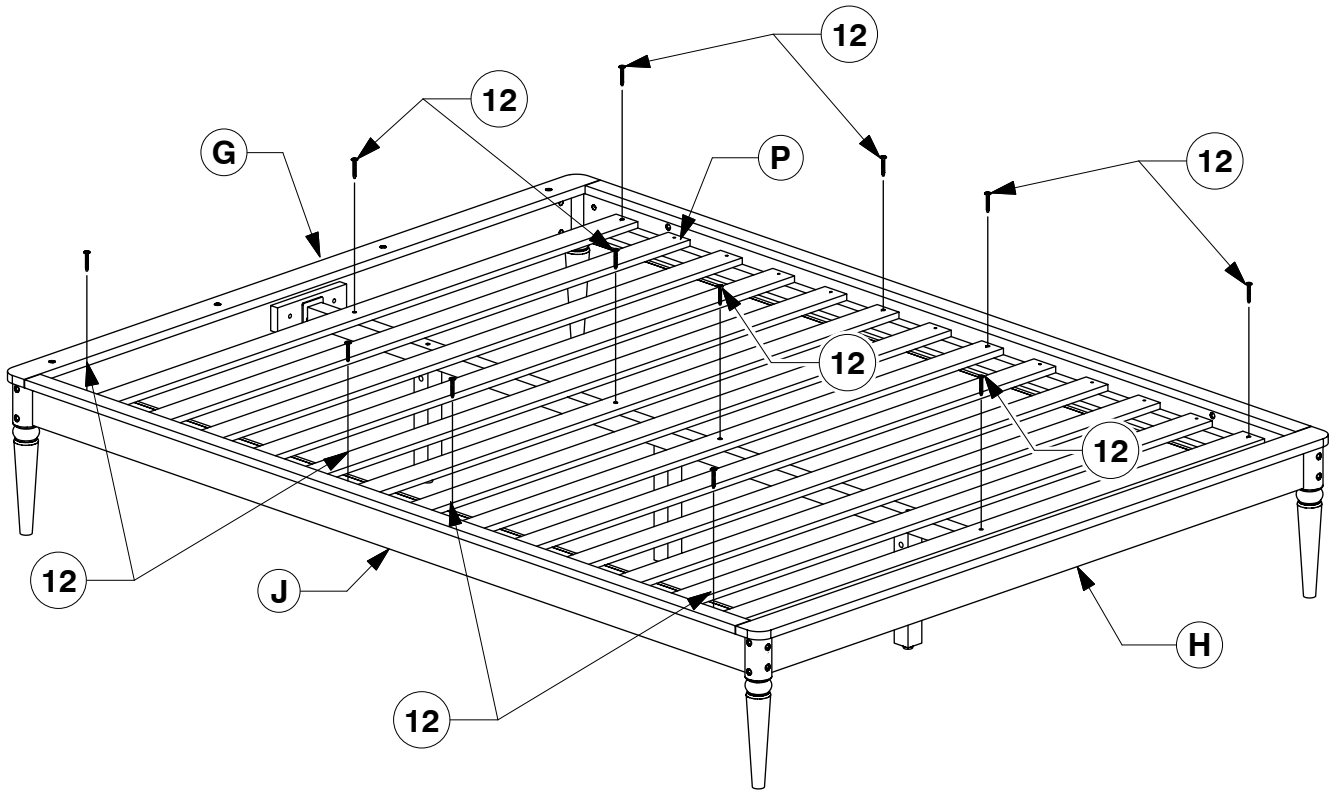

- 11** Screw the Bed Slats (P) to the Side Rail (J).

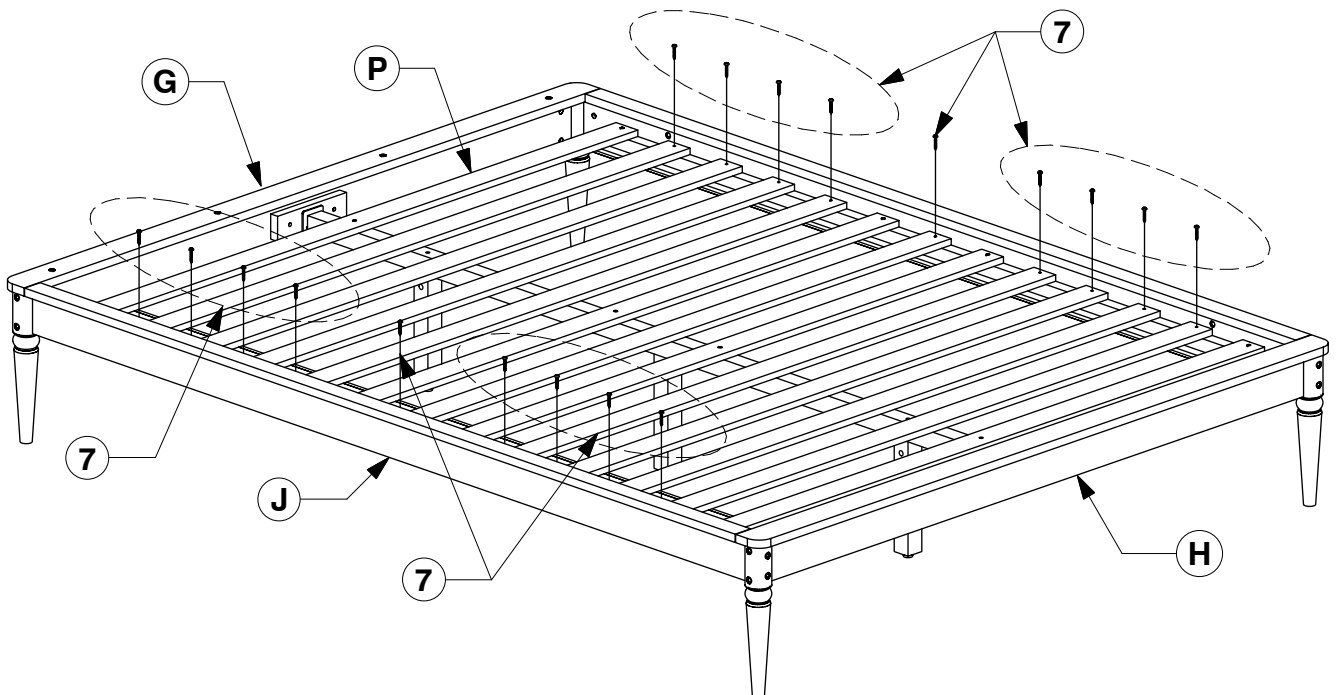


# 0067 Queen Bed


## Assembly Instructions

WI-1220

- 12** Fit the Headboard Top Rail (B) & Headboard Bottom Rail (C) to the Headboard Support (E).

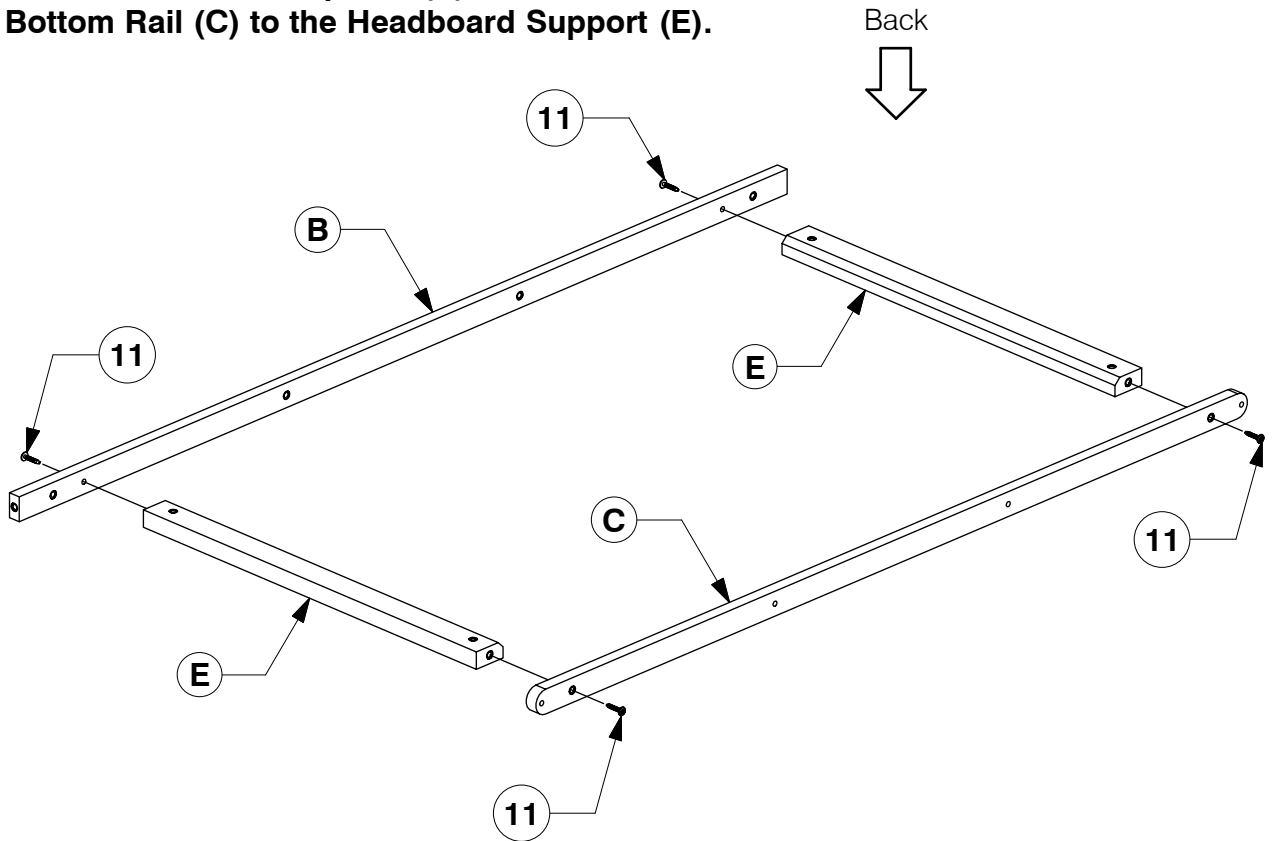

- 13** Use bolts to fix the Headboard Bottom Rail (C) to the Headboard Panel (G).

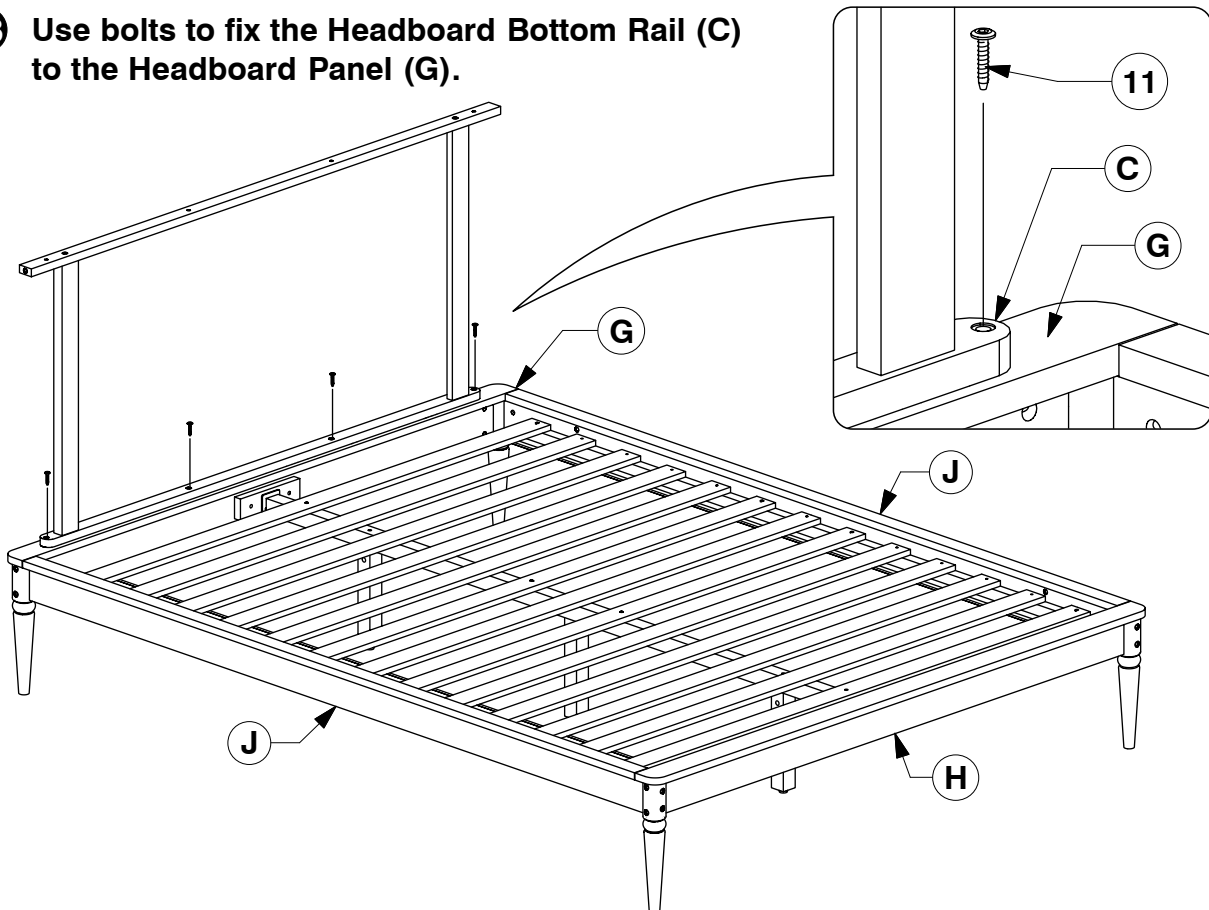


# 0067 Queen Bed


## Assembly Instructions

WI-1220

- 14** Fit the Headboard Top (A) to the Headboard Top Rail (B).

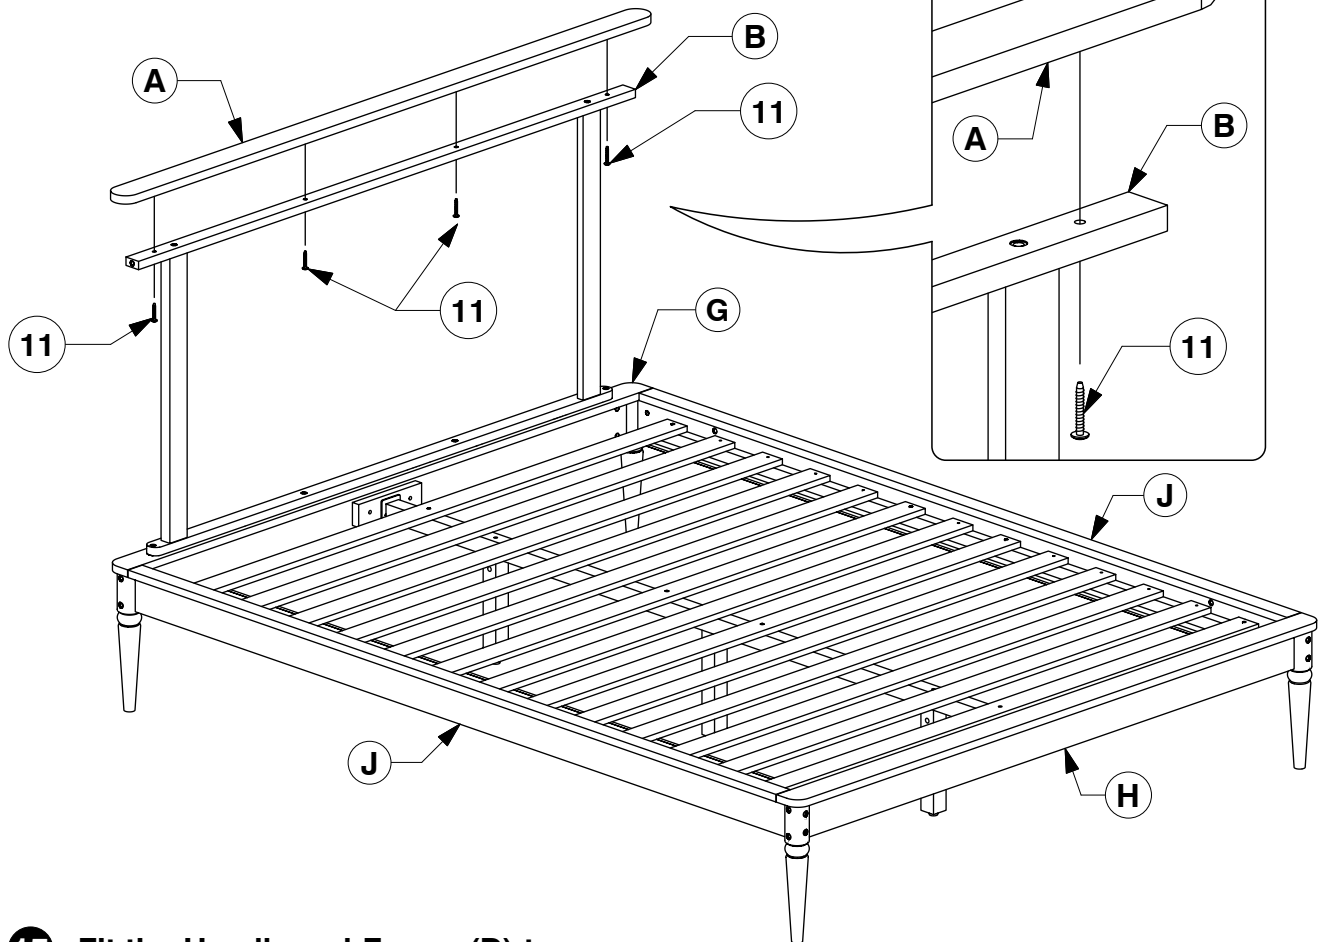

- 15** Fit the Headboard Frame (D) to the Headboard Support (E).

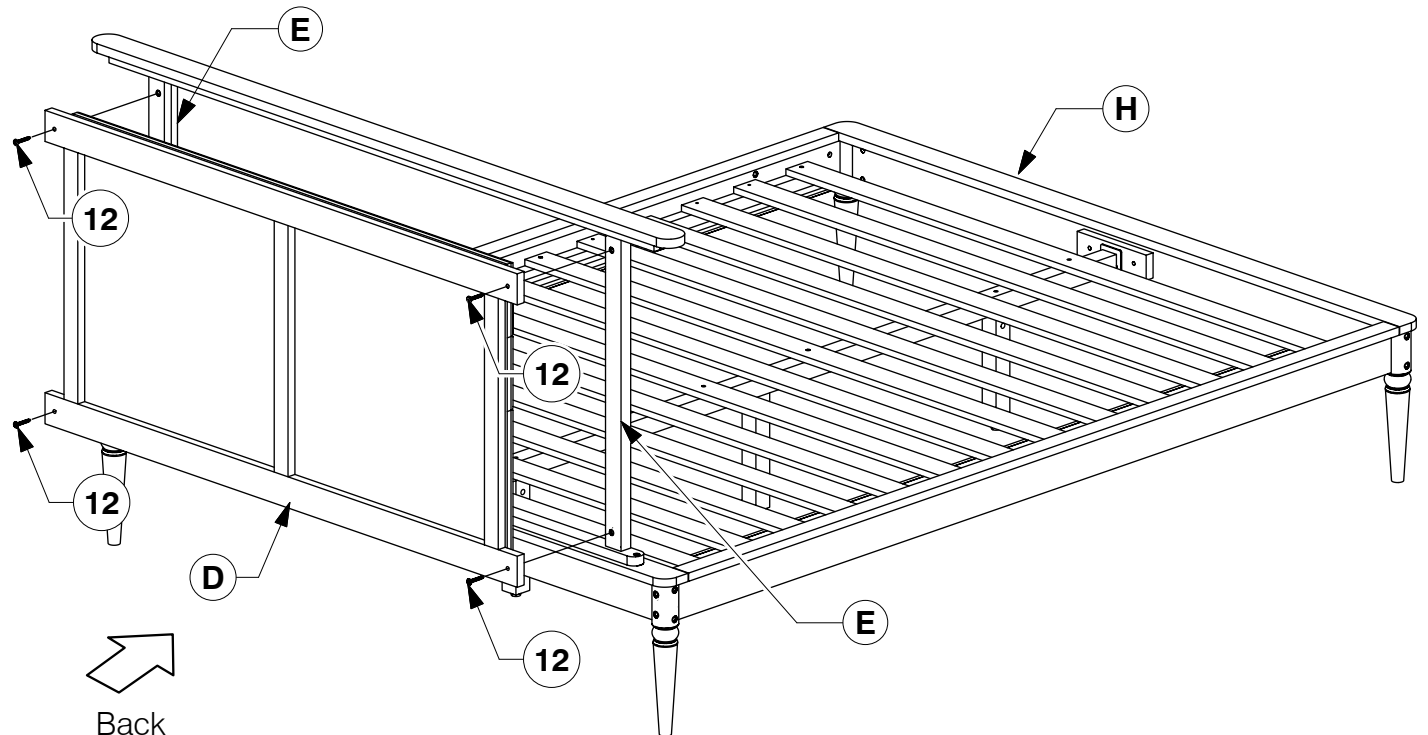

# 0067 Queen Bed

## Assembly Instructions

WI-1220

**16** Fit the Headboard Side Bar (F) to the Headboard Top Rail (B) & Side Rail (J).

