



WI-1220

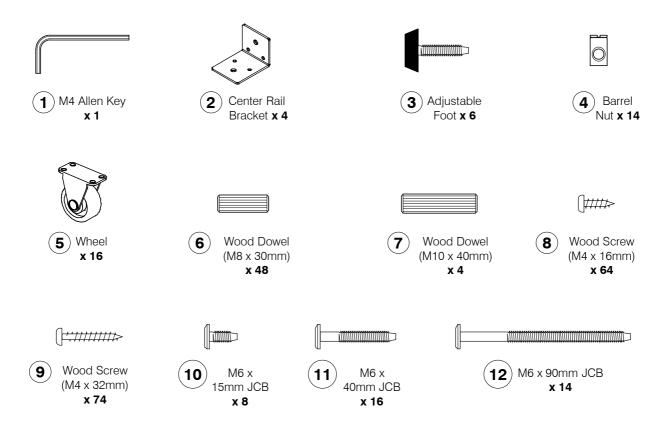




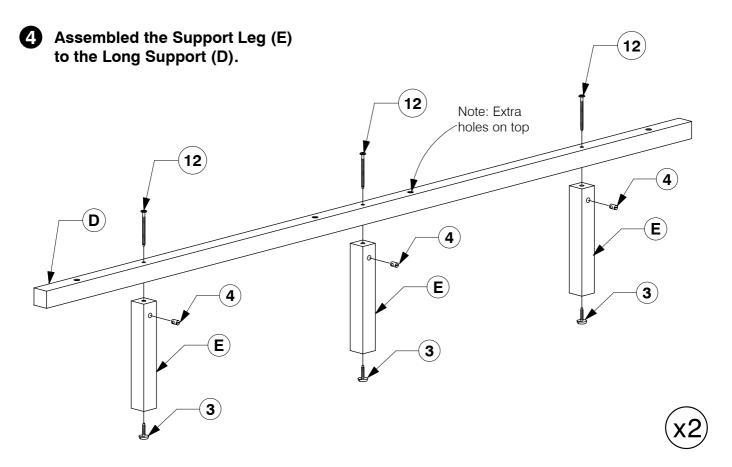


WI-1220

5 Assemble the Drawer Side (K) and Drawer Rail (L & M) to the Drawer Back (J).



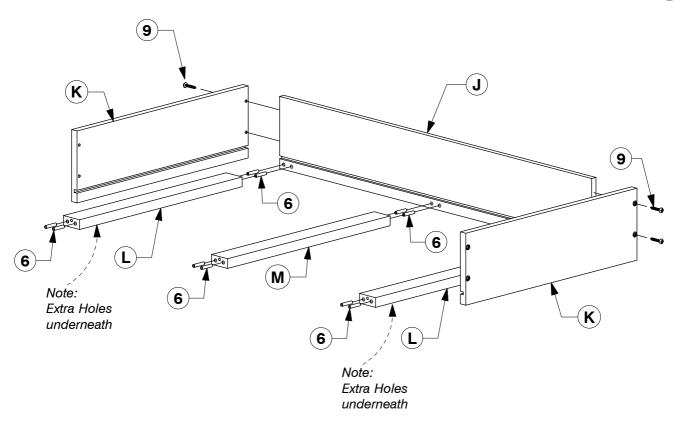


6 Slide the Drawer Bottom (H) onto the groove on the Drawer Sides (K).

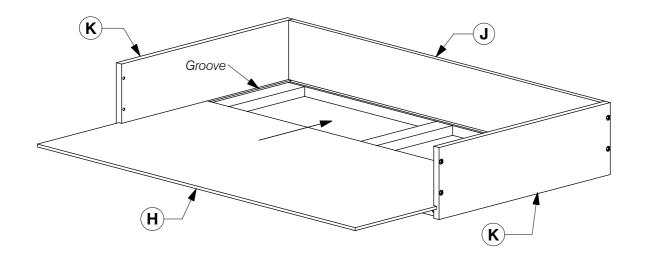


Assembly Instructions

WI-1220


Assemble the Drawer Face (G) to the Drawer Sides (K).

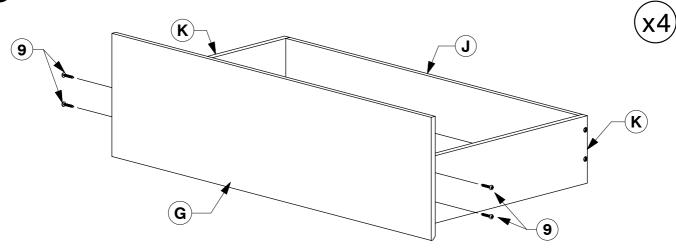


Turn the Drawer over to fit angled 32mm Wood Screws (9) to the Drawer Rails (L & M).

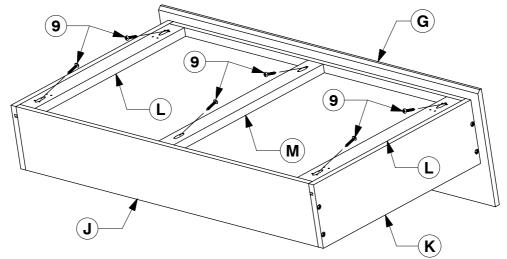


9 Fit the Wheels (5) to the Drawer Rail (L).

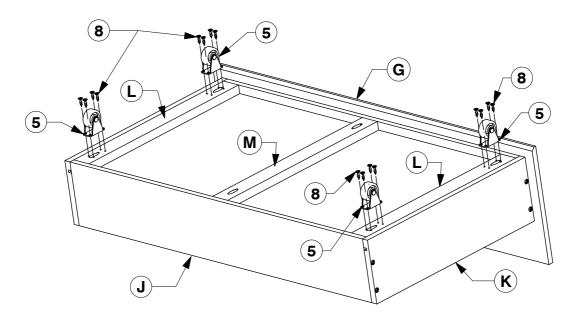



10 Fit the Center Rail Bracket to the

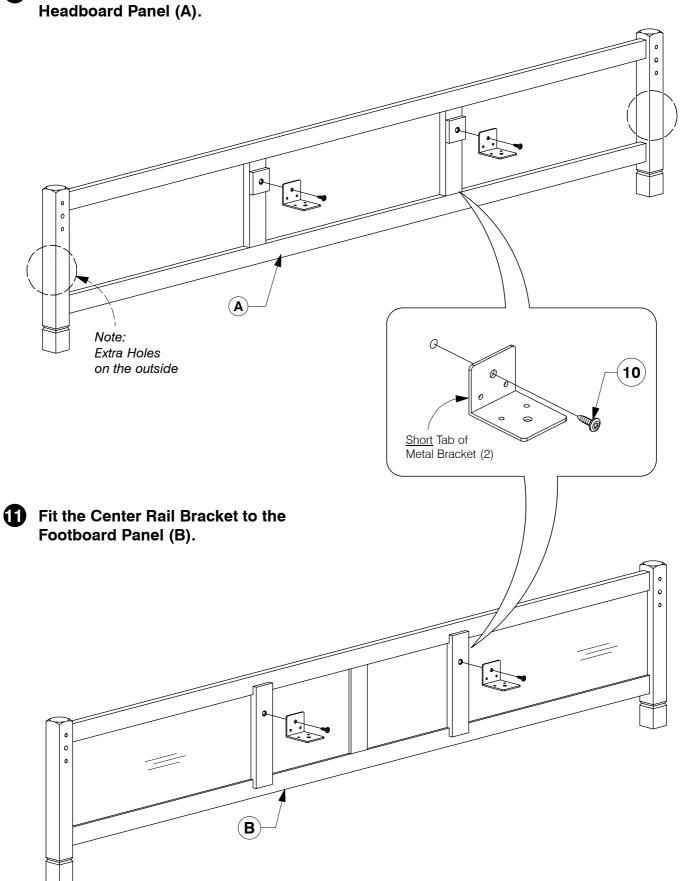

WI-1220

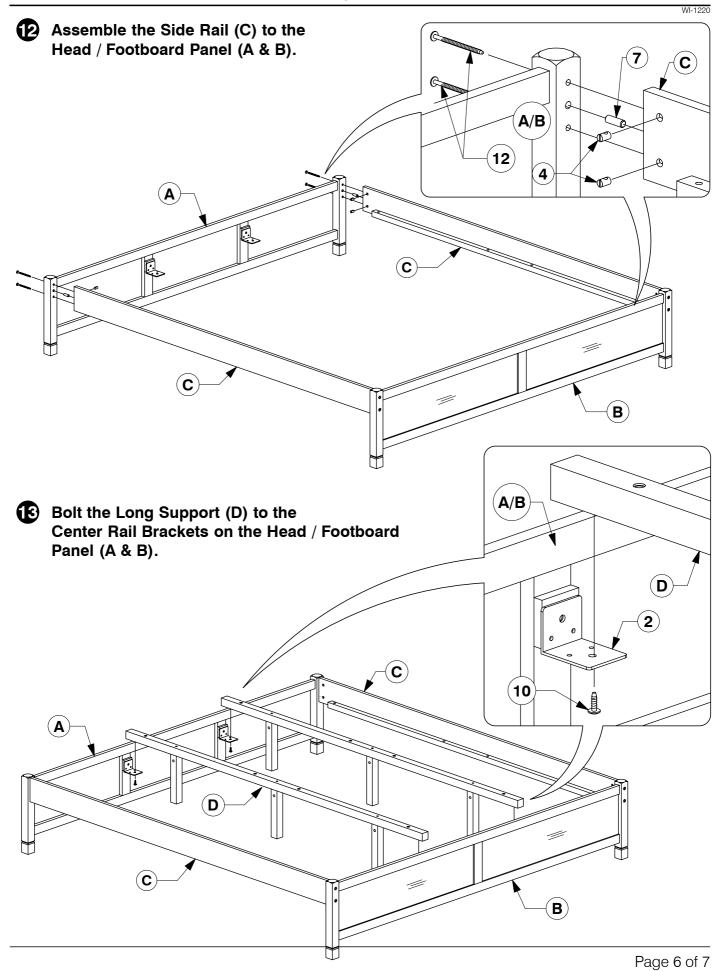

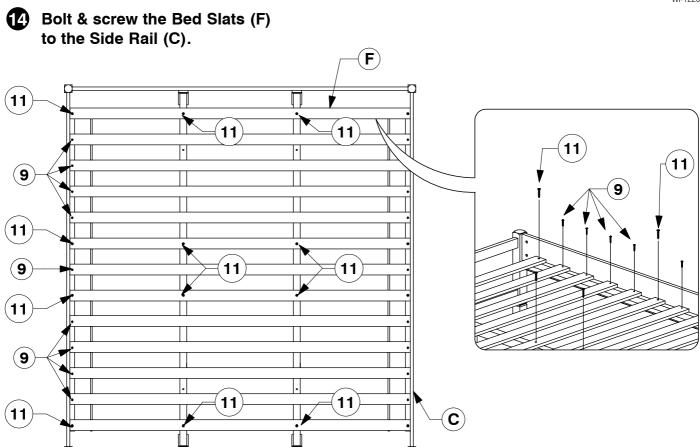

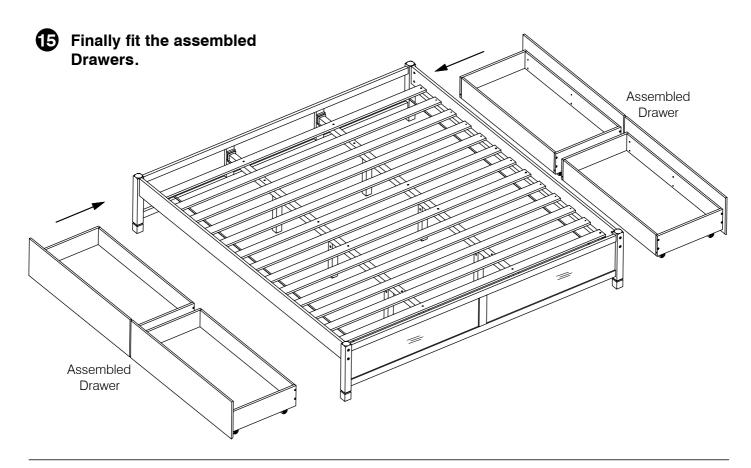

0068 King Headboard

Assembly Instructions

