
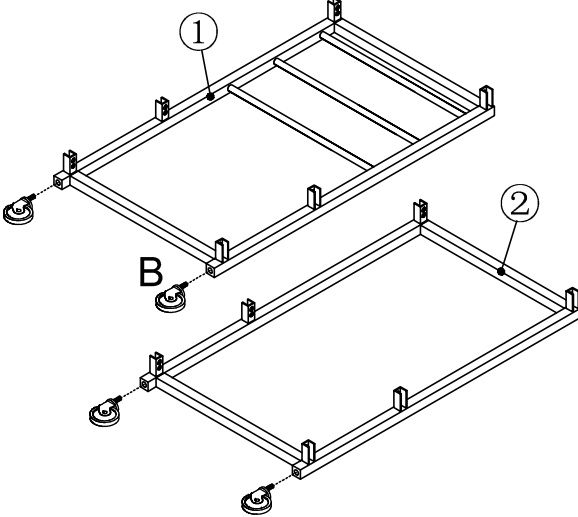
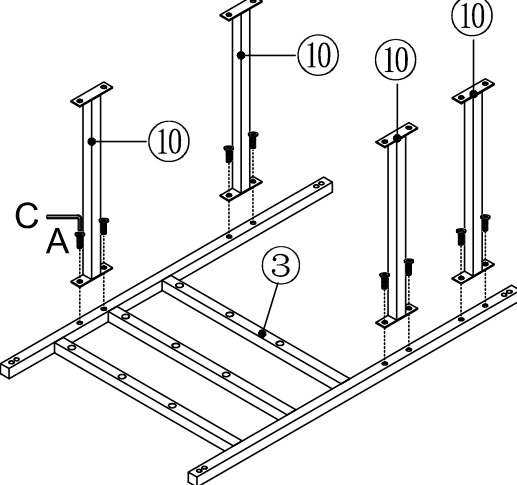




















# ASSEMBLY INSTRUCTION

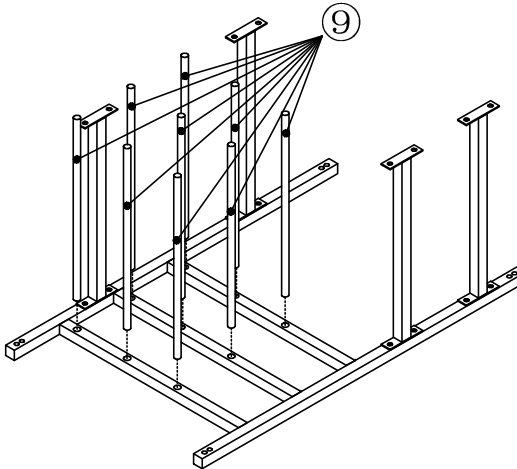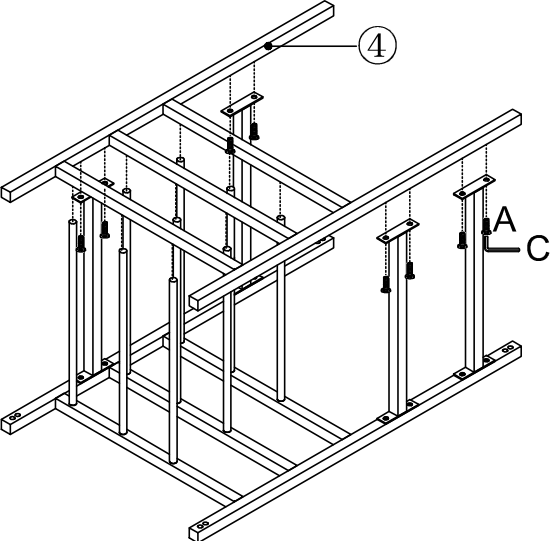
## ITEM: Metal-Cart

NO	PART LIST	QTY	STEP 1	STEP 2
①	 FRAME	1PC		
②	 FRAME	1PC		
③	 FRAME	1PC		
④	 FRAME	1PC		
⑤	 FRAME	1PC		
⑥	 L TRAY	1PC		
⑦	 M TRAY	1PC		
⑧	 S TRAY	1PC		
⑨	 ROUN D BAR	9PCS		
⑩	 METRL BAR	4PCS		
⑪	 LONG LEATHER BAND	6PCS		
⑫	 SHORT LEATHER BAND	3PCS		
NO	HARDWARE LIST	QTY		
A	 SCREWS Ø6 X 12 mm	40PCS		
B	 WHEEL	4PCS		
C	 ALLEN KEY Ø4 X60 mm	1PC		
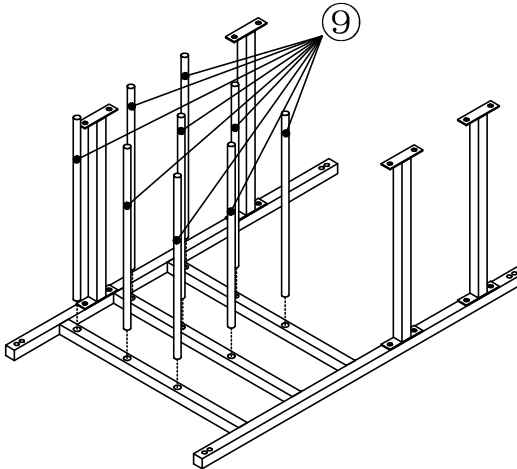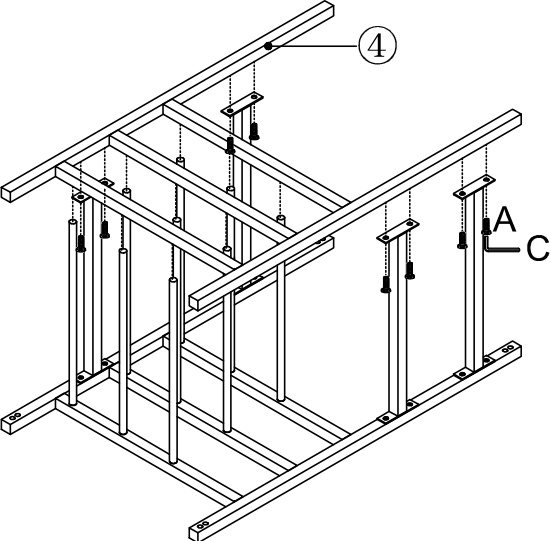
# ASSEMBLY INSTRUCTION


## STEP 5

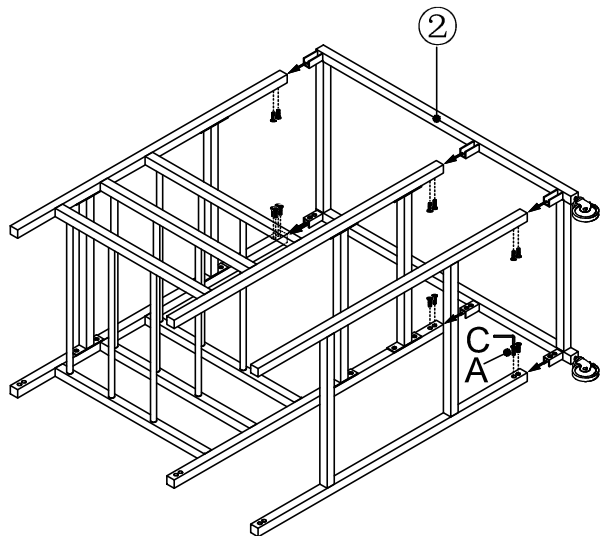Attaching Frame (2) to assembled frame (3),(4) &(5) and screwing with screw (A) using allen key (C)




## STEP 6

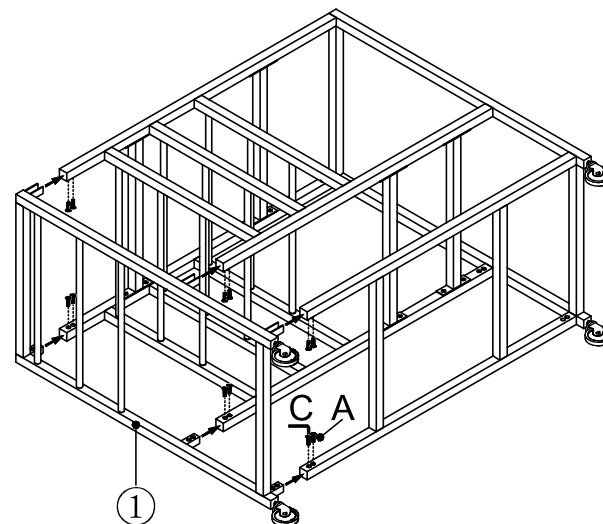Attaching Frame (1) to assembled frame (3),(4) &(5) and screwing with screw (A) using allen key (C)




## STEP 7

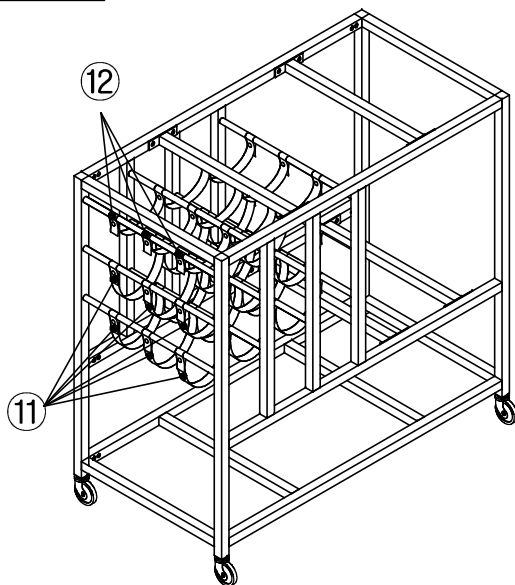Button the Leath Band (11 &12) to round bar (9)



## STEP 8

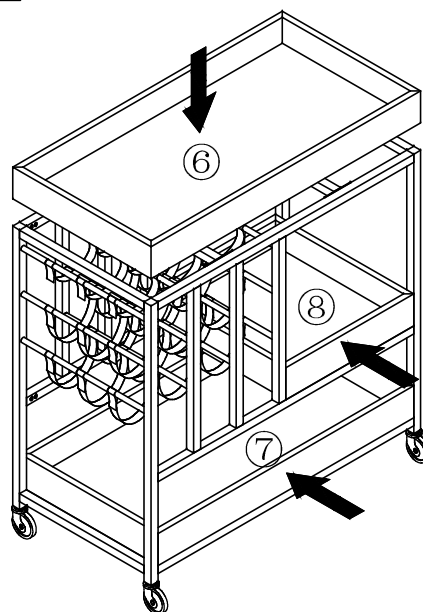Attaching wooden trays (6, 7 &8) to the assembled trolley



## STEP 9

Assembly Complete

