

Assembly Instructions

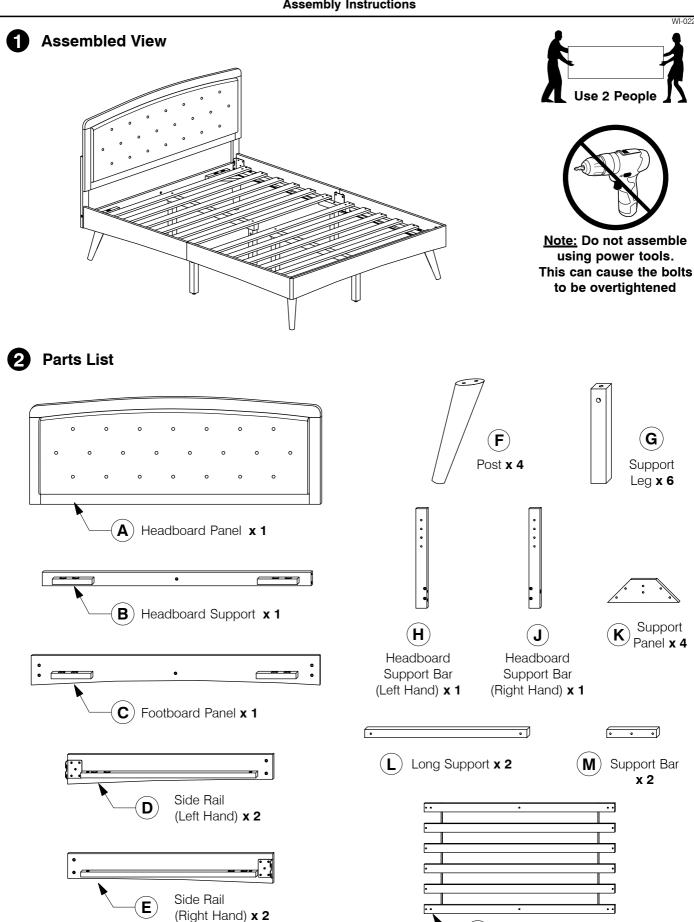


N) Set of Bed Slats x 2

Assembly Instructions

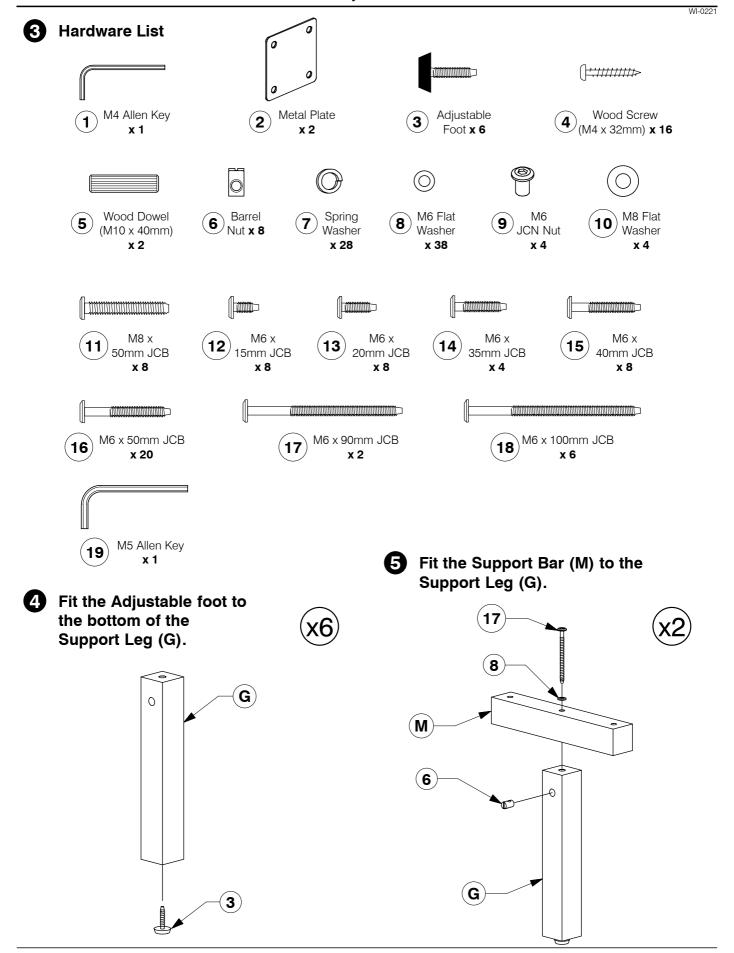


Assembly Instructions


WI-0221

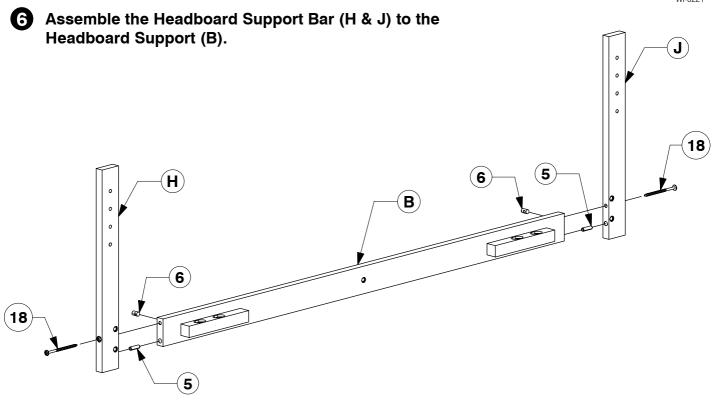


Fit the Headboard Support Bar (H & J) to the Headboard Panel (A).

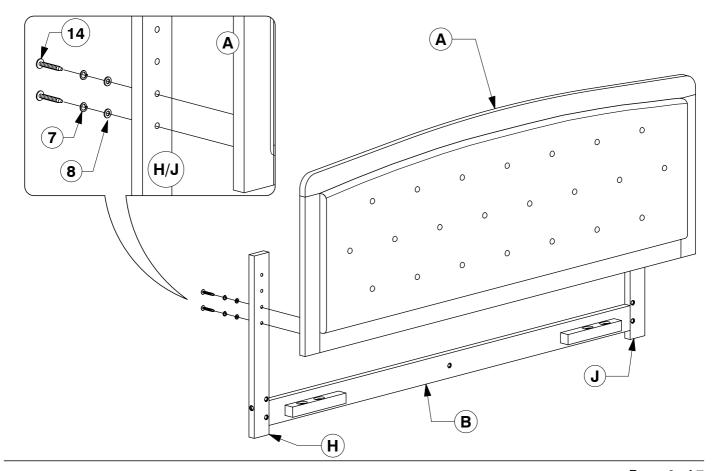

Assembly Instructions

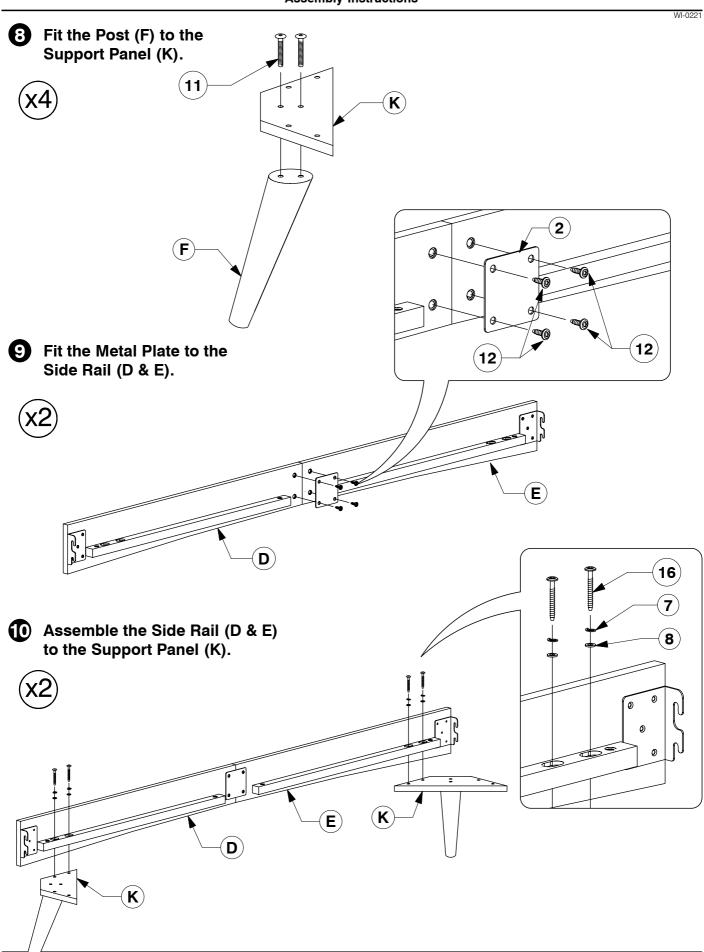


Assembly Instructions

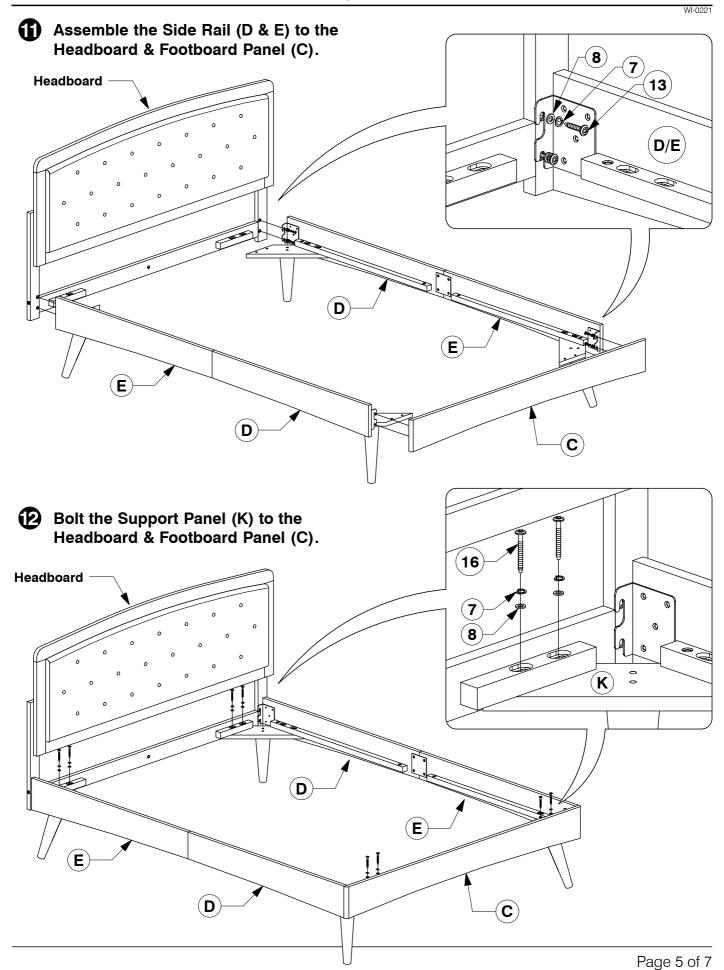


Assembly Instructions

WI-0221

(G)

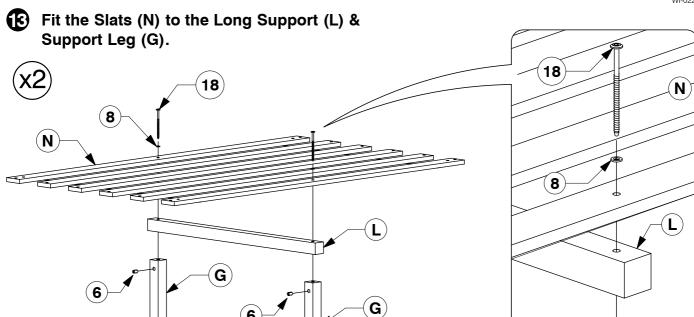

Bolt the Bed Slats (N) to the Side Rail (D & E).

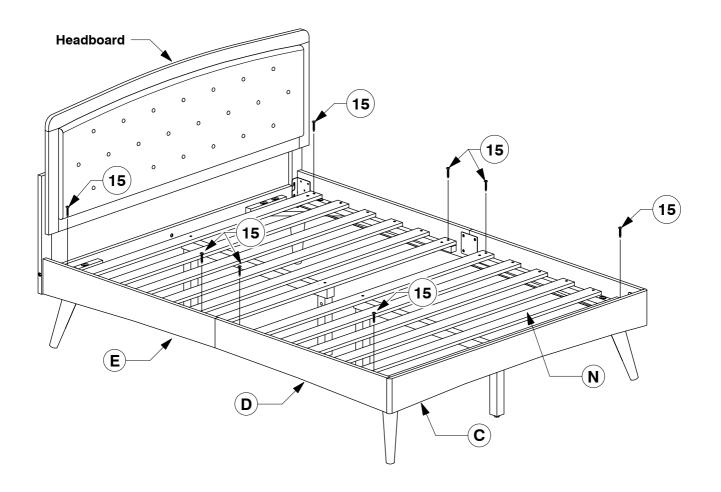

VI-0221

Screw the Bed Slats (N) to the Side Rail (D & E).

