



Assembly Instructions

WII-012




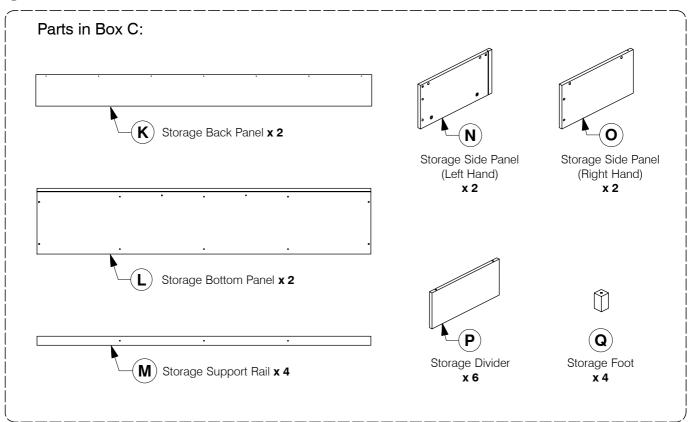


3 Hardware List

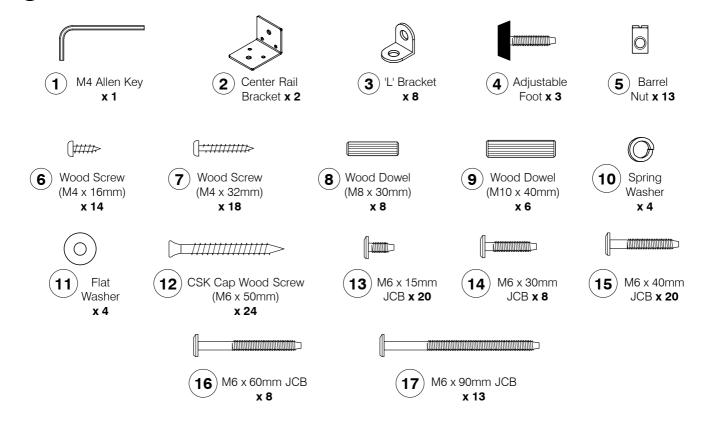

Assembly Instructions

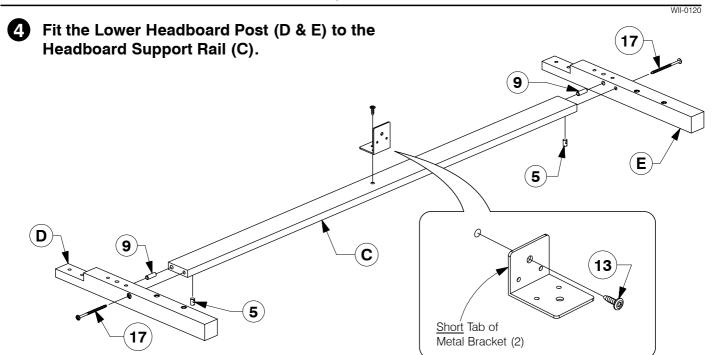


Fit the Headboard Panel (A) to the Headboard Post (D & E).

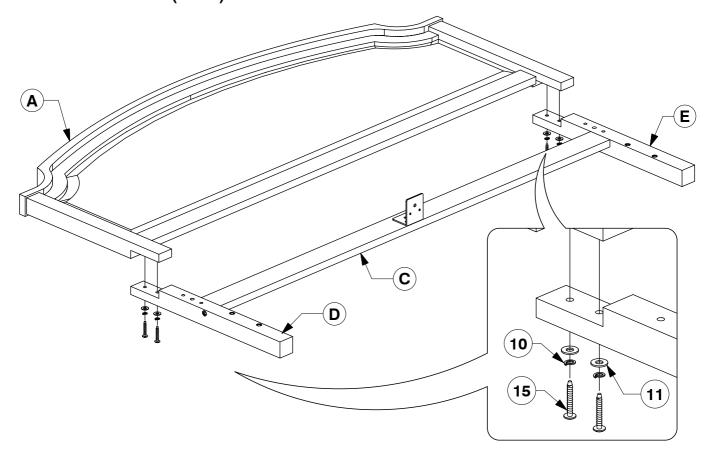

Assembly Instructions


WII 0120

Page 4 of 9

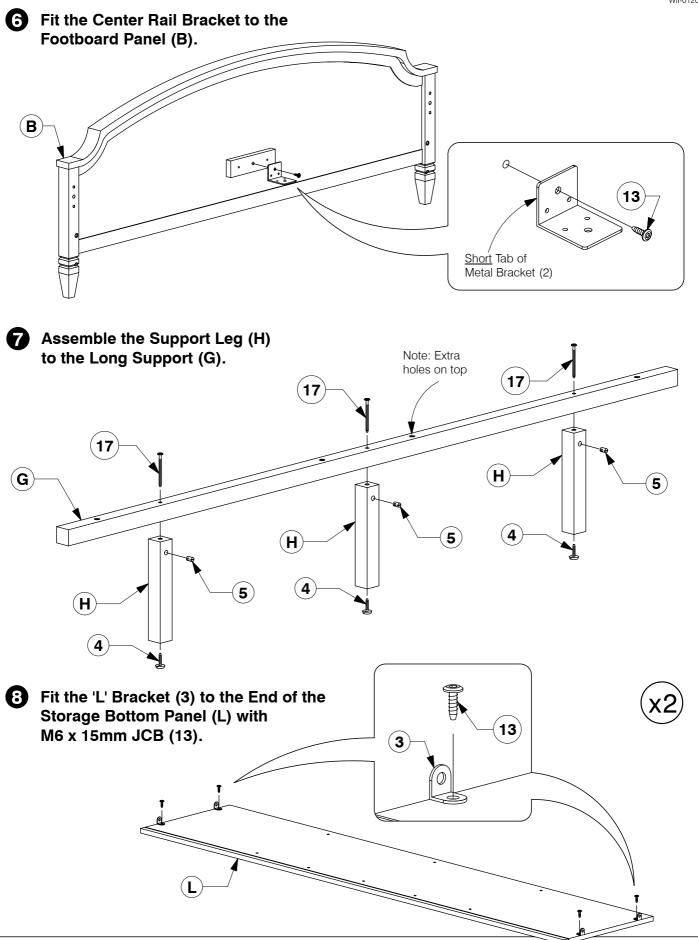



Assembly Instructions

WII-0120

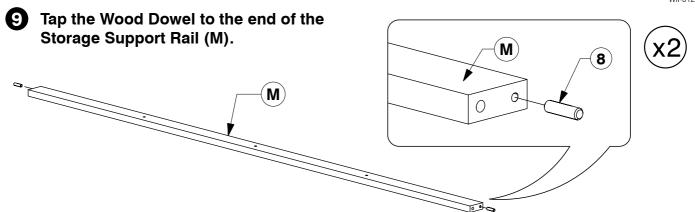


Assemble the Storage Bottom Panel (L) & Support Rail (M) to the Storage Divider (P).

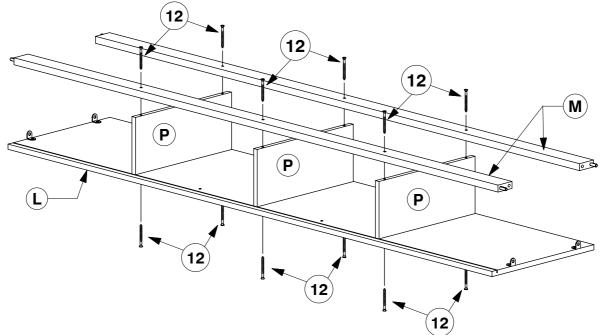


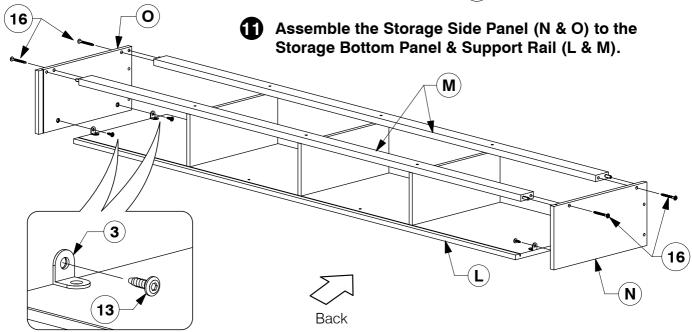


Assembly Instructions

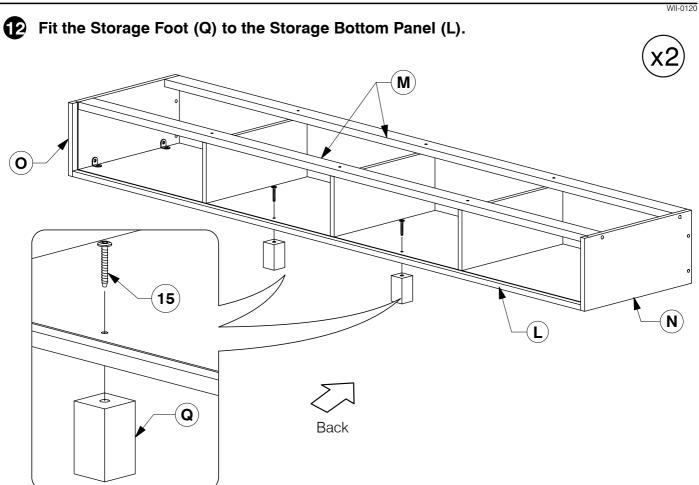


Slide the Storage Back Panel (K) into the groove.

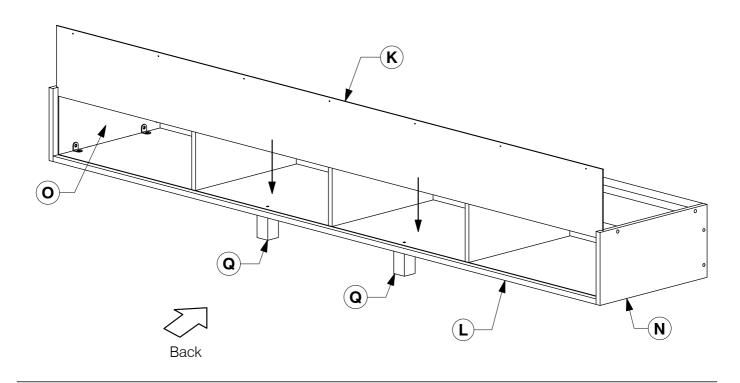


Fit the Storage Back Panel (K) in place.

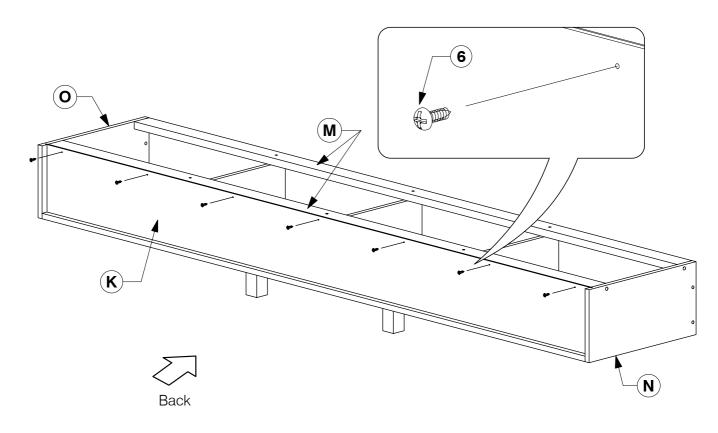


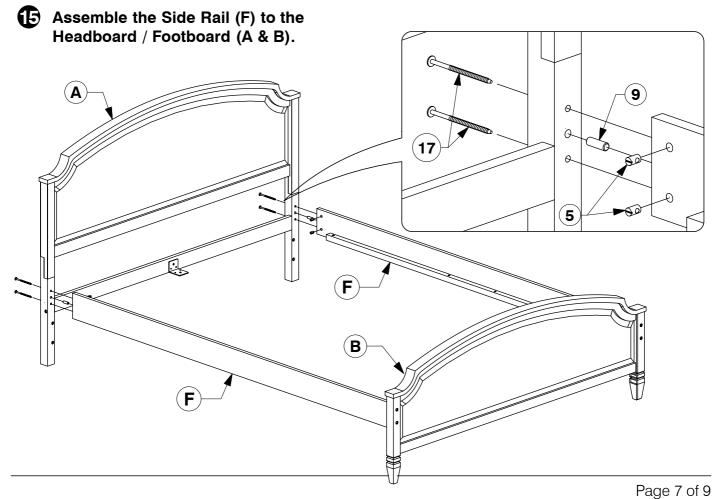



Assembly Instructions

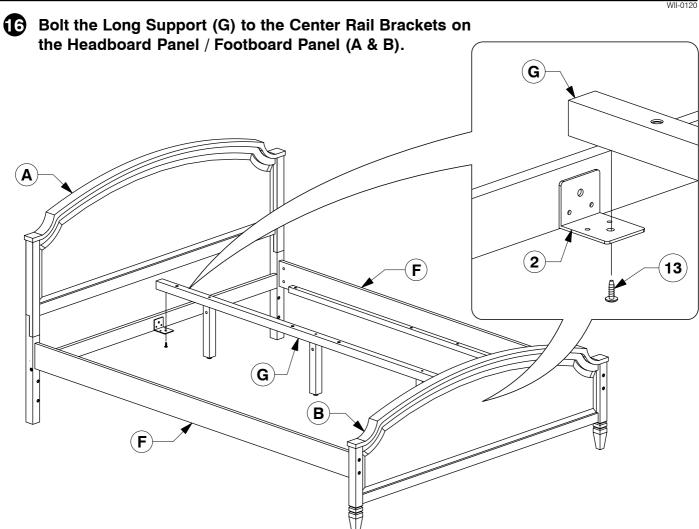

Bolt & screw the Bed Slats (J) to the Side Rail (F).

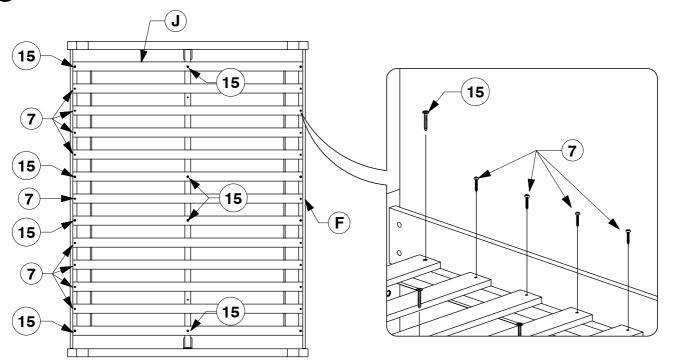


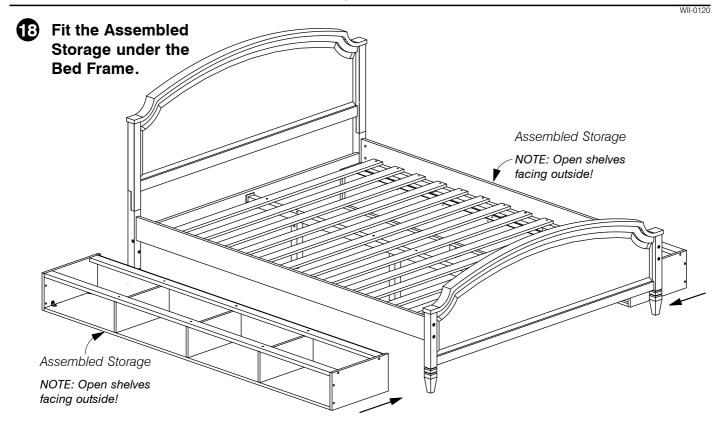


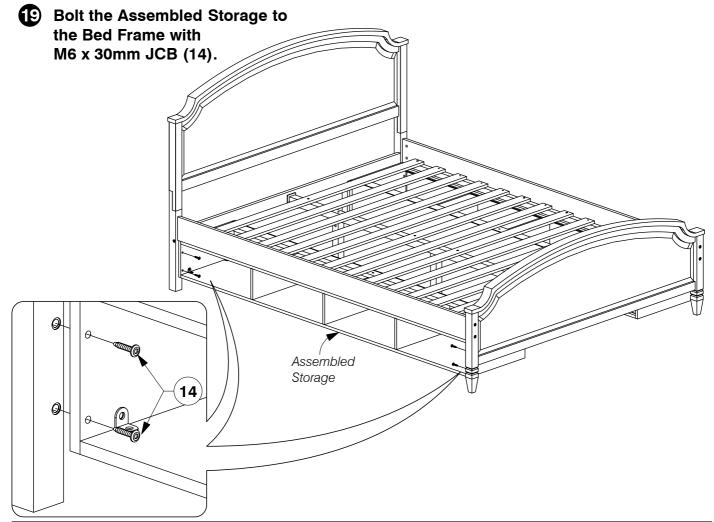

0038 Nightstand Assembly Instructions



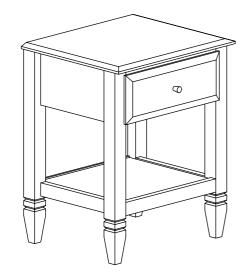









Note: Do not assemble using power tools. This can cause the bolts to be overtightened




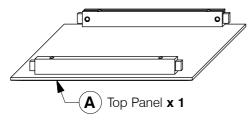



















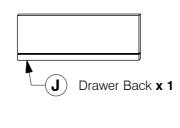



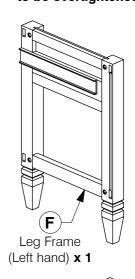

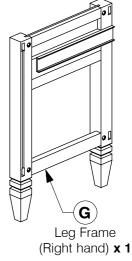

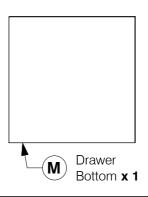

2 Hardware List













M6 x 15mm JCB x 16

M4 x 25mm Wood Screw x 8

M4 x 22mm Wood Screw x 1


'L' Bracket (5005-3)x 8

Handle (1005)x 1


Allen Key **(6**) x 1

WII-0120


3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).

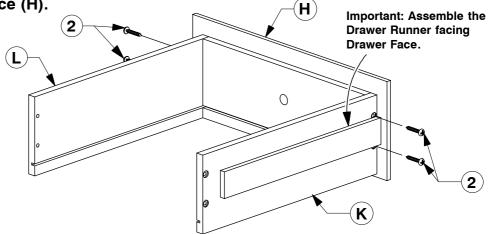


4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

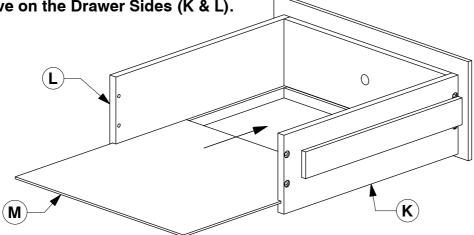


6 Assemble the Drawer Back (J) to the Drawer Sides (K & L).

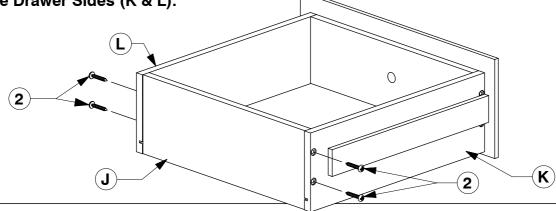


6 Fit the 'L' Bracket to the Left & Right hand Leg Frame (F & G).

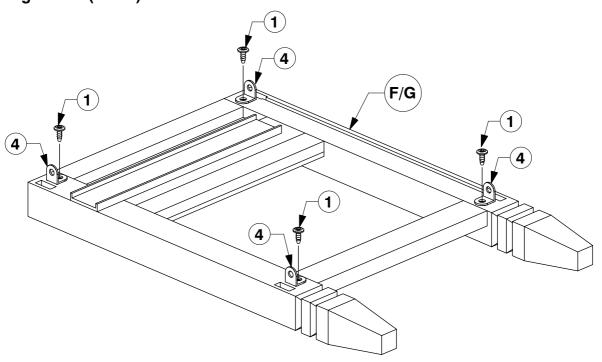


7 Fit the Back Panel (C) to the Top Panel (A).

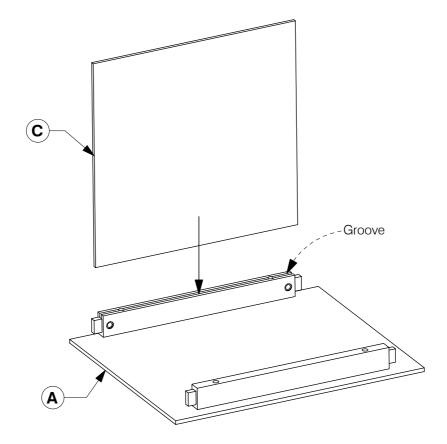


8 Assemble the Left hand Leg Frame (F).

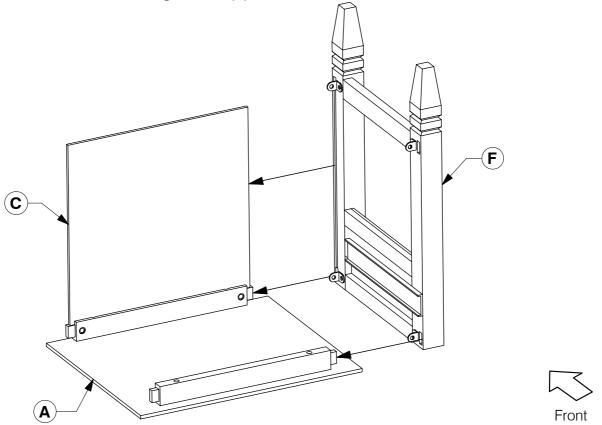


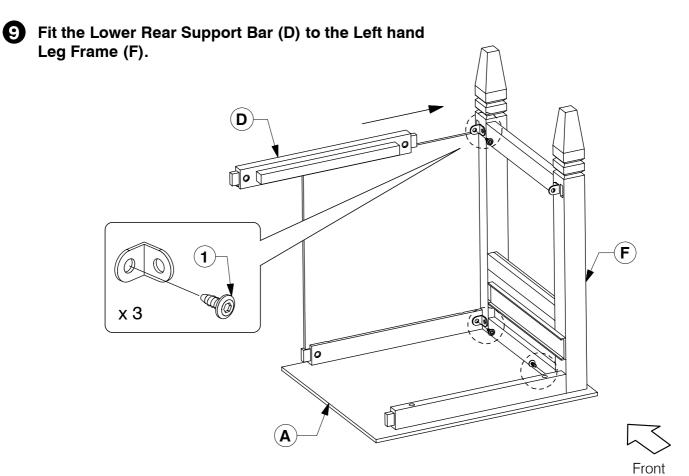

10 Fit the Lower Front Support Bar (E) to the Left hand Leg Frame (F). Assemble the Right hand Leg Frame (G) to the frame.

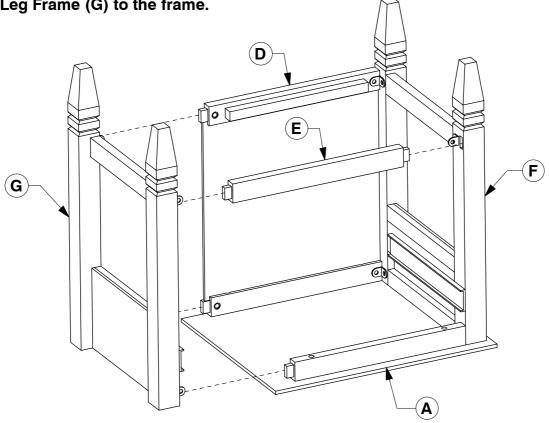




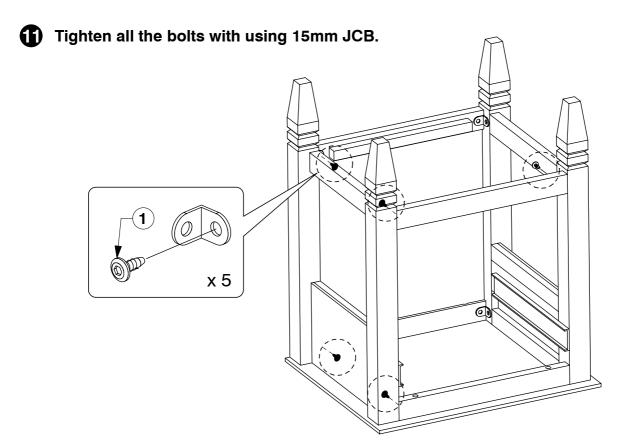




Front

Fit the Shelf (B).

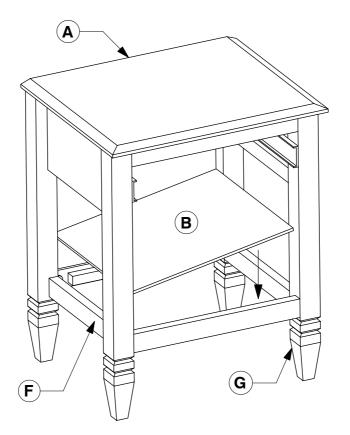




Fit the Handle to the Drawer face (H). Finally, fit the assembled Dawer.

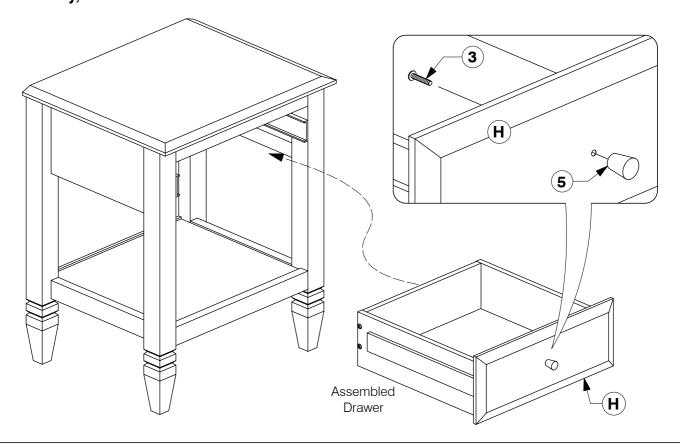









Note: Do not assemble using power tools.

This can cause the bolts to be overtightened



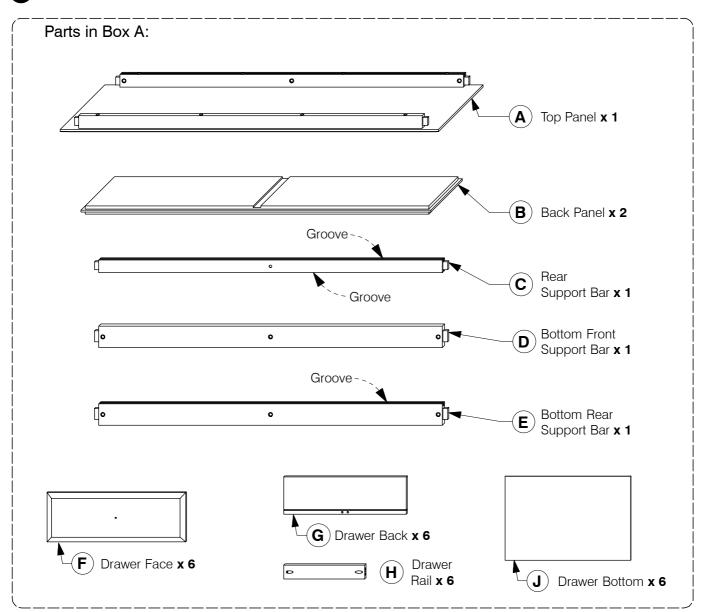

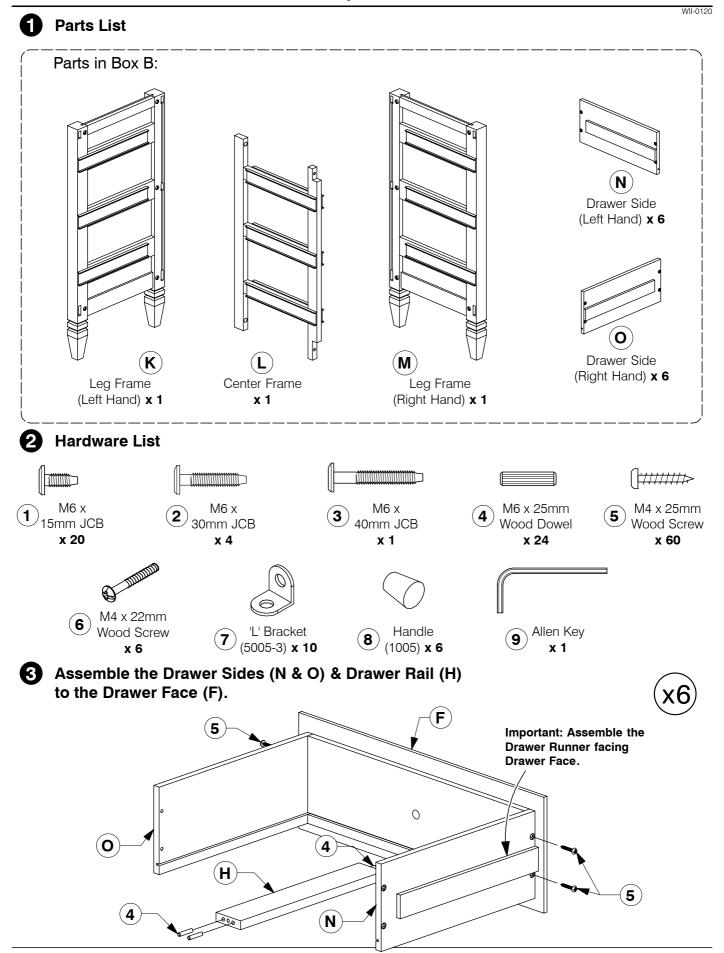


Assembly Instructions


Slide the Drawer Bottom (J) into the groove on the Drawer Sides (N & O).




WII-0120

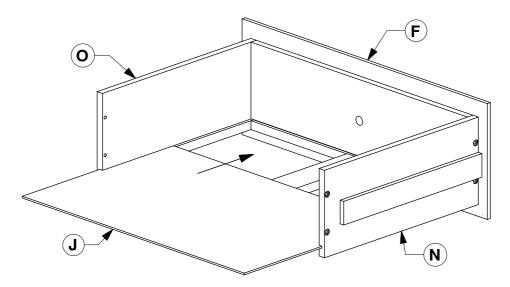



Assemble the Drawer Back (G) to the Drawer Sides (N & O).

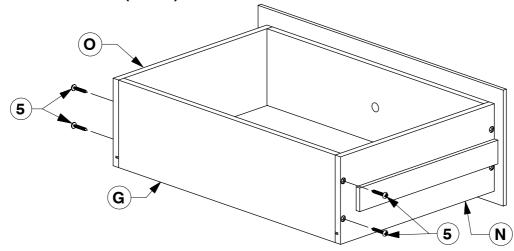


Turn the Drawer over to fit angled 25mm Wood screws (5) to the Drawer Rail (H).

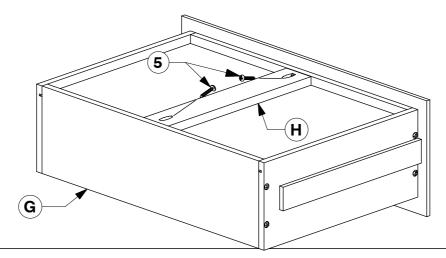

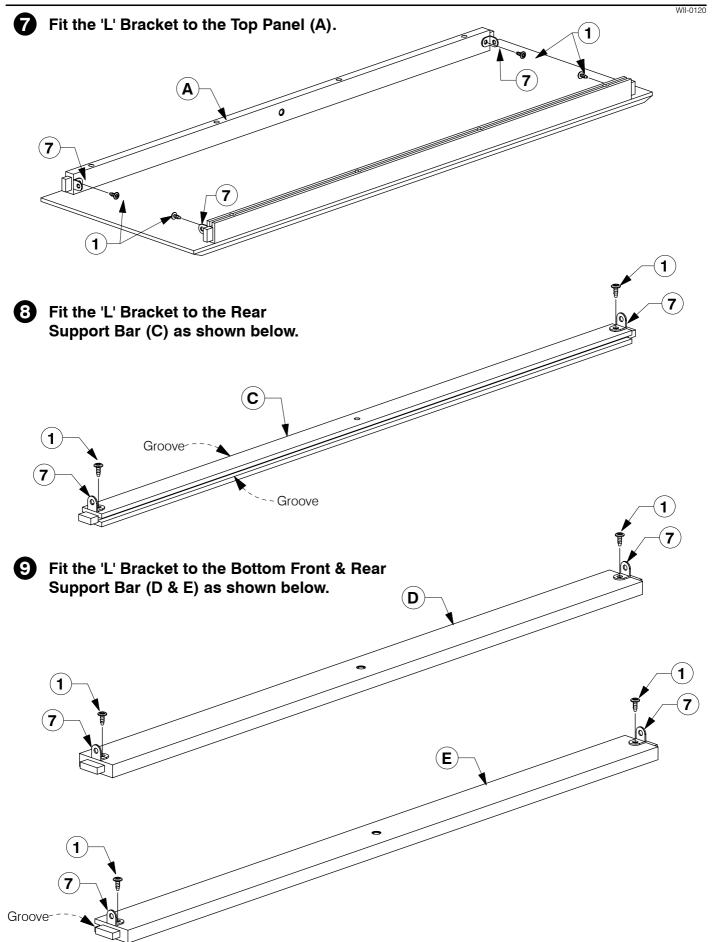


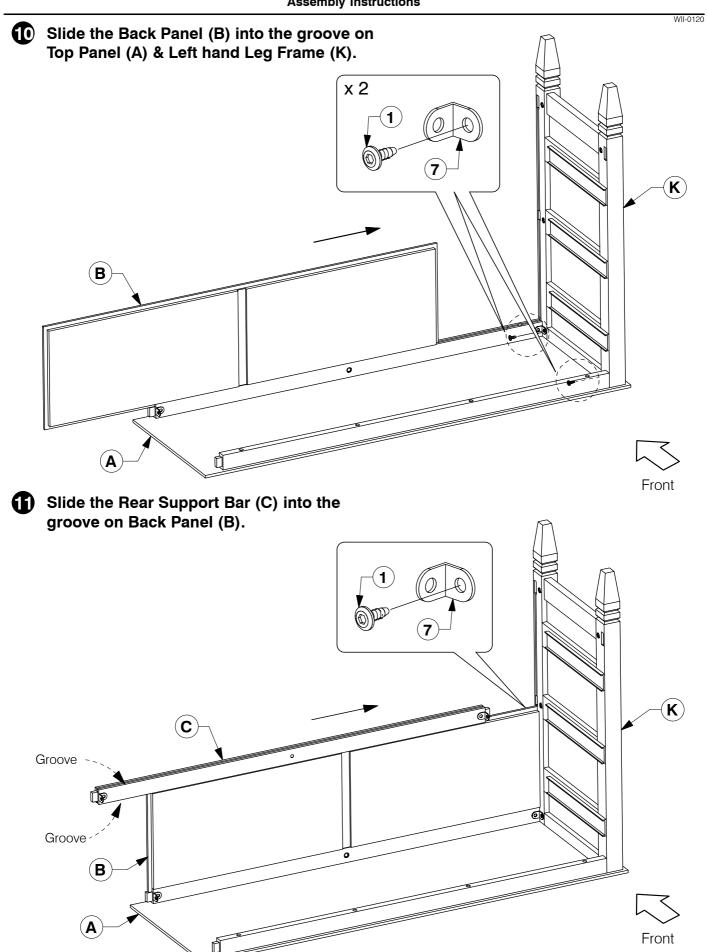

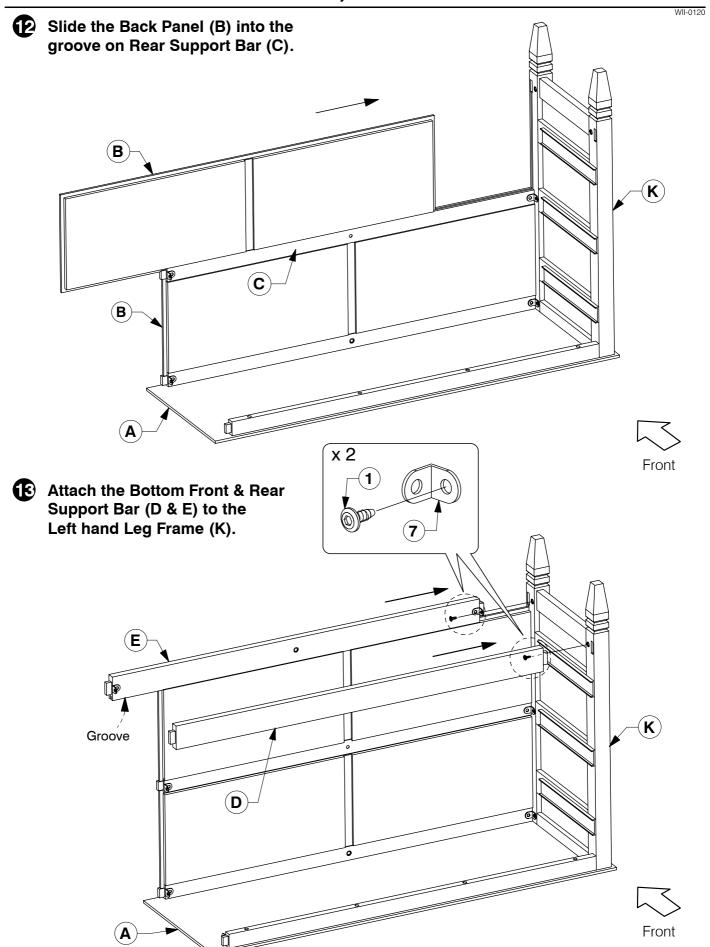

0038 6 Drawer Dresser Assembly Instructions

Fit the Center Frame (L) to the frame.

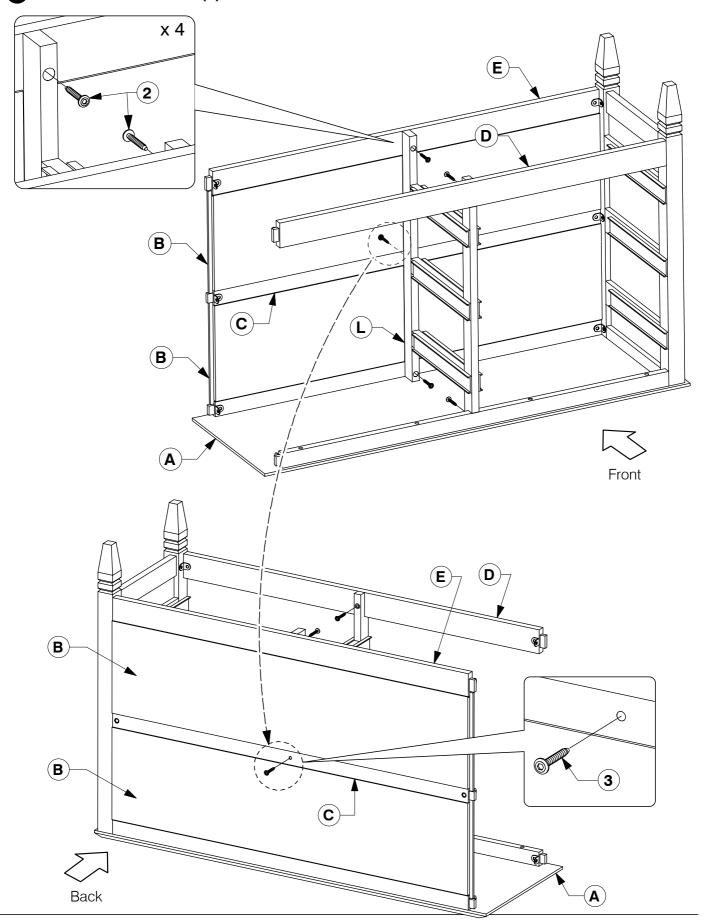

WII-0120 Fit the Right hand Leg Frame (M) to the frame. (E) 1 D x 5 M Front

