
# Cabinet

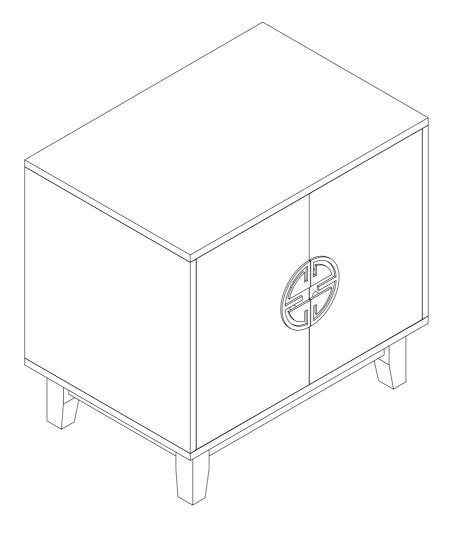


# **ASSEMBLY INSTRUCTION**

## HARDWARE LIST


A 10 PCS	A A	B 10 PCS	9 <sup>5</sup>	C 18 PCS		D 4 PCS	APPOPPOP	E 8 PCS	E DODING
F 16 PCS	Donny	G 4 PCS	(L)DD	H 8 PCS	Quanta	l 8 PCS	O	J 4 PCS	
K 2 PCS		L 1 PC		M 4 PCS	E Mana	N 4 PCS		0 1 PC	

PARTS LIST

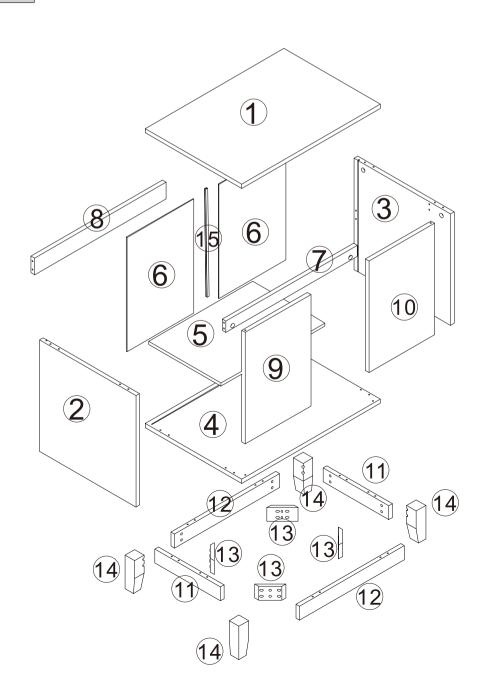

#### STEP 1.

Insert quickfit screws (B) and wooden dowel (C) into part 2, as shown. Insert cam locks (A) into parts 7 and 8.Fit parts 7 and 8 to part 2, as shown. Turn cam locks clockwise to tighten.

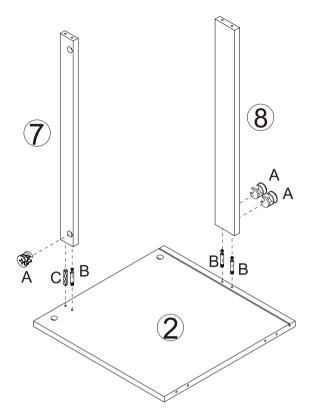









#### STEP 2.

Insert quickfit screws (B) and wooden dowel (C) into part 3, as shown. Insert cam locks (A) into parts 7 and 8. Fit parts 7 and 8 to part 3, as shown. Turn cam locks clockwise to tighten.

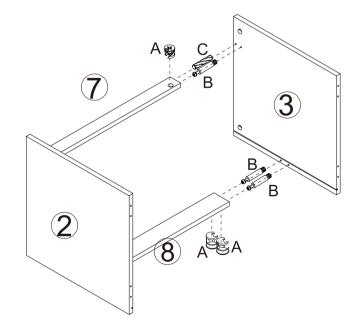






#### STEP 3.

Fix hardware (O) to part 1 using screws (G), as shown. Insert quickfit screws (B) and wooden dowels (C) into part 1. Insert cam locks (A) into parts 2 and 3, as shown. Attach part 1 to parts 2 and 3, as shown. Turn cam locks clockwise to tighten.

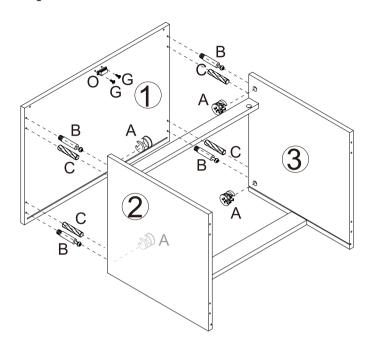













#### STEP 4.

Slide part 6 into grooves between parts 1 and 2, as shown.

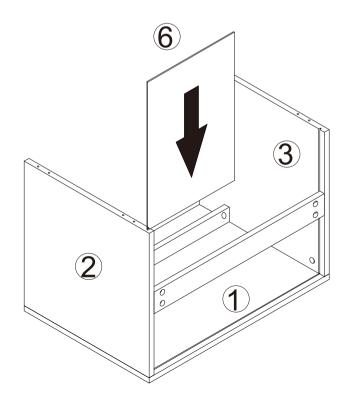


## STEP 5.

Slide parts 15 and 6 into grooves between parts 1 and 3, as shown.

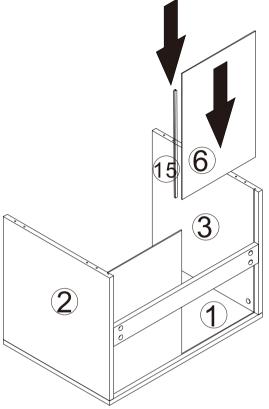

#### STEP 6.

Insert wooden dowels (C) into parts 2 and 3. Fix part 4 to assembled unit using screws (D), as shown.

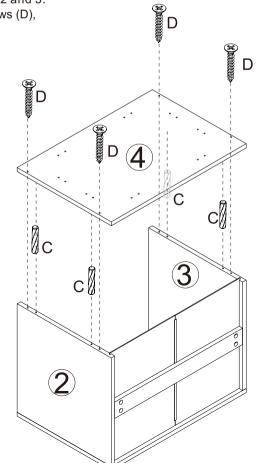






## STEP 7.


Insert wooden dowels (C) into part 4. Fix parts 11 to part 4 using screws (E), as shown.

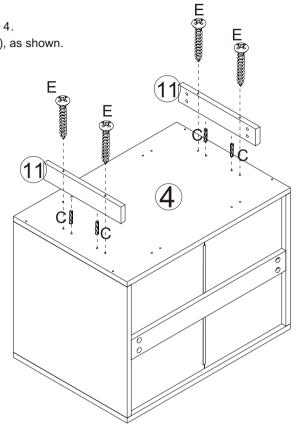






#### STEP 8.

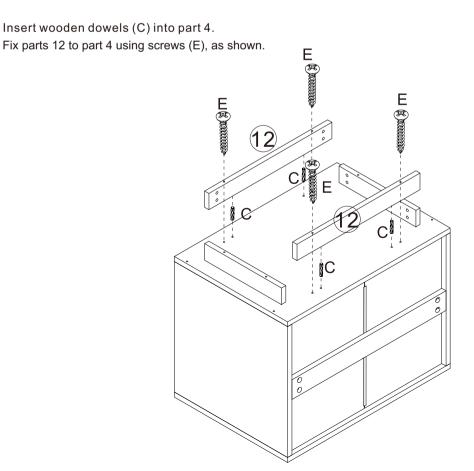




## STEP 9.


Fix parts 13 to parts 11 and 12 using screws (F), as shown.




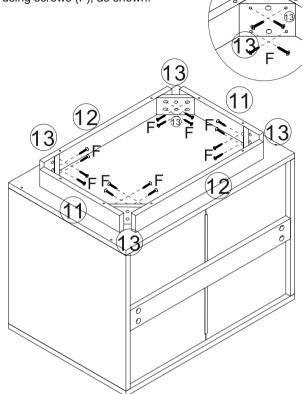

## **STEP 10**.


Fix parts 13 to parts 11 and 12 using screws (H) and washers (I), as shown.

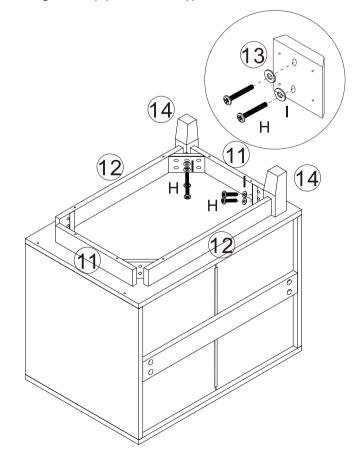



#### STEP 11.


Fix parts 13 to parts 11 and 12 using screws (H) and washers (I), as shown.

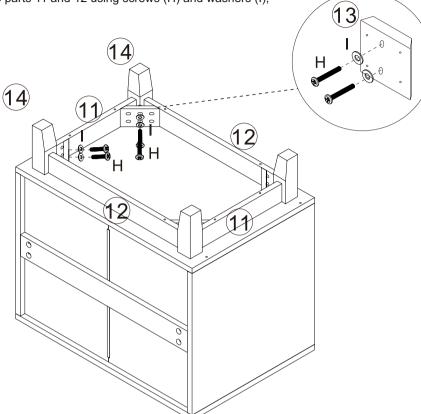

$\bigcap$		
	0	
	Hx4	
$\bigcap$		
	0	
	lx4	

## **STEP 12.**

Press down (J) and fit doors 9 and 10 into assembled unit, as shown.

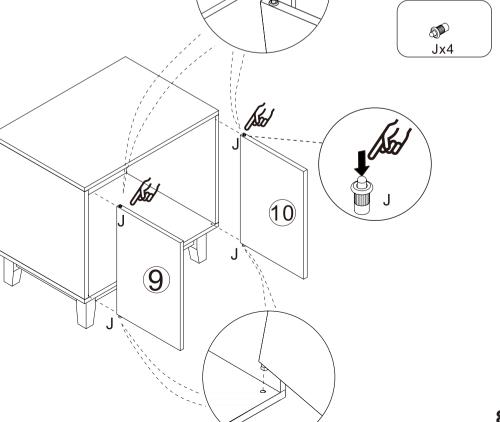

#### STEP 13.

Fix handles (L) to doors 9 and 10 using screws (M). Fix hardwares (K) to doors 9 and 10 using screws (G), as shown. Fit shelf supporters (N) to the inside of parts 2 and 3, as shown.

2 N N












#### STEP 13.

Place part 5 on shelf supporters, as shown.

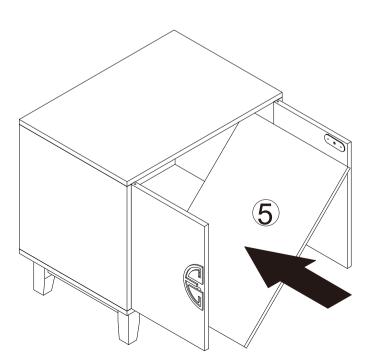

3

G

Μ

M

M

N

K

9