

Assembly Instructions

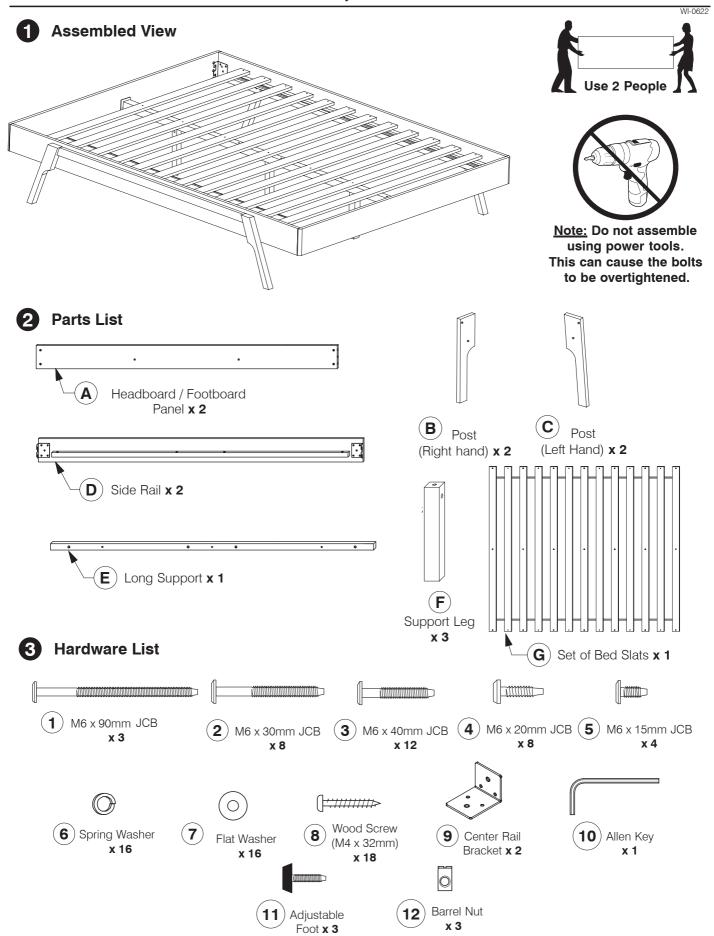



Assembly Instructions


WI-0622

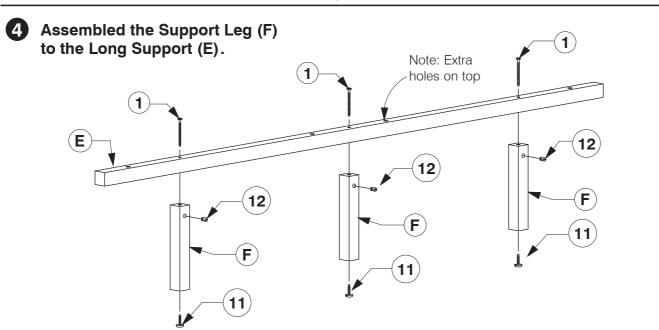

5 Fit the Center Rail Bracket to the Headboard / Footboard Panel (A).

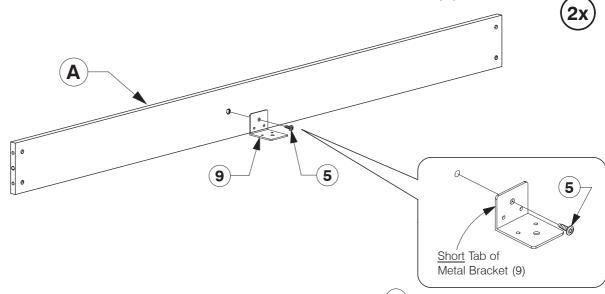


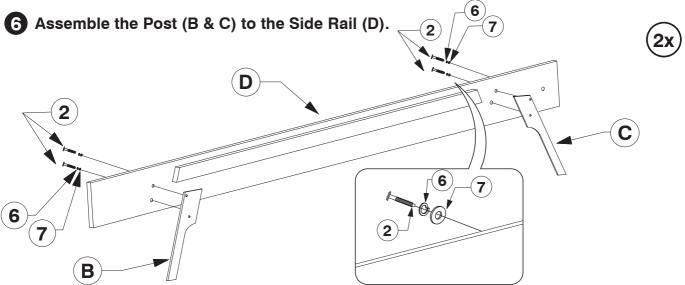

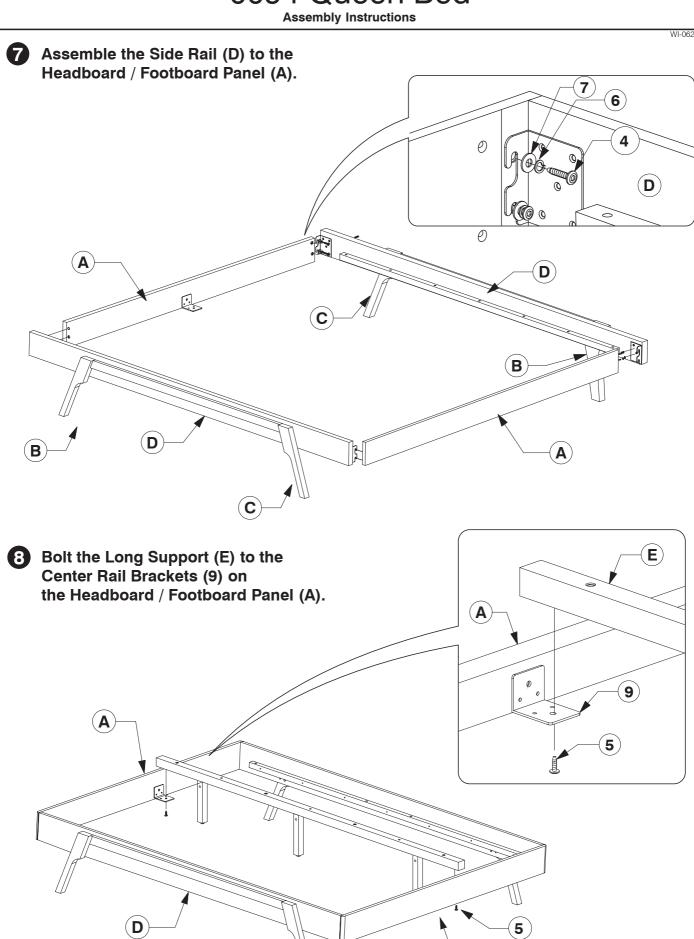

Assembly Instructions

9 Bolt & screw the remaining Bed Slats (G) to the Side Rail (D).

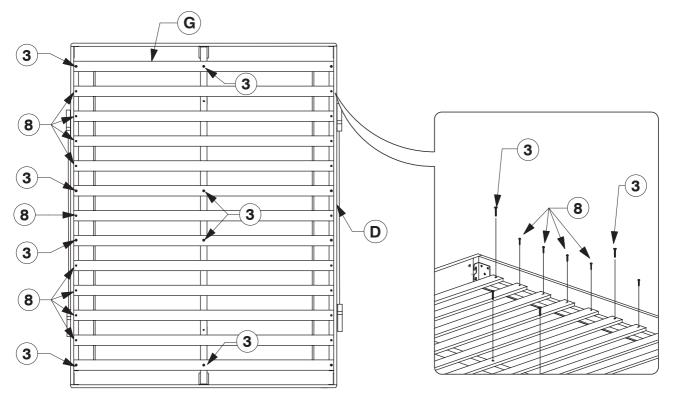

Page 4 of 4