


King Bed


Assembly Instructions

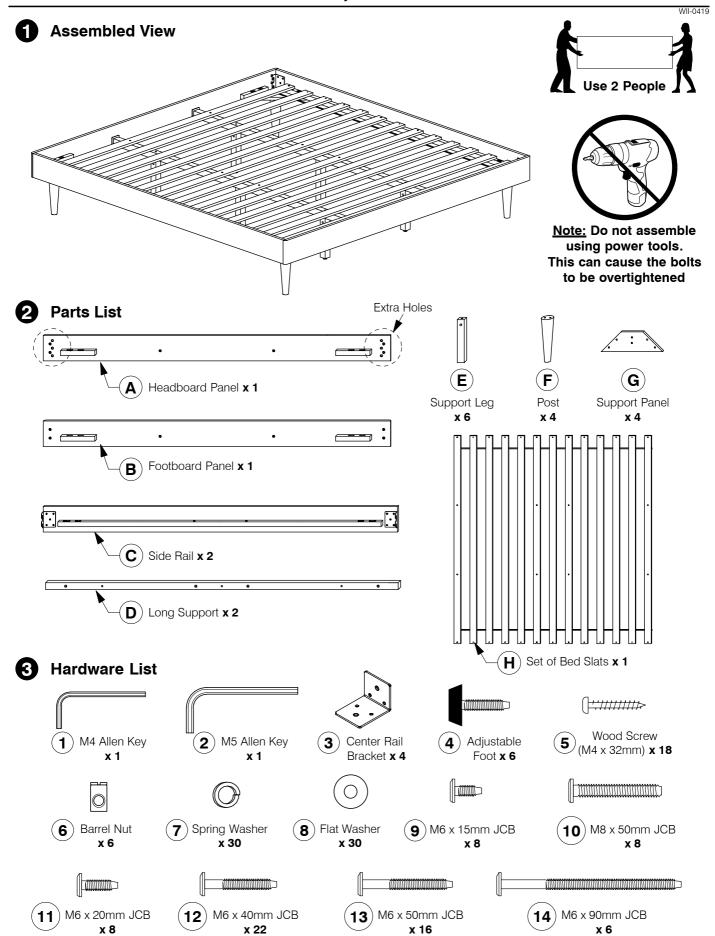


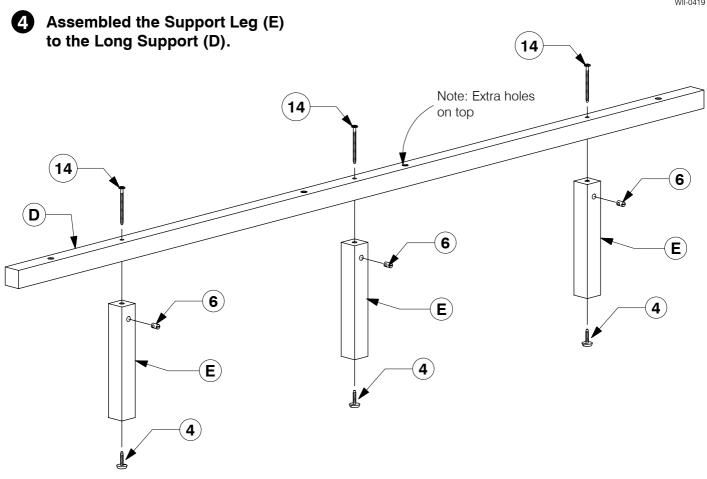


5 Fit the Post (F) to the Support Panel (G).

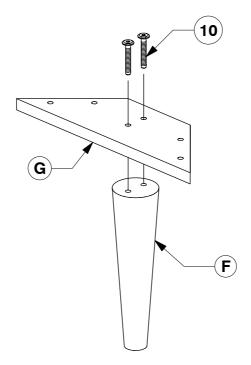


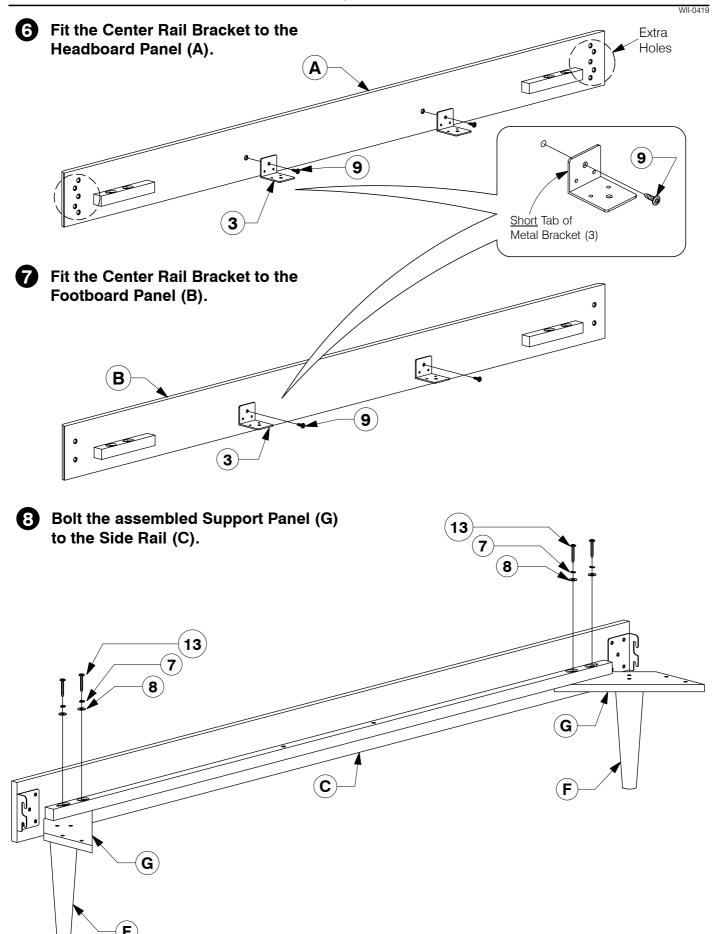

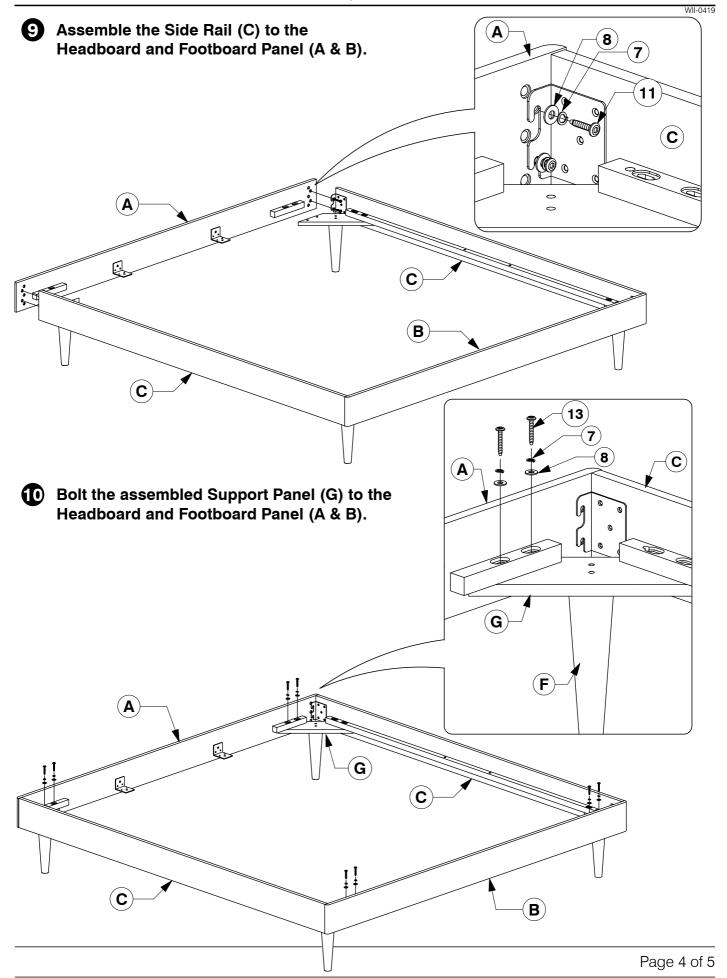

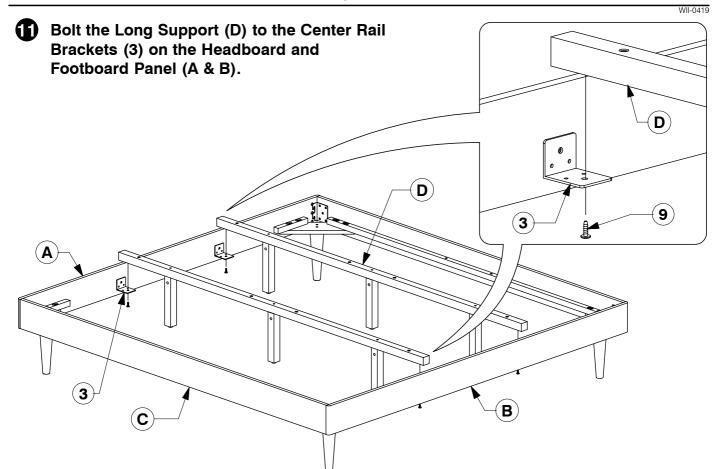


Bolt & screw the Bed Slats (H) to the Side Rail (C).

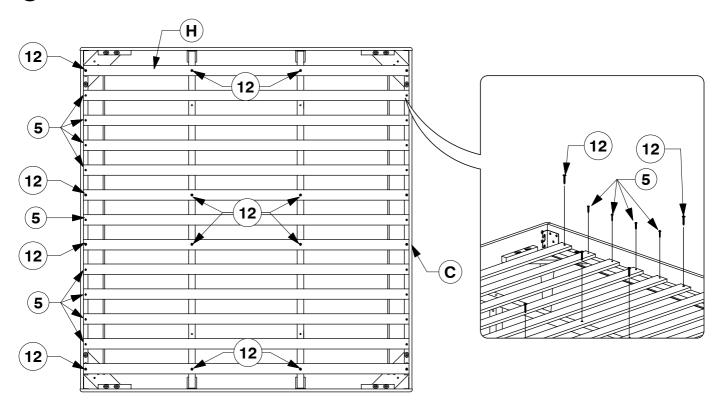


King Headboard

Assembly Instructions

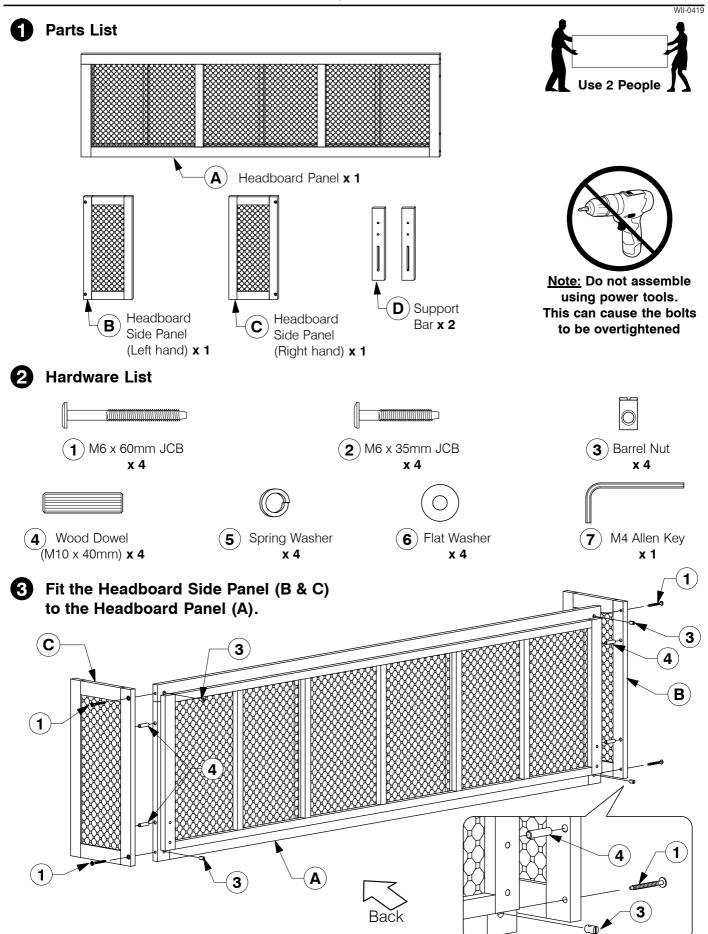



97151 King Headboard Assembly Instructions



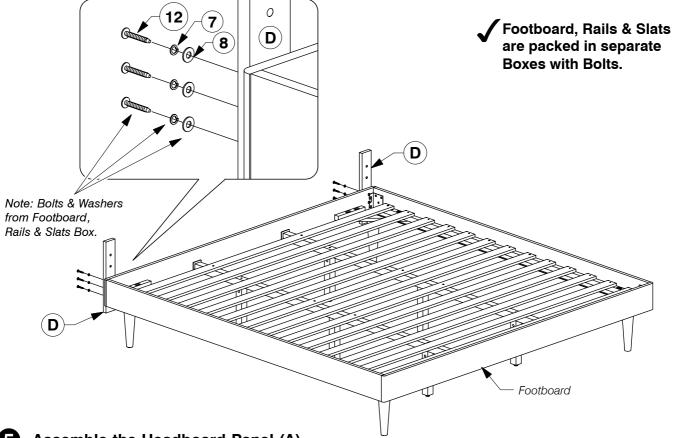


5 Assemble the Headboard Panel (A) to the Support Bars (D).

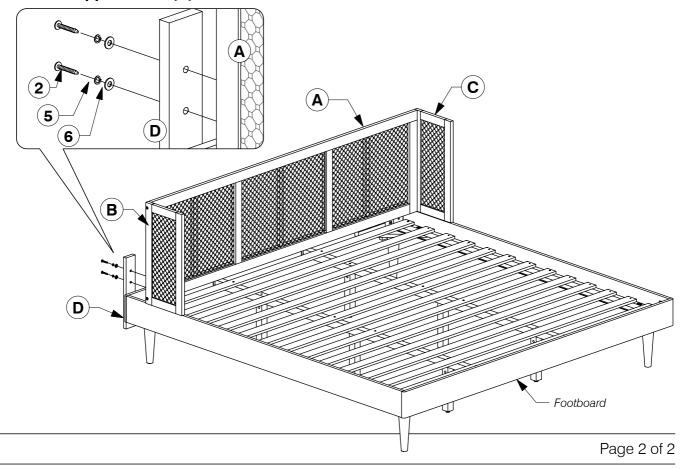

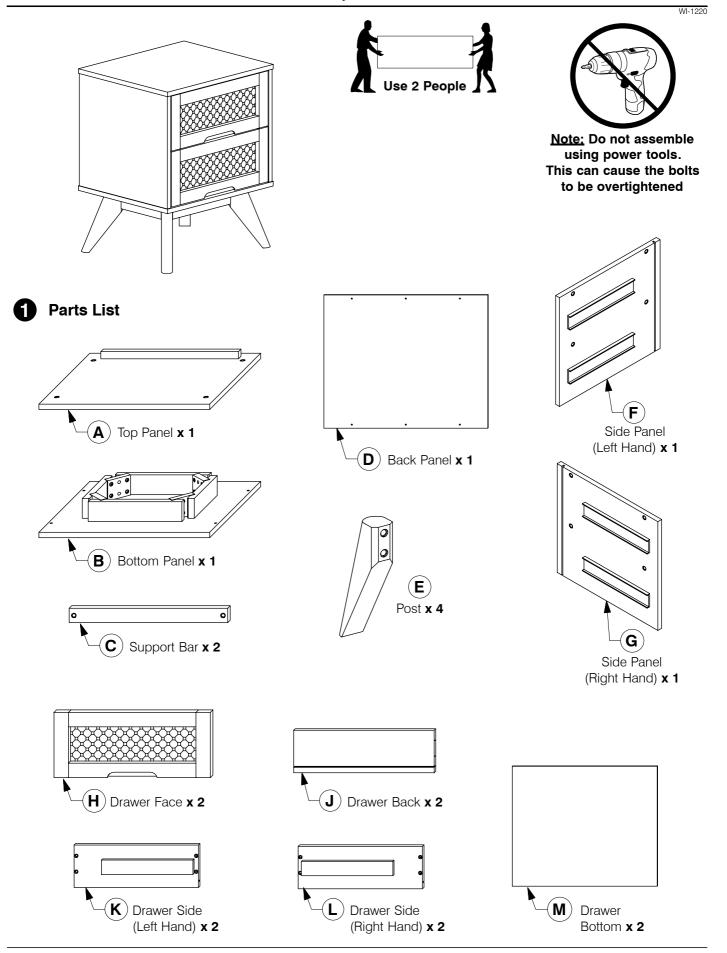



9001 2 Drawer Nightstand

Assembly Instructions

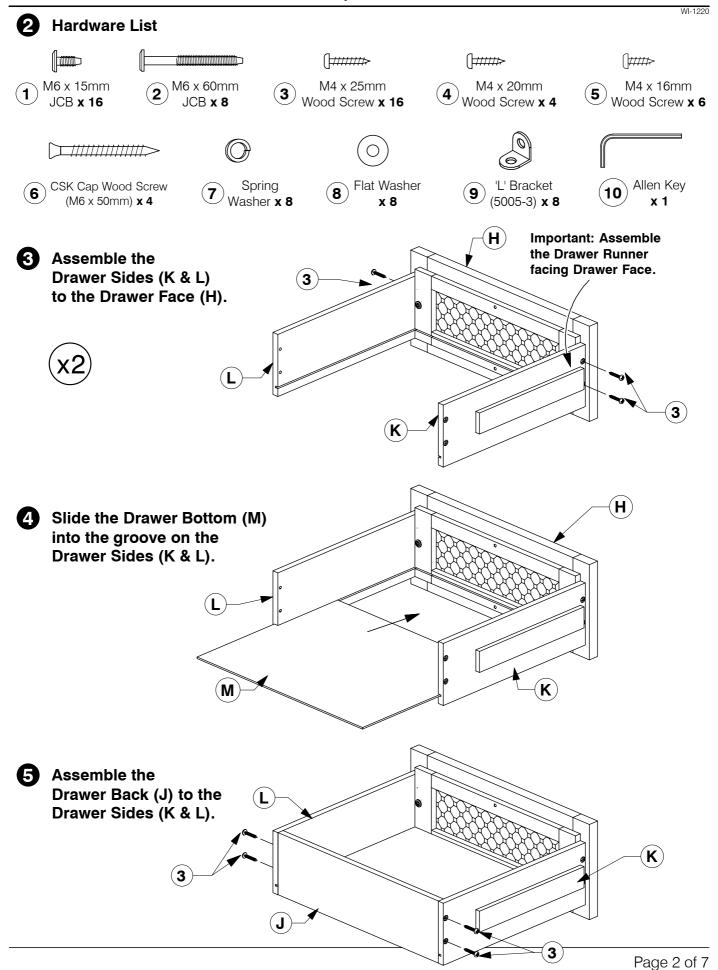


WI-1220

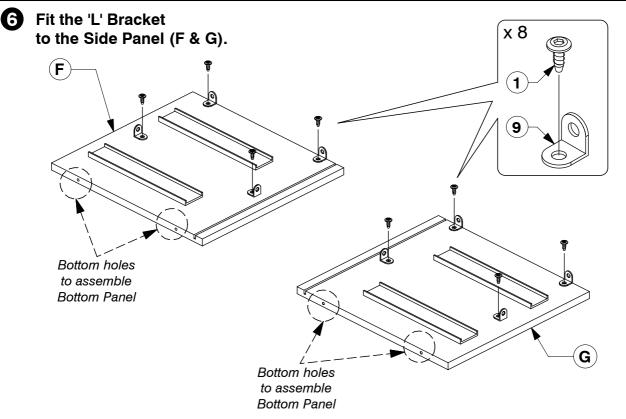


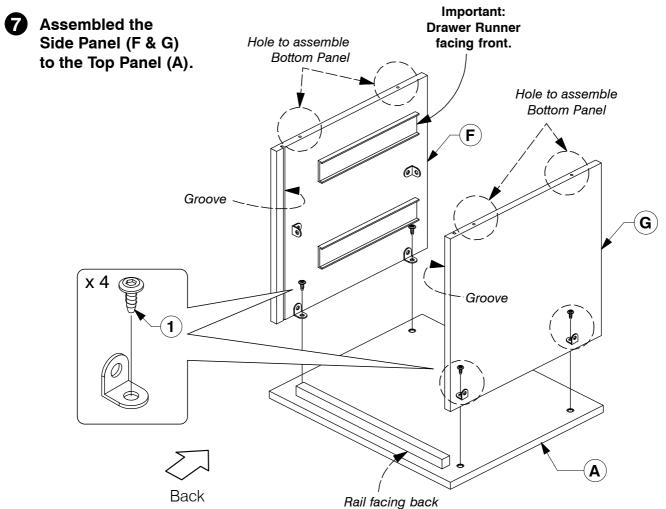


8 Fit the Support Bar (C) to the Side Panel (F & G).

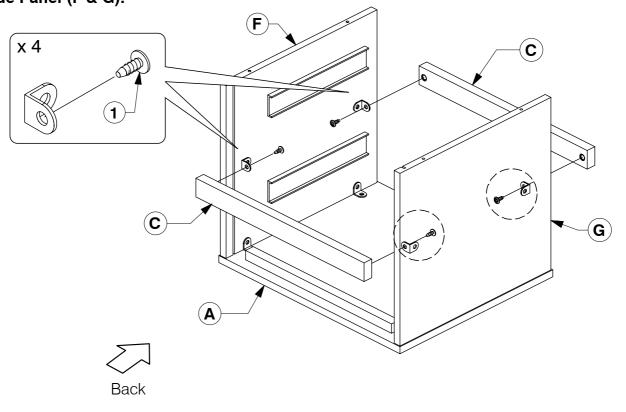


9 Slide the Back Panel (D) into the groove on the back of the Side Panel (F & G).

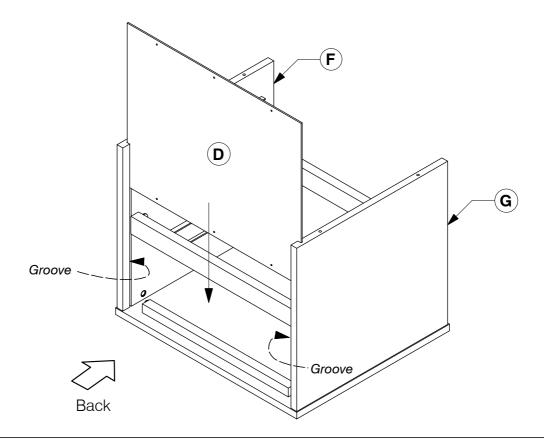

WI-1220

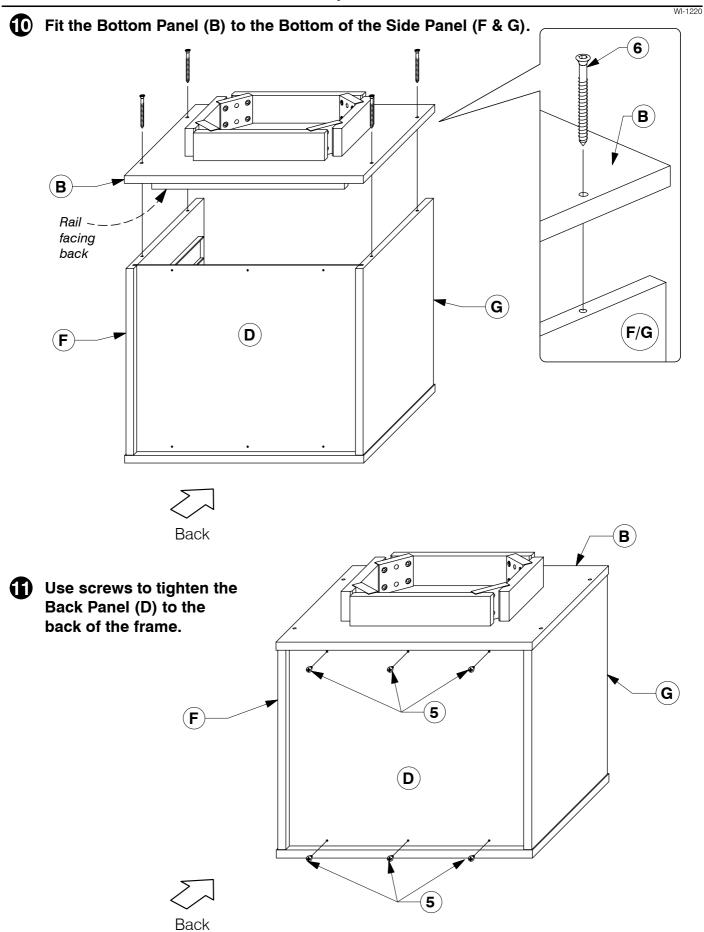


Fit the Post (E) to the Bottom Panel (B).

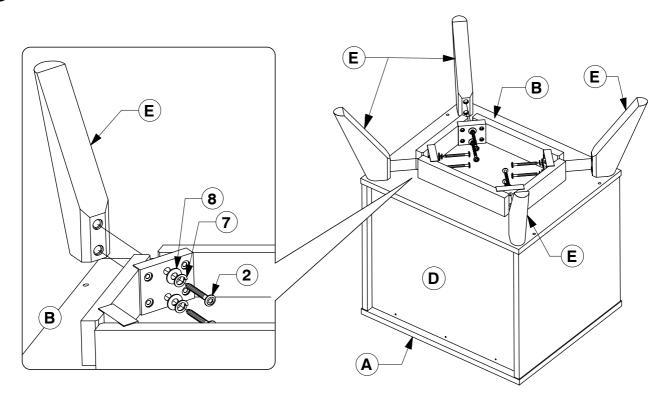

Fit and adjust the Drawer Face (H).

* NOTE: Before fitting the Wood Screws. Lossen the JCBs on the Drawer Face if the face needs alignment.

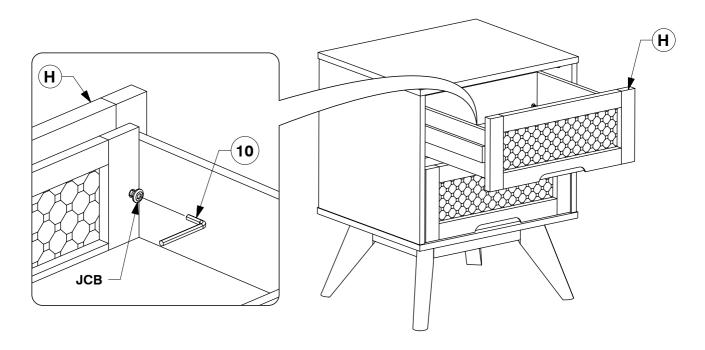

WI-1220

After the Drawer Faces (H) are aligned, secure with wood screws.

