







Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.


**CAUTIONS :** 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.  
2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.  
3. Keep all hardware parts out of reach of children.

**NOTE :** THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.  
Tool needed : Screwdriver (not provided).


| PART LIST |               |      |
|-----------|---------------|------|
| ITEM      | DESCRIPTION   | QTY  |
| A         | CHAIR         | 1 PC |
| B         | CHAIR LEG (L) | 1 PC |
| C         | CHAIR LEG (R) | 1 PC |
| D         | FRONT RAIL    | 1 PC |
| E         | BACK RAIL     | 1 PC |
| F         | BOTTOM RAIL   | 1 PC |

| HARDWARE LIST |   |      |
|---------------|---|------|
| ITEM          | DESCRIPTION   | QTY  |
| 1             | JCBB BOLT M8 x 50mm        | 6pcs |
| 2             | JCBB BOLT M8 x 60mm        | 2pcs |
| 3             | M8 SPRING WASHER           | 8pcs |
| 4             | WOOD SCREW M4 x 38mm       | 4pcs |
| 5             | WOOD DOWEL M8 x 35mm       | 8pcs |
| 6             | M5 ALLEN KEY (BALL SHAPE)  | 1pc  |

## STEP 1

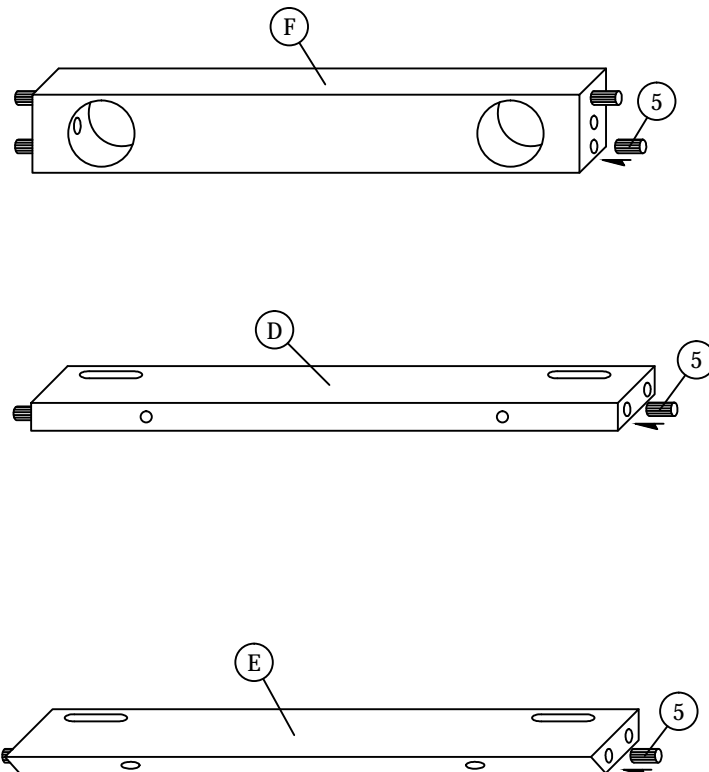

## STEP 2

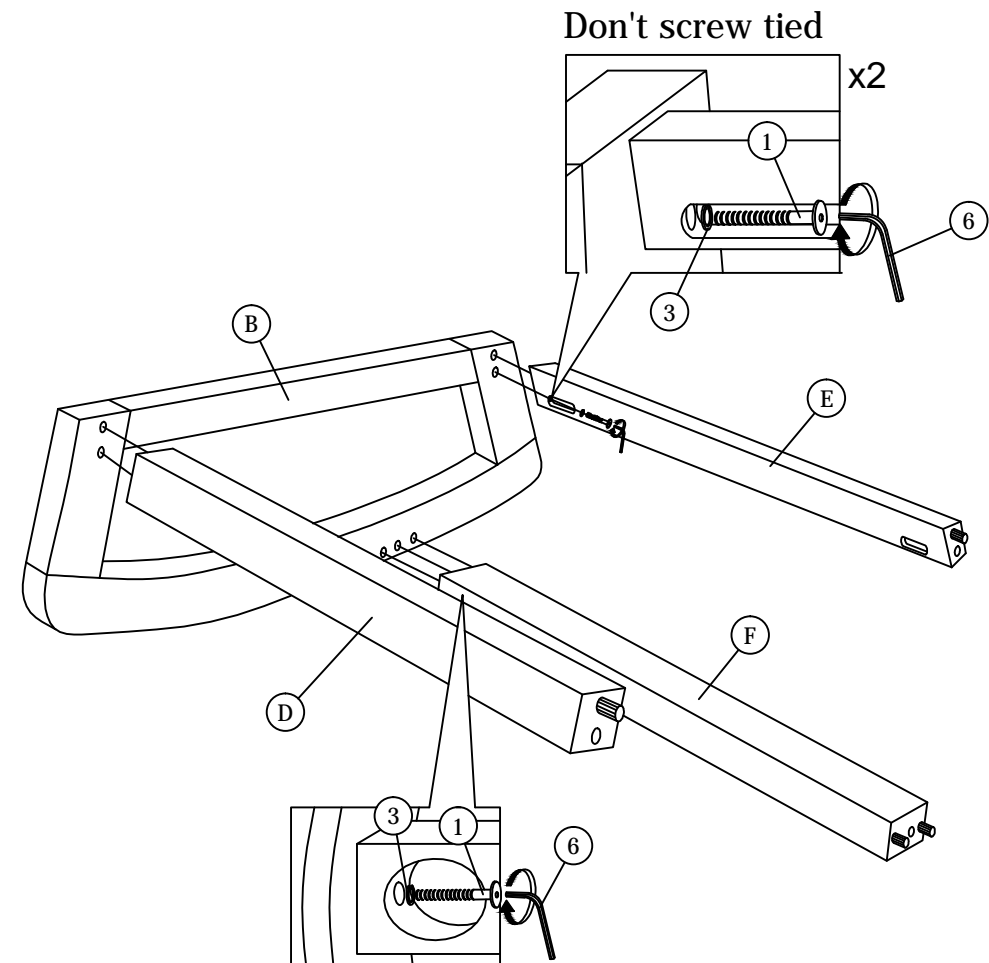


# ASSEMBLY INSTRUCTIONS

2 of 2

## STEP 3


Don't screw tied

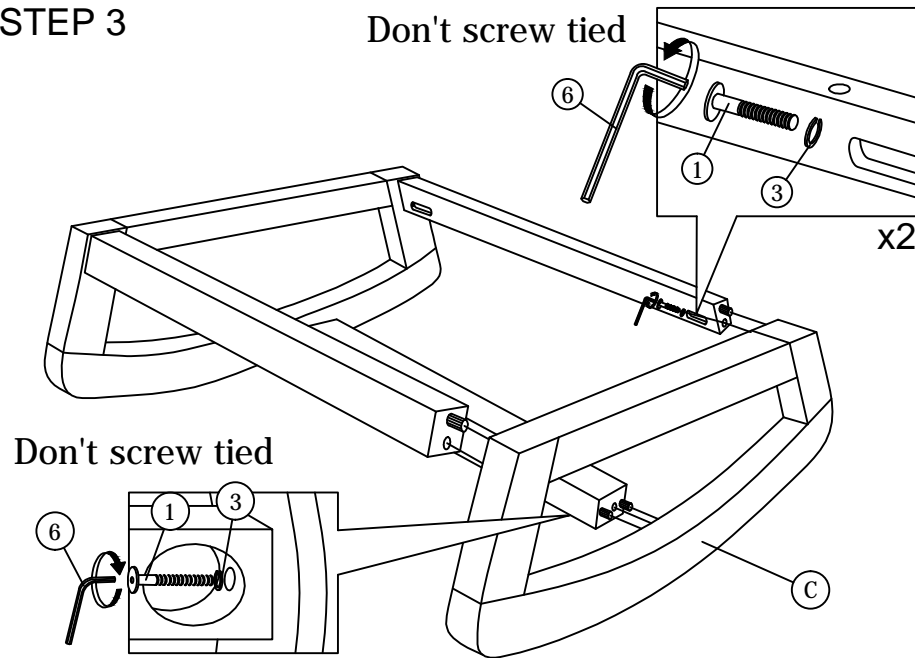


## STEP 4

**\*\*Finish step 4,**

Please screw tied the step 2 and step 3 bolt.

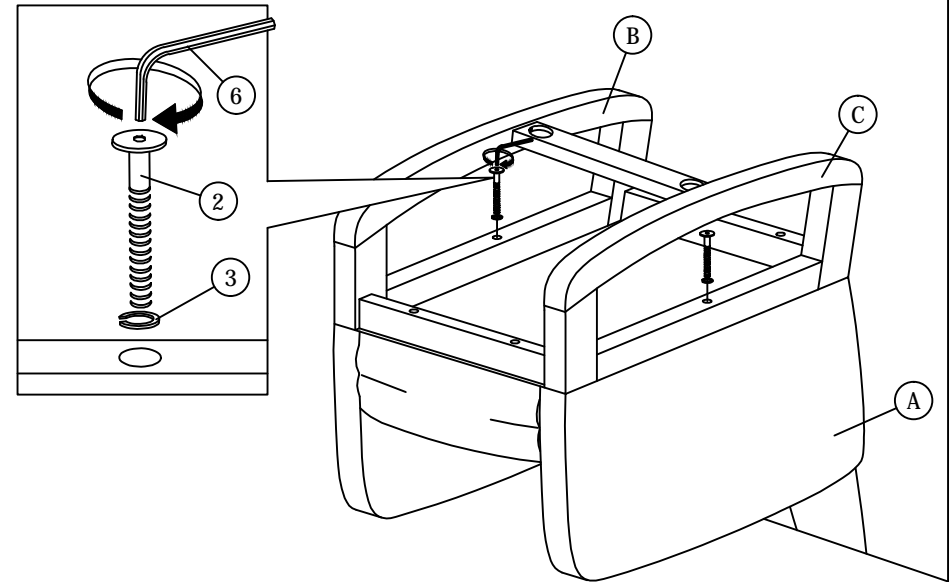

## STEP 5

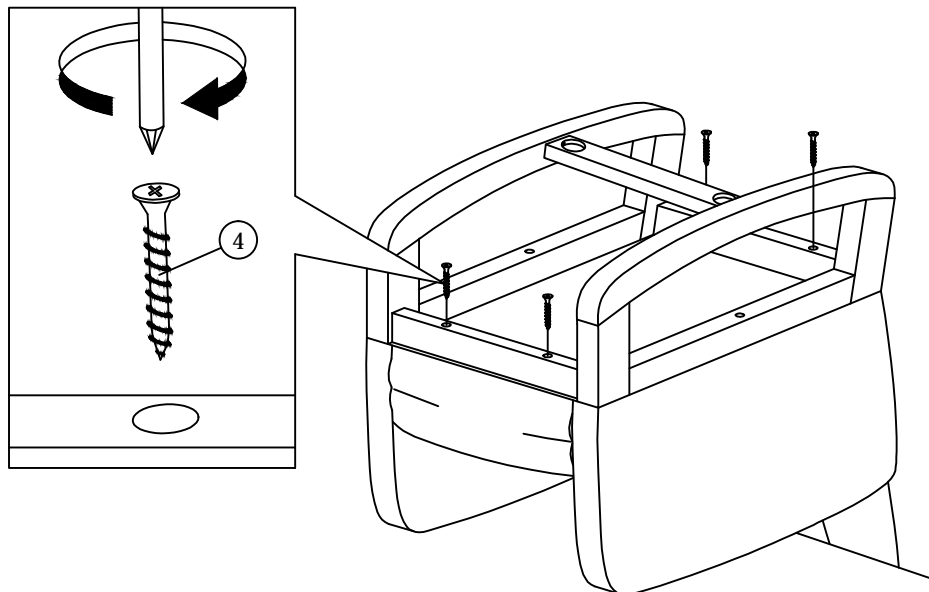

## STEP 6

