# **Cabinet**




# **ASSEMBLY INSTRUCTION**

# HARDWARE LIST


A 6 PCS		B 6 PCS		C 12 PCS		D 6 PCS	<b>Bananagan</b>	E 8 PCS	
F 8 PCS	(2) Digital	G 4 PCS		H 4 PCS	*	I 8 PCS		J 6 PCS	
K 10 PCS	Quinney.	L 4 PCS	& Days	M 8 PCS	Paraman	N 1 PC		O 2 PCS	©


# PARTS LIST

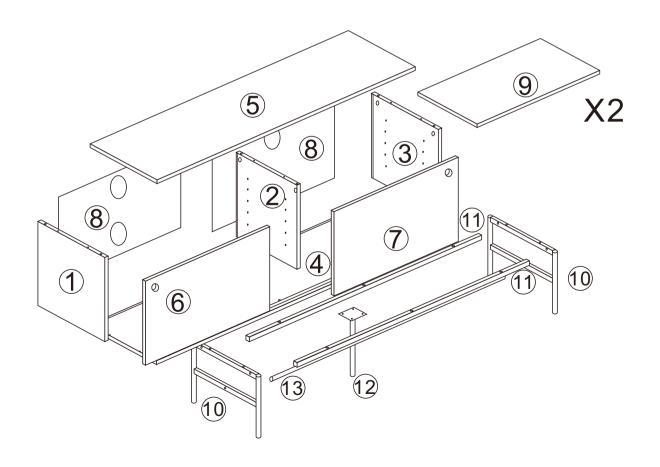

#### STEP 1.


Insert quickfit screws (A) into part 5, as shown.



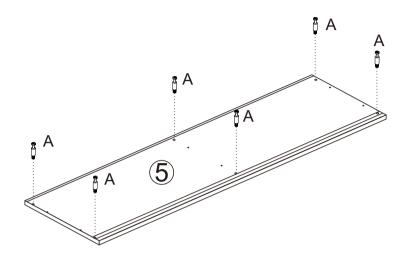

#### STEP 2.

Insert wooden dowels (C) into part 5, as shown. Insert cam locks (B) into parts 1, 2 and 3, as shown. Fit parts 1, 2 and 3 to part 5, as shown. Turn cam locks clockwise to tighten.

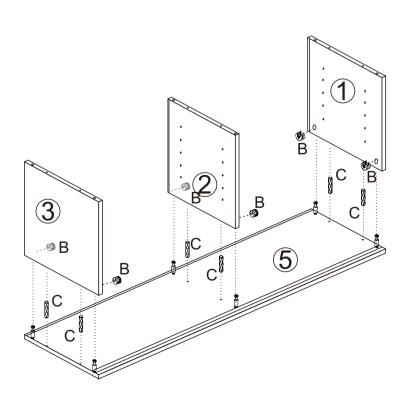









#### STEP 3.

Slide parts 8 into grooves between parts 1, 2 and 3, as shown.

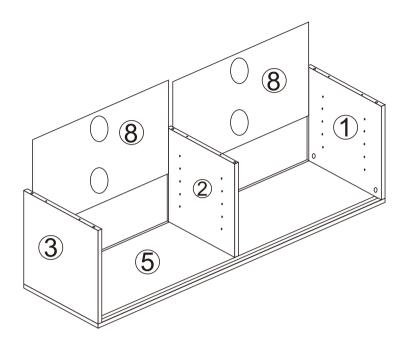

## STEP 4.

Attach part 4 to parts 1, 2 and 3 with wooden dowels (C) and screws (D), as shown.

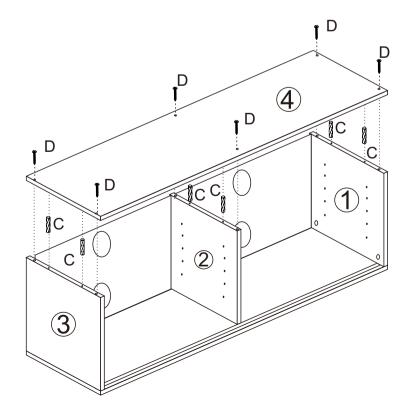





#### STEP 5.


Insert handles (O) and bearings (G) into doors 6 and 7, as shown. Fix wheels (H) to doors 6 and 7 using screws (F), as shown.










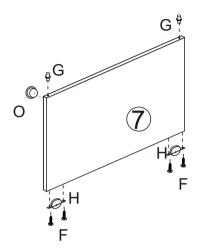

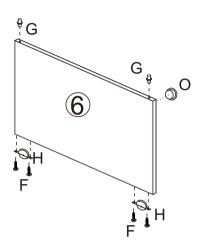


#### STEP 6.

Fix parts 11 and 13 to parts 10 using screws (J) and allen key (N), as shown.






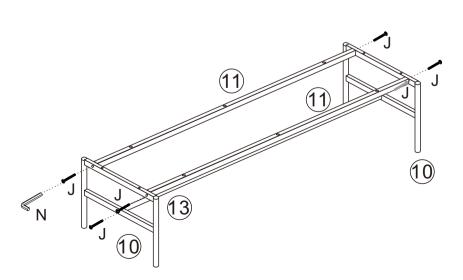

#### STEP 7.

Fix assembled legs to part 4 using screws (K) and allen key, as shown. Fix corner brackets (I) to parts 8 using screws (M), as shown.

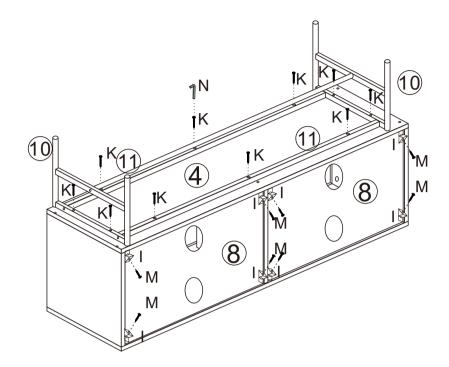








## STEP 8.

Fix leg 12 to part 4 using screws (L), as shown.




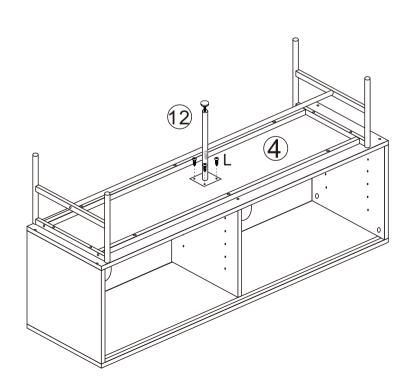

#### STEP 9.


Fit shelf supports (E) into desired position in the assembled unit, as shown.



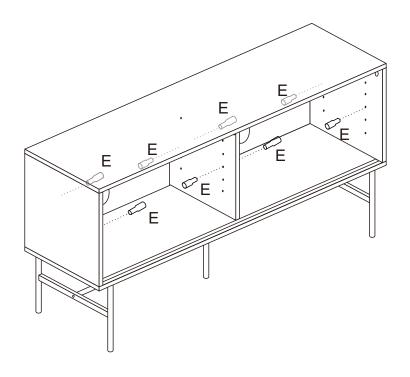


#### **STEP 10.**

Place shelf 9 on top of shelf supports, as shown.

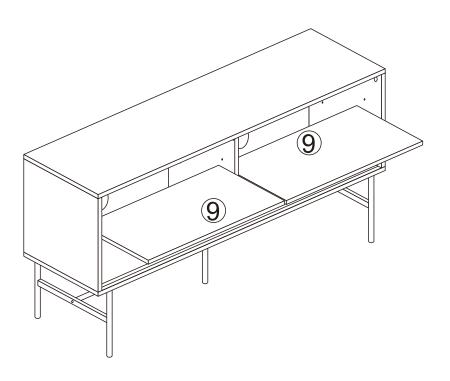

#### **STEP 11.**

Fit doors 6 and 7 into assembled unit, as shown.

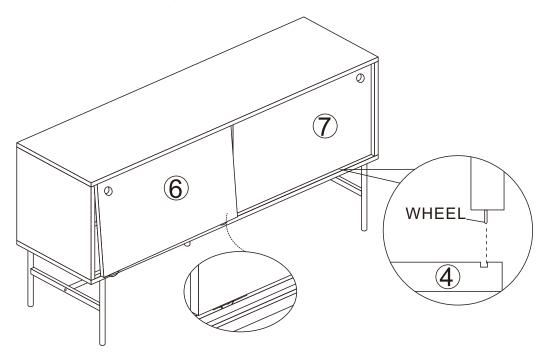

#### **STEP 12.**

Your cabinet is ready for use.

