


9749 King Headboard

Assembly Instructions

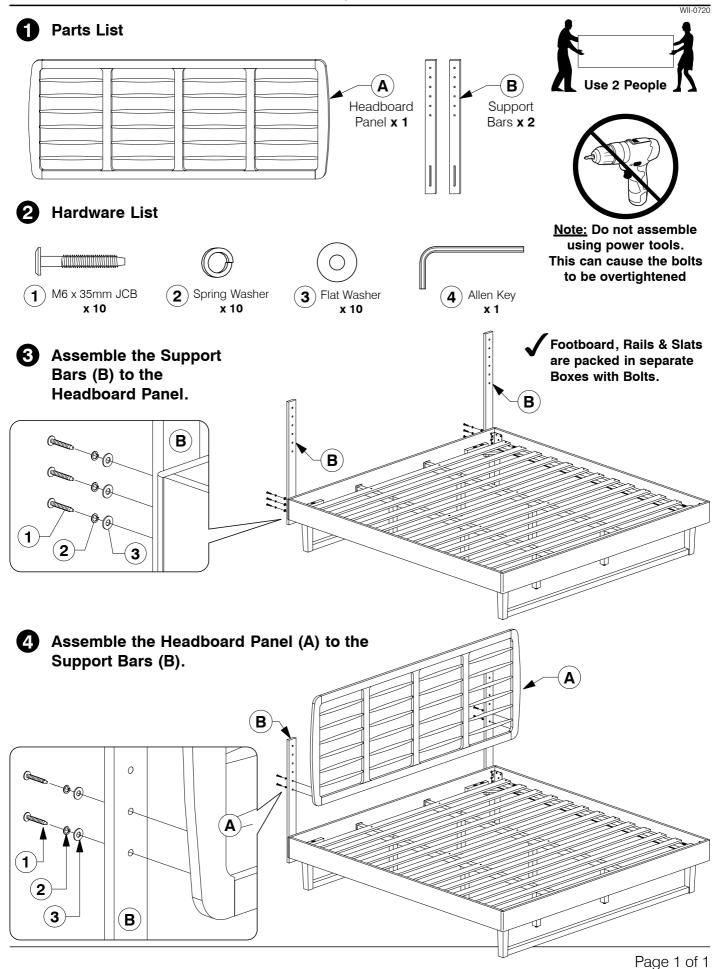


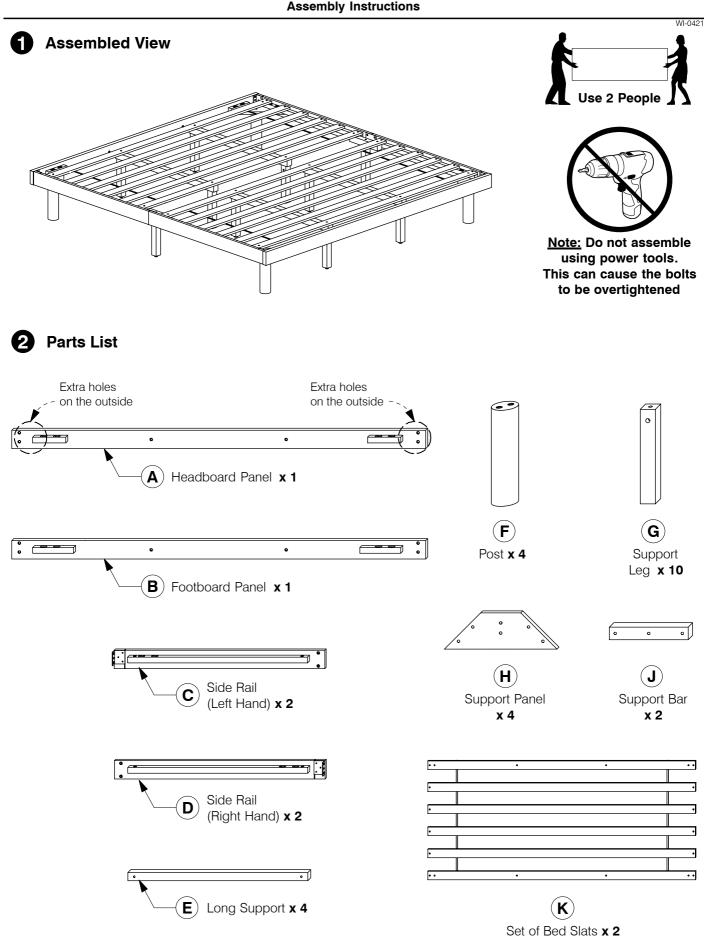


Assembly Instructions

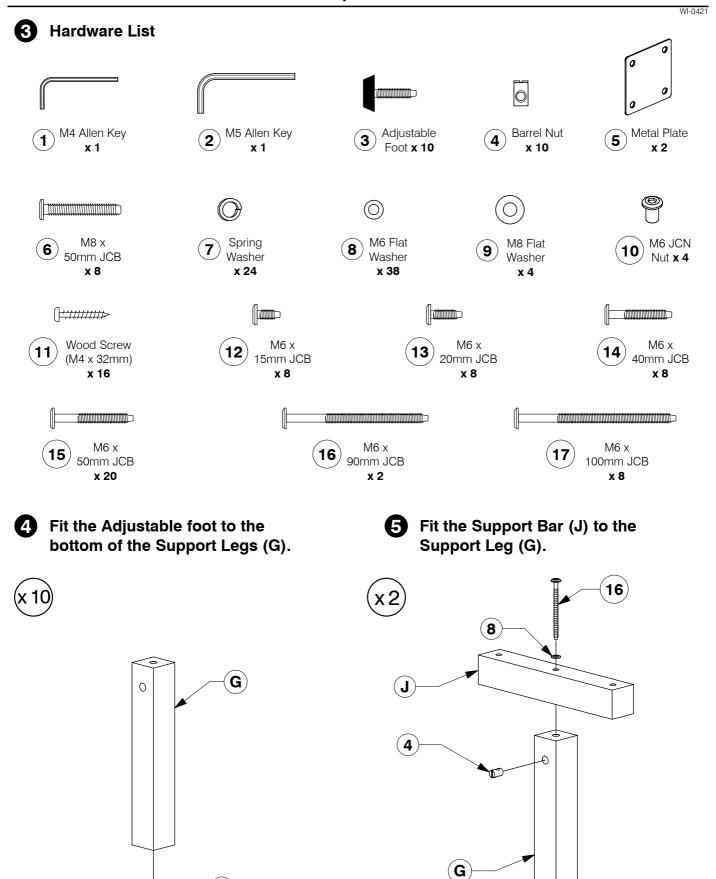

(3)

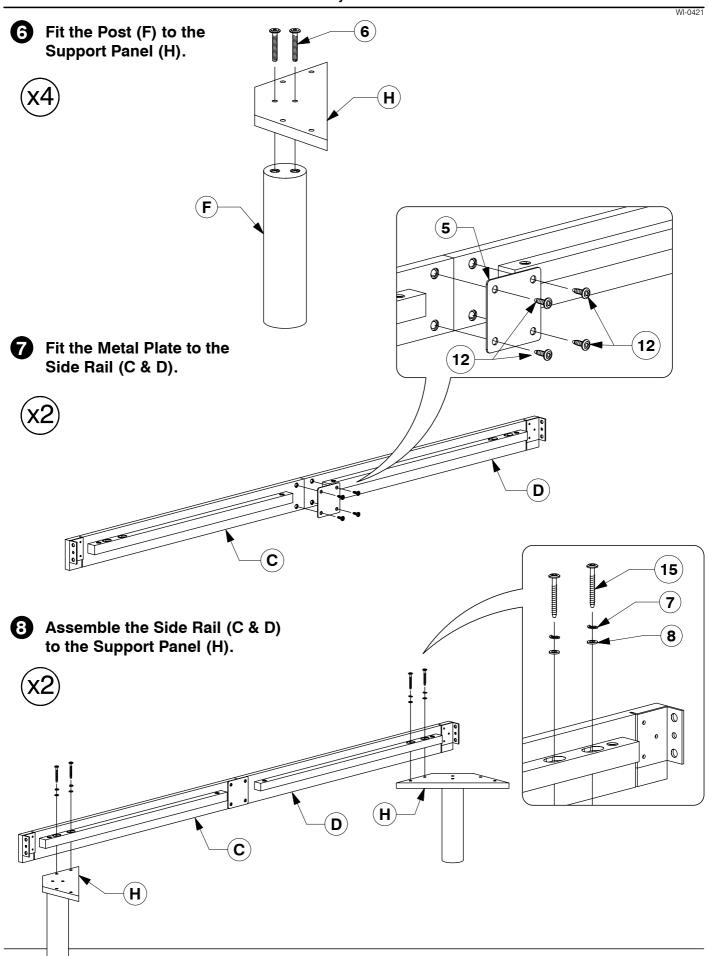


Page 3 of 6

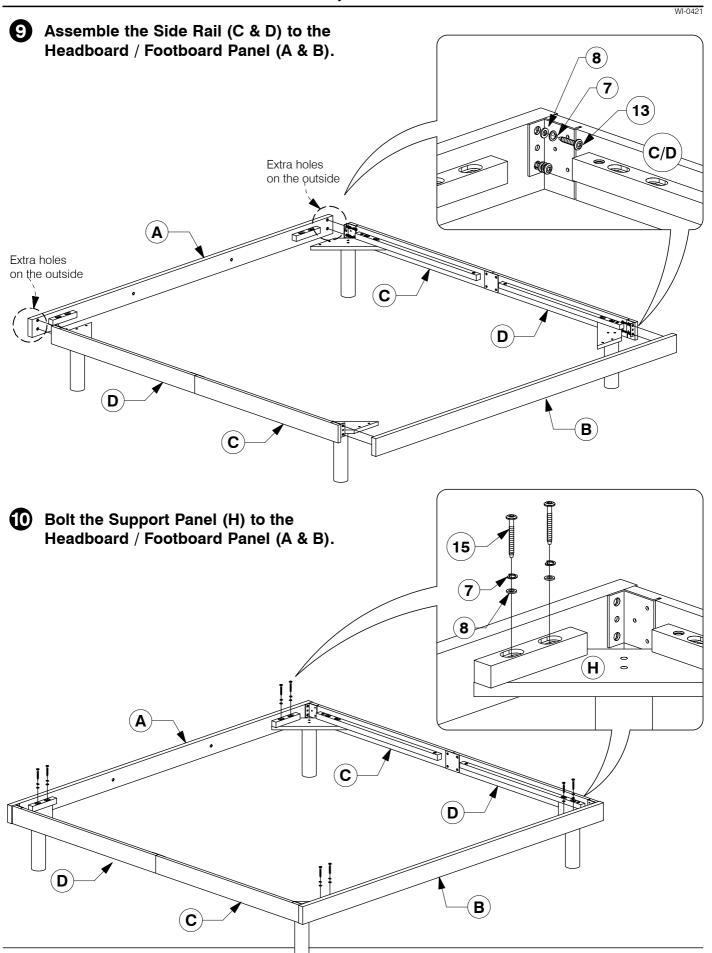


Page 4 of 6

WI-0421

1 Fit the Slats (K) to the Long Support (E) & Support Leg (G).

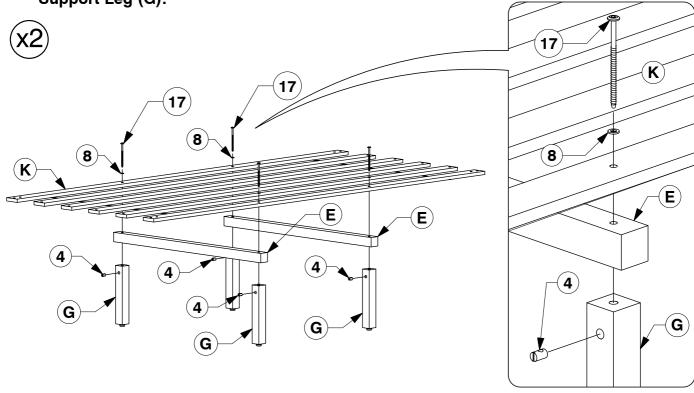

Bolt the Bed Slats (K) to the Side Rail (C & D).

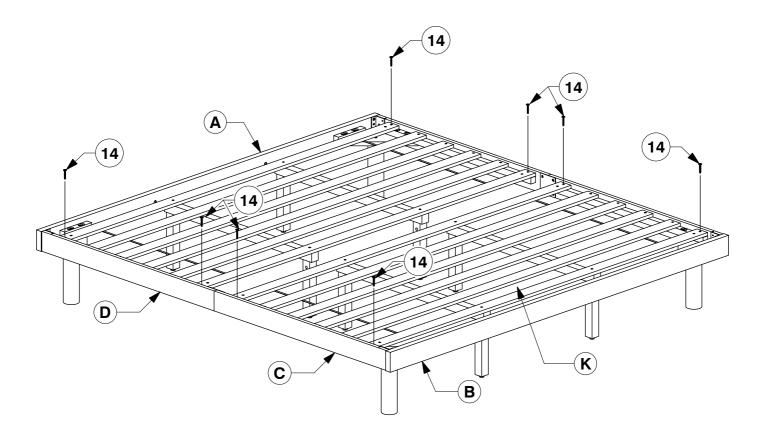

Screw the Bed Slats (K) to the Side Rail (C & D).

