

9767 Full / Queen Headboard


Assembly Instructions

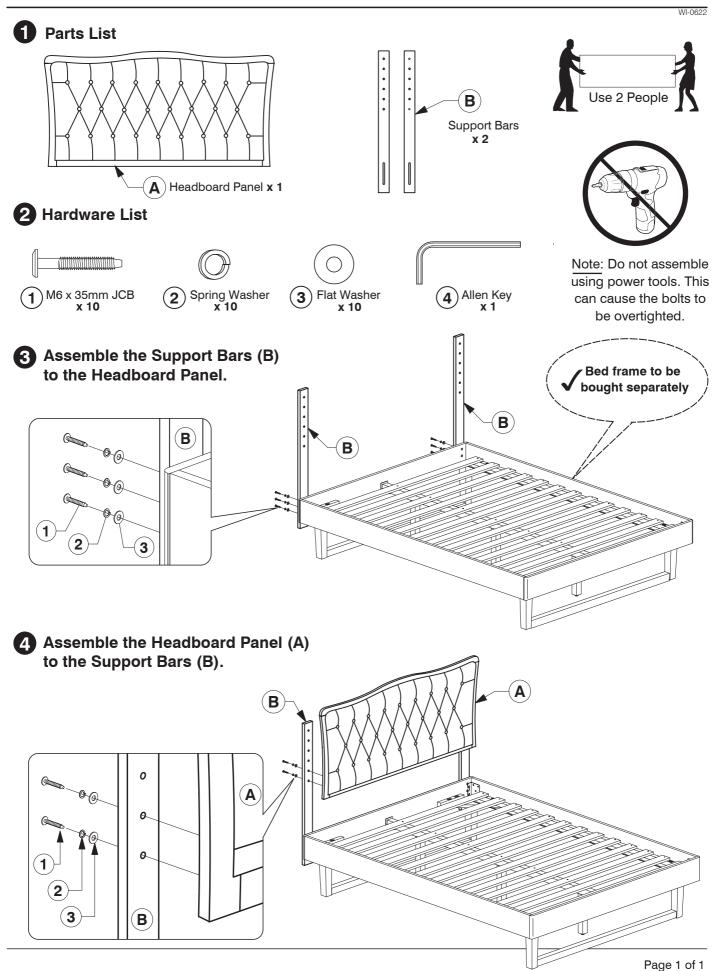

9767 King Headboard Assembly Instructions

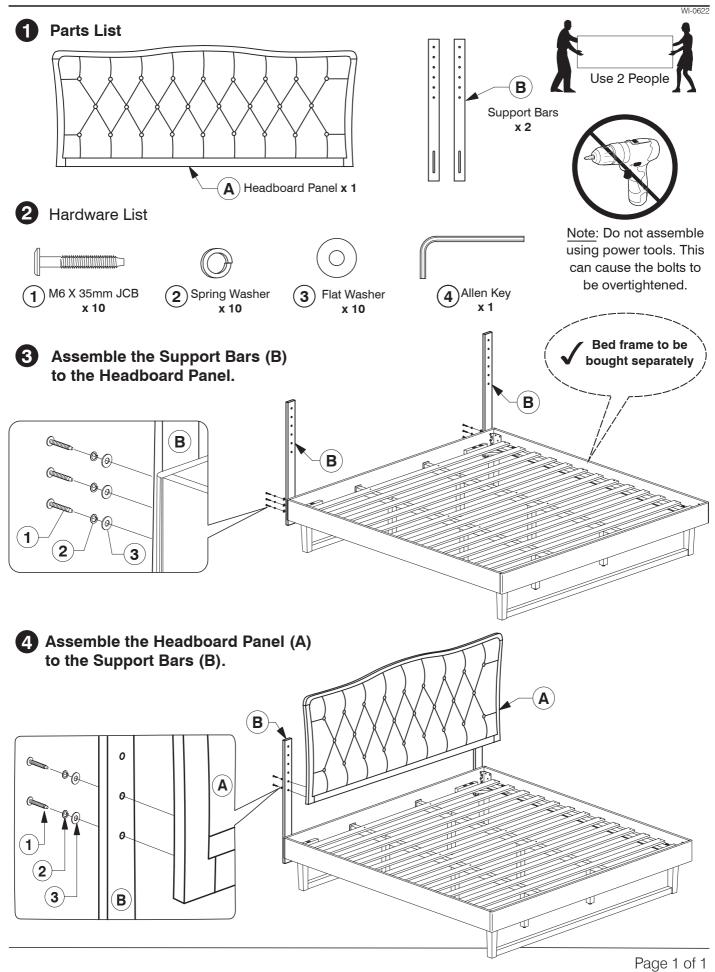


Assembly Instructions

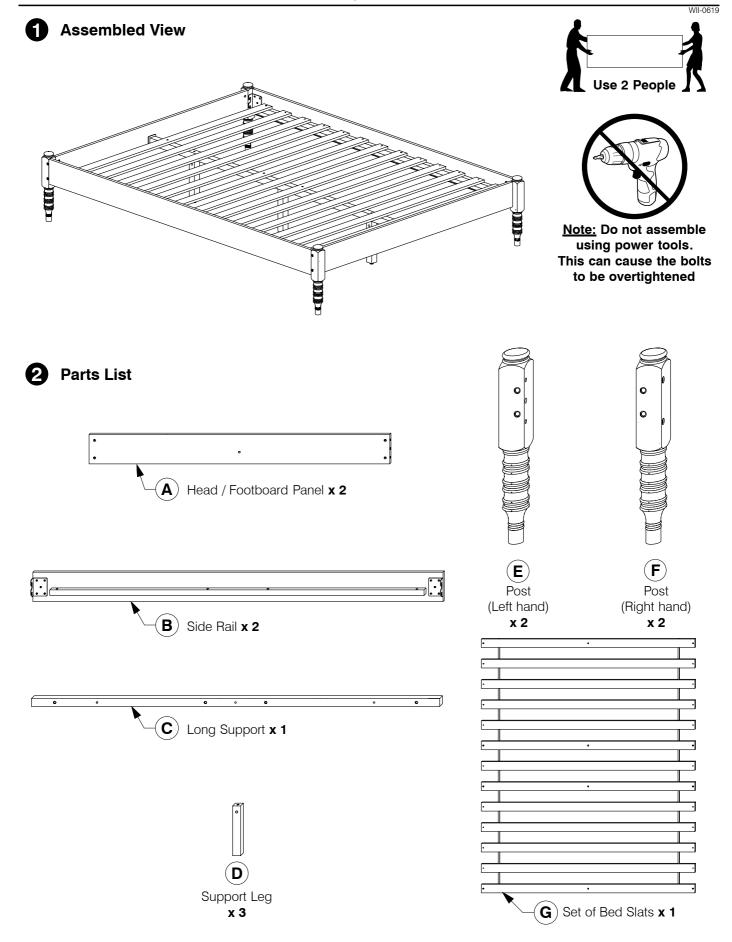


Assembly Instructions

WII-0619



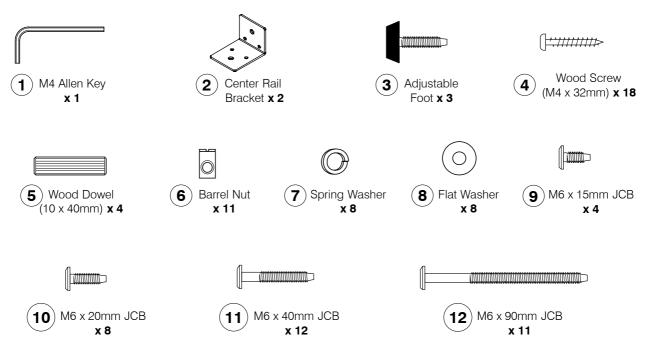


Assembled the Support Leg (D) to the Long Support (C).

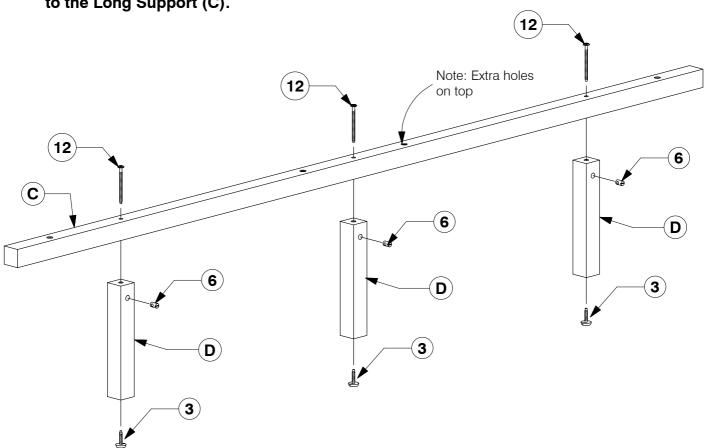


Assembly Instructions


WII 0610

Assemble the Post (E & F) to the Head / Footboard Panel (A). Fit the Center Rail Bracket to the Head / Footboard Panel (A).

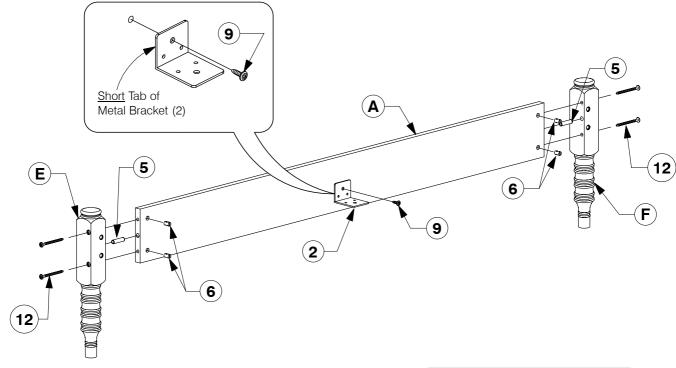

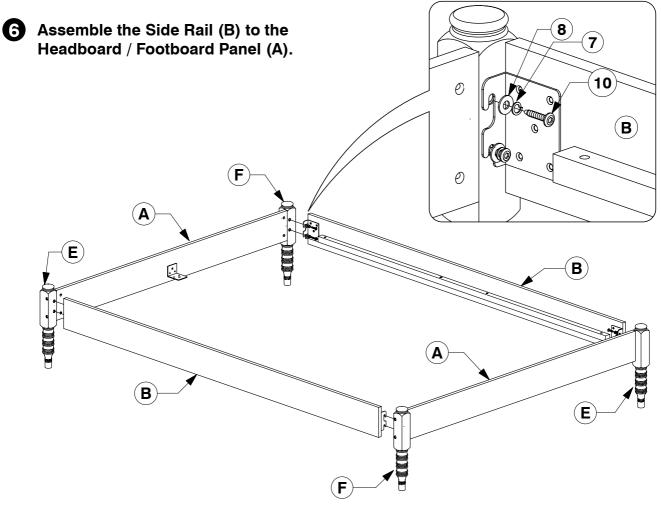

Assembly Instructions

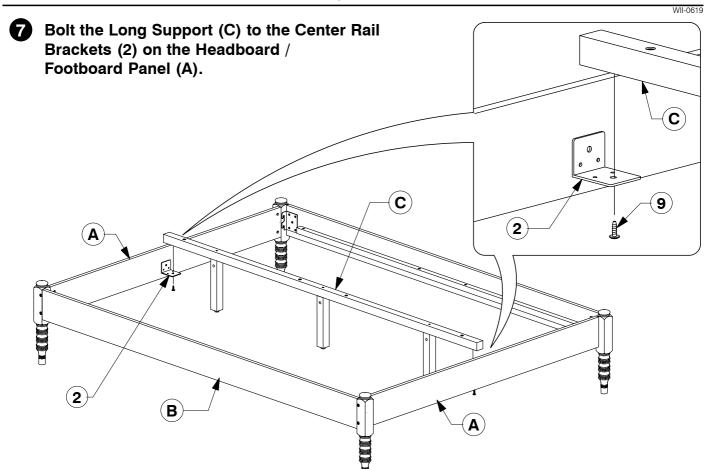

8 Bolt & screw the Bed Slats (G) to the Side Rail (B).

