

#### 9767 Full / Queen Headboard

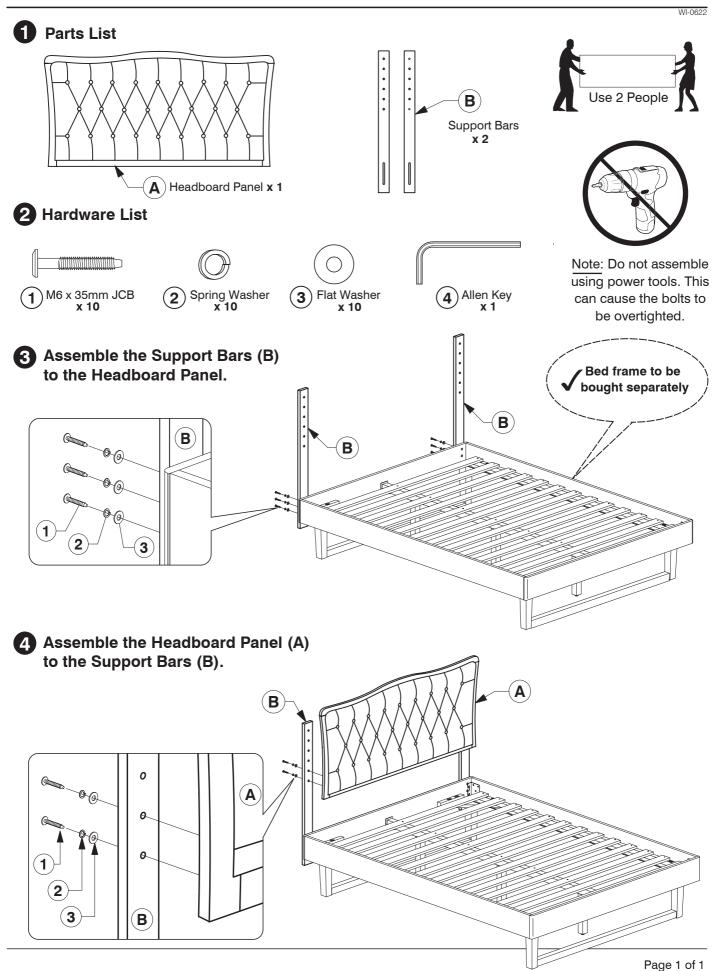


# 9767 King Headboard Assembly Instructions

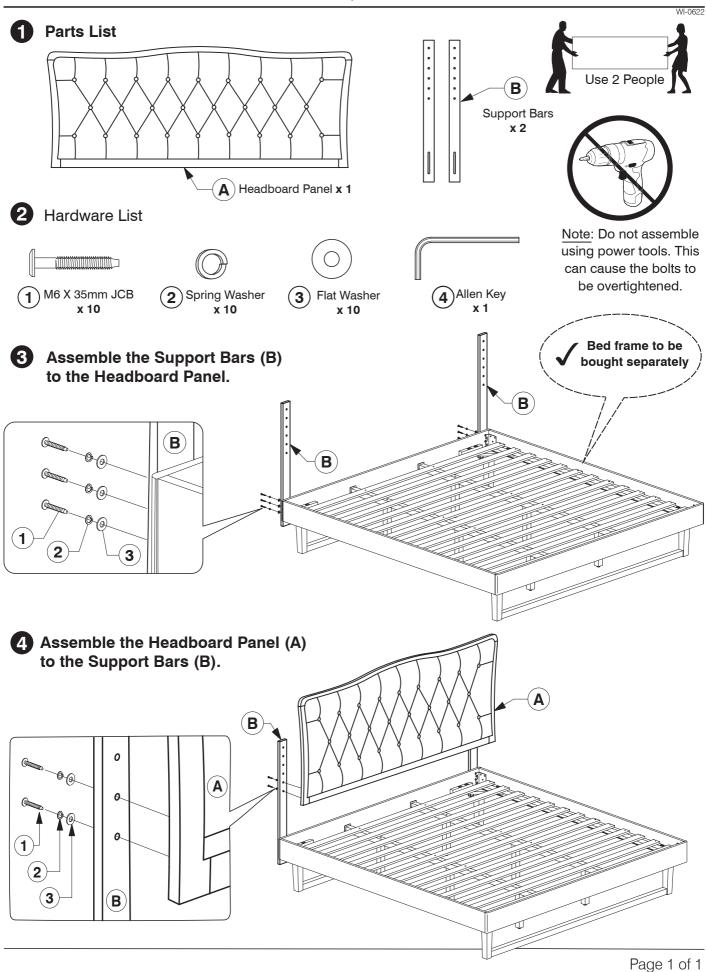



# 9765 Full / Queen Headboard

Assembly Instructions

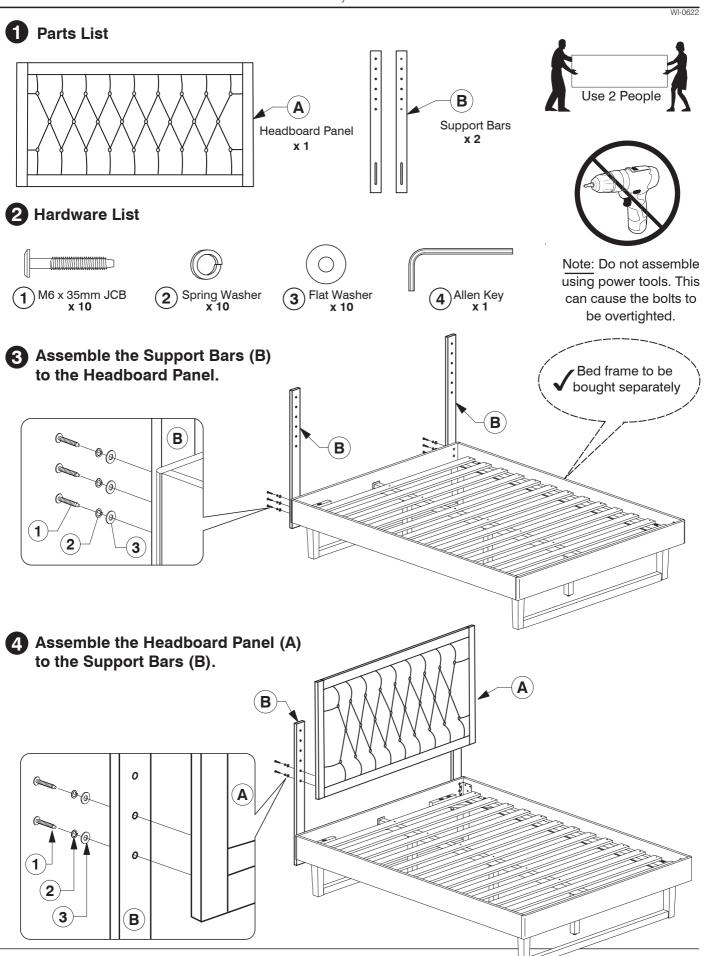


Page 1 of 1

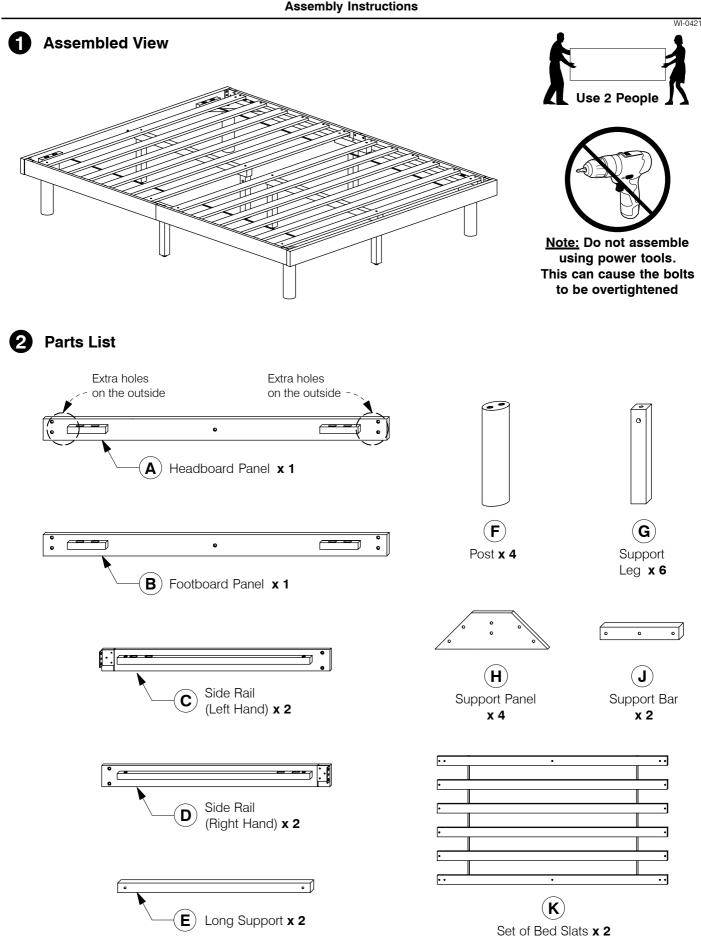


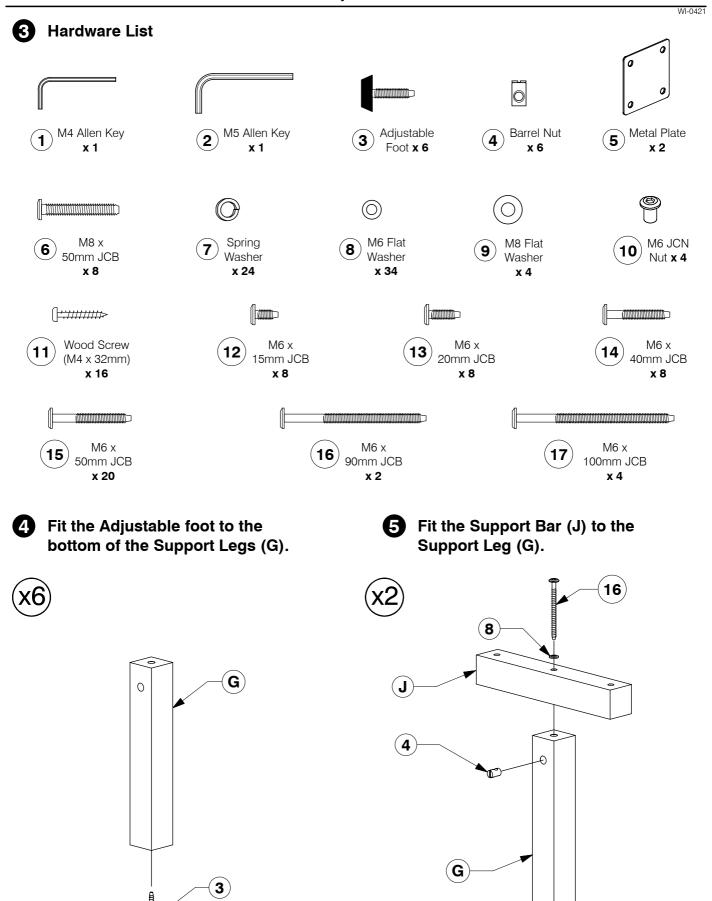

Assembly Instructions

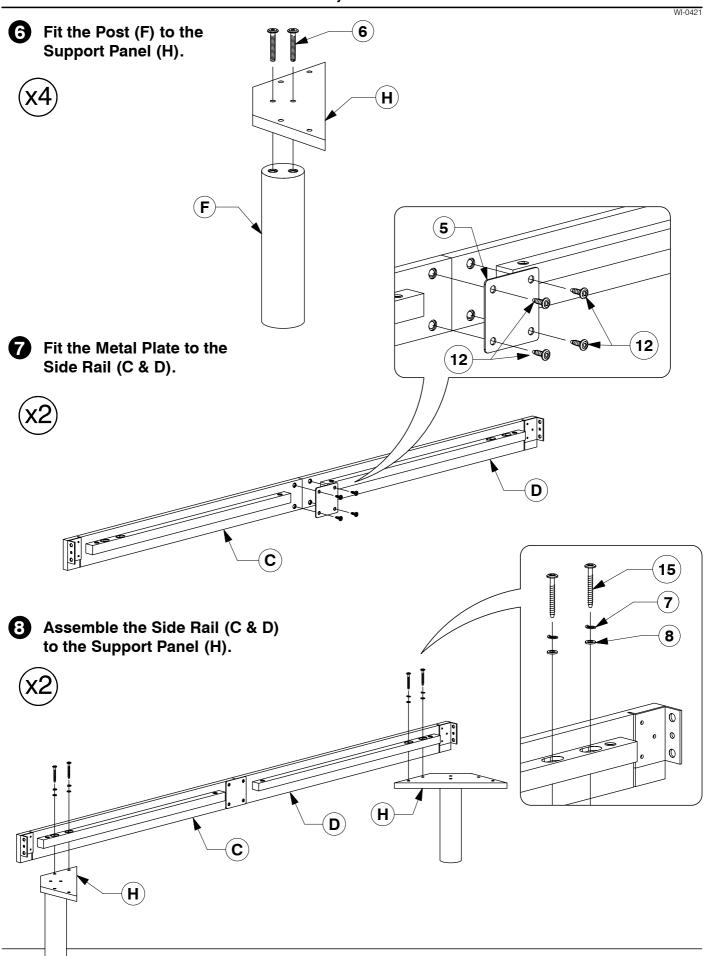


Page 3 of 6

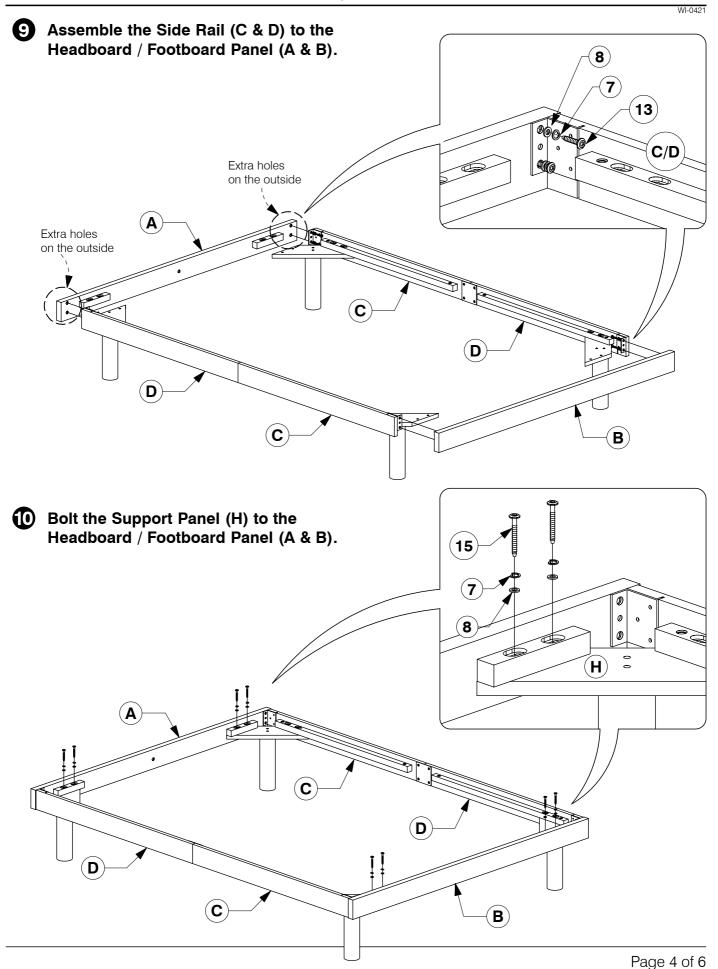


Assembly Instructions

WI-0421

Fit the Slats (K) to the Long Support (E) & Support Leg (G).

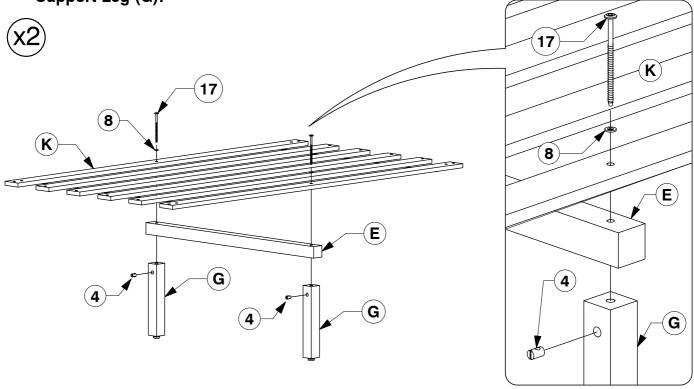


Bolt the Bed Slats (K) to the Side Rail (C & D).

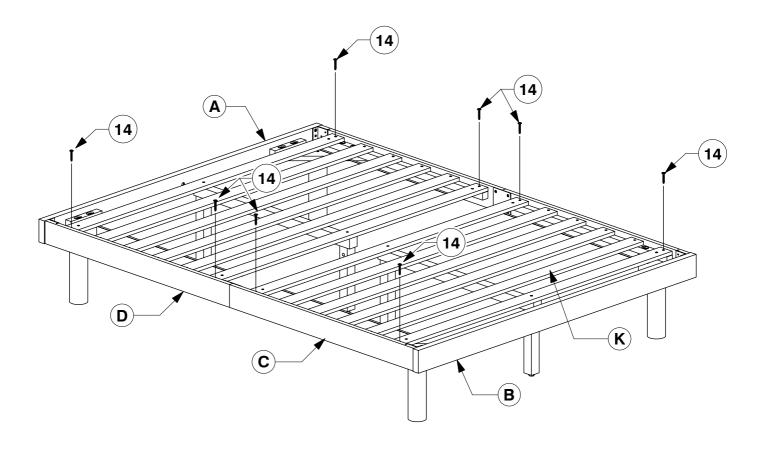


Assembly Instructions

WI-042

Screw the Bed Slats (K) to the Side Rail (C & D).

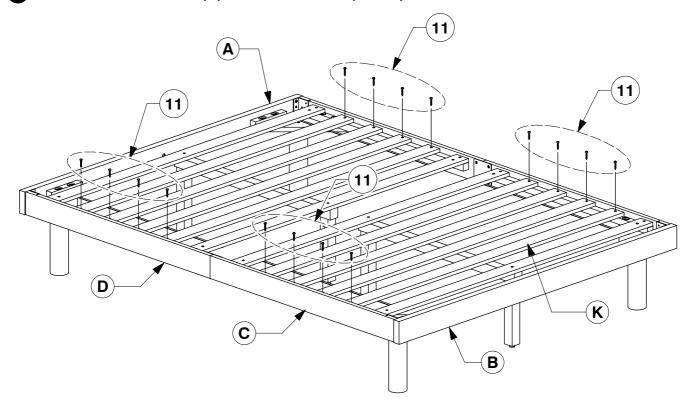

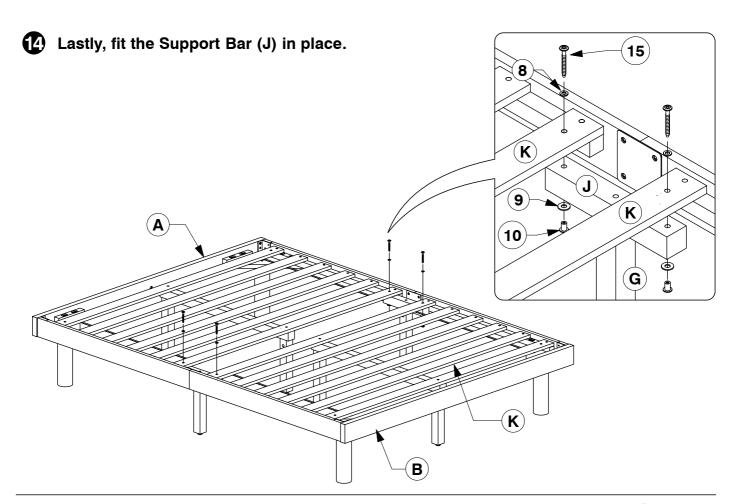

# 9765 King Headboard

