

9767 Full / Queen Headboard


Assembly Instructions

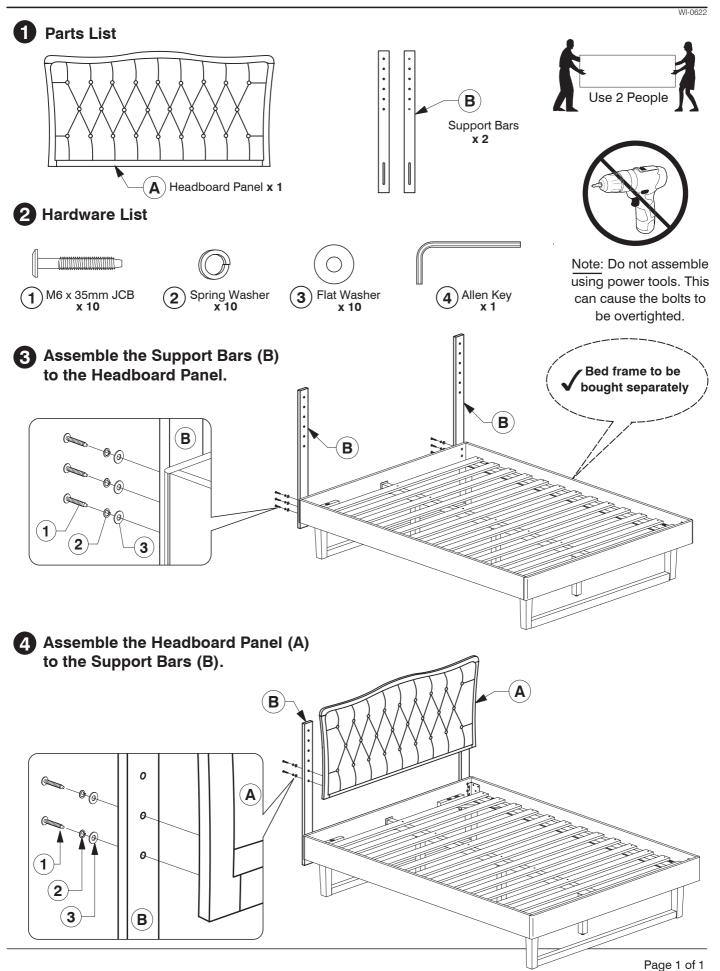


9767 King Headboard Assembly Instructions

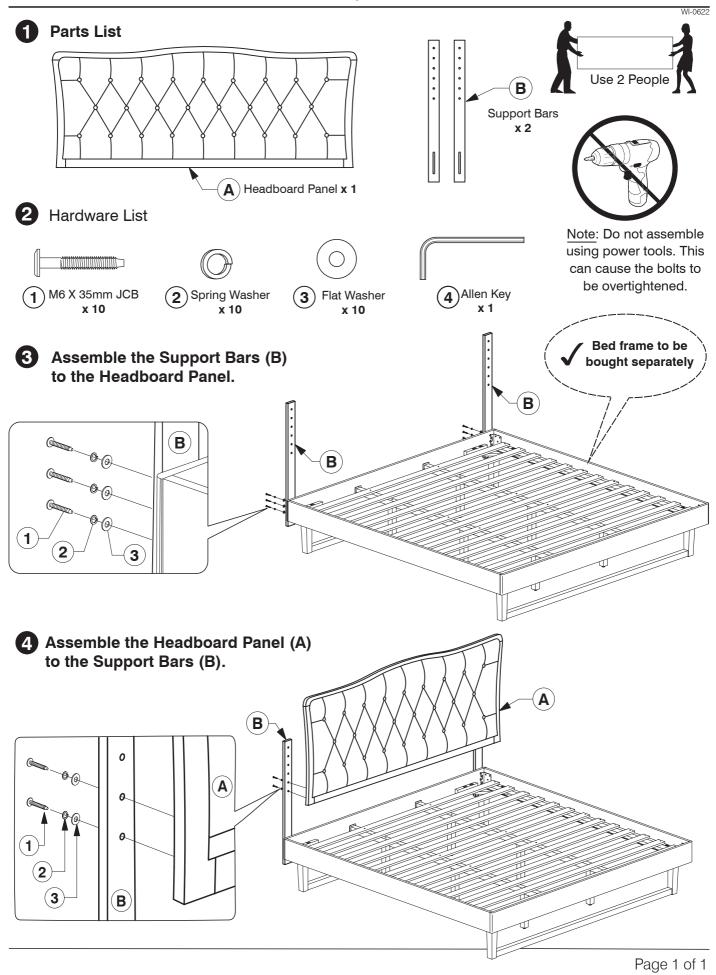

Assembly Instructions

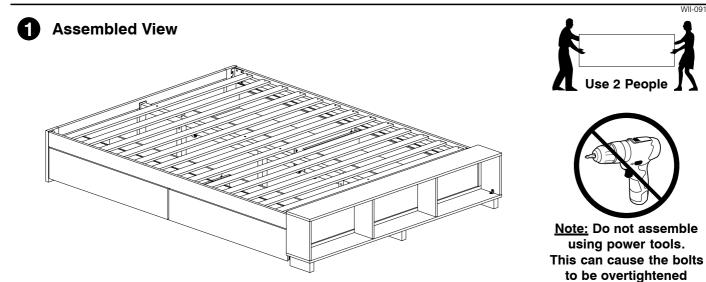

Parts List

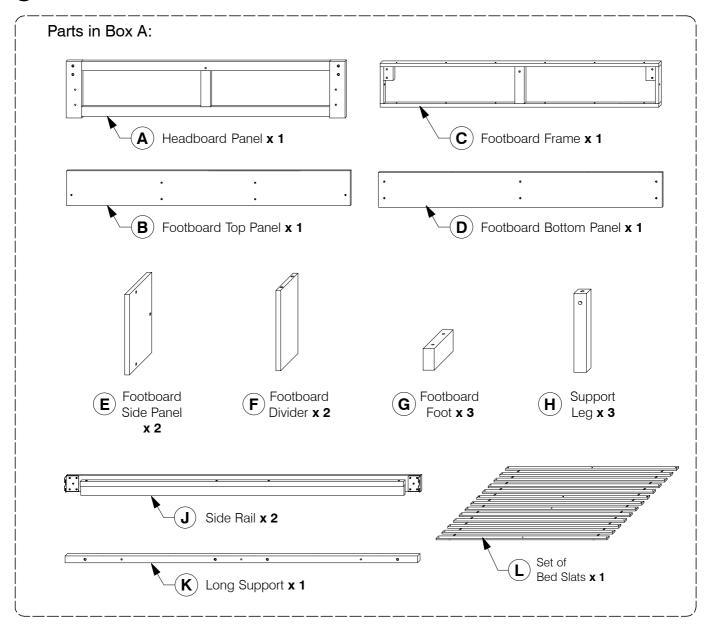


Assembly Instructions


Parts in Box B:

| M | Drawer Face x 4 |
| P | Drawer Side x 8 |
| Extra holes |
| O | Drawer Back x 4 |
| O | Drawer Back x 4 |

3 Hardware List

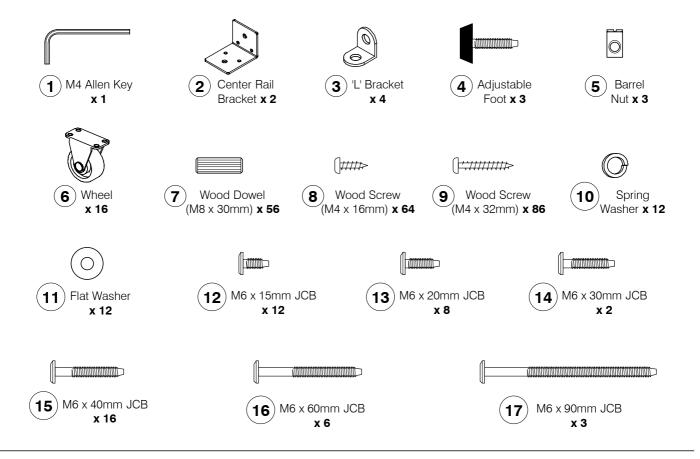


Assembly Instructions

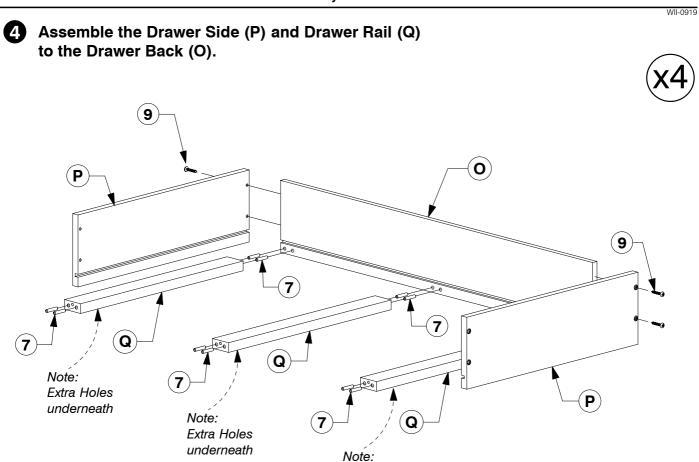

Extra Holes underneath


5 Slide the Drawer Bottom (N) into the groove on the Drawer Sides (P).

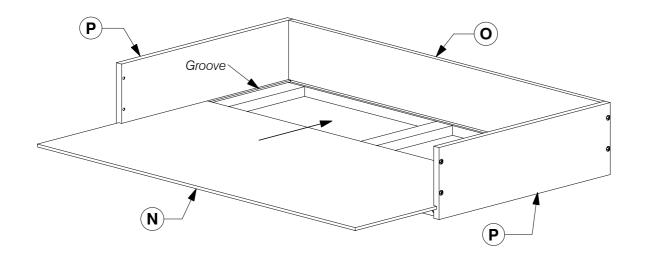


Assembly Instructions

WII-0919


6 Assemble the Drawer Face (M) to the Drawer Sides (P).

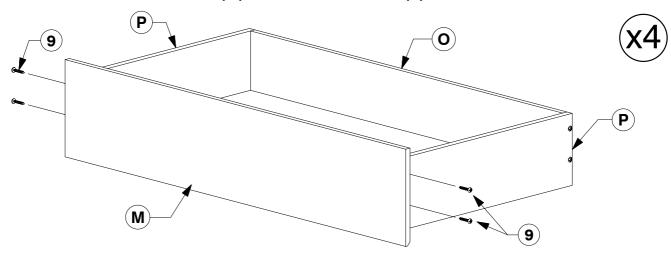


Turn the Drawer over to fit angled 32mm Wood Screws (9) to the Drawer Rails (Q).

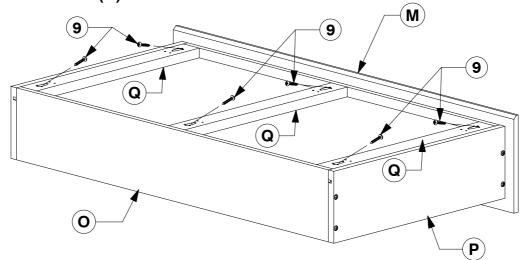

8 Fit the Wheels (6) to the Drawer Side Rail (Q).

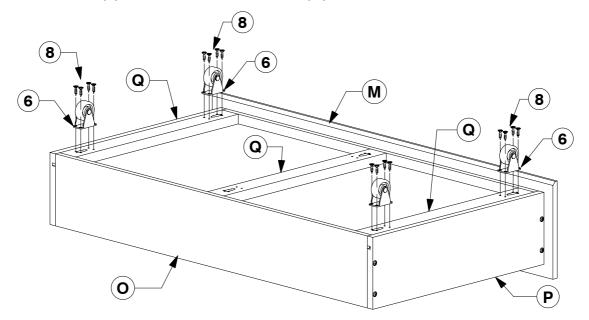

Assembly Instructions

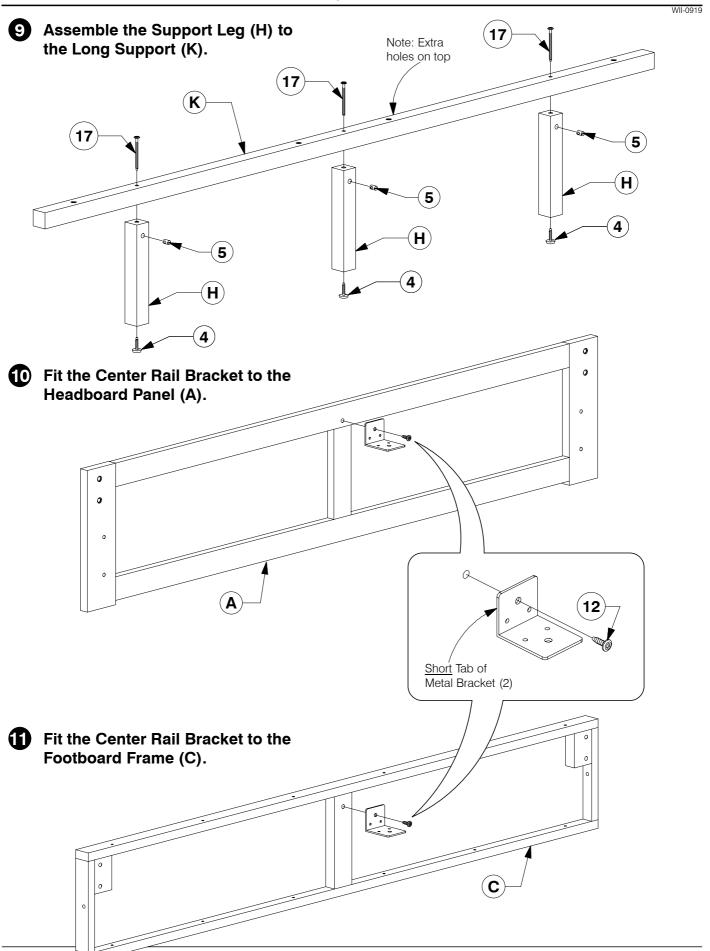


Page 5 of 9


Assembly Instructions

W/II_0919


Fit 'L' Bracket to the Footboard Side Panel (E). Assembly the Footboard Side Panel (E) to the Footboard Frame (C).

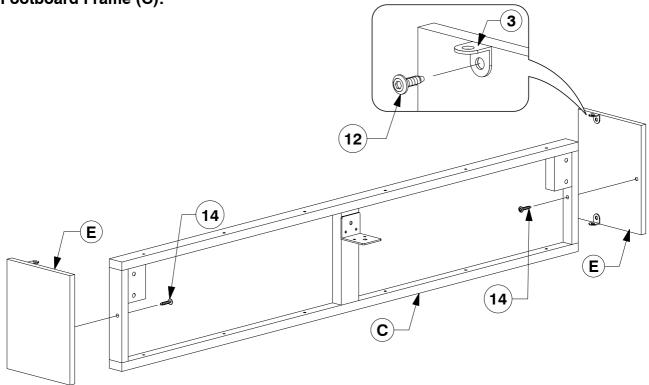


13 Fit the Footboard Foot (G) to the Footboard Bottom Panel (D).

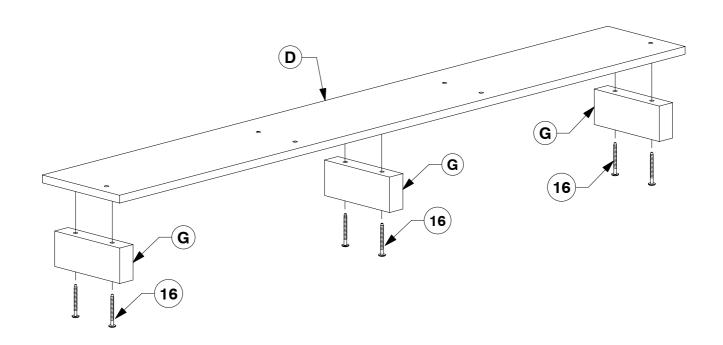



Assembly Instructions

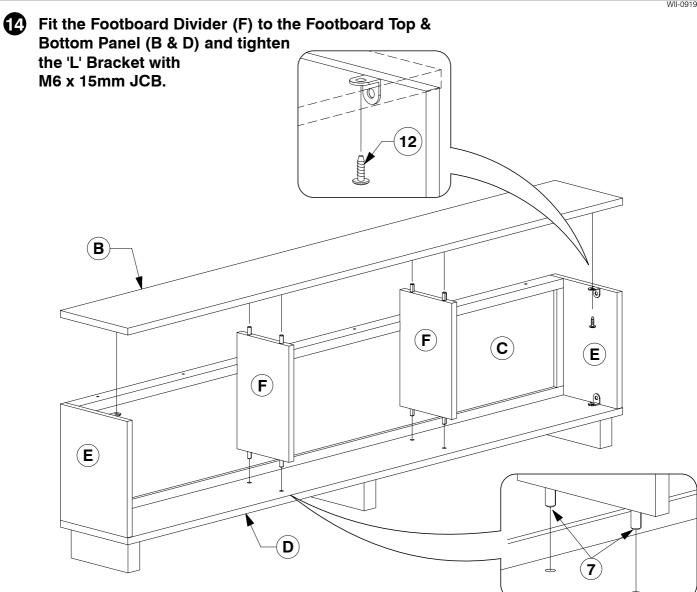

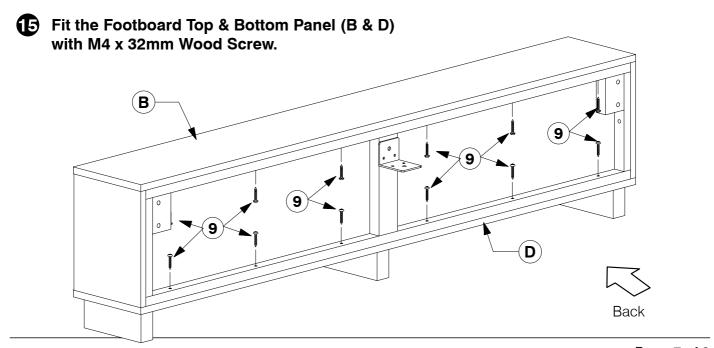

Assembly Instructions

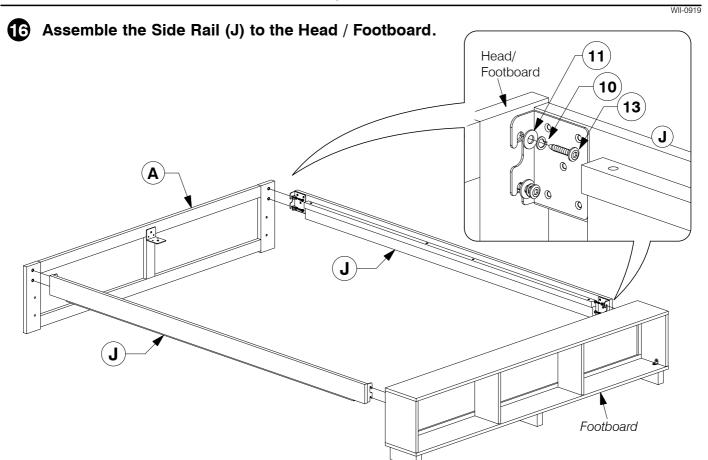

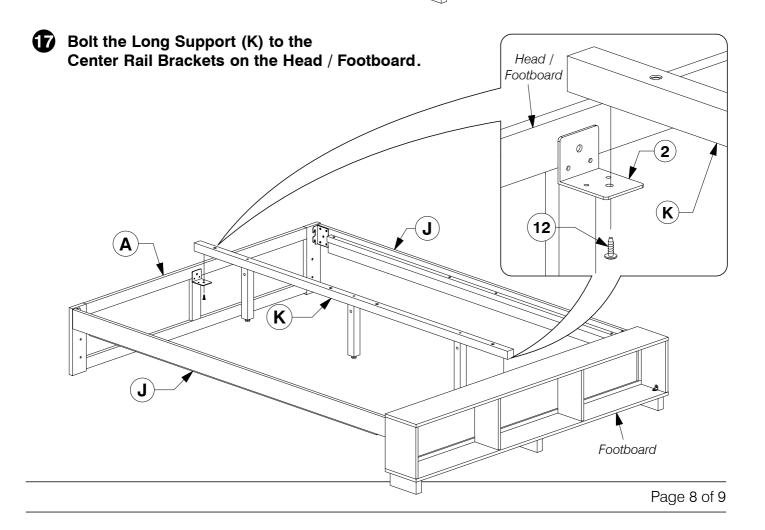

Assembly Instructions

A/II 0010

