


9773-1 Full / Queen Headboard


Assembly Instructions

WI-0622



1 Parts List

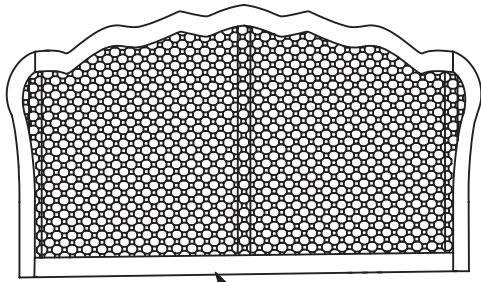

A Headboard Panel x 1



B
Support Bars
x 2

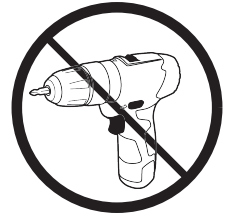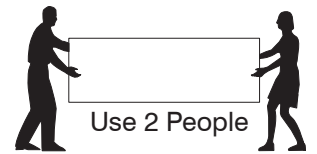

2 Hardware List



1 M6 x 35mm JCB
x 10



2 Spring Washer
x 10





3 Flat Washer
x 10





4 Allen Key
x 1

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

3 Assemble the Support Bar (B) to the Headboard Panel.

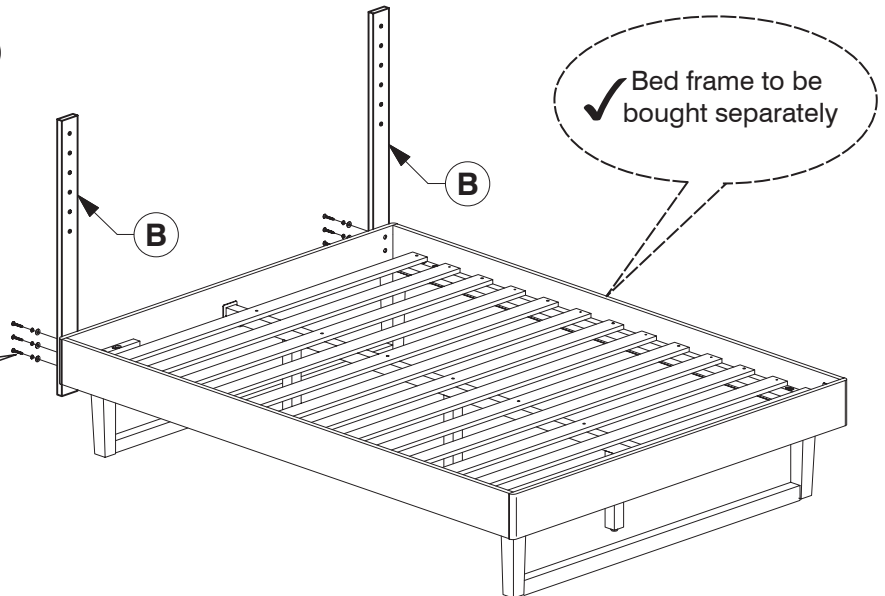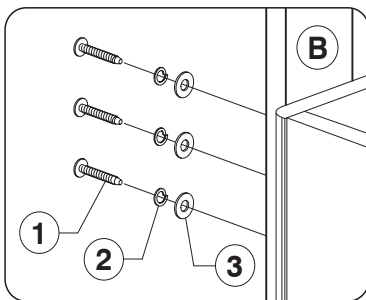

4 Assemble the Headboard Panel (A) to the Support Bars (B).


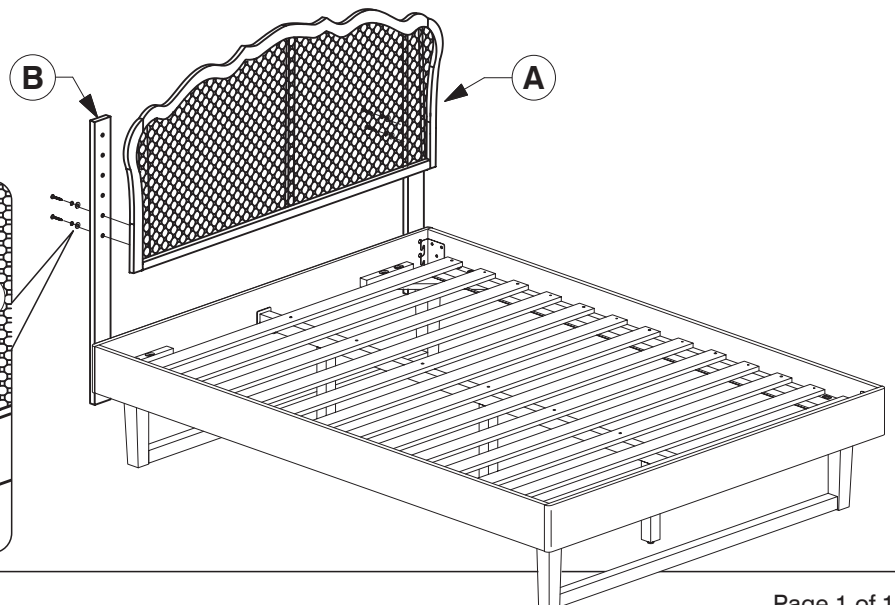
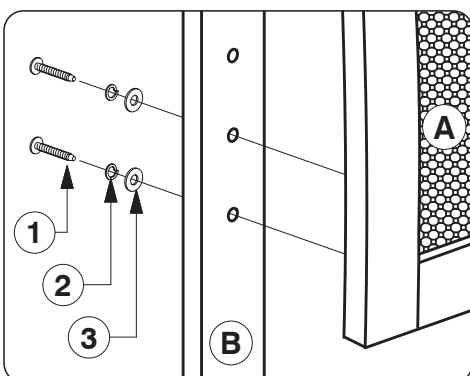


9773-1 King Headboard

Assembly Instructions

WI-0622

1 Parts List

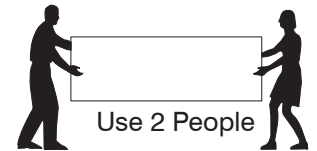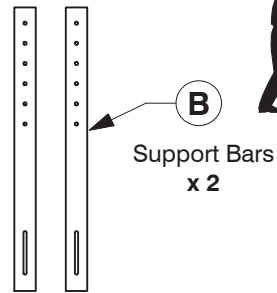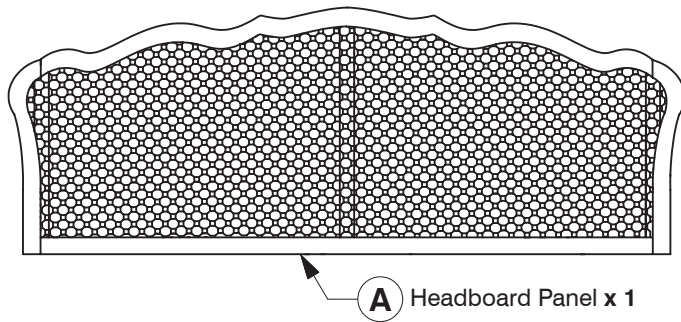

2 Hardware List



1 M6 X 35mm JCB
x 10



2 Spring Washer
x 10





3 Flat Washer
x 10



4 Allen Key
x 1

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

3 Assemble the Support (B) to the Headboard Panel.

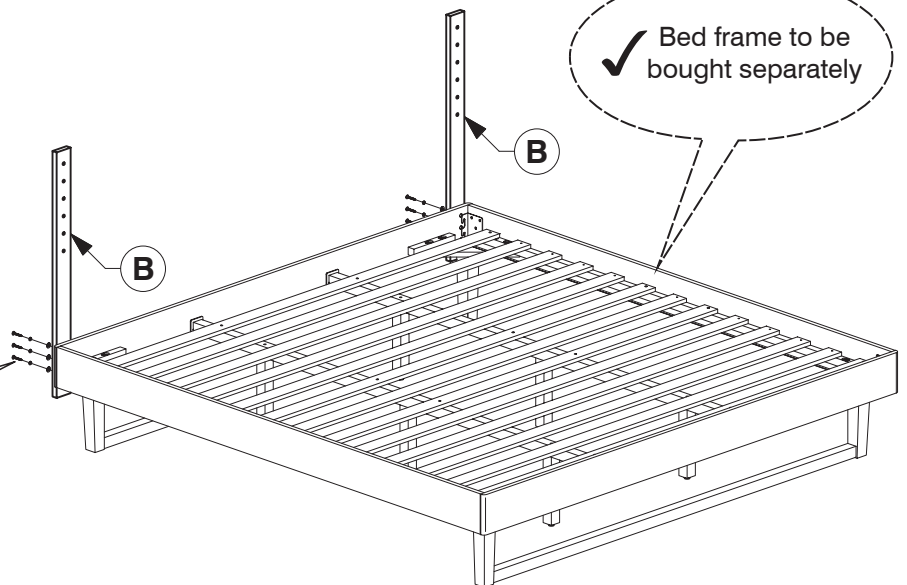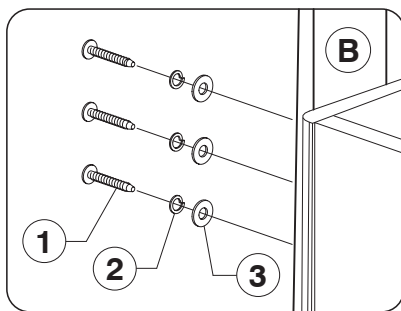

4 Assemble the Headboard Panel (A) to the Support Bars (B).

