

ASSEMBLY INSTRUCTIONS

MODEL: BE1323C (Apron D size same with footrest C)

Read this instruction carefully. Refer hardware and furniture parts list for guidance. Make sure all parts are complete, before assembling. Place all wooden furniture part on a clean and flat soft surface to prevent scratched. Refer steps provided as assembling guide.

PART LIST				HARDWARE LIST			
ITEM	DESCRIPTION	QTY	ITEM	DESCRIPTION		QTY	
A	Backrest	1 PC		JCBC Screw M6 x 25mm		4 PCS	
B	Leg	4 PCS	2	JCBC Screw M6 x 40mm		4 PCS	
C	Footrest	1 PC	3	JCBC Screw M6 x 45mm		10 PCS	
D	Apron	1 PC	4	Spring Washer M6 x 13mm		14 PCS	
	Cushion with Apron	1 PC	5	Flat Washer M6 x 16.5mm		14 PCS	
			6	Allen Key M4 x 110		1 PC	

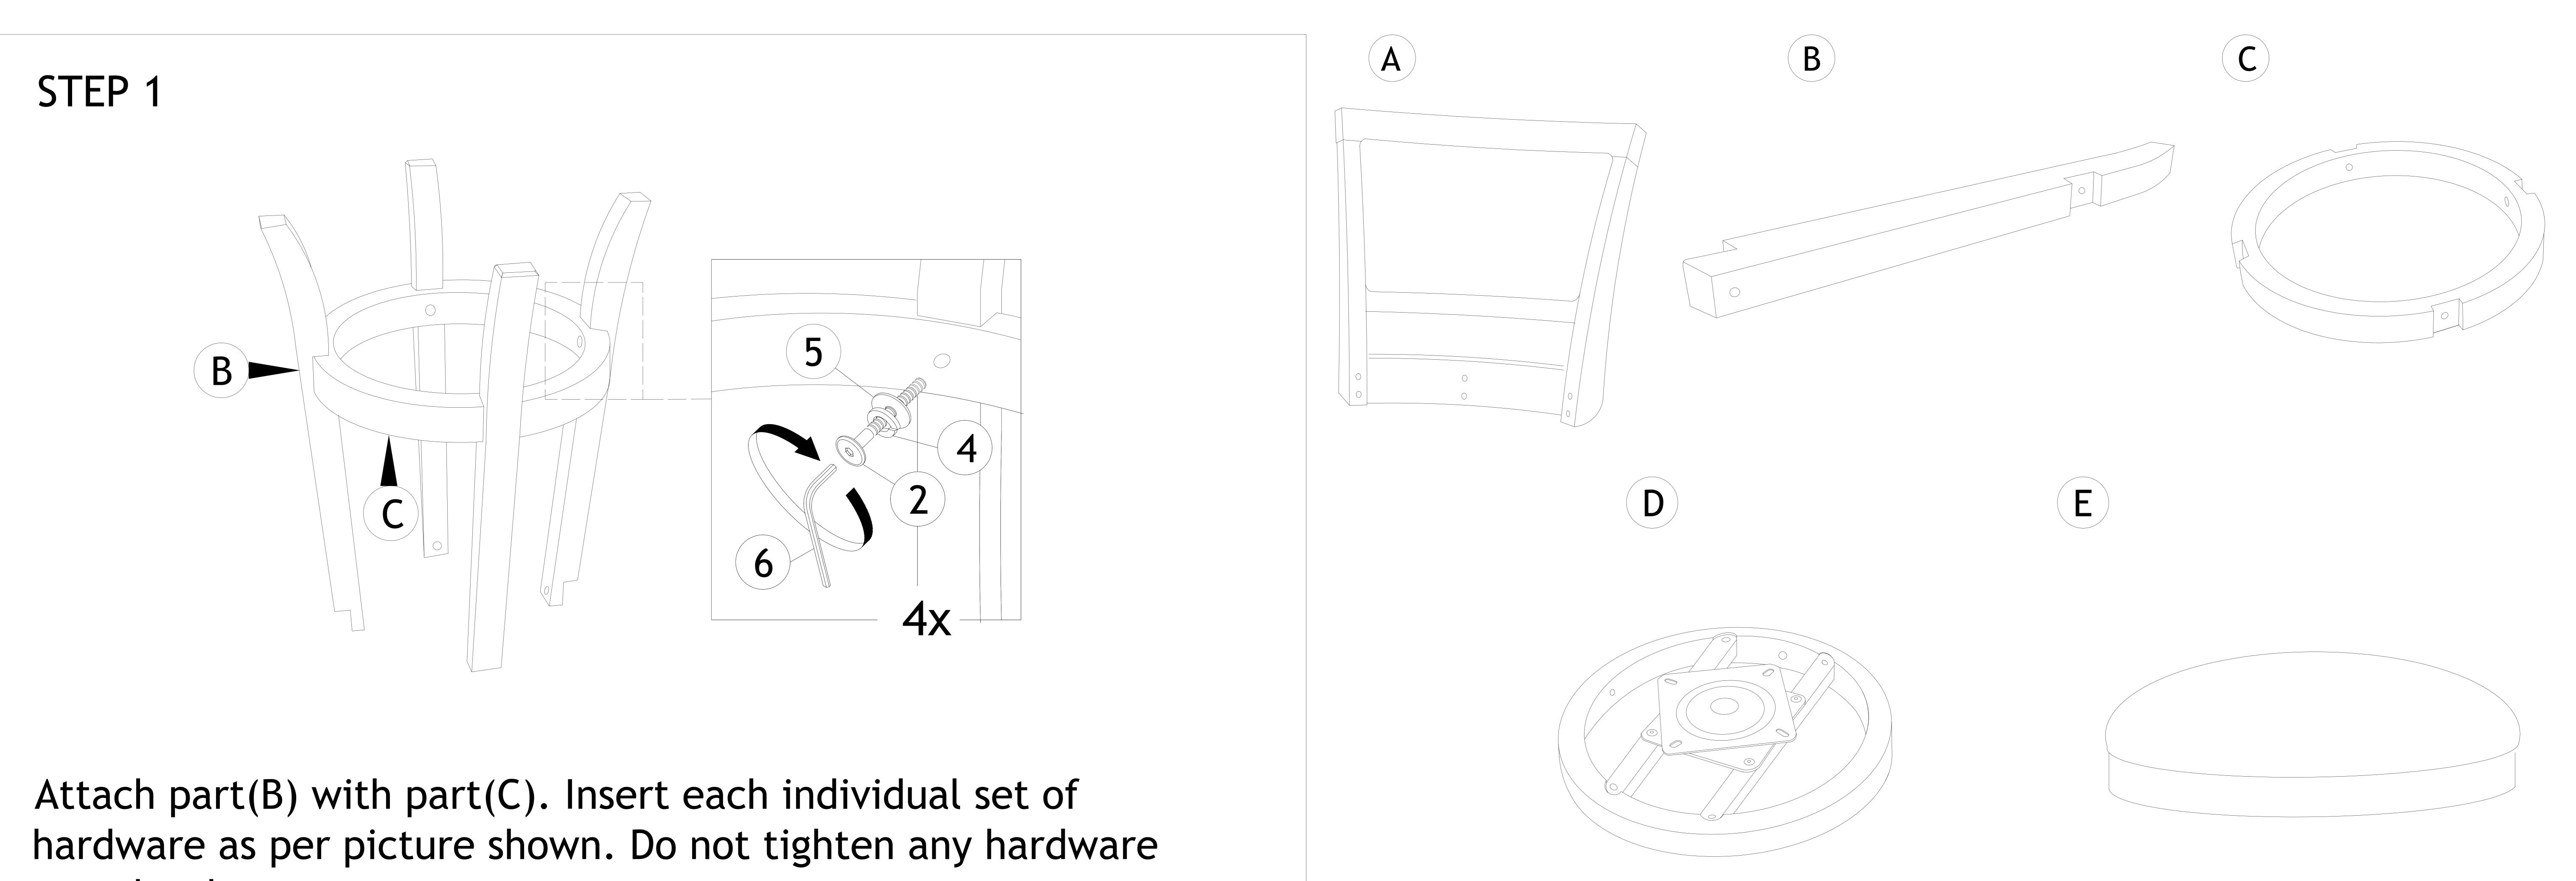

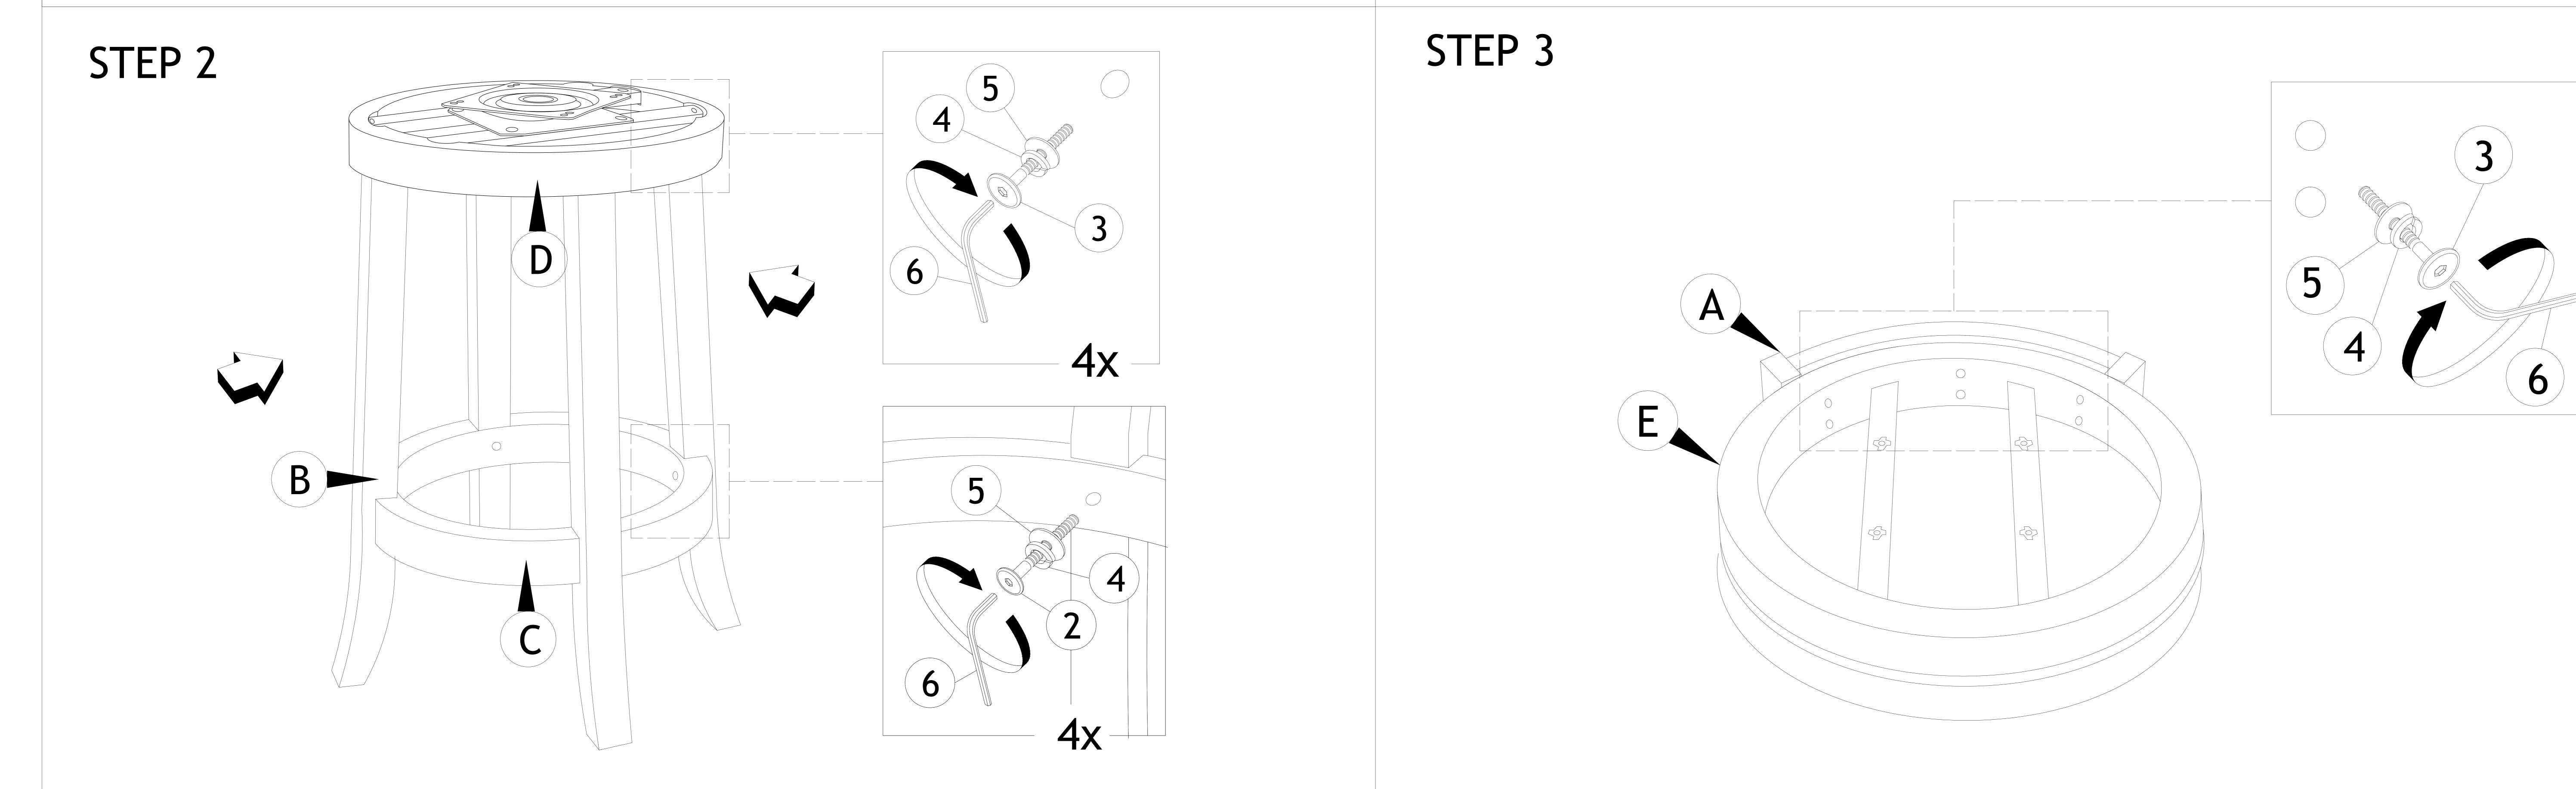

Attach part(B) with part(D). Tighten part(B) with part(D) first, then tighten part(B) with part(C) completely. Insert 6 sets hardware first, then tighten part(A) with part(E) completely after alignment is done.

STEP 4

