



B-166#


Accessory Code	Quantity	Accessory	Steps:
A	8 Pcs		① Please refer to the picture for specific operations.
E	32 Pcs	30*8mm	② Use the screw E and A type angle irons to fix of the headboard and bedside
I	1 Pcs		② Use the screw E and A type angle irons to fix of the bedside and bed end
D	11 Pcs	Height:22cm	③ Install the stand G and the slat Slat foot can be adjusted in accordance with the slat

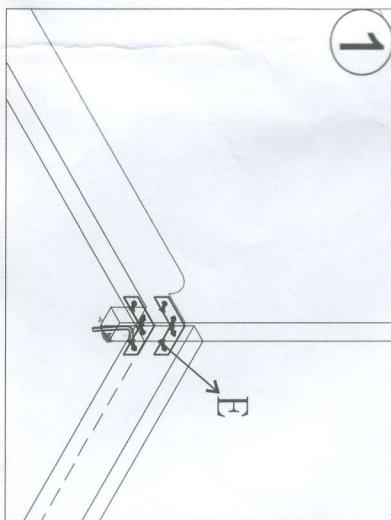

1

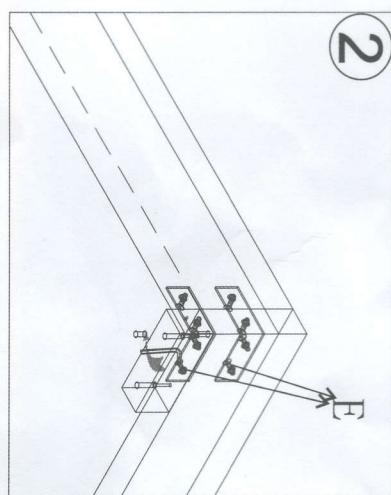

2

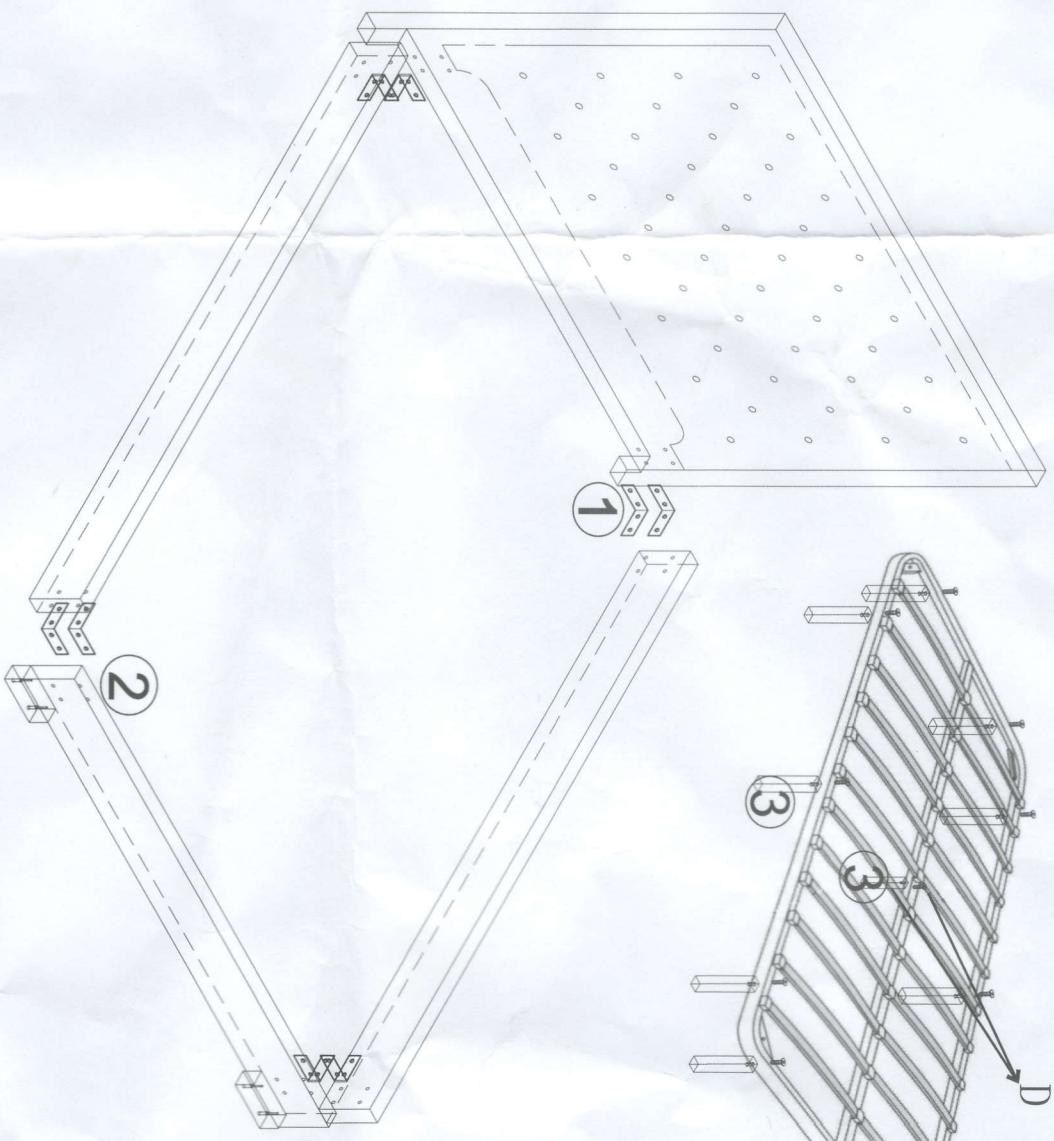

D