
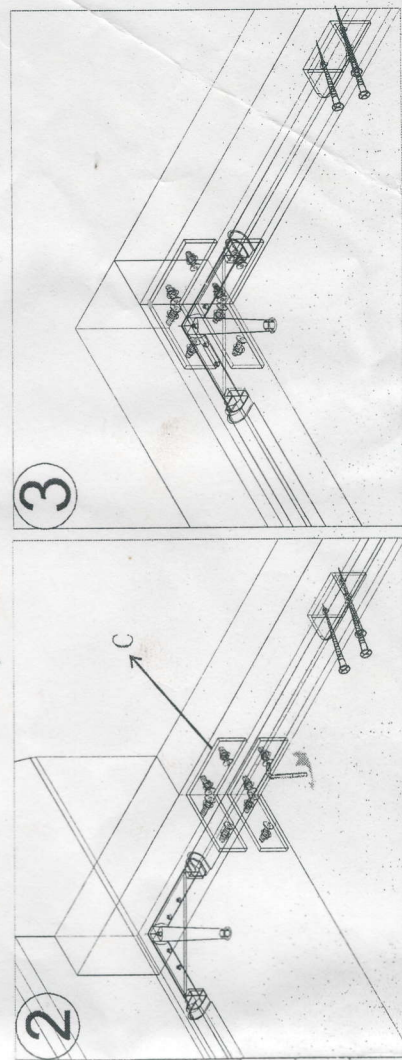


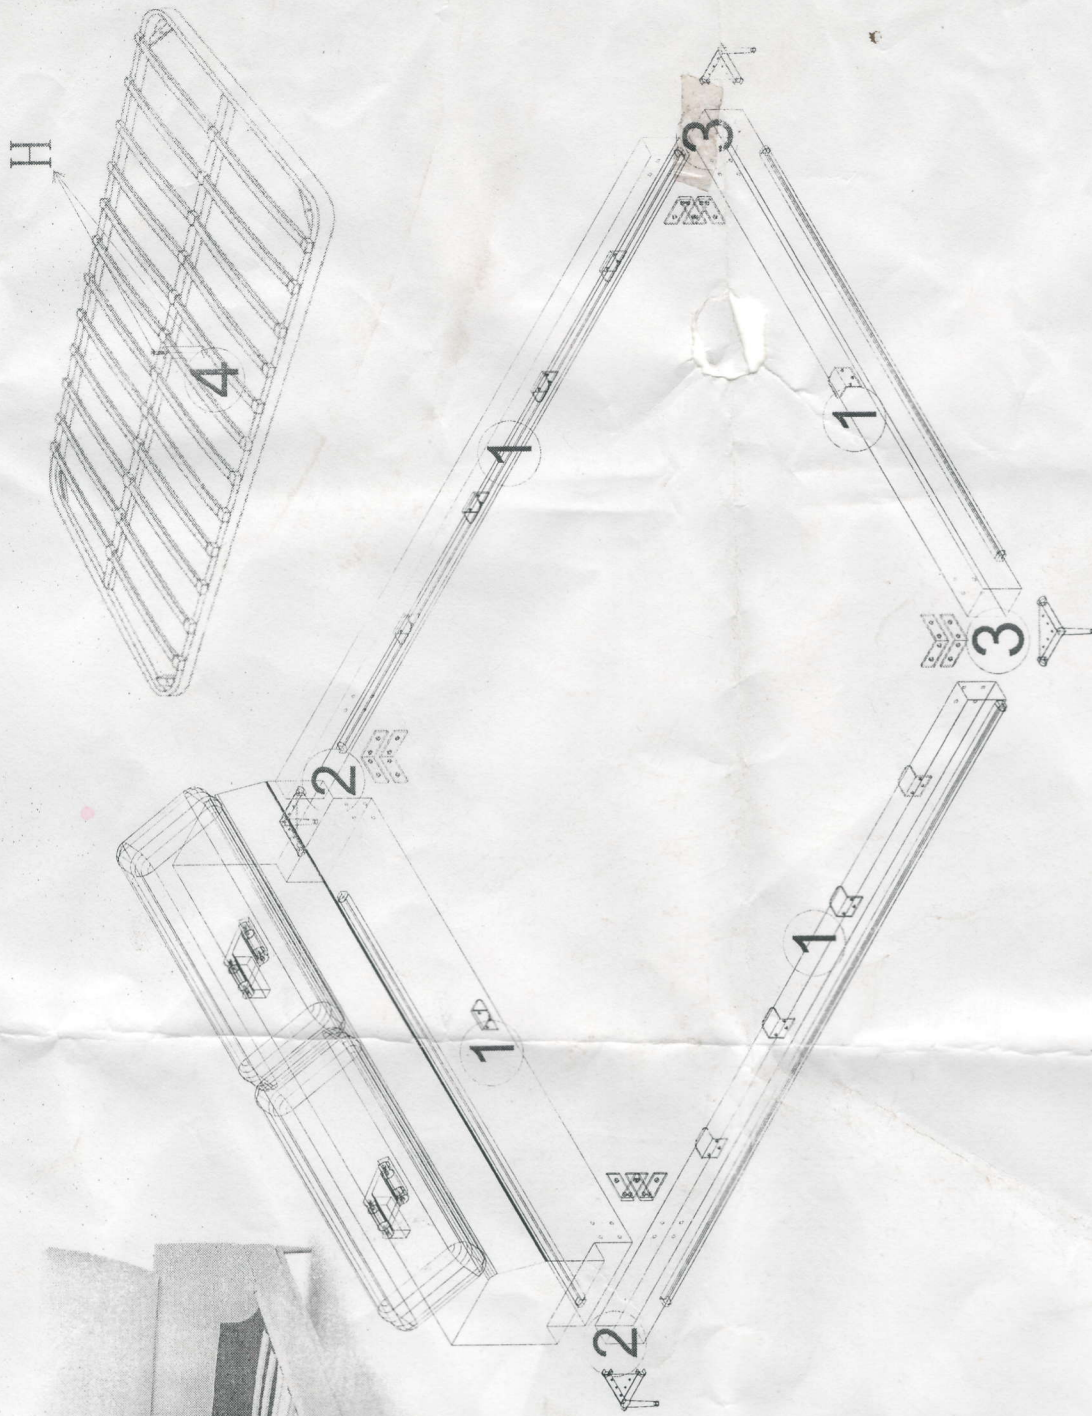

Steps	Please refer to the picture for specific operations	
①	Use the wood screw F to fix the headboard, bedside And bed end, install the accessories B, and stick on the cotton pad H	
②	Use angle iron A and screw D to fix the headboard and the bedside; and install the feet E	
③	Use angle iron A and screw D to fix the bedside And bed end; and install the feet E	
④	Install the stand H and the slat	

Quantity	Accessory
8 PCS	
10	
32	30*8mm
4	
50	ø40*5mm
1	
1	Height 19cm
10	Black cotton pad Diameter 28mm