



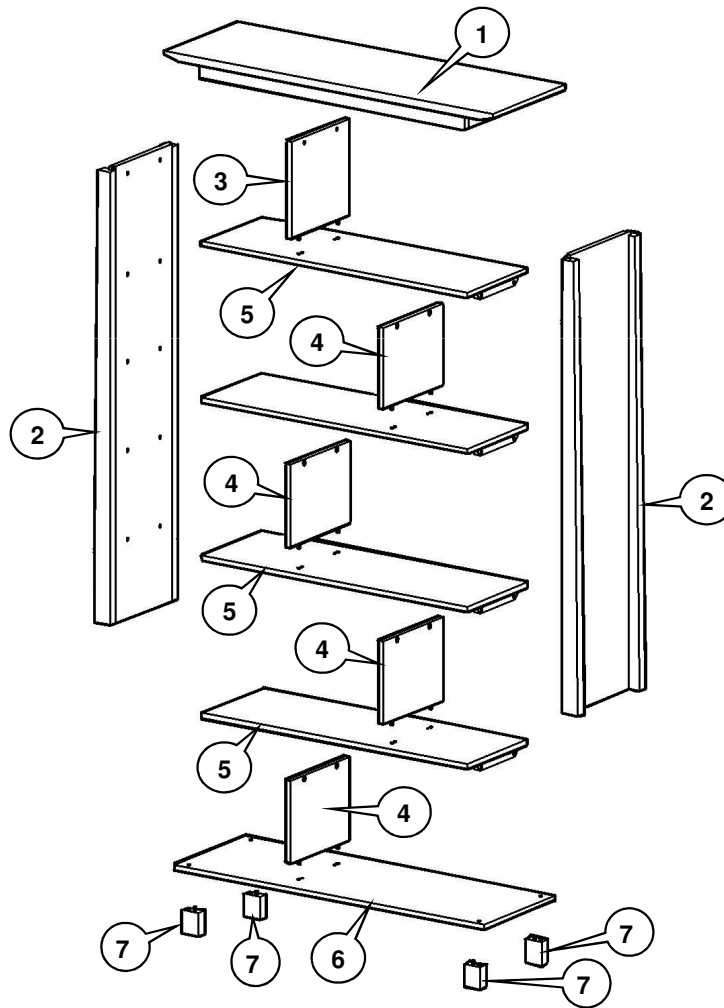






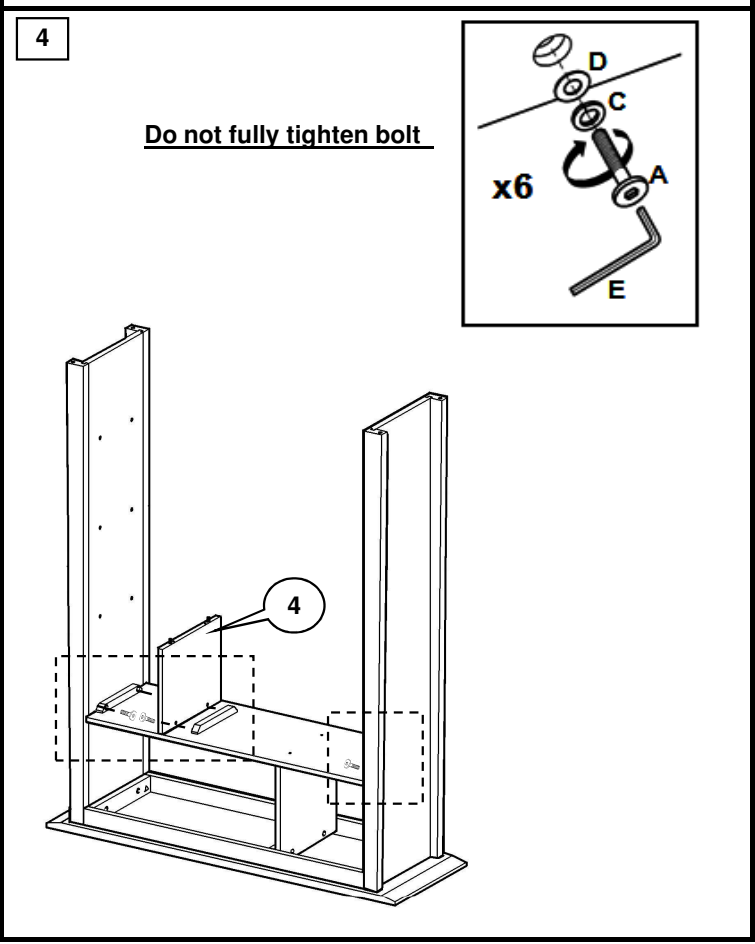
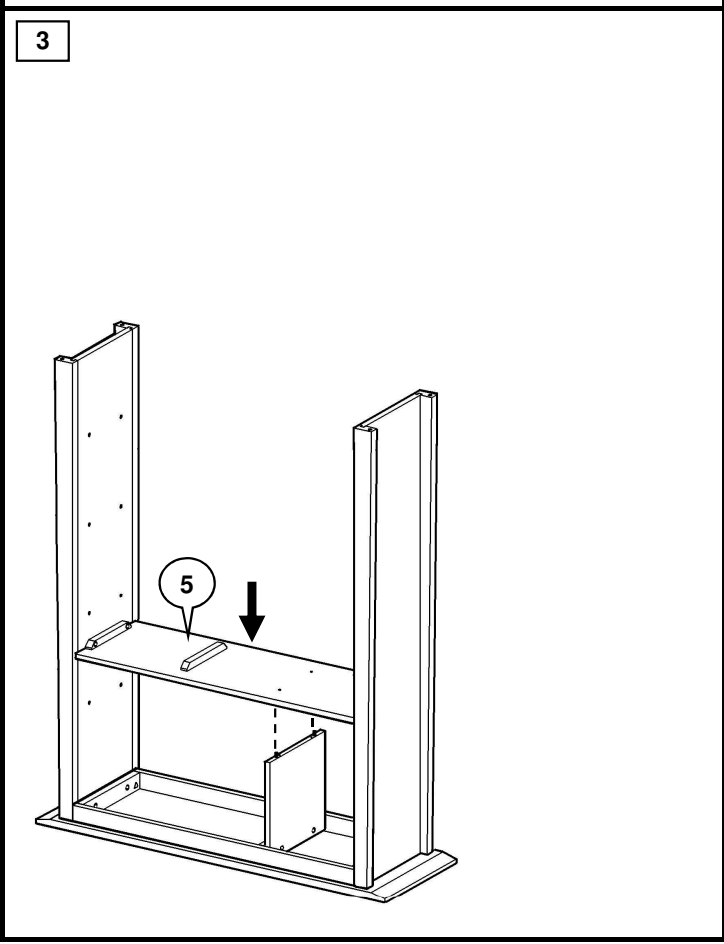
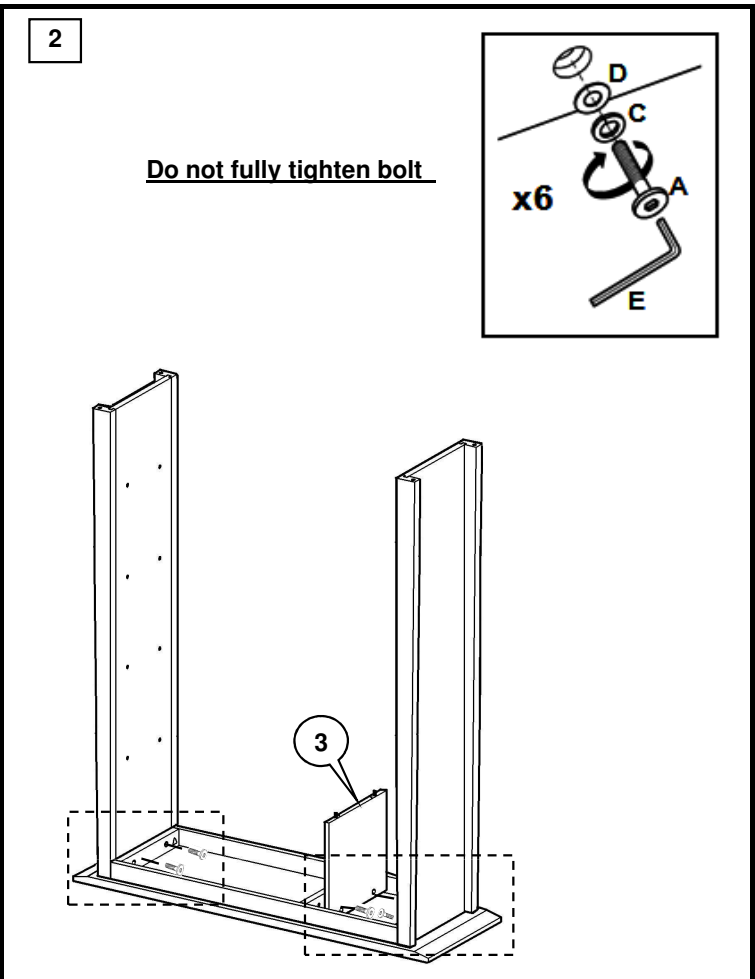
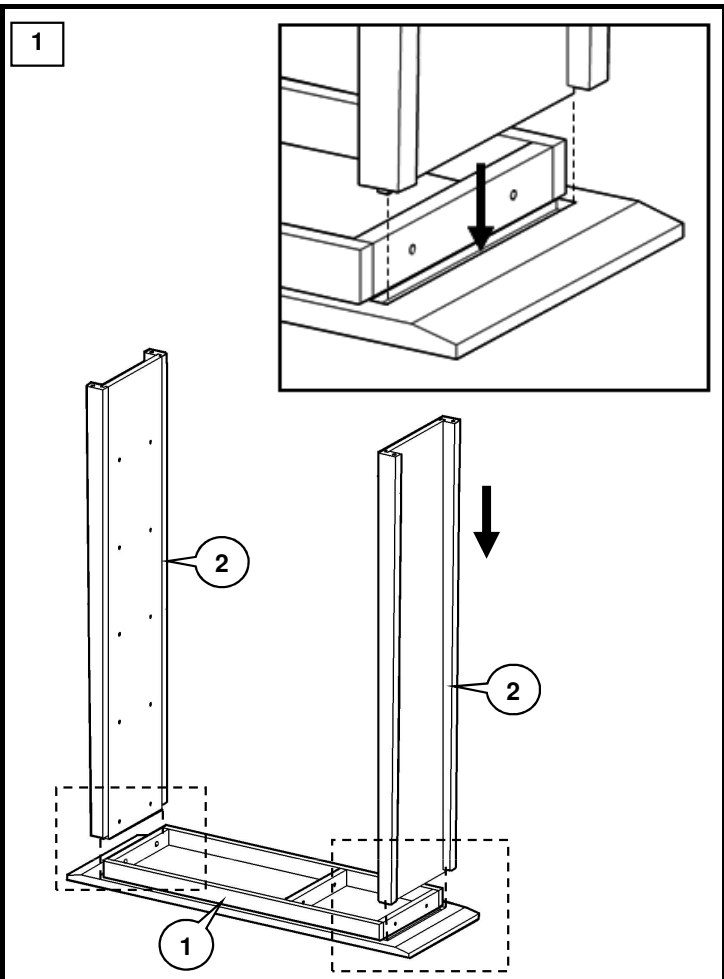


ASSEMBLY INSTRUCTIONS



Havana High Bookcase

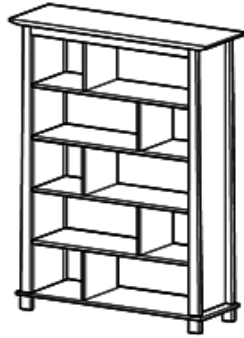

A  M6 x 25mm x 30	E  x 1	I  x 1
B  M6 x 100mm x 4	F  #8 x 32mm x 10	
C  x 34	G  #10 x 38mm x 4	
D  M6 x 13mm x 34	H  #8 x 16mm x 1	





5

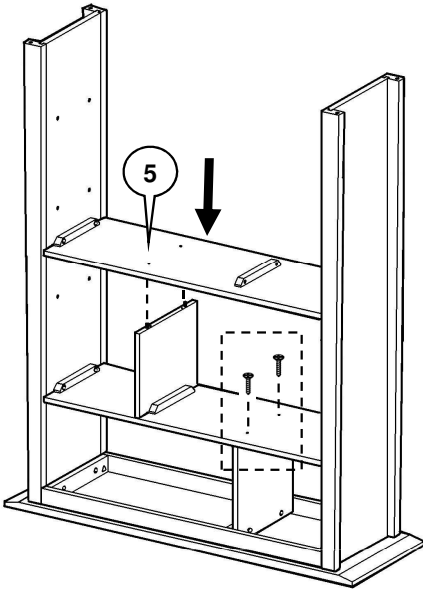
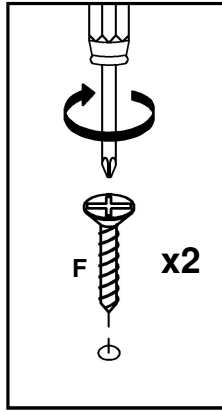


6

Do not fully tighten bolt

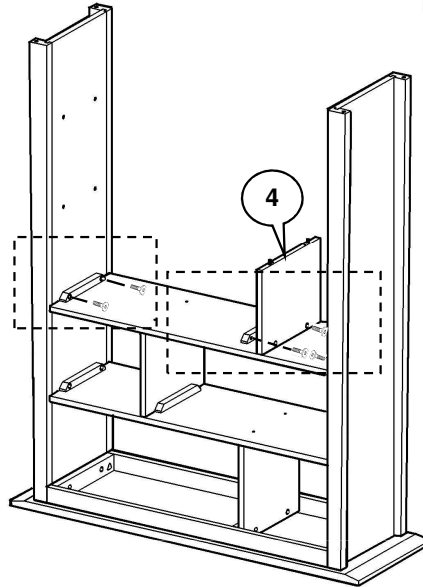
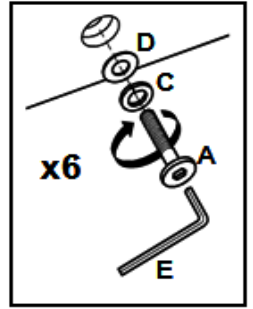


7

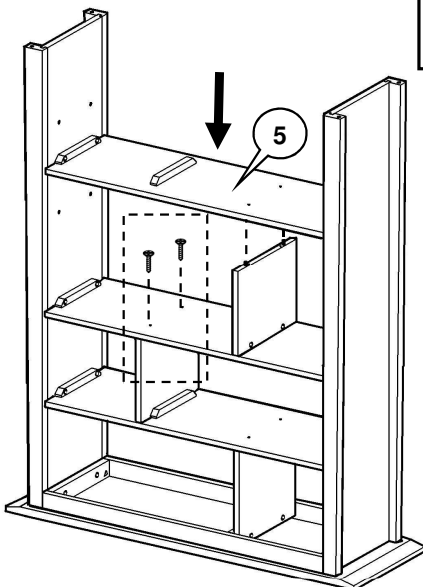
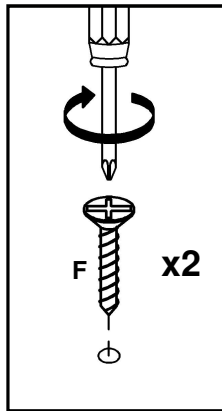


8


Do not fully tighten bolt

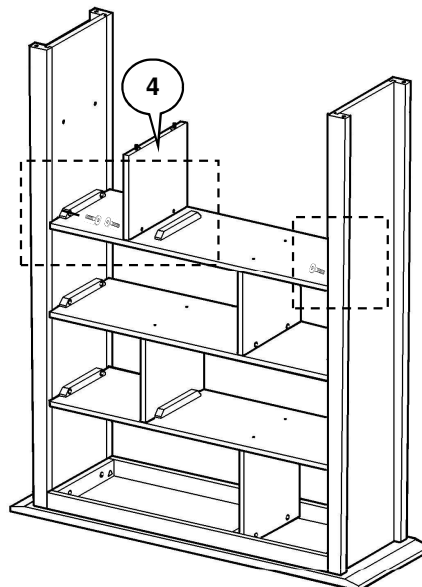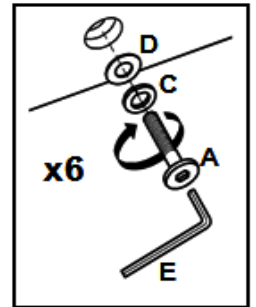


9

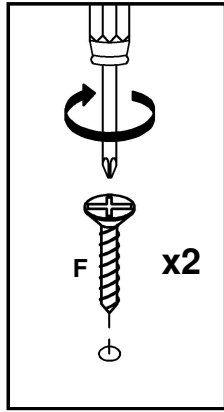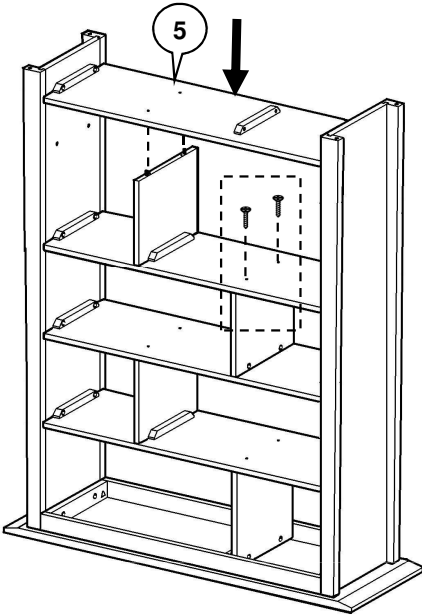




10

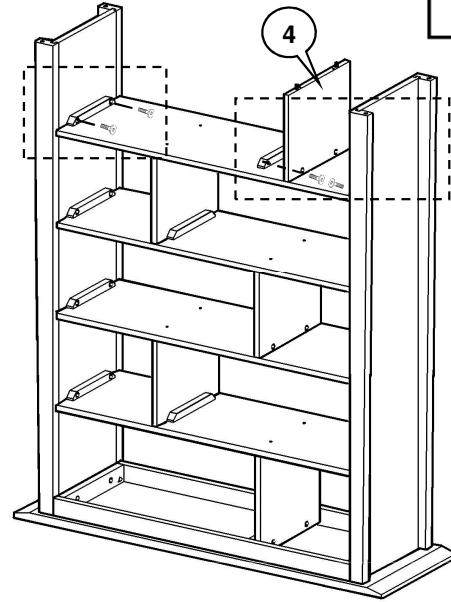

Do not fully tighten bolt

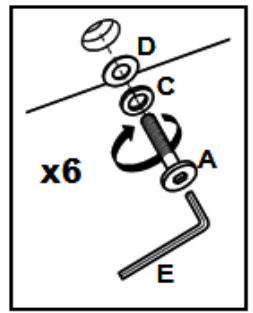

11

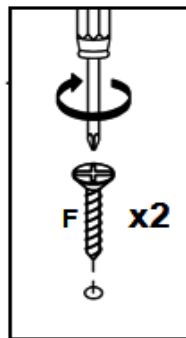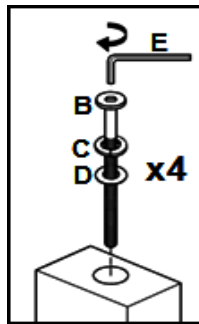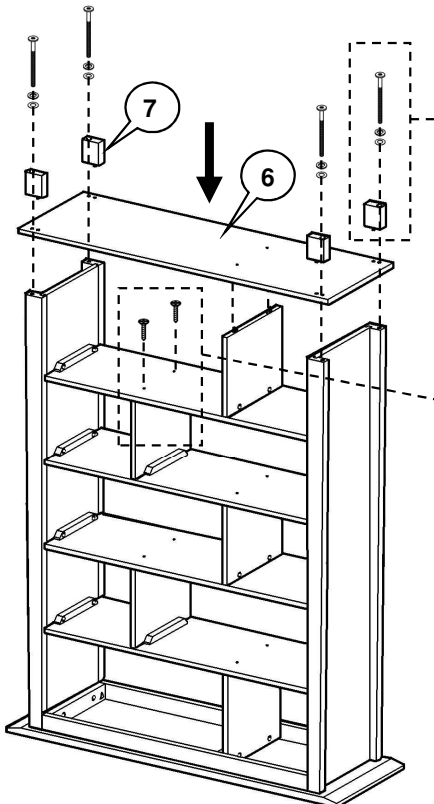

12

Tighten all bolts

