






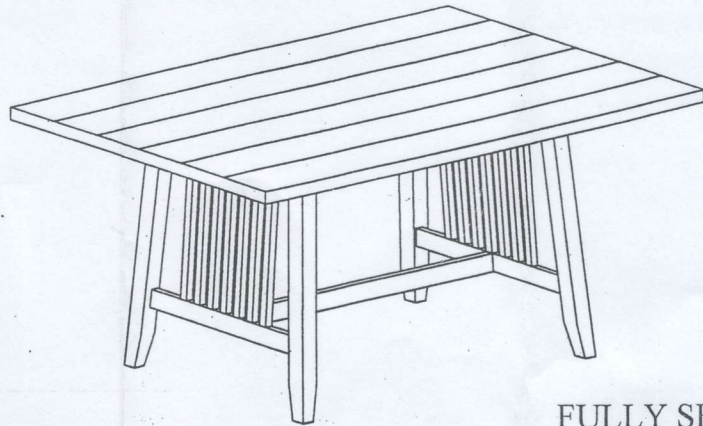
# ASSEMBLY INSTRUCTIONS

MODEL : PCH 4266 SK (7) - V5

- \* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- \* DO NOT TIGHTEN ALL SCREWS UNTIL THE PRODUCT IS FULLY SET-UP.




## HARDWARE LIST

NO	DESCRIPTION	QTY
A	JCBC BOLT 	2 PCS
B	SPRING WASHER 	2 PCS
C	WOOD SCREW 	20 PCS
D	ALLEN KEY 	1 PC
E	WOOD DOWEL 	2 PCS



FULLY SET UP

### STEP 1

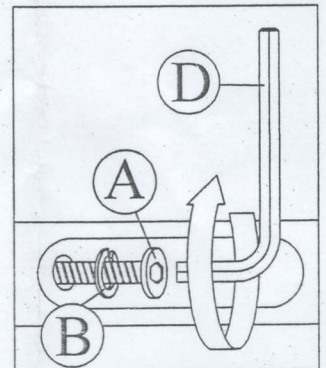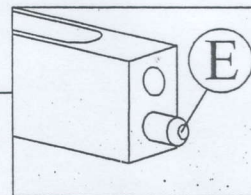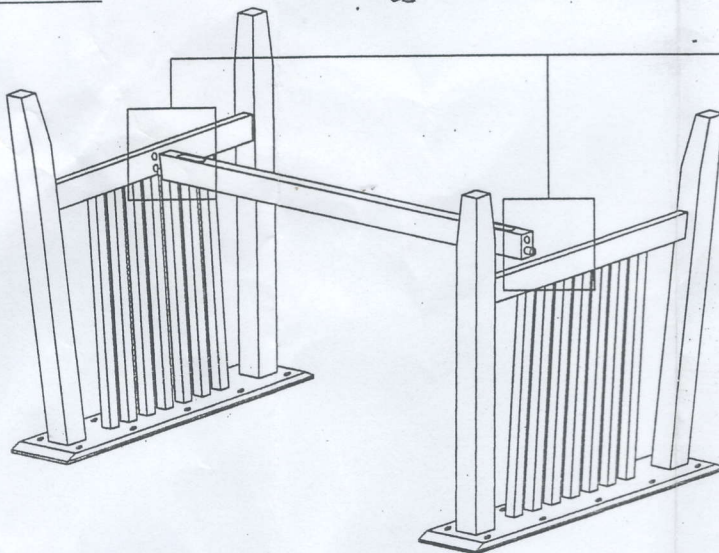

### STEP 2

