

Assembly Instruction




Model : FTV 890

SOFT DRY CLOTH		CHEMICAL		HEAT	KEEP DRY	HANDLE WITH CARE	DO NOT USE OILS


3	4	5	6	7	8	9	10
1X3	1X20	1X8	1X6	10 Sets	1X5	1X2	2 Sets (400 mm)

LIST


Step 1

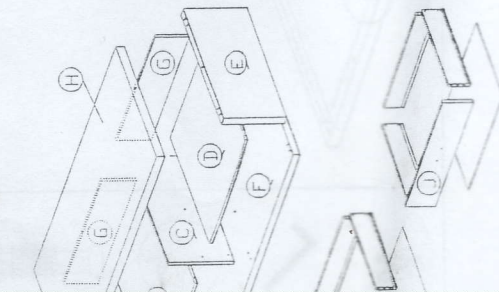


Step 2

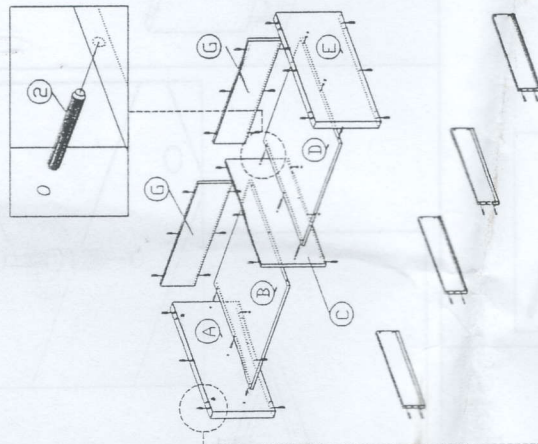


Step 3

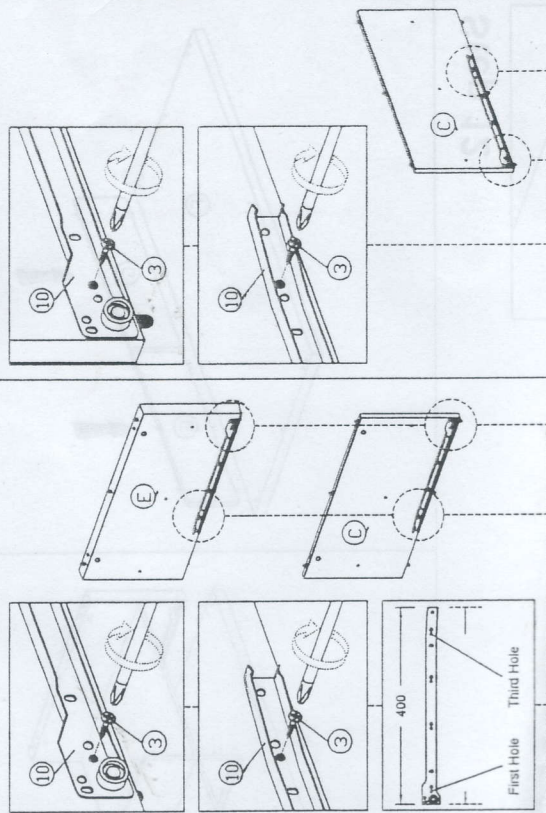


Step 5

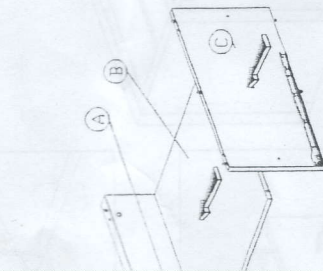

Step 6

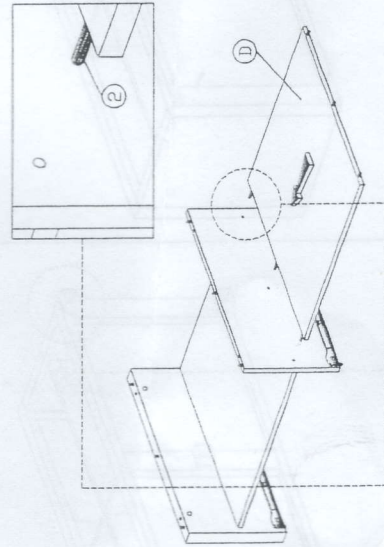


Step 7

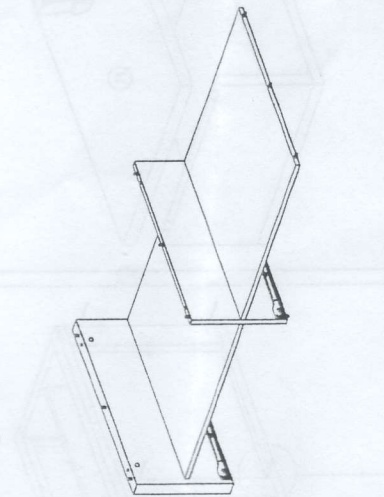


Assembly Instruction

Model : FTV 890



Step 8

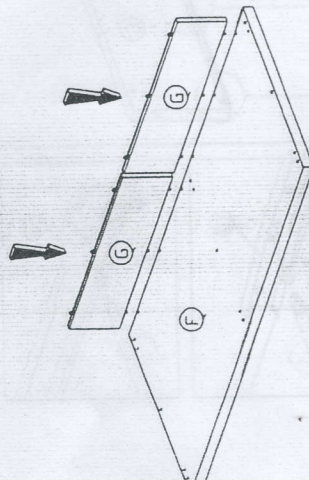


Step 9

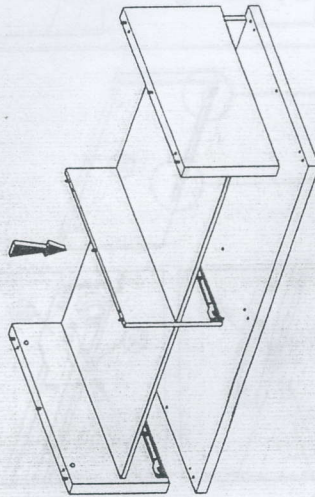


Step 10

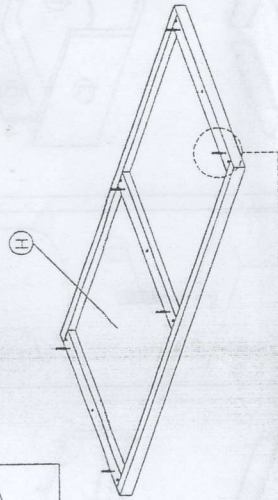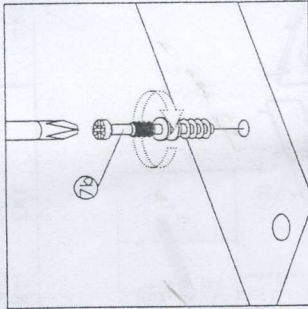



Step 11

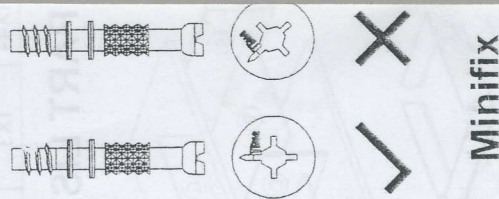




Step 12

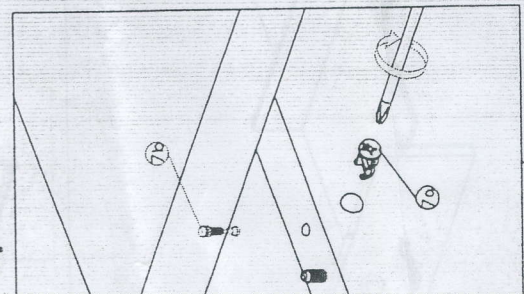

Step 13

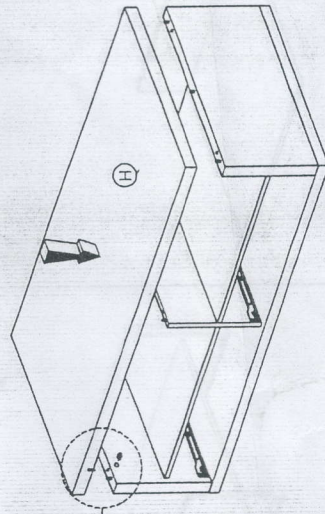


Step 14

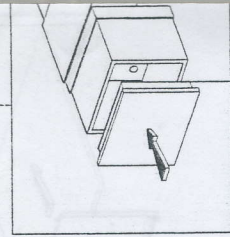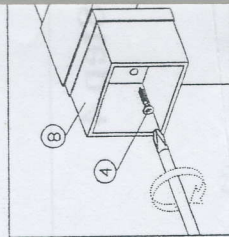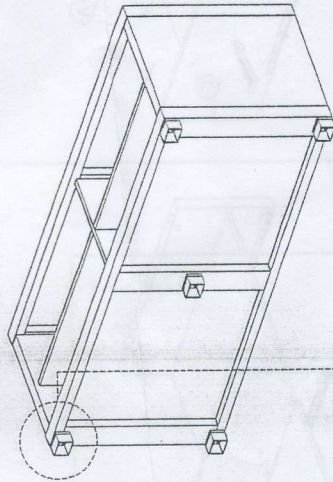


Assembly Instruction




Model : FTV 890




15

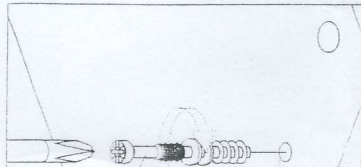


Step 16

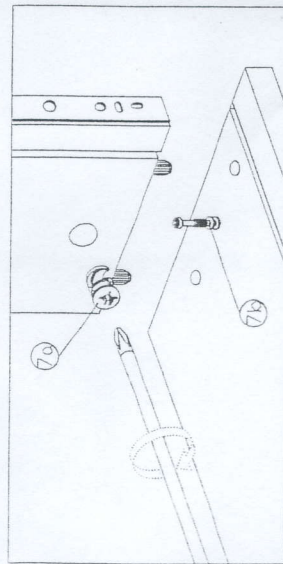

Step 17

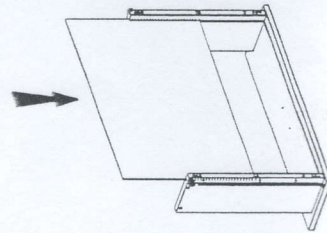


Step 18




Step 19




Step 20

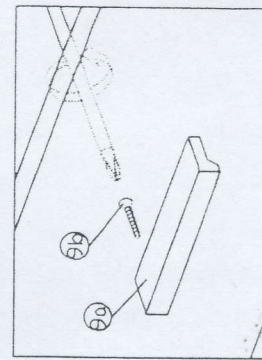

21

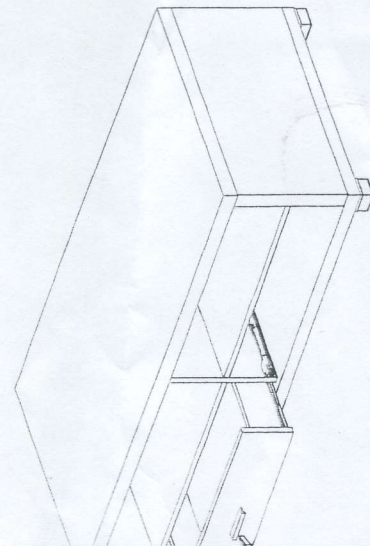

Step 22

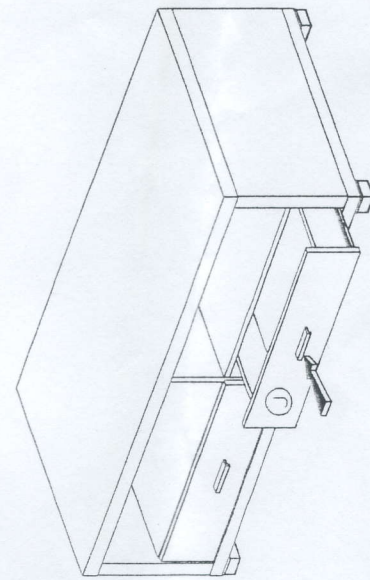

Complete

