
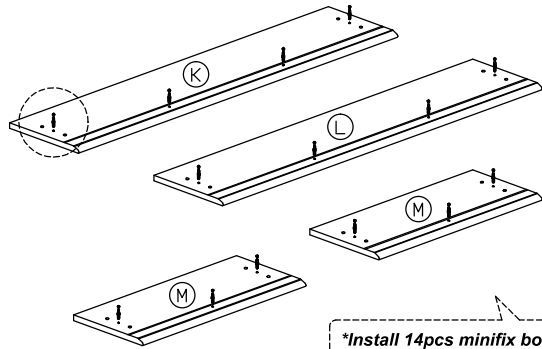




Assembly Instruction

Step 6


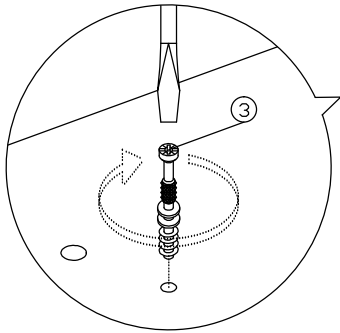


**Install 14pcs minifix bolt as shown above.*

Step 7

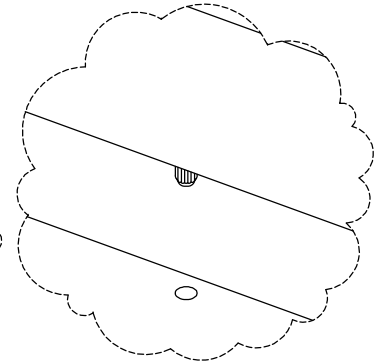
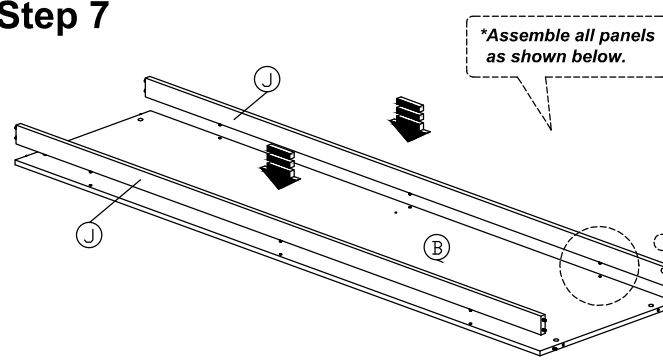


Step 8

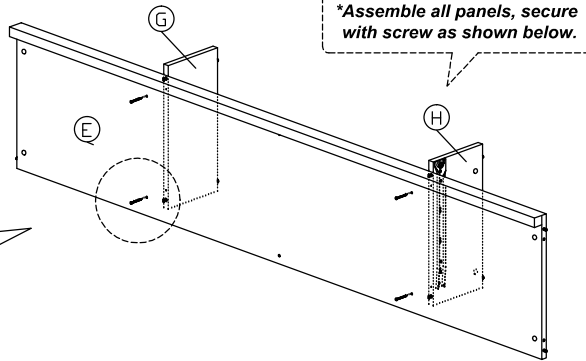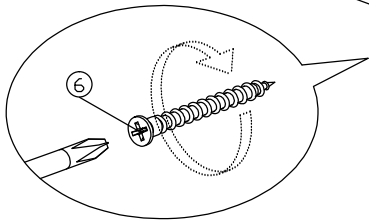



**Assemble all panels, secure with screw as shown below.*

Step 10

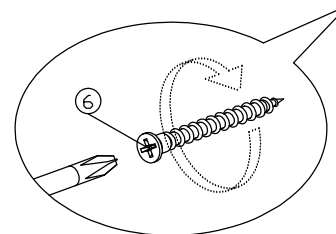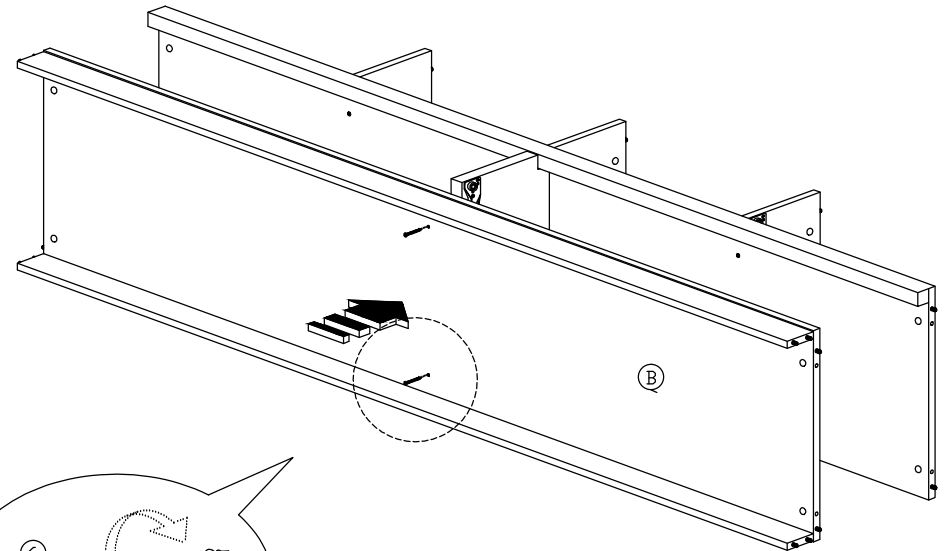

**Place bottom panel, secure with screw as shown above.*

Step 9

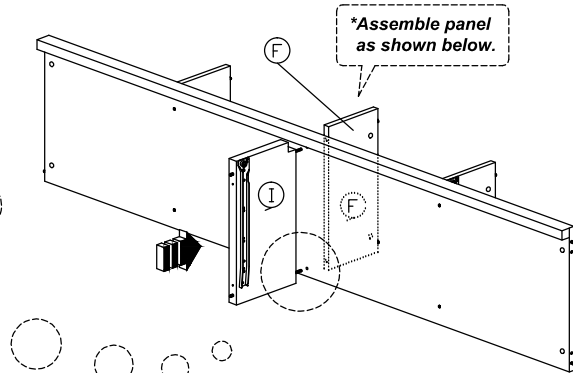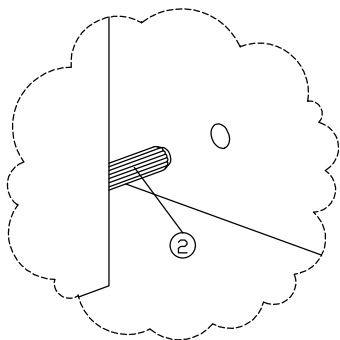

**Assemble panel as shown below.*