ASSEMBLY INSTRUCTION

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list


For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling. CAUTION:


- 1. Do not FULLY TIGHTEN the nut or screw untill all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.


NO	PART LIST	QTY
Α	BACK REST	1 PC
В	FRONT LEG	1 PC
С	SIDE RAIL	2 PCS
D	CUSHION SEAT	1 PC


NO	DESRIPTION		QTY
1	JCBC SCREW M6 X 50MM	0	6 PCS
2	WOOD DOWEL Ø8 x 30MM		4 PCS
3	CSK SCREW M4 x 30MM	OTTOMORPO	3 PCS
4	SPRNG WASHER M6	0	6 PCS
5	M4 ALLEN KEY		1 PC

MODEL: 317C

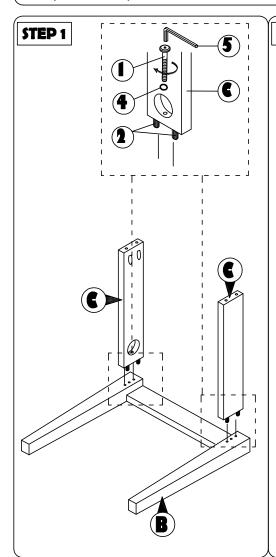

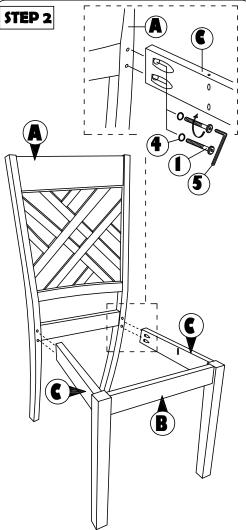

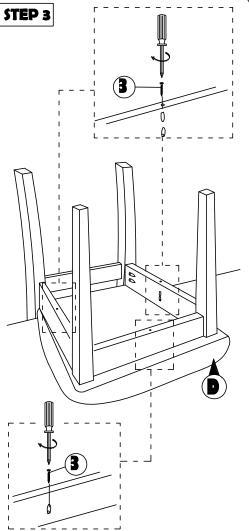

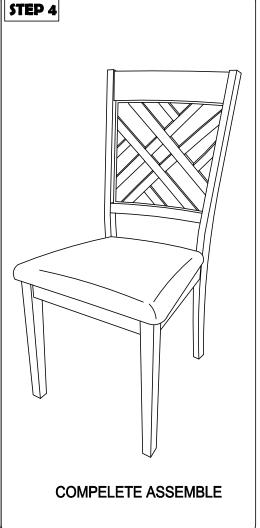

ASSEMBLY INSTRUCTION

MODEL: 7231T

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

NO	PART LIST	QTY
Α	TABLE TOP	1 PC
В	PEDESTAL TABLE CENTER	1 PC
С	PEDESTAL LEGS	4 PCS
D	CROSS BAR 'X'	2 PCS
E	BOX COVER	1 PC


CAUTION:


- 1. Do not FULLY TIGHTEN the nut or screw until all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.

NO	DESCRIPTION		QTY
1	CSK SCREW M4 X 30MM	OTTOMOR .	16 PCS
2	HEX. NUT	•	8 PCS
3	FLAT WASHER	0	8 PCS
4	SPANNAR	%	1 PC
5	ADJUSTER		4 PCS

STEP 1.1


Firstly, connect \underline{C} to \underline{B} according to the hole using hardware number 2,3 and 4.

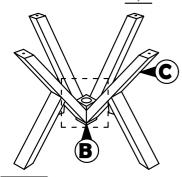


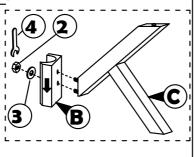

TED 12


Then, attached 4 pieces hardware number $\frac{5}{2}$ to part

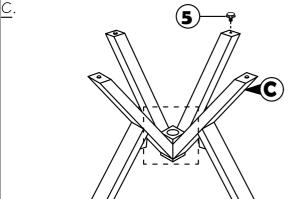

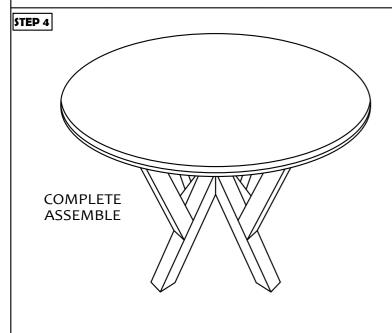


STEP 2.1

Put part \underline{E} to \underline{B} align to the nut provided.

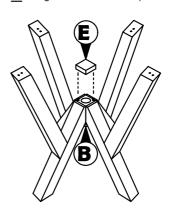

STEP 2.2

Align part \underline{D} to \underline{C} accordingly and tighten it using hardware number I.

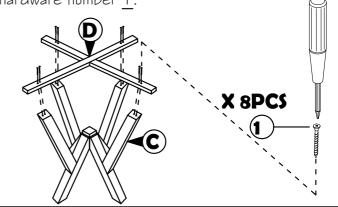

STEP 3

Align part \underline{D} to \underline{A} ; make it center and tighten it using hardware number \underline{I} .

