


9773-1 Full / Queen Headboard

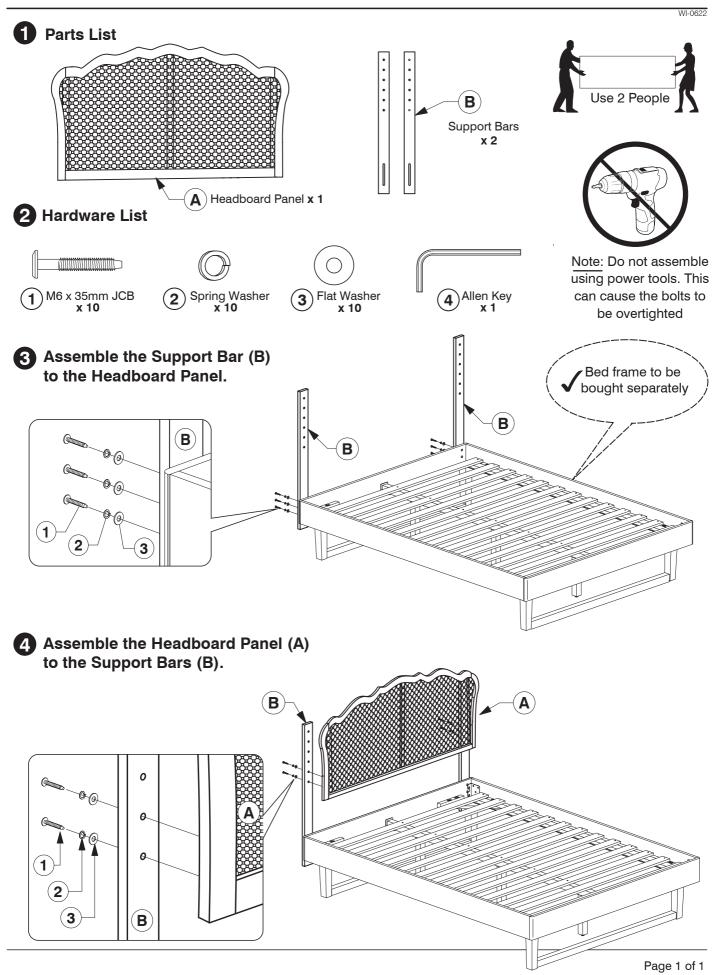


9773-1 King Headboard

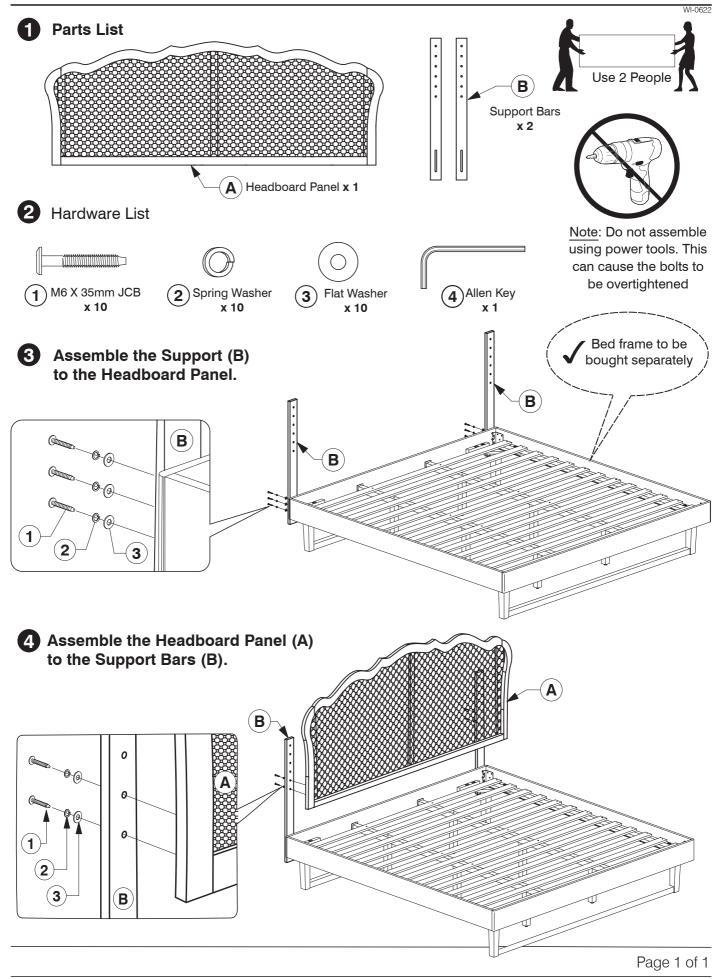

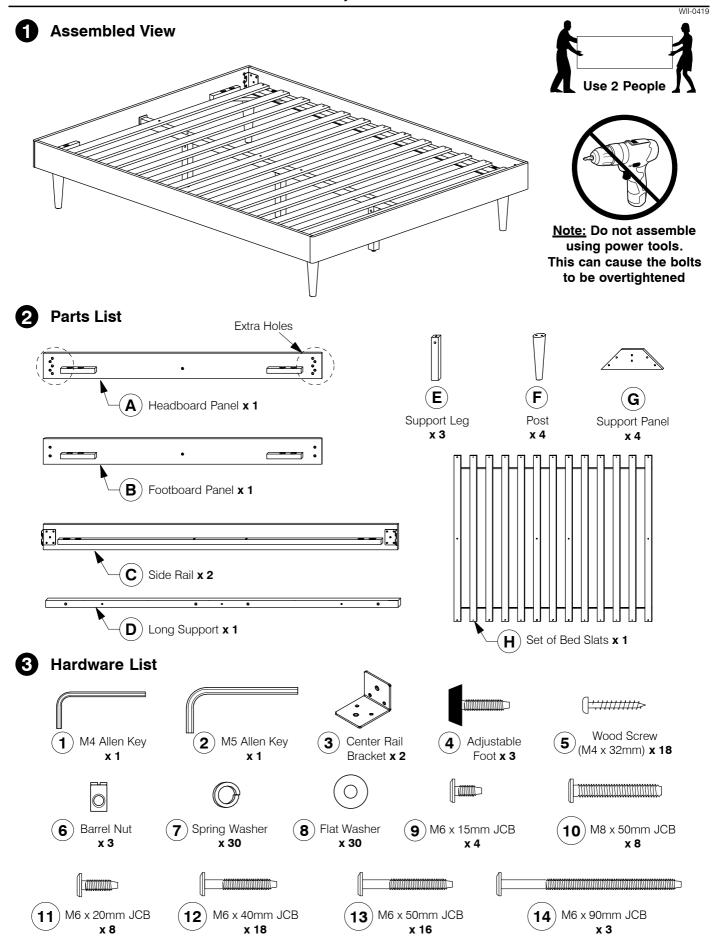



Assembly Instructions


\/\IL∩/110

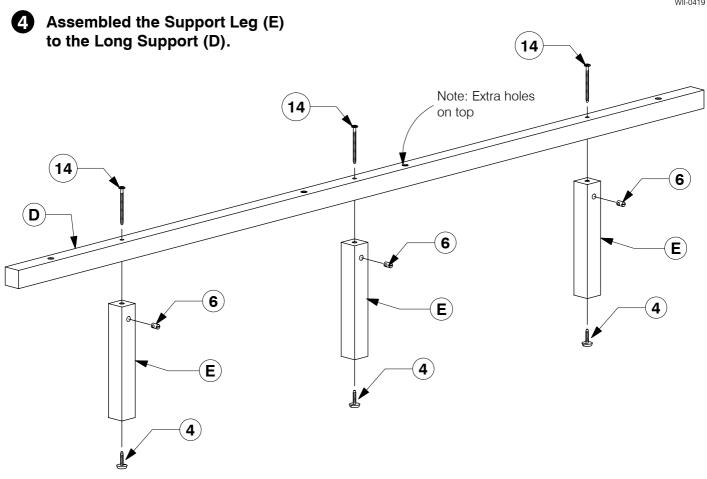


5 Fit the Post (F) to the Support Panel (G).

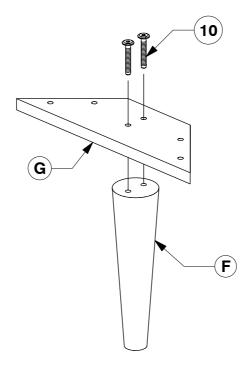

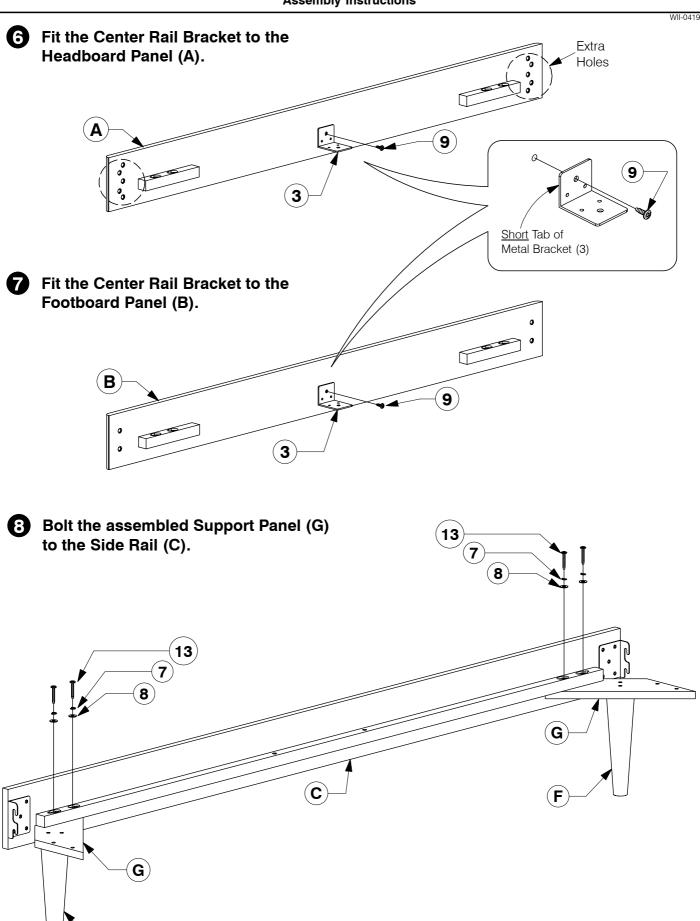

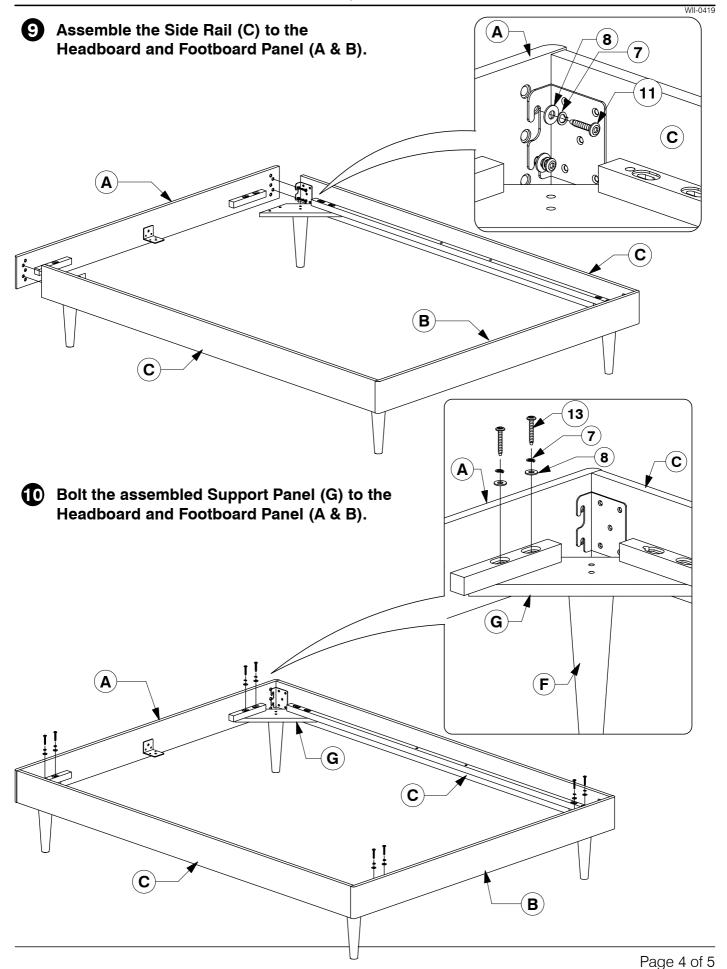

Assembly Instructions

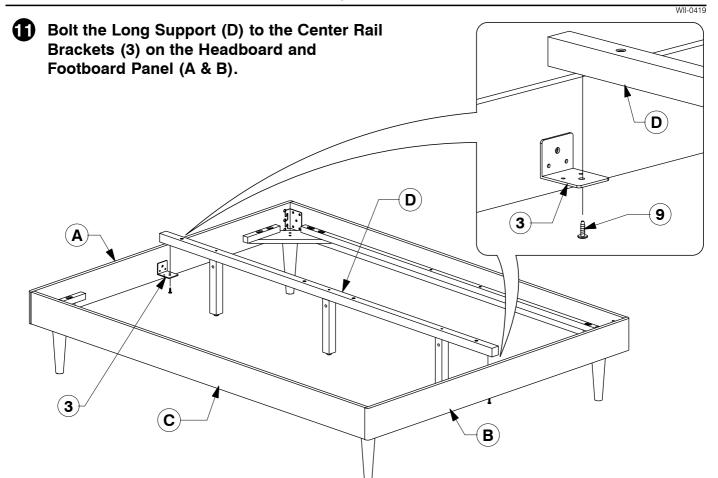

Bolt & screw the Bed Slats (H) to the Side Rail (C).

