

9778 Full / Queen Headboard


Assembly Instructions

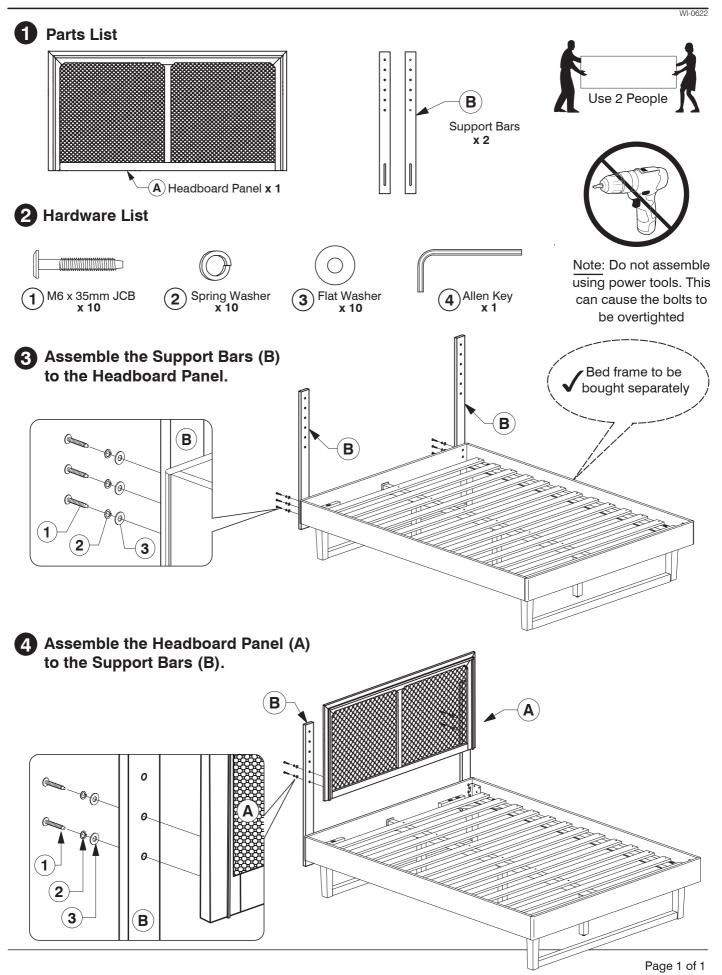

9778 King Headboard Assembly Instructions

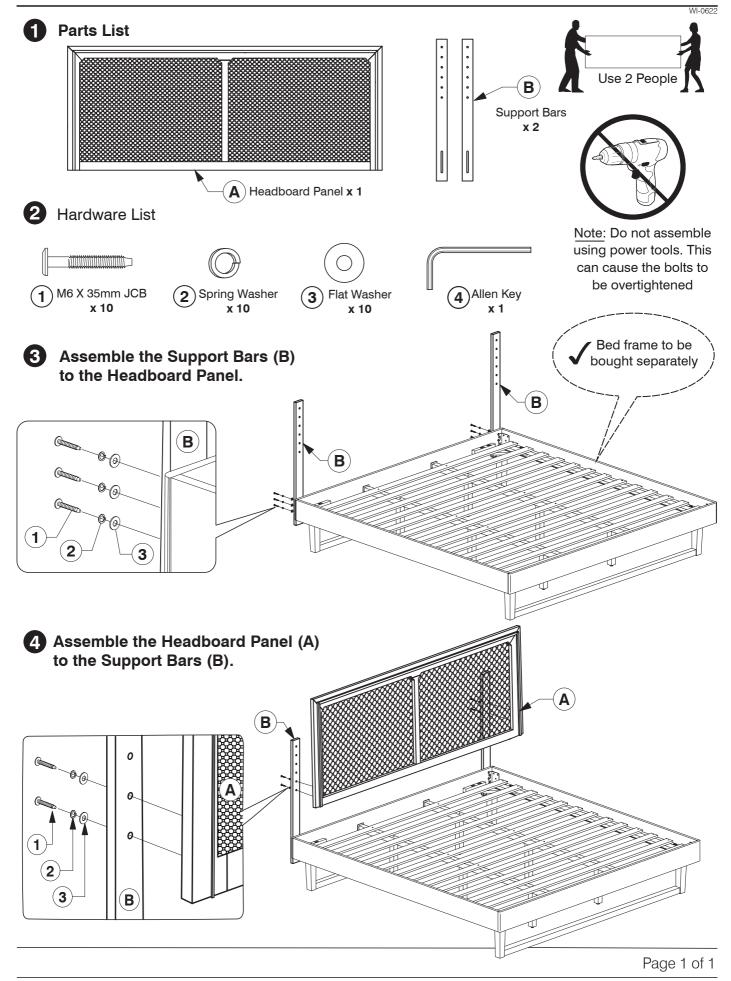

Assembly Instructions

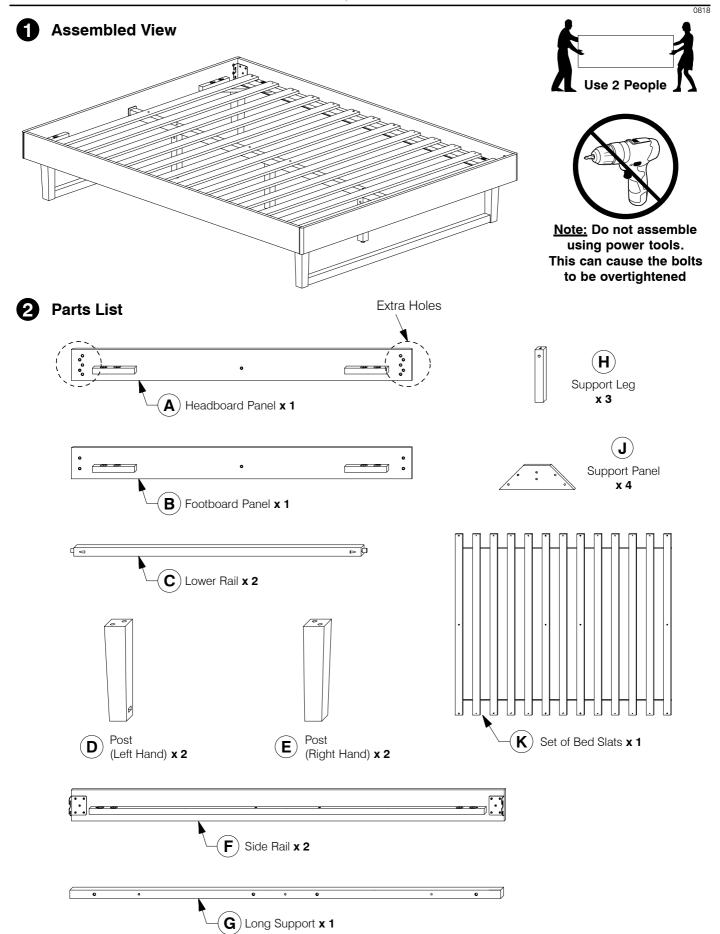


Assembly Instructions

3 Hardware List (4) M6 x 20mm JCB **1** M6 x 90mm JCB M6 x 50mm JCB (3) M6 x 40mm JCB х3 x 16 x 18 x 8 **(5)** M6 x 15mm JCB (9) Flat Washer **6**) M8 x 50mm JCB (7) Barrel Nut (8) Spring Washer x 30 x 30 x 4 x 8 х 3 **12**) M5 Allen Key Wood Screw M4 Allen Key Center Rail Adjustable (10) (11 13 (M4 x 32mm) **x 22** Foot **x 3** Bracket x 2 x 1 x 1 Assembled the Support Leg (H) to the Long Support (G). Note: Extra holes on top 1 7 (H)14 14 H) 14 E 5 Fit the Lower Rail (C) to the Post (D & E). 10 D) (\mathbf{C})


10

0818


6 Assemble the assembled Post (D & E) & Lower Rail (C) to the Support Panel (J).

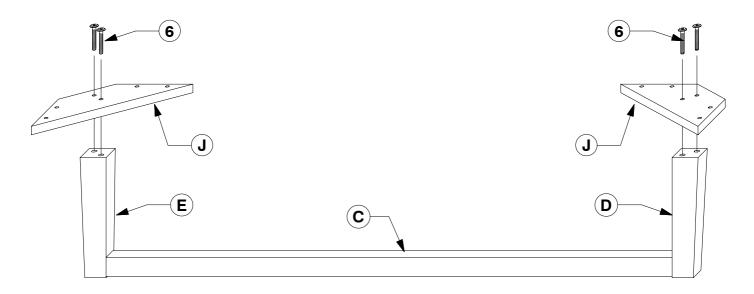


Fit the Center Rail Bracket to the Headboard Panel (A).

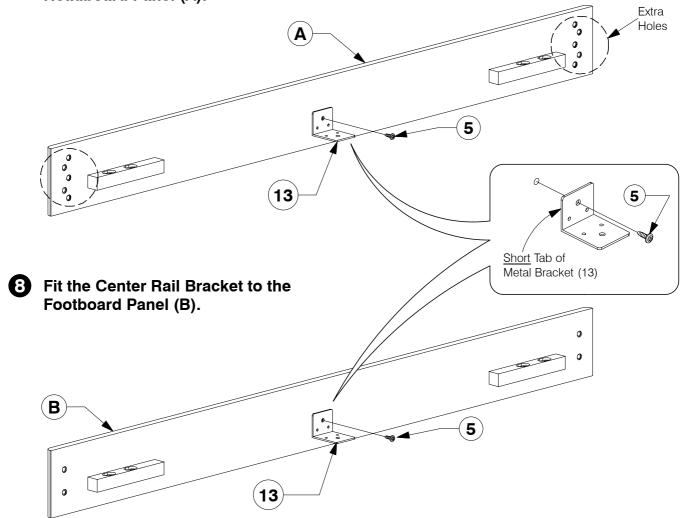


Assembly Instructions

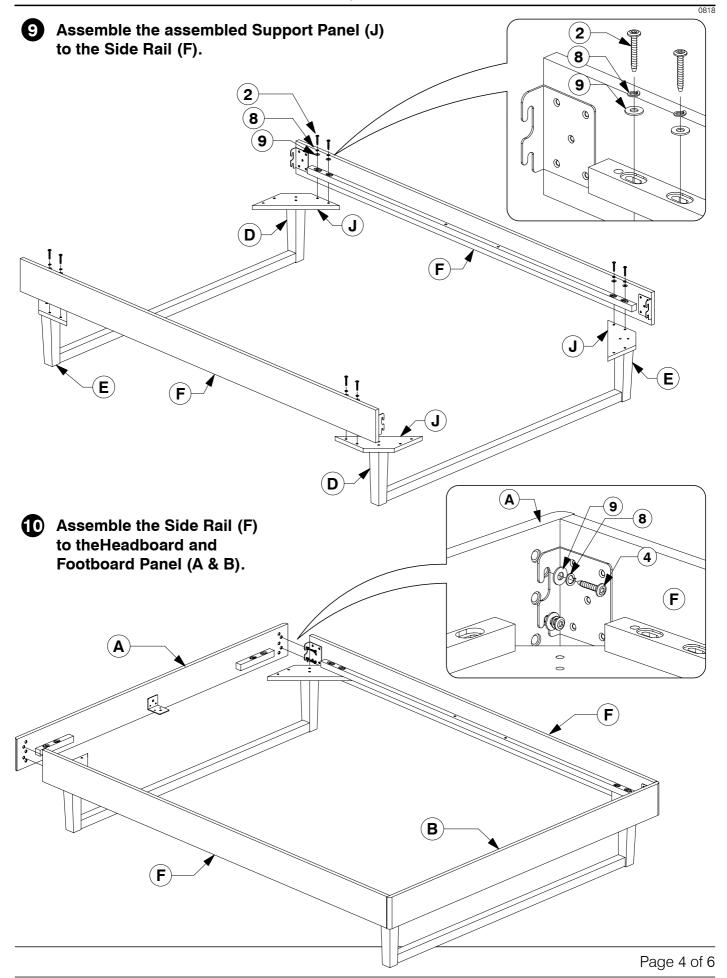

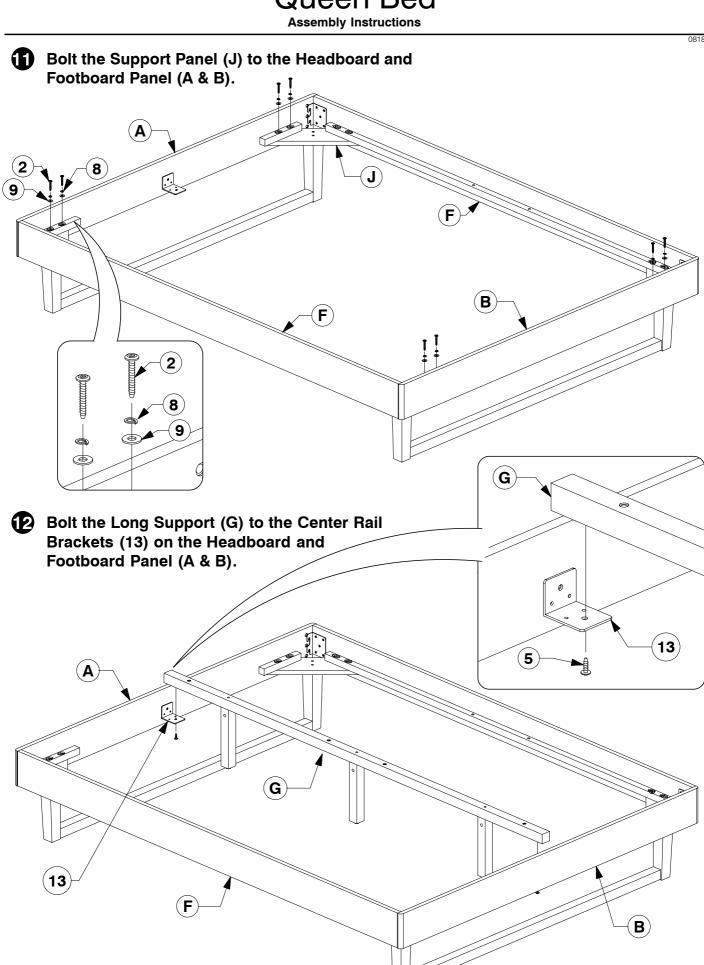

Page 5 of 6

Bolt the Bed Slats (K) to the Side Rail (F).

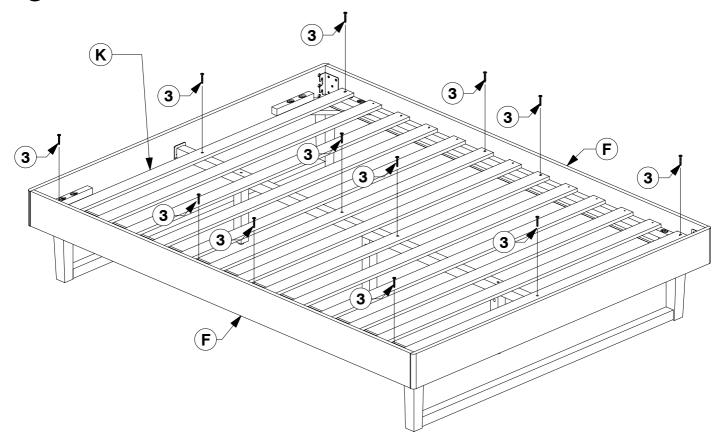

Screw the Bed Slats (K) to the Side Rail (F).

