
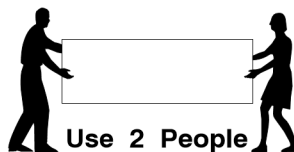


9010 2 Drawer Nightstand


Assembly Instructions

WI-0724

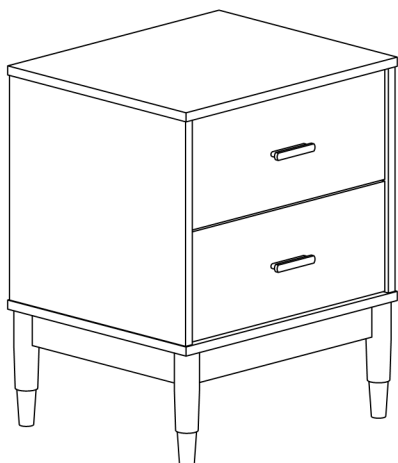


Note: Do not assemble using power tools. This can cause the bolts to be overtightened


1 Parts List

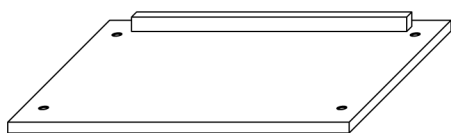


A Top Panel x 1

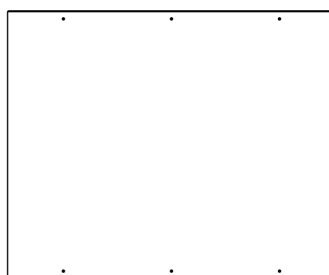

D Back Panel x 1

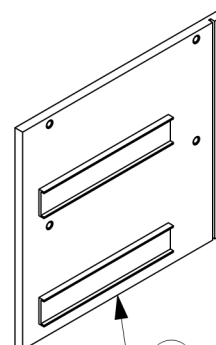

F Side Panel (Left Hand) x 1

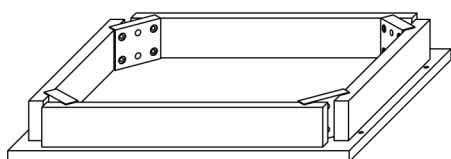


B Bottom Panel x 1




C Support Bar x 2




E Post x 4

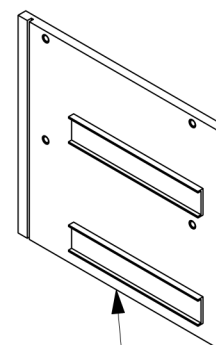


G Side Panel (Right Hand) x 1

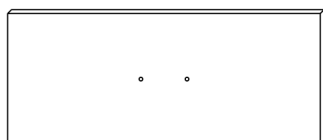

H Drawer Face x 2




J Drawer Back x 2



K Drawer Side (Left Hand) x 2



L Drawer Side (Right Hand) x 2















M Drawer Bottom x 2

9010 2 Drawer Nightstand


Assembly Instructions

WI-0724


2 Hardware List

- | | | | | | |
|--|--|--|--|---|---|
| 
1 M6 x 15mm
JCB x 16 | 
2 M6 x 60mm
JCB x 8 | 
3 M4 x 25mm
Wood
Screw x 16 | 
4 M4 x 20mm
Wood
Screw x 8 | 
5 M4 x 16mm
Wood
Screw x 6 | 
6 CSK Cap
Wood Screw
(M6 x 60mm) x 4 |
| 
7 Spring
Washer
x 8 | 
8 Flat
Washer
x 8 | 
9 'L' Bracket
(5005-3)
x 8 | 
10 M4 x 20mm
Wood Screw
x 4 | 
11 Handle
(3321-64)
x 2 | 
12 Allen Key
x 1 |


3 Assemble the Drawer Sides (K & L) to the Drawer Face (H).

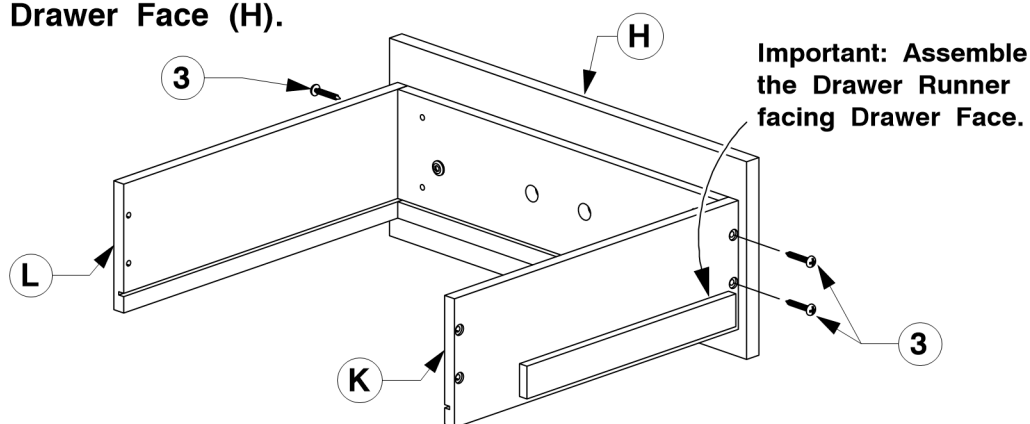

4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

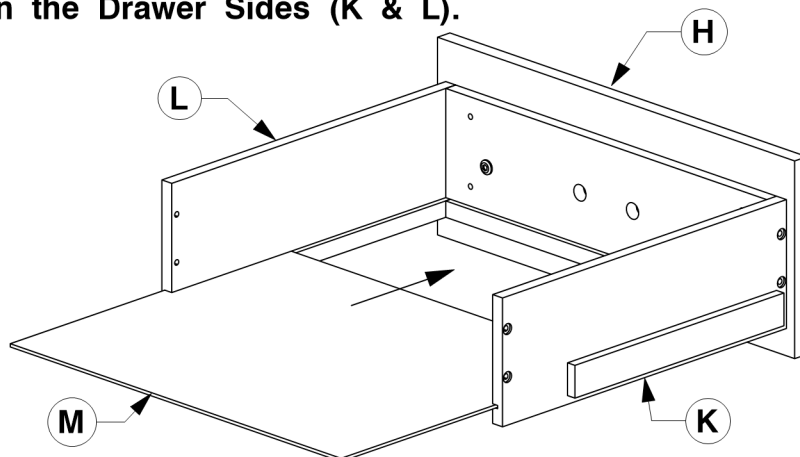

5 Assemble the Drawer Back (J) to the Drawer Sides (K & L).

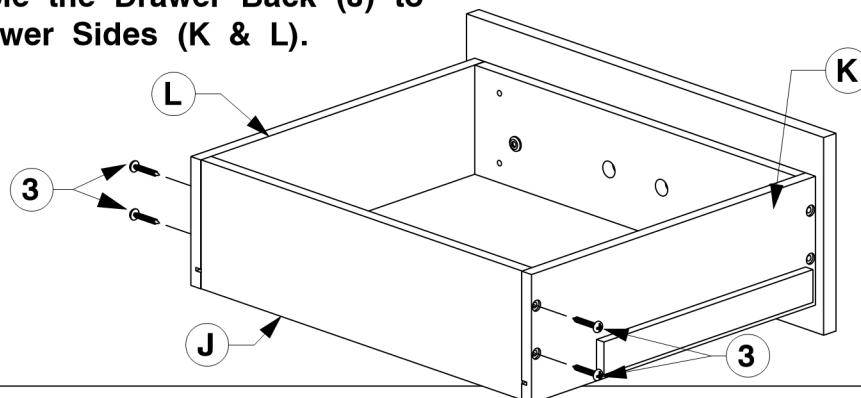


9010 2 Drawer Nightstand


Assembly Instructions

WI-0724

6 Fit the 'L' Bracket to the Side Panel (F & G).

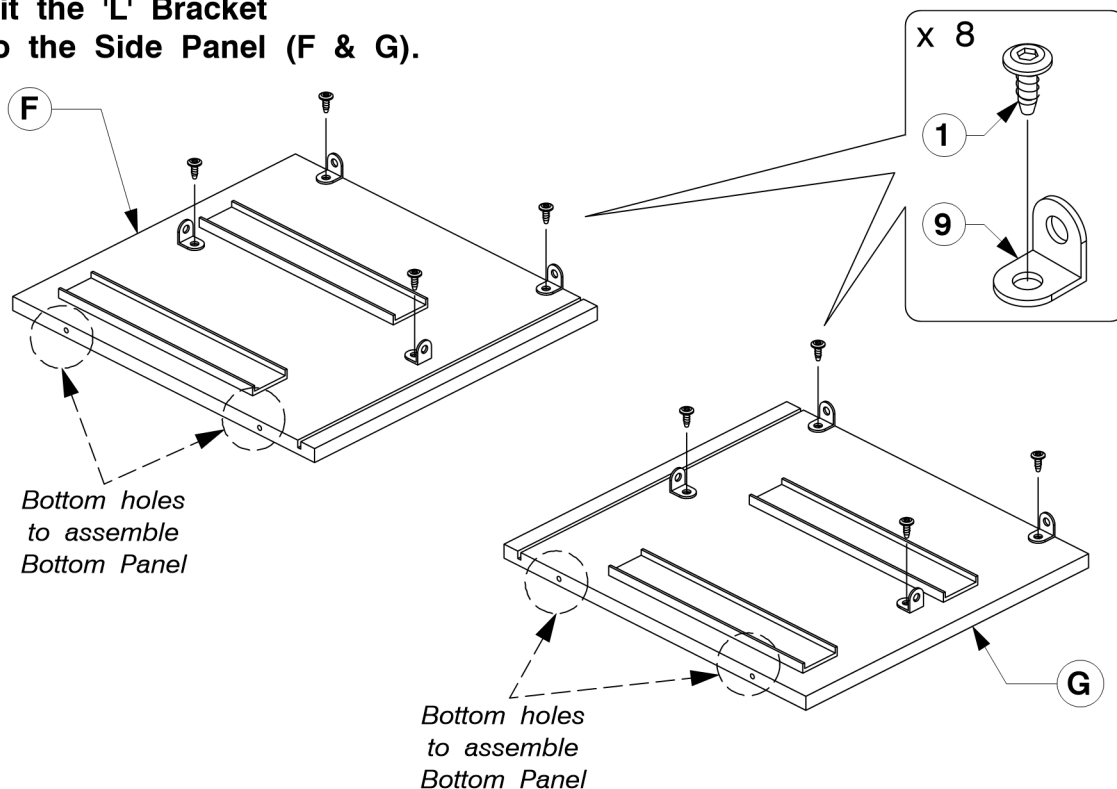

7 Assembled the Side Panel (F & G) to the Top Panel (A).

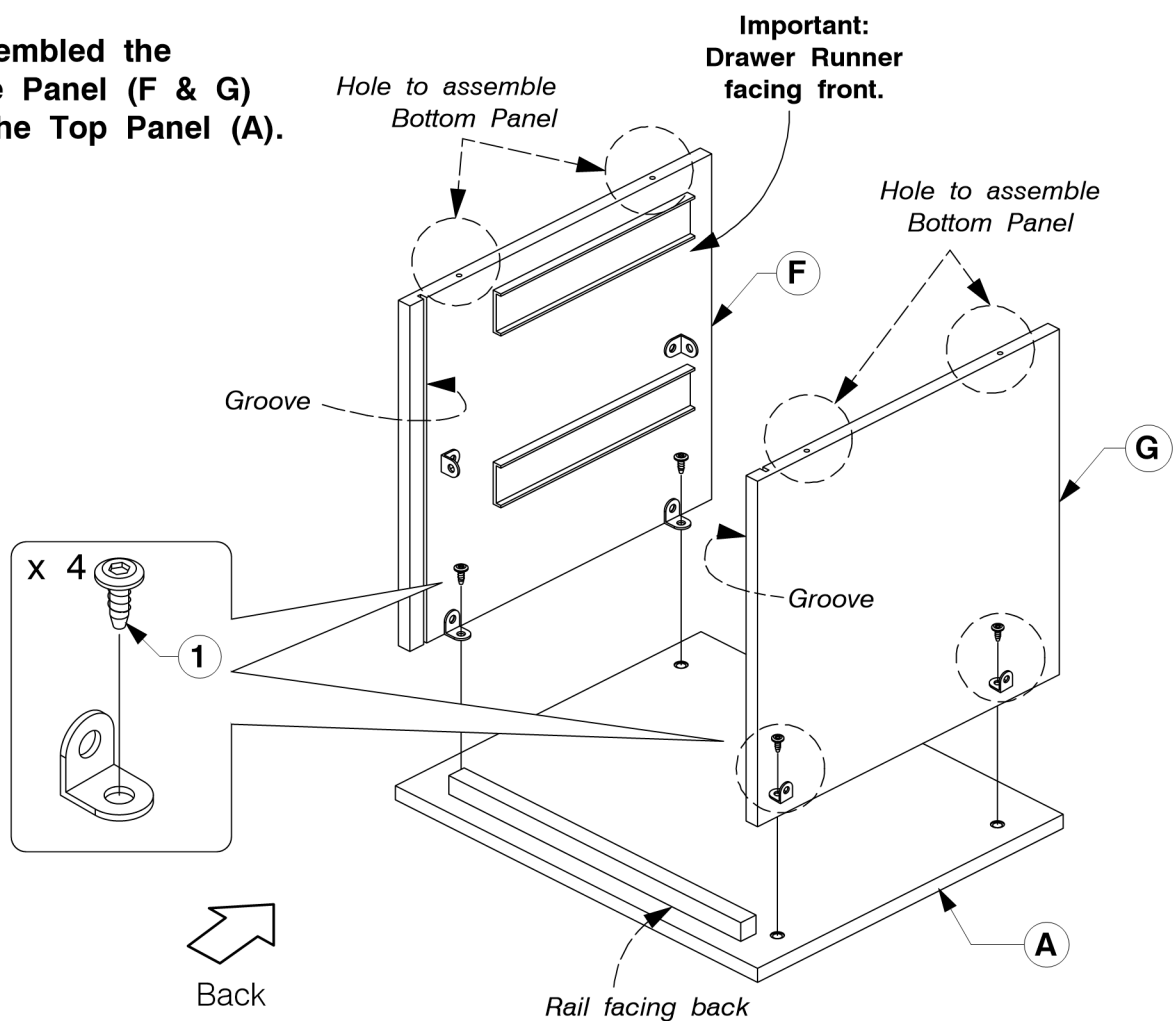


9010 2 Drawer Nightstand


Assembly Instructions

WI-0724

- 8** Fit the Support Bar (C) to the Side Panel (F & G).

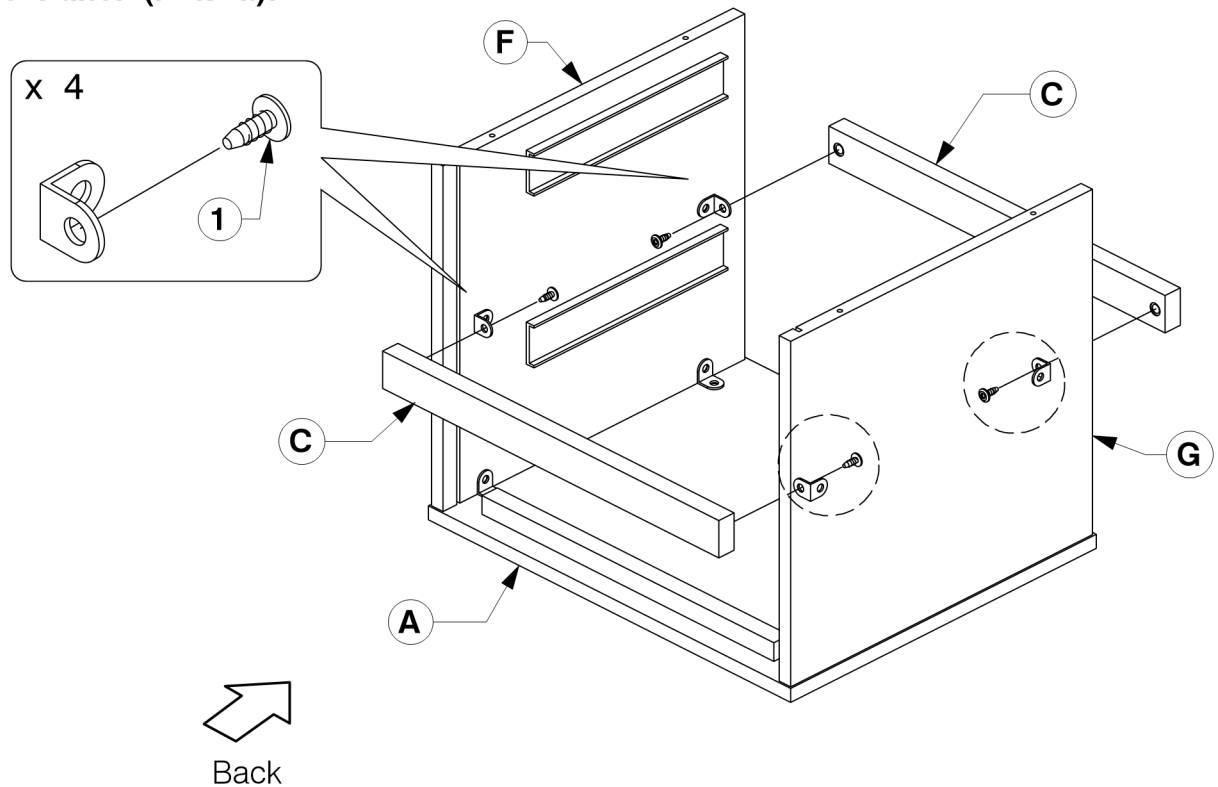

- 9** Slide the Back Panel (D) into the groove on the back of the Side Panel (F & G).

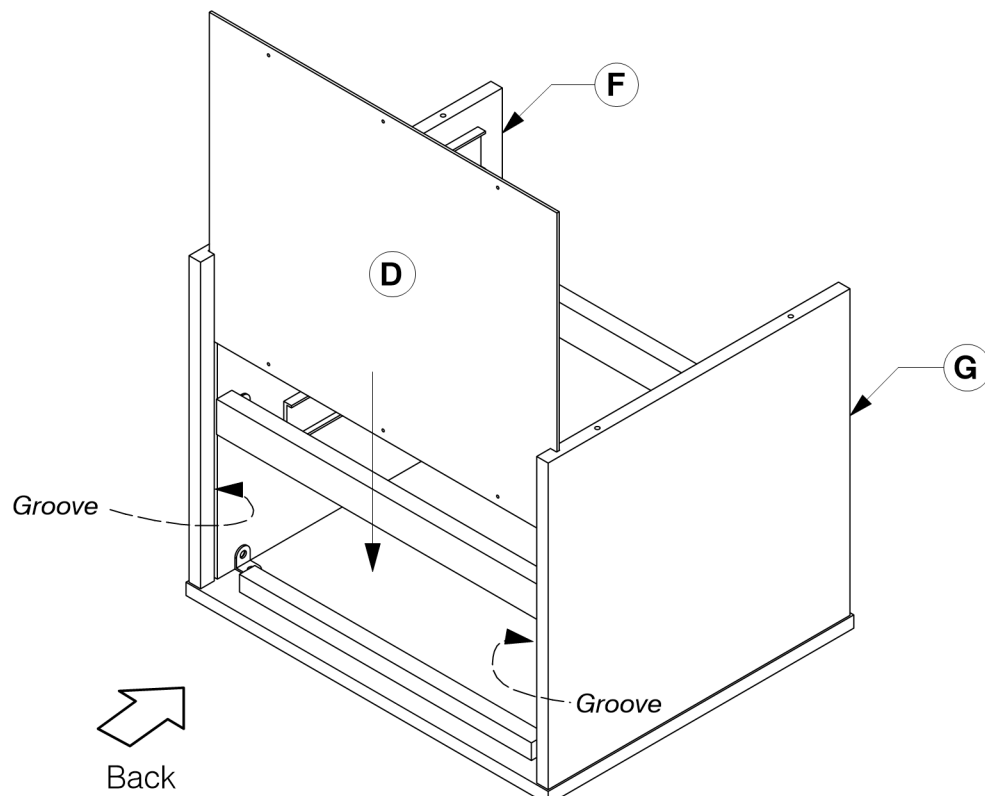


9010 2 Drawer Nightstand


Assembly Instructions

WI-0724

- 10** Fit the Bottom Panel (B) to the Bottom of the Side Panel (F & G).

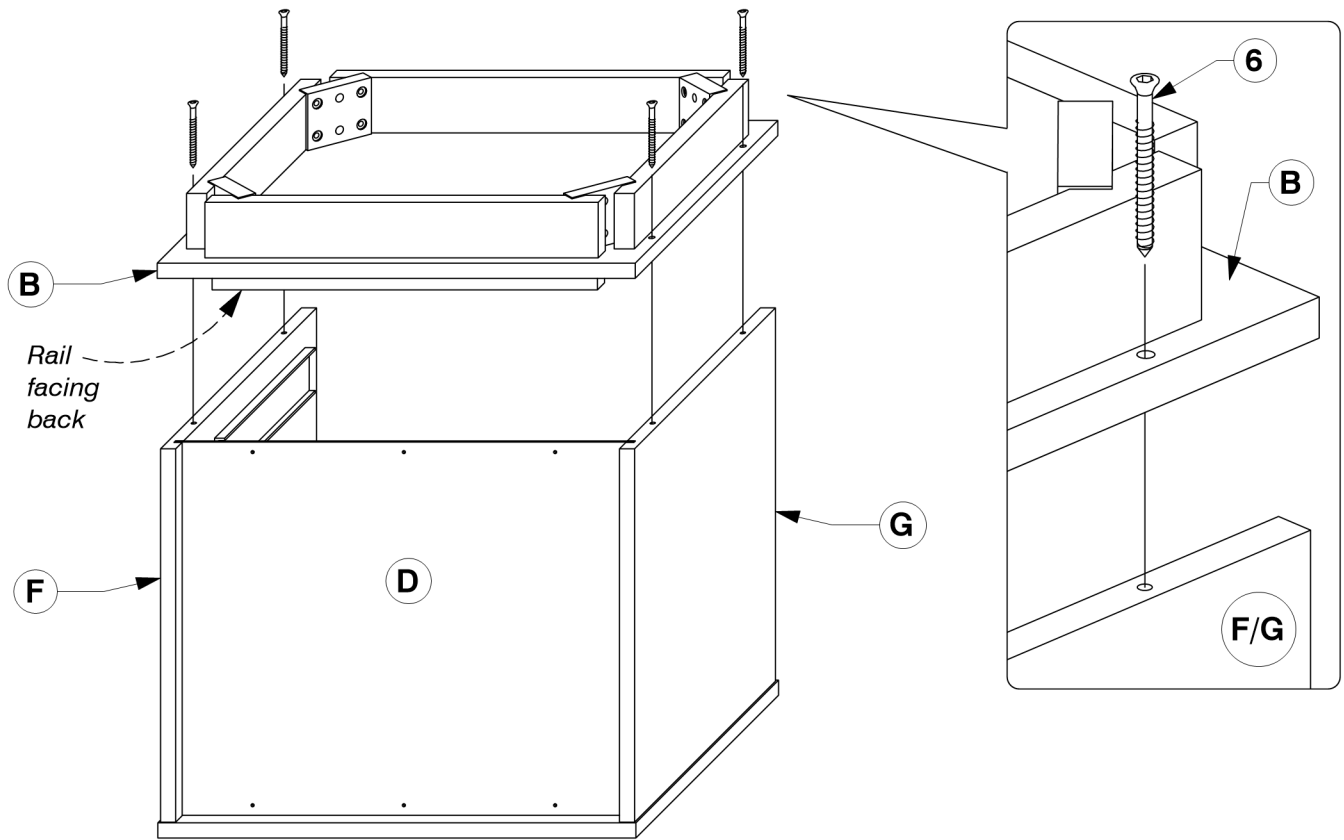

- 11** Use screws to tighten the Back Panel (D) to the back of the frame.

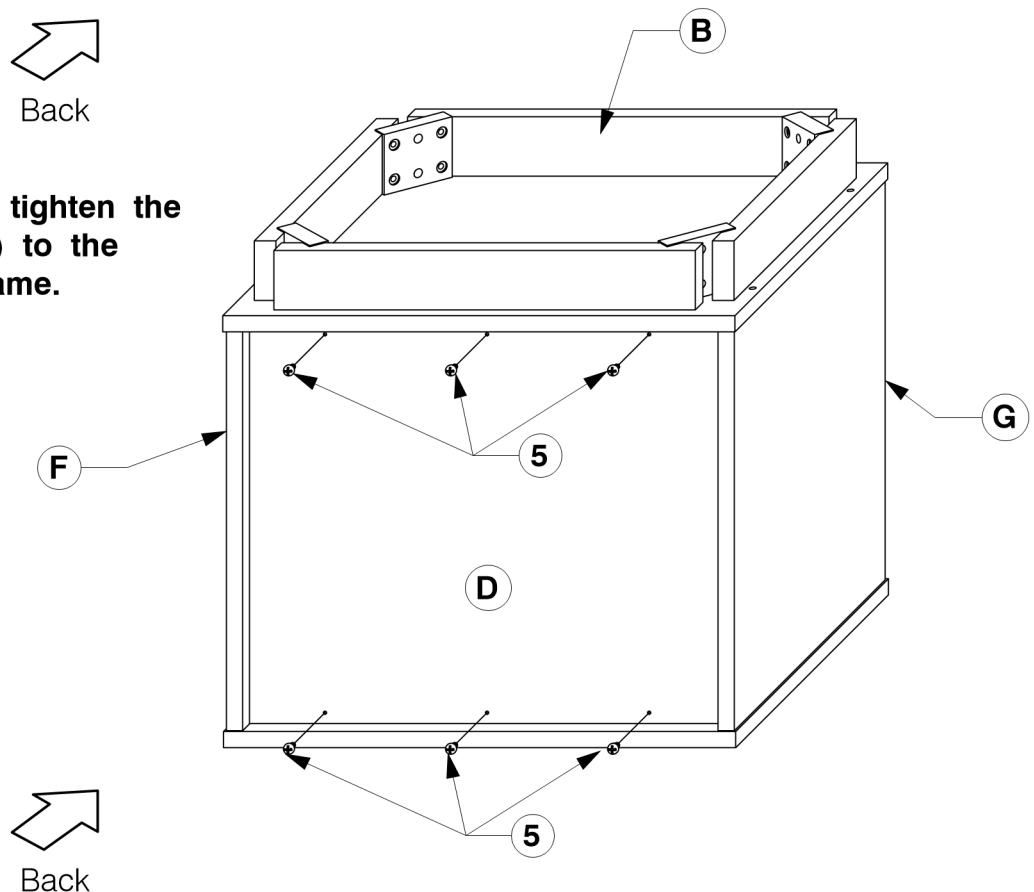


9010 2 Drawer Nightstand

Assembly Instructions


WI-0724

12 Fit the Post (E) to the Bottom Panel (B).

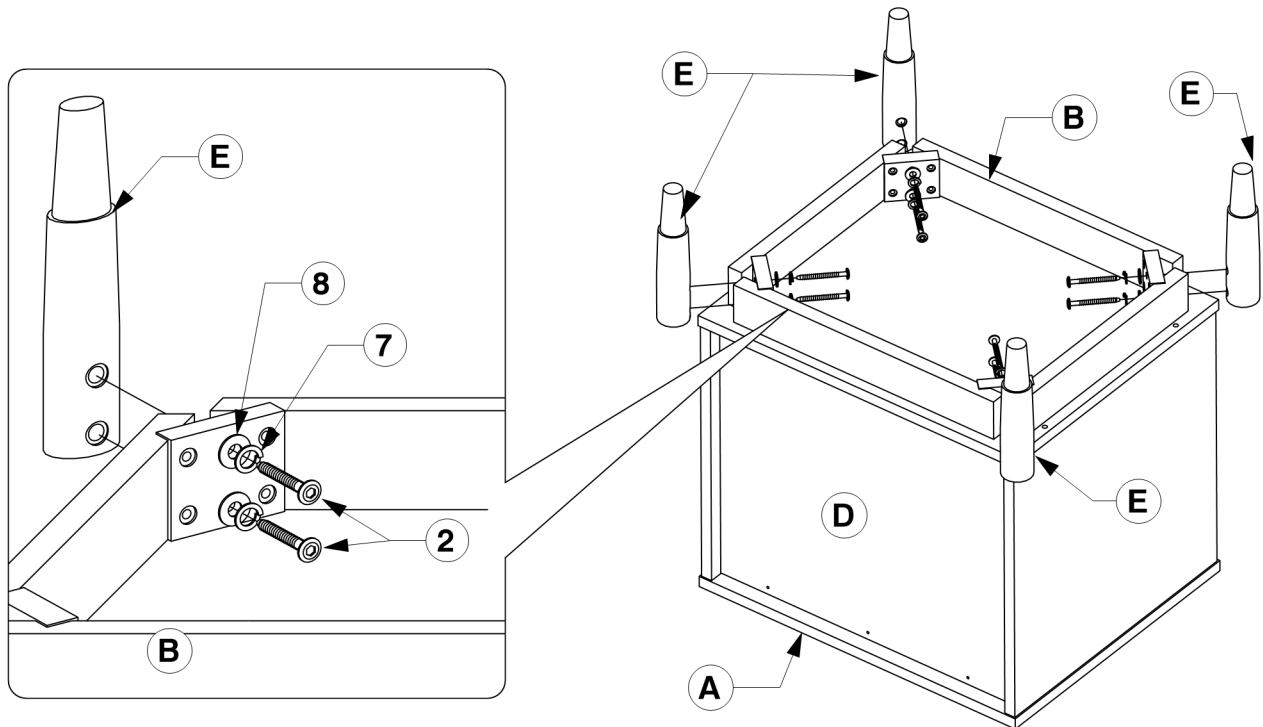

13 Fit and adjust the Drawer Face (H).

* NOTE: Before fitting the Wood Screws.
Loosen the JCBs on the Drawer Face if
the face needs alignment.

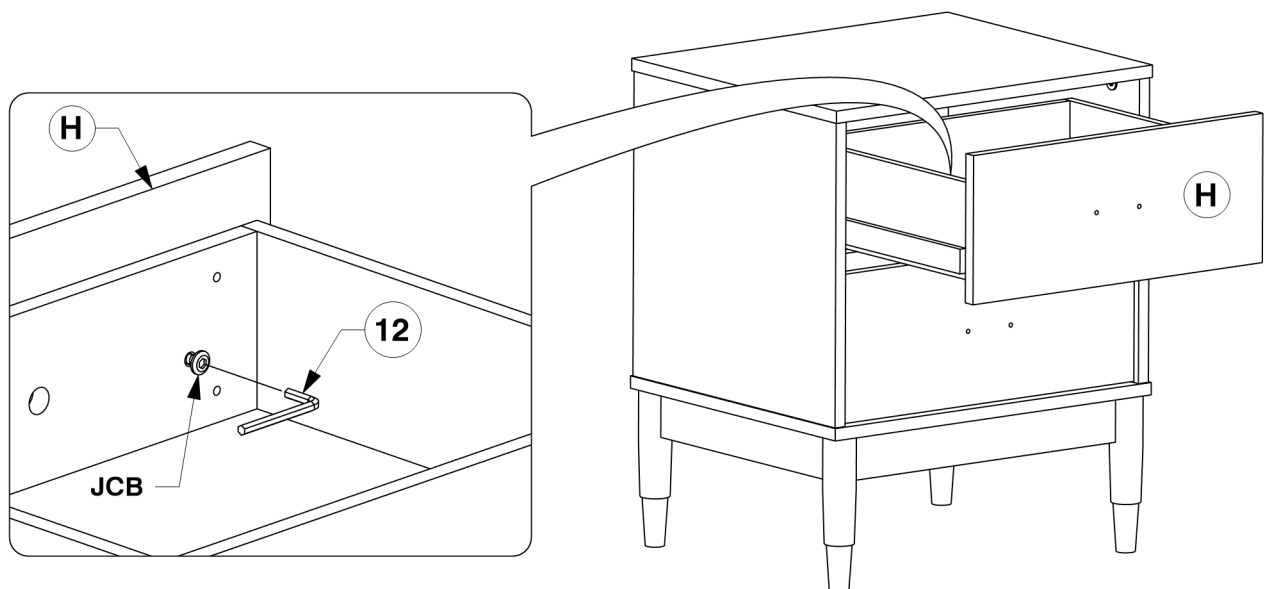


9010 2 Drawer Nightstand

Assembly Instructions

WI-0724

- 14** After the Drawer Faces (H) are aligned, secure with wood screws.

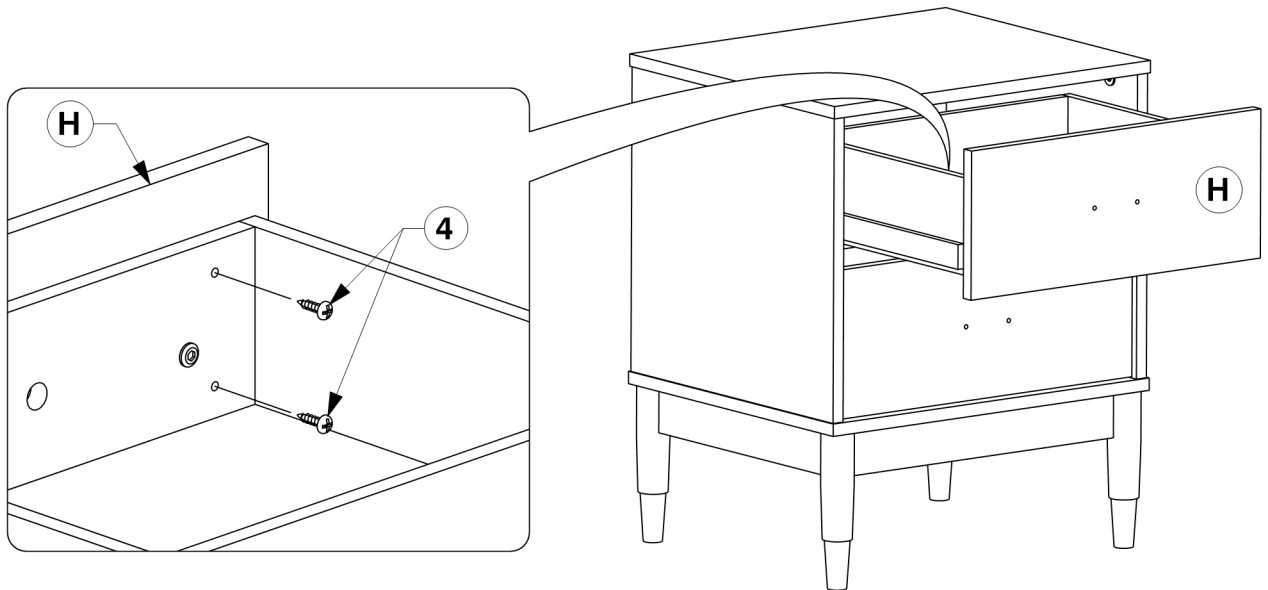

- 15** Finally, fit the Handle to the Drawer Face (H).

