


SW 8620-F/Q/K

1. Attach the Headboard Panel (P2) to the Headboard post (P1).



You will need
D = 4pcs

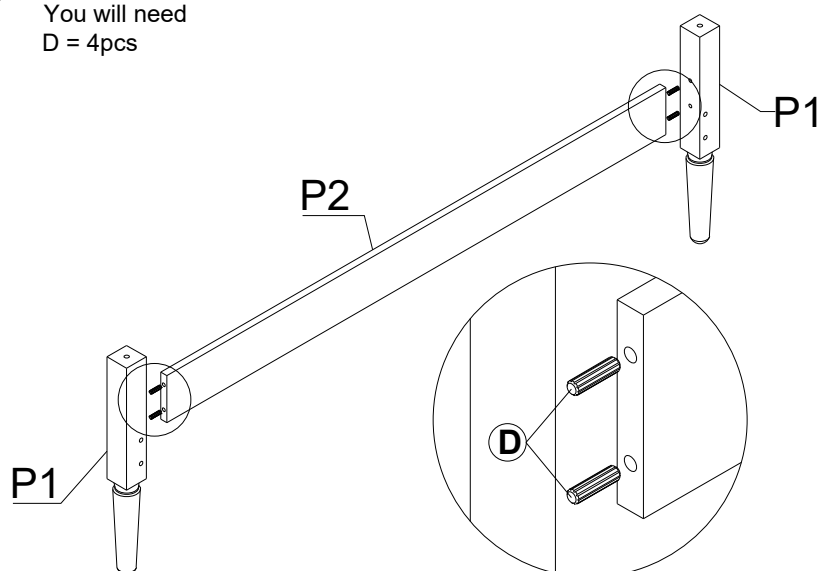

2. Attach the Headboard Frames (P3) to the Headboard post (P1).

You will need
A = 4pcs
E = 1pc
I = 2pcs





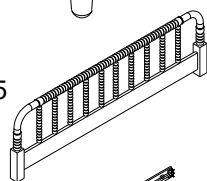


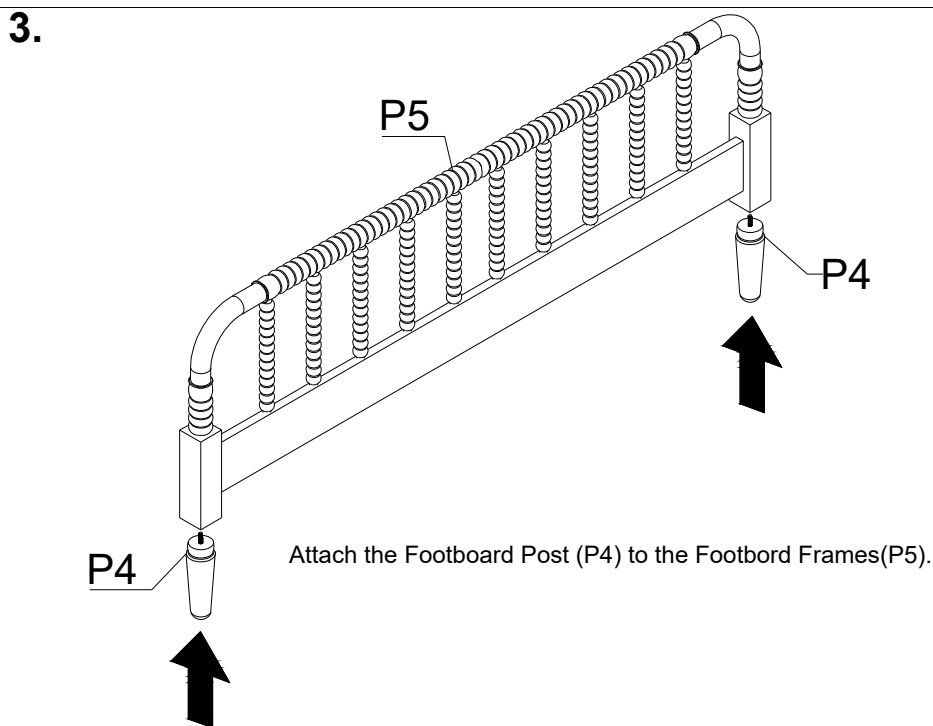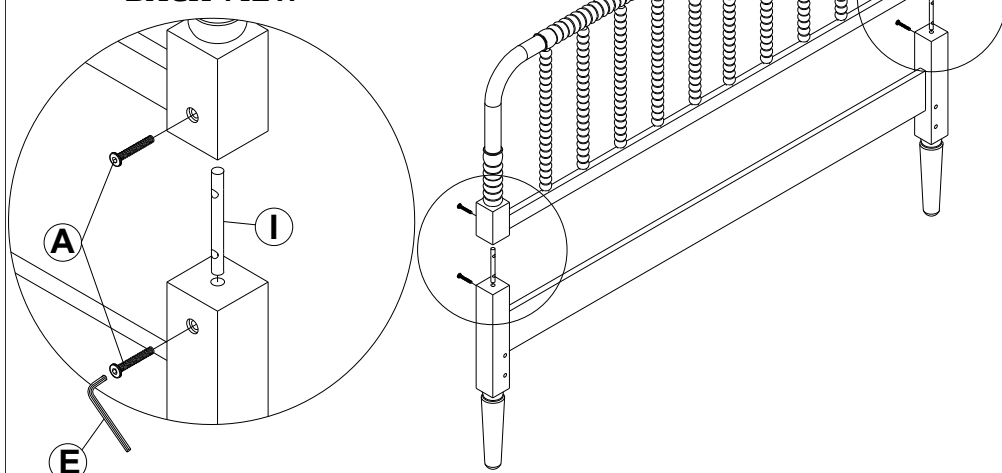

BACK VIEW



WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

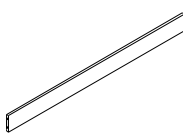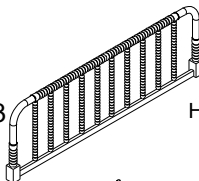PART LIST

| | | |
|----|---|-----------------------------------|
| P1 |  | Headboard Post = L-1pc = R-1pc |
| P2 |  | Headboard Panel = 1pc |
| P3 |  | Headboard Frames = 1pc |
| P4 |  | Footboard Post = 2pcs |
| P5 |  | Footboard Frames = 1pc |
| P6 |  | Side Rail = 2pcs |
| P7 |  | Center Rail = 2pcs |
| P8 |  | Bed Slats = 14pcs |
| P9 |  | Support Leg = 4pcs |


HARDWARE LIST

| | | |
|---|---|------------------------------|
| A |  | M6 X 40MM JCBC = 4pcs |
| B |  | M6 X 50MM JCBC = 4pcs |
| C |  | M8 X 20MM JCBB = 8pcs |
| D |  | WOOD DOWEL M8 X 30MM = 4pcs |
| E |  | ALLEN KEY M4 = 1pc |
| F |  | ALLEN KEY M5 = 1pc |
| G |  | M4 X 25MM SCREW = 8pcs |
| H |  | ADJUSTER = 4pcs |
| I |  | METAL PIN Ø10 X 100MM = 2pcs |




SW 8620-F/Q/K


4.

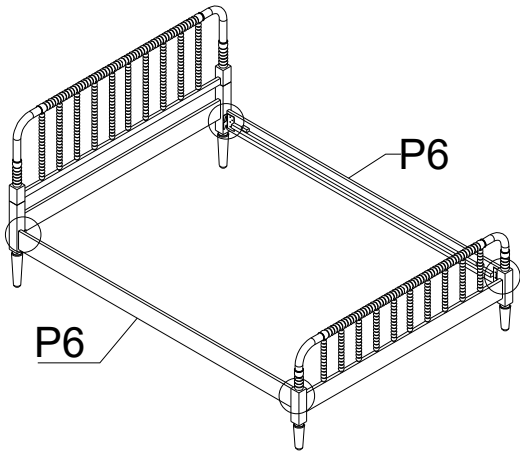

Attach the Side Rail (P6) to the Footboard Frames (P5) and Headboard Post (P1) using hardware:
C = 8pcs
F = 1pc

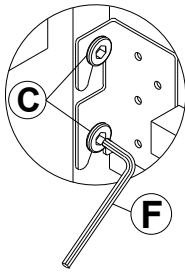


5.

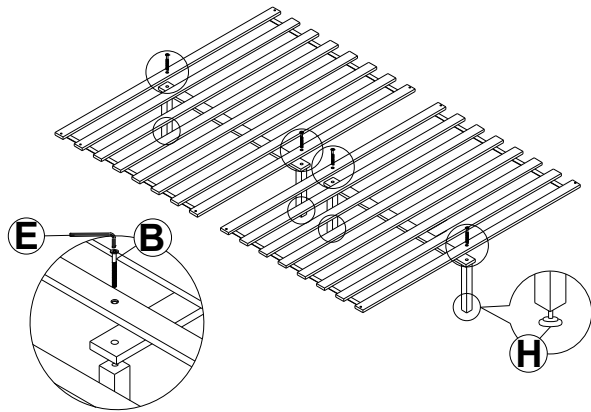


Fix the adjuster (H) to the support leg (P9) using hardware:
H = 4pcs

Attach the support leg (P9) to the center rail (P7) and bed slats (P8) using hardware:
B = 4pcs
E = 1pc

6.

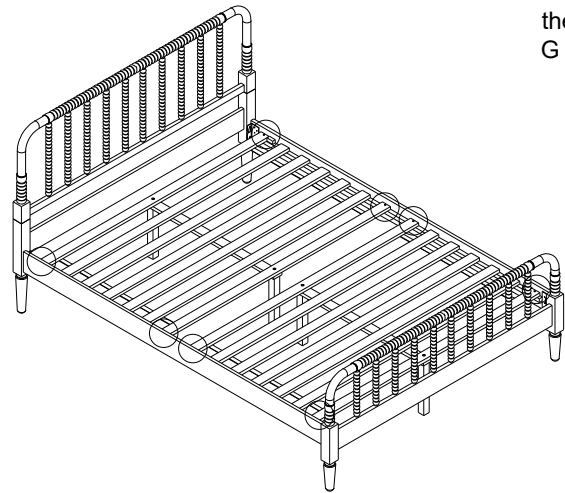


Lay the bed slats (P8) between the side rail (P6) using hardware:
G = 8pcs

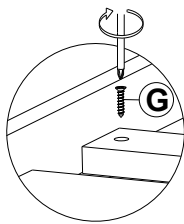

****Apply pressure with your knee to the side rail whilst attaching the slats to ensure that the slats are flush against the inside of side rail****










ASSEMBLY COMPLETE

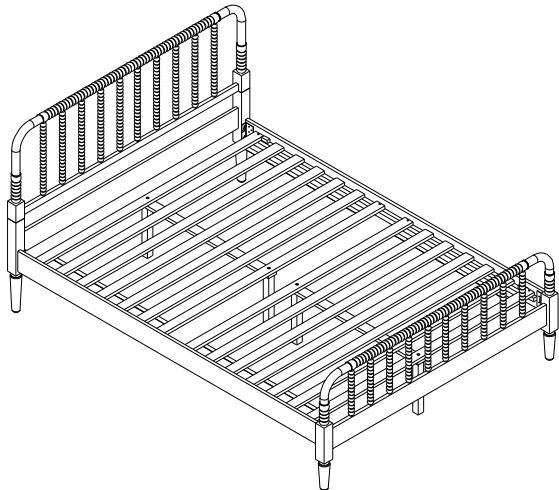





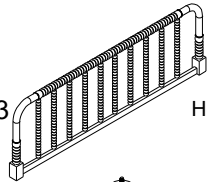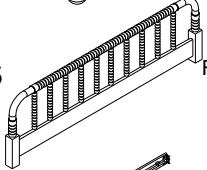




WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST

| | | | | |
|----|---|------------------|---|----------------|
| P1 |  | Headboard Post | = | L-1pc R-1pc |
| P2 |  | Headboard Panel | = | 1pc |
| P3 |  | Headboard Frames | = | 1pc |
| P4 |  | Footboard Post | = | 2pcs |
| P5 |  | Footboard Frames | = | 1pc |
| P6 |  | Side Rail | = | 2pcs |
| P7 |  | Center Rail | = | 2pcs |
| P8 |  | Bed Slats | = | 14pcs |
| P9 |  | Support Leg | = | 4pcs |

HARDWARE LIST

| | | | | |
|---|---|----------------------|---|------|
| A |  | M6 X 40MM JCBC | = | 4pcs |
| B |  | M6 X 50MM JCBC | = | 4pcs |
| C |  | M8 X 20MM JCBB | = | 8pcs |
| D |  | WOOD DOWEL M8 X 30MM | = | 4pcs |
| E |  | ALLEN KEY M4 | = | 1pc |
| F |  | ALLEN KEY M5 | = | 1pc |
| G |  | M4 X 25MM SCREW | = | 8pcs |
| H |  | ADJUSTER | = | 4pcs |
| I |  | METAL PIN 10 X 100MM | = | 2pcs |

