


SW 8632 - F/Q/K


1.

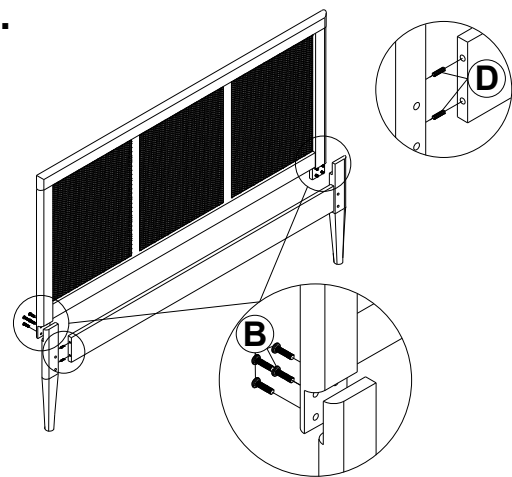

Attach the headboard bottom rail (P3) to the headboard post (P2) using hardware:
D = 4pcs


Attach the headboard post (P2) to the headboard (P1) using hardware:
B = 8pcs
E = 1pc

2.

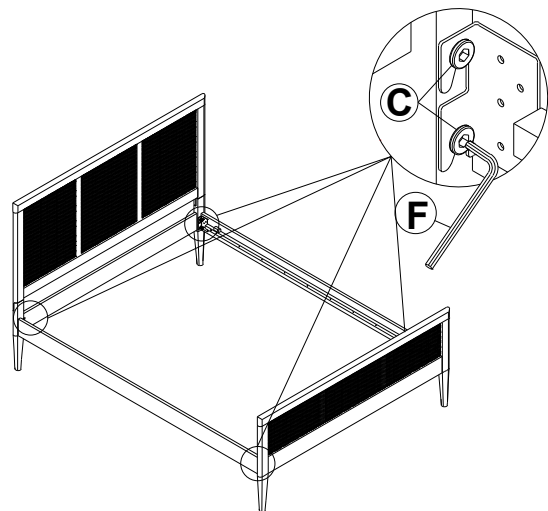

Attach the side rail (P5) to the headboard post (P2) and footboard (P4) using hardware:
C = 8pcs
F = 1pc


3.

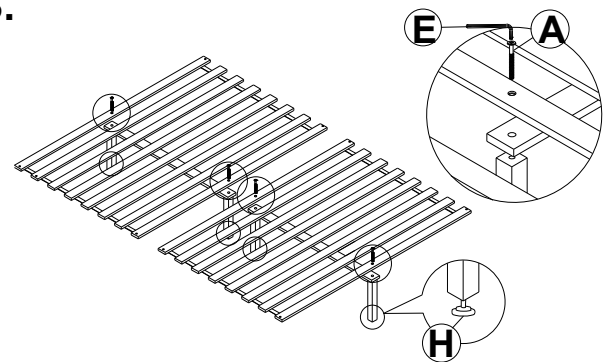

Fix the adjuster (H) to the support leg (P8) using hardware:
H = 4pcs

Attach the support leg (P8) to the center rail (P6) and bed slats (P7) using hardware:
A = 4pcs
E = 1pc

4.

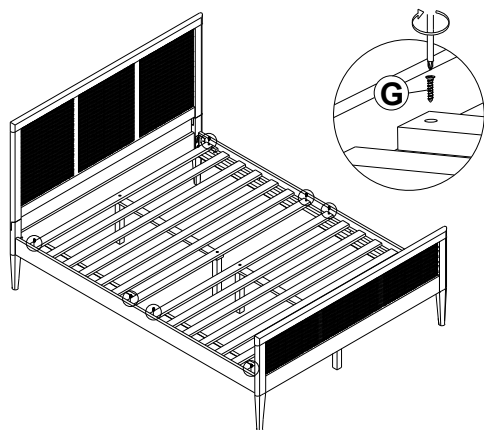









Lay the bed slats (P7) between the side rail (P5) using hardware:
G = 8pcs

****Apply pressure with your knee to the side rail whilst attaching the slats to ensure that the slats are flush against the inside of side rail****





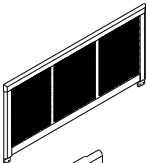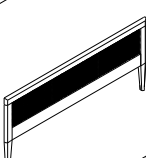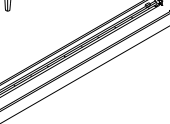



WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST

P1		Headboard	=	1pc
P2		Headboard Post	=	L-1pc R-1pc
P3		Headboard Bottom Rail	=	1pc
P4		Footboard	=	1pc
P5		Side Rail	=	2pcs
P6		Center Rail	=	2pcs
P7		Bed Slats	=	14pcs
P8		Support Leg	=	4pcs

HARDWARE LIST

A		M6 X 50MM JCBC	=	4pcs
B		M6 X 25MM JCBC	=	8pcs
C		M8 X 20MM JCBB	=	8pcs
D		WOOD DOWEL M8 X 30MM	=	4pcs
E		ALLEN KEY M4	=	1pc
F		ALLEN KEY M5	=	1pc
G		M4 X 25MM SCREW	=	8pcs
H		ADJUSTER	=	4pcs

