
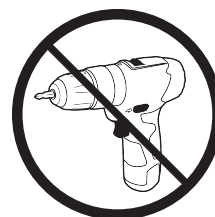
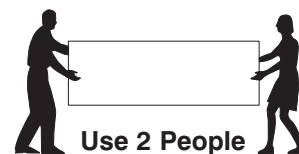


0246-2 Canopy Queen Bed

Assembly Instructions

WI-1124


1 Assembled View

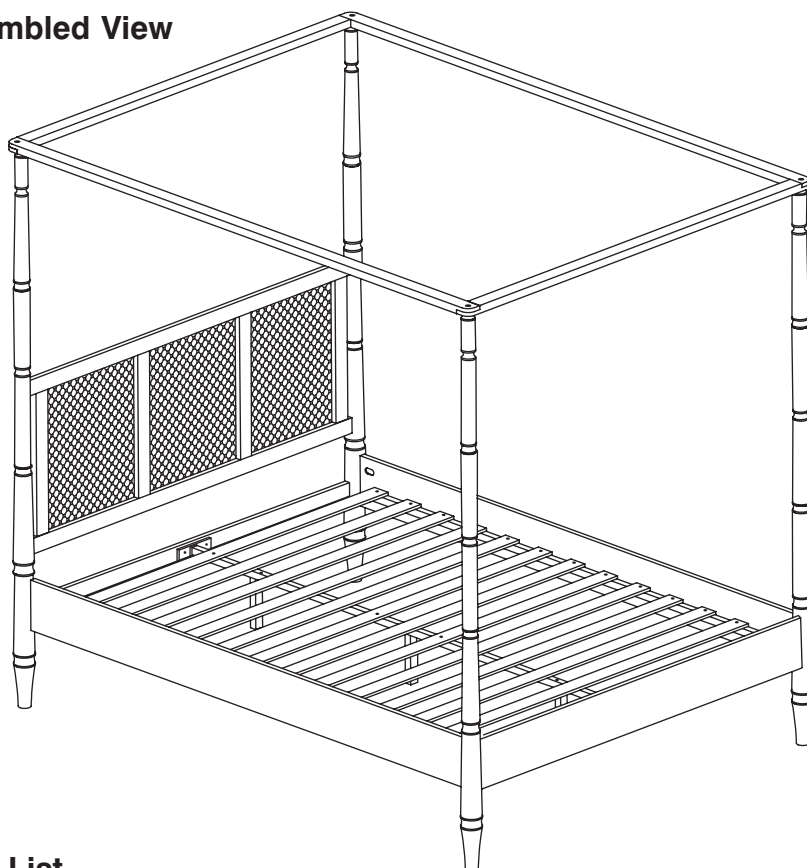

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box A:

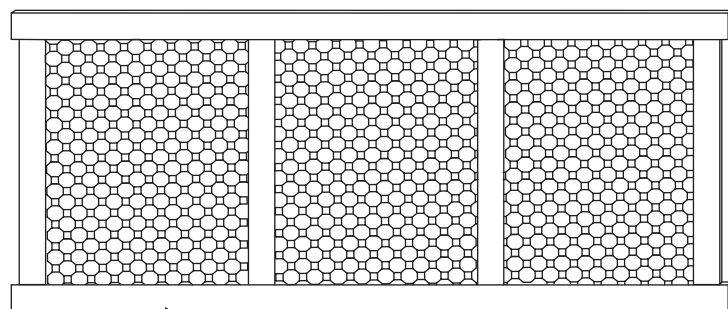

A Headboard Panel x 1




B Footboard Panel x 1



C Headboard Support x 1



D Top Bar (Short) x 2

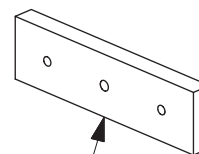

E

Headboard/Footboard Support Bar x 2





0246-2 Canopy Queen Bed

Assembly Instructions

WI-1124

3 Parts List

Parts in Box B:

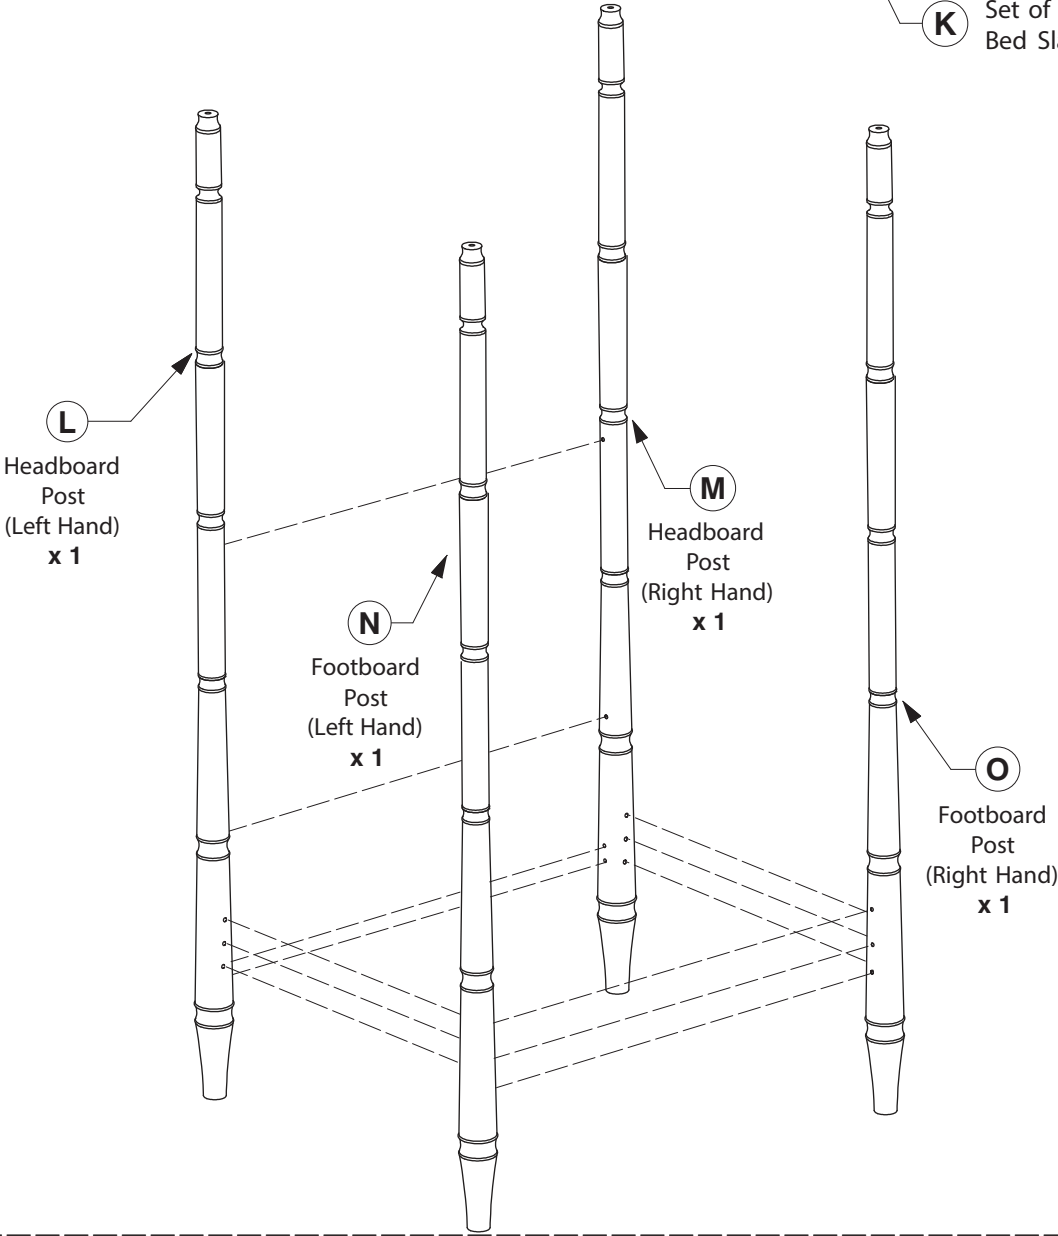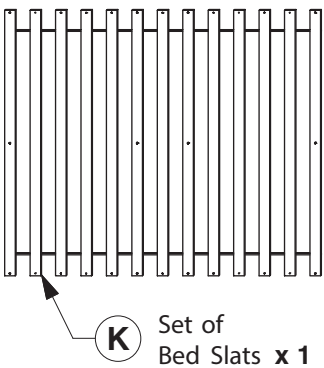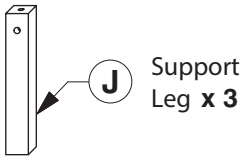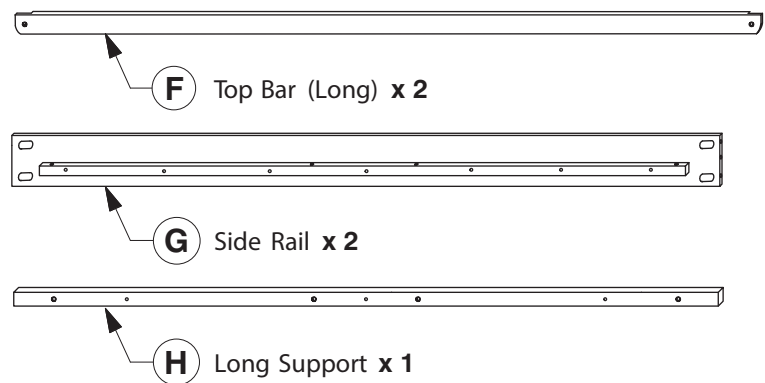


0246-2 Canopy Queen Bed


Assembly Instructions

WI-1124

4 Hardware List

- | | | | |
|--|--|--|--|
| 
1 M6 x 15mm JCB
x 4 | 
2 M6 x 30mm JCB
x 4 | 
3 M6 x 40mm JCB
x 32 | 
4 M6 x 50mm JCB
x 4 |
| 
5 M6 x 90mm JCB
x 3 | 
6 Wood Screw
(M4 x 32mm) x 18 | 
7 Center Rail
Bracket x 2 | 
8 Barrel Nut
x 3 |
| 
9 Wood Dowel
(M10 x 40mm) x 6 | 
10 Adjustable
Foot x 3 | 
11 Allen Key
x 1 | |

5 Assemble the Support Leg (J) to the Long Support (H).

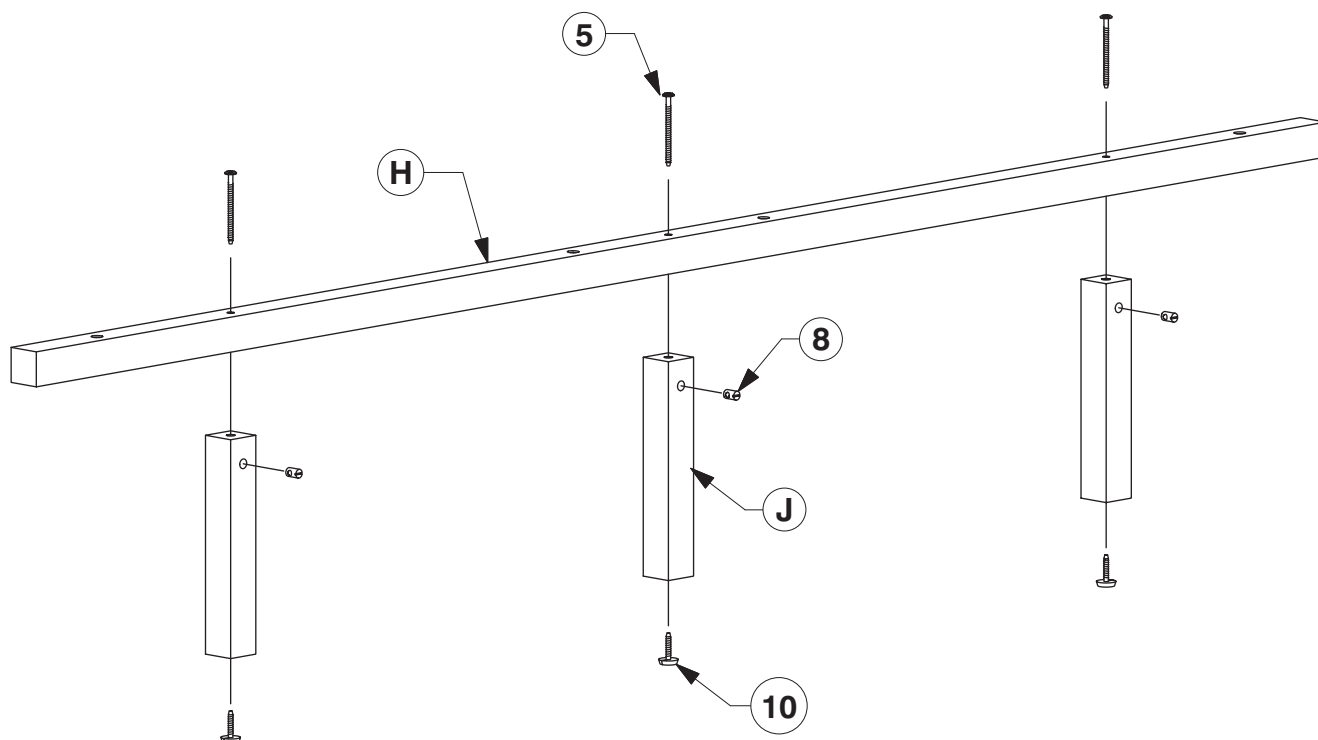


0246-2 Canopy Queen Bed


Assembly Instructions

WI-1124

- 6** Attach the Headboard Post (L & M) to the Headboard Panel (A) and Headboard Support (C).

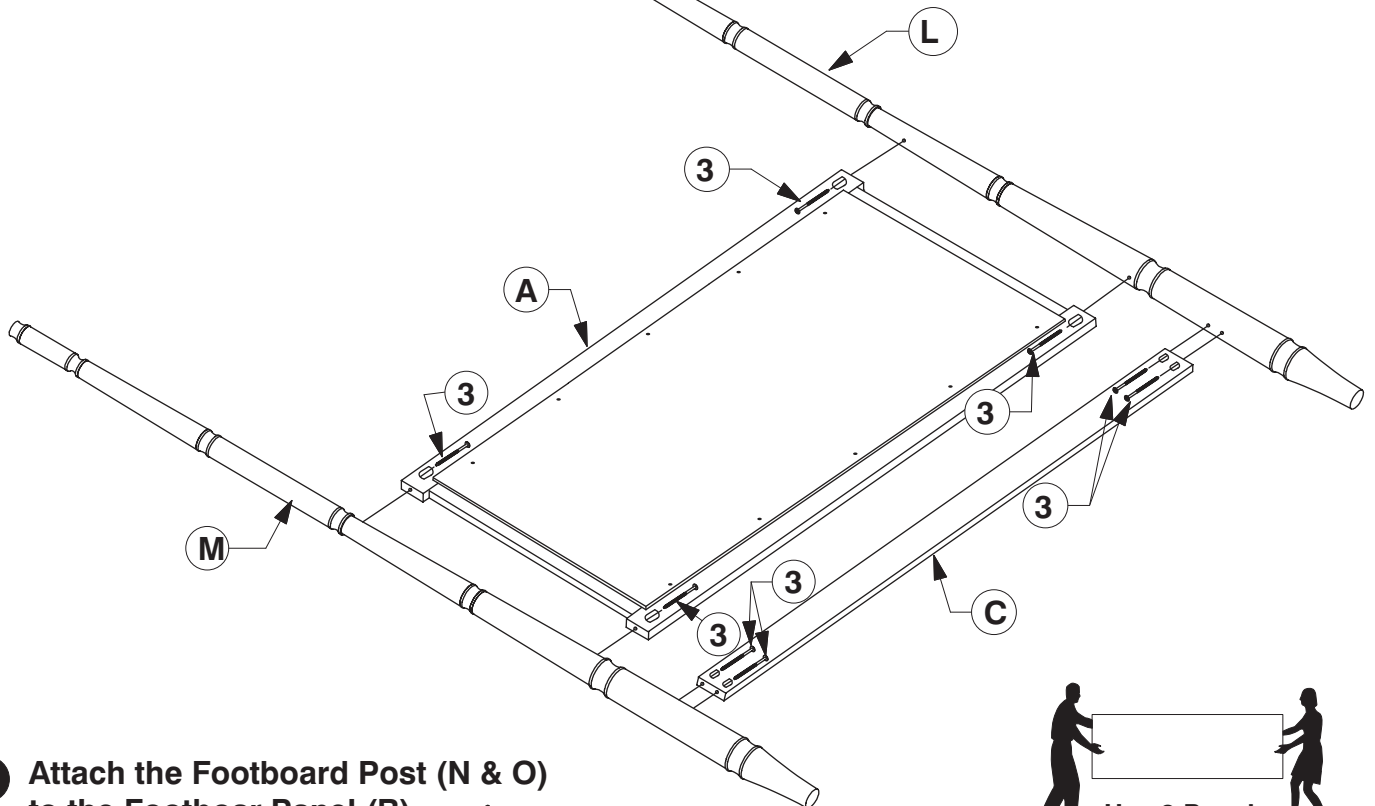

- 7** Attach the Footboard Post (N & O) to the Footboard Panel (B).

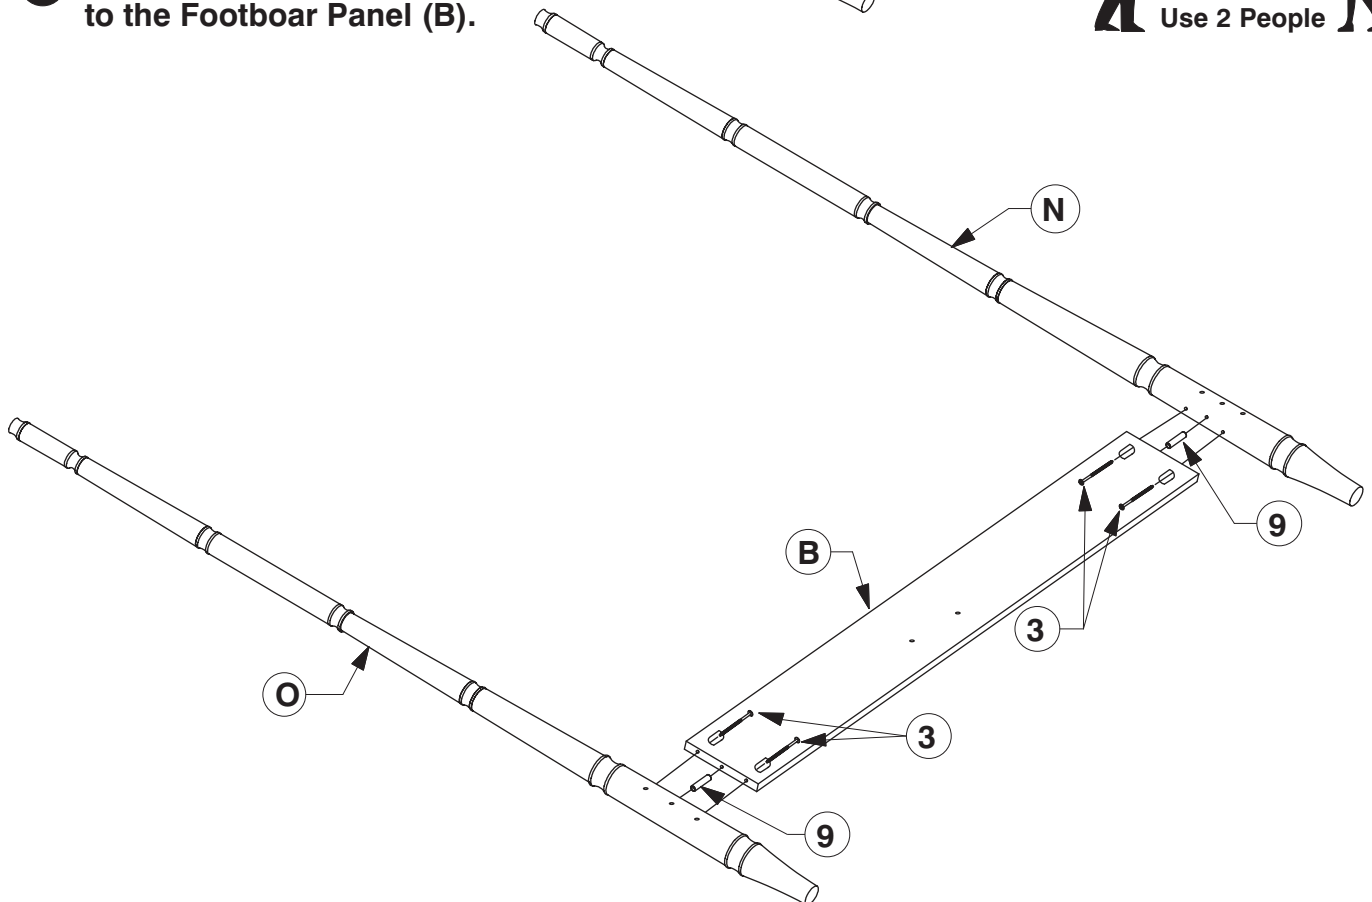


0246-2 Canopy Queen Bed


Assembly Instructions

WI-1124

- 8** Fit the Center Rail Bracket (7) to the Headboard Support (C).

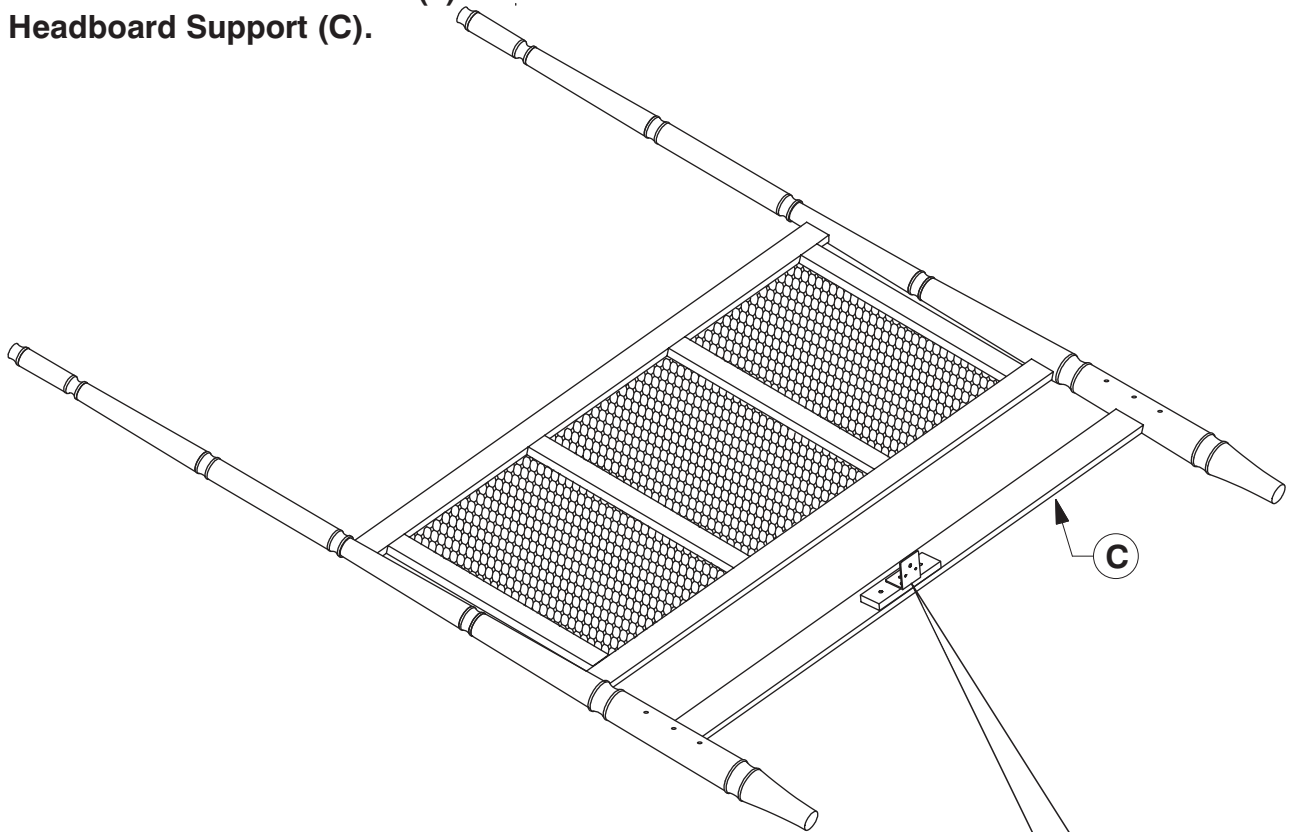

- 9** Fit the Center Rail Bracket (7) to the Footboard Panel (B).


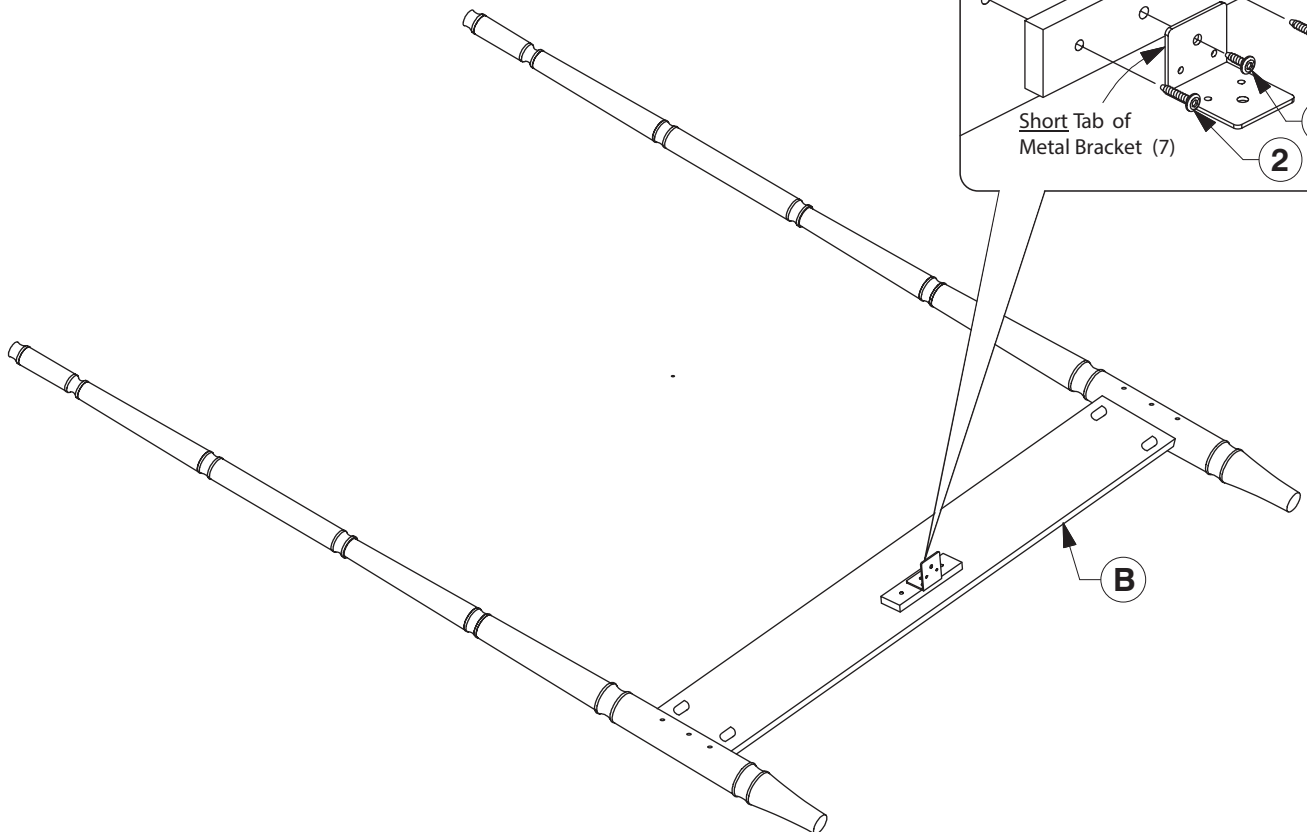


0246-2 Canopy Queen Bed

Assembly Instructions

WI-1124

- 10** Assemble the Side Rail (G) to the Head / Footboard.

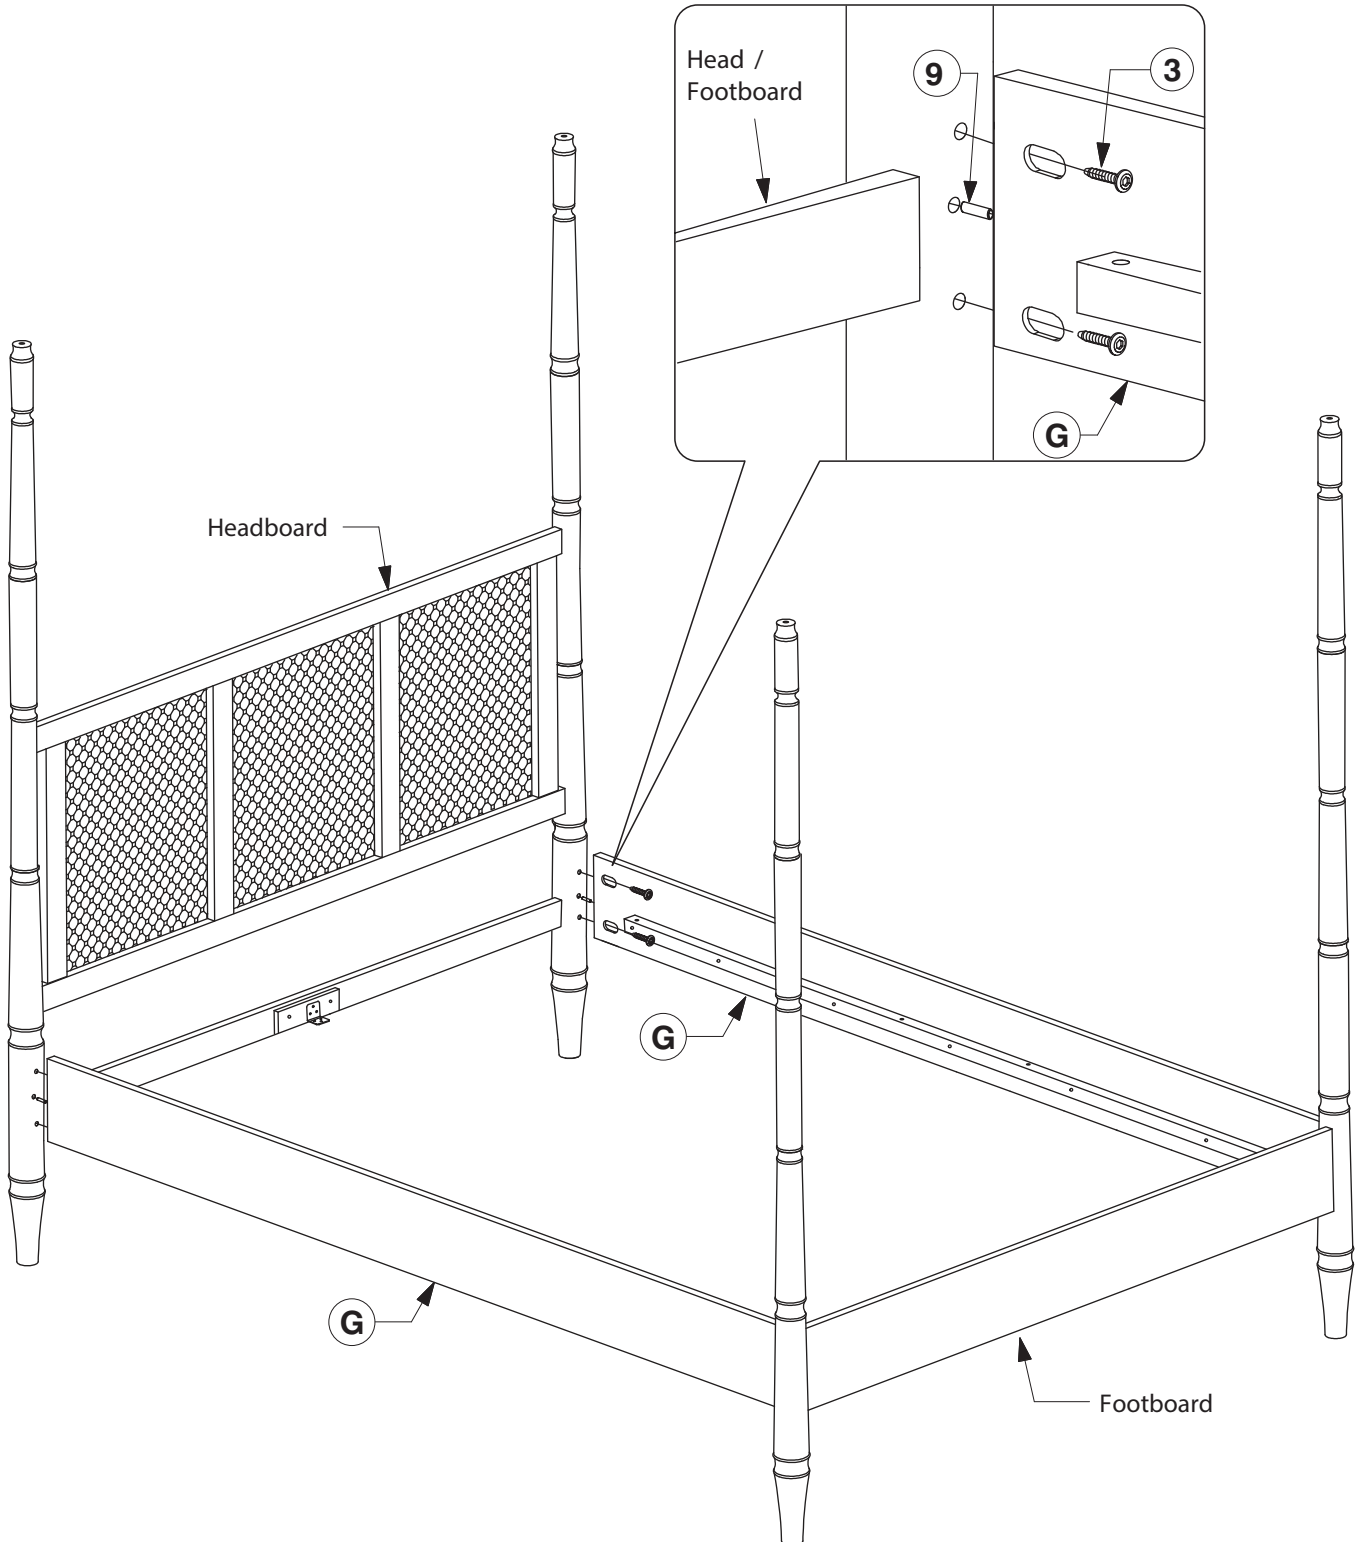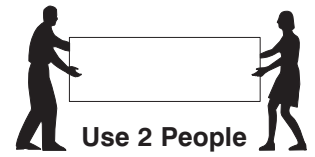


0246-2 Canopy Queen Bed

Assembly Instructions

WI-1124

- 11** Bolt the Long Support (H) to the Center Rail Brackets on the Headboard/Footboard.

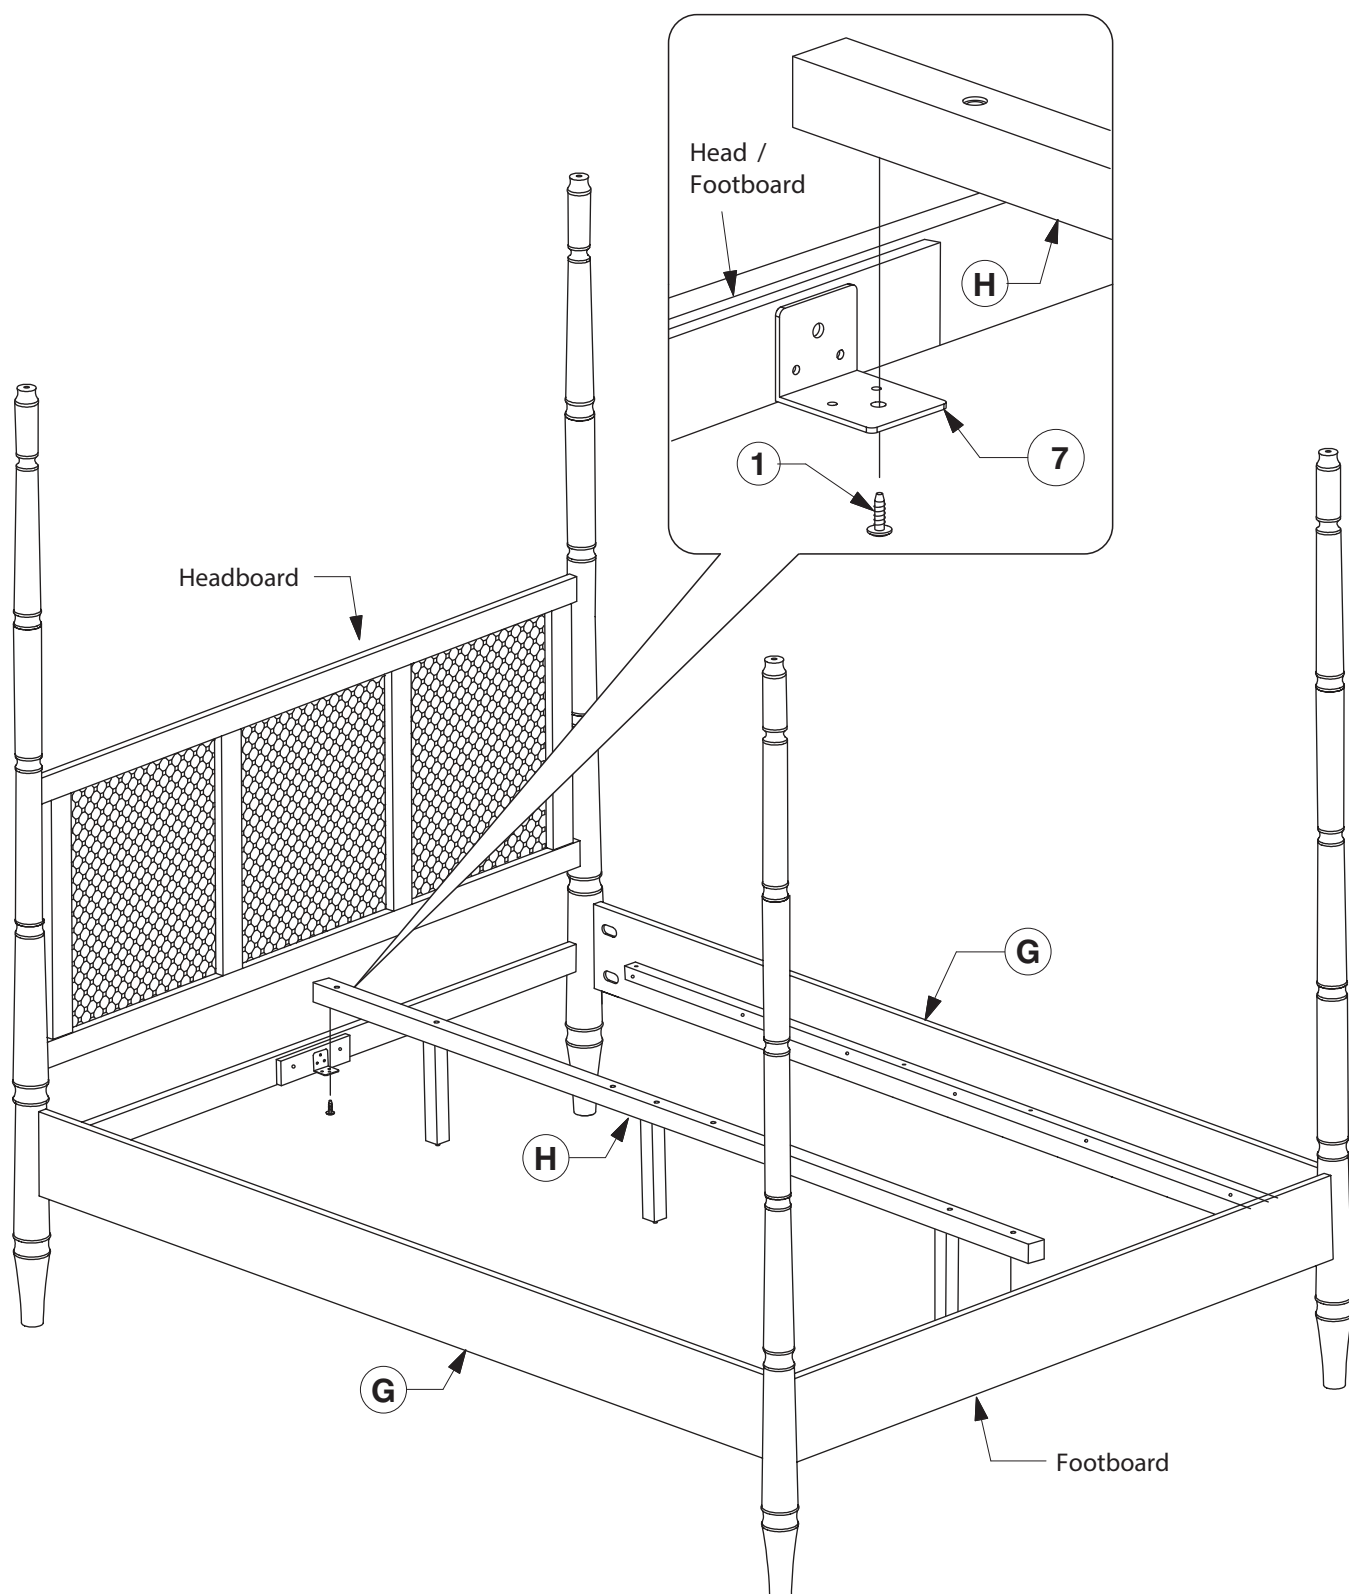


0246-2 Canopy Queen Bed

Assembly Instructions

WI-1124

- 12** Bolt & Screw the Bed Slats (K) to the Side Rail (G).

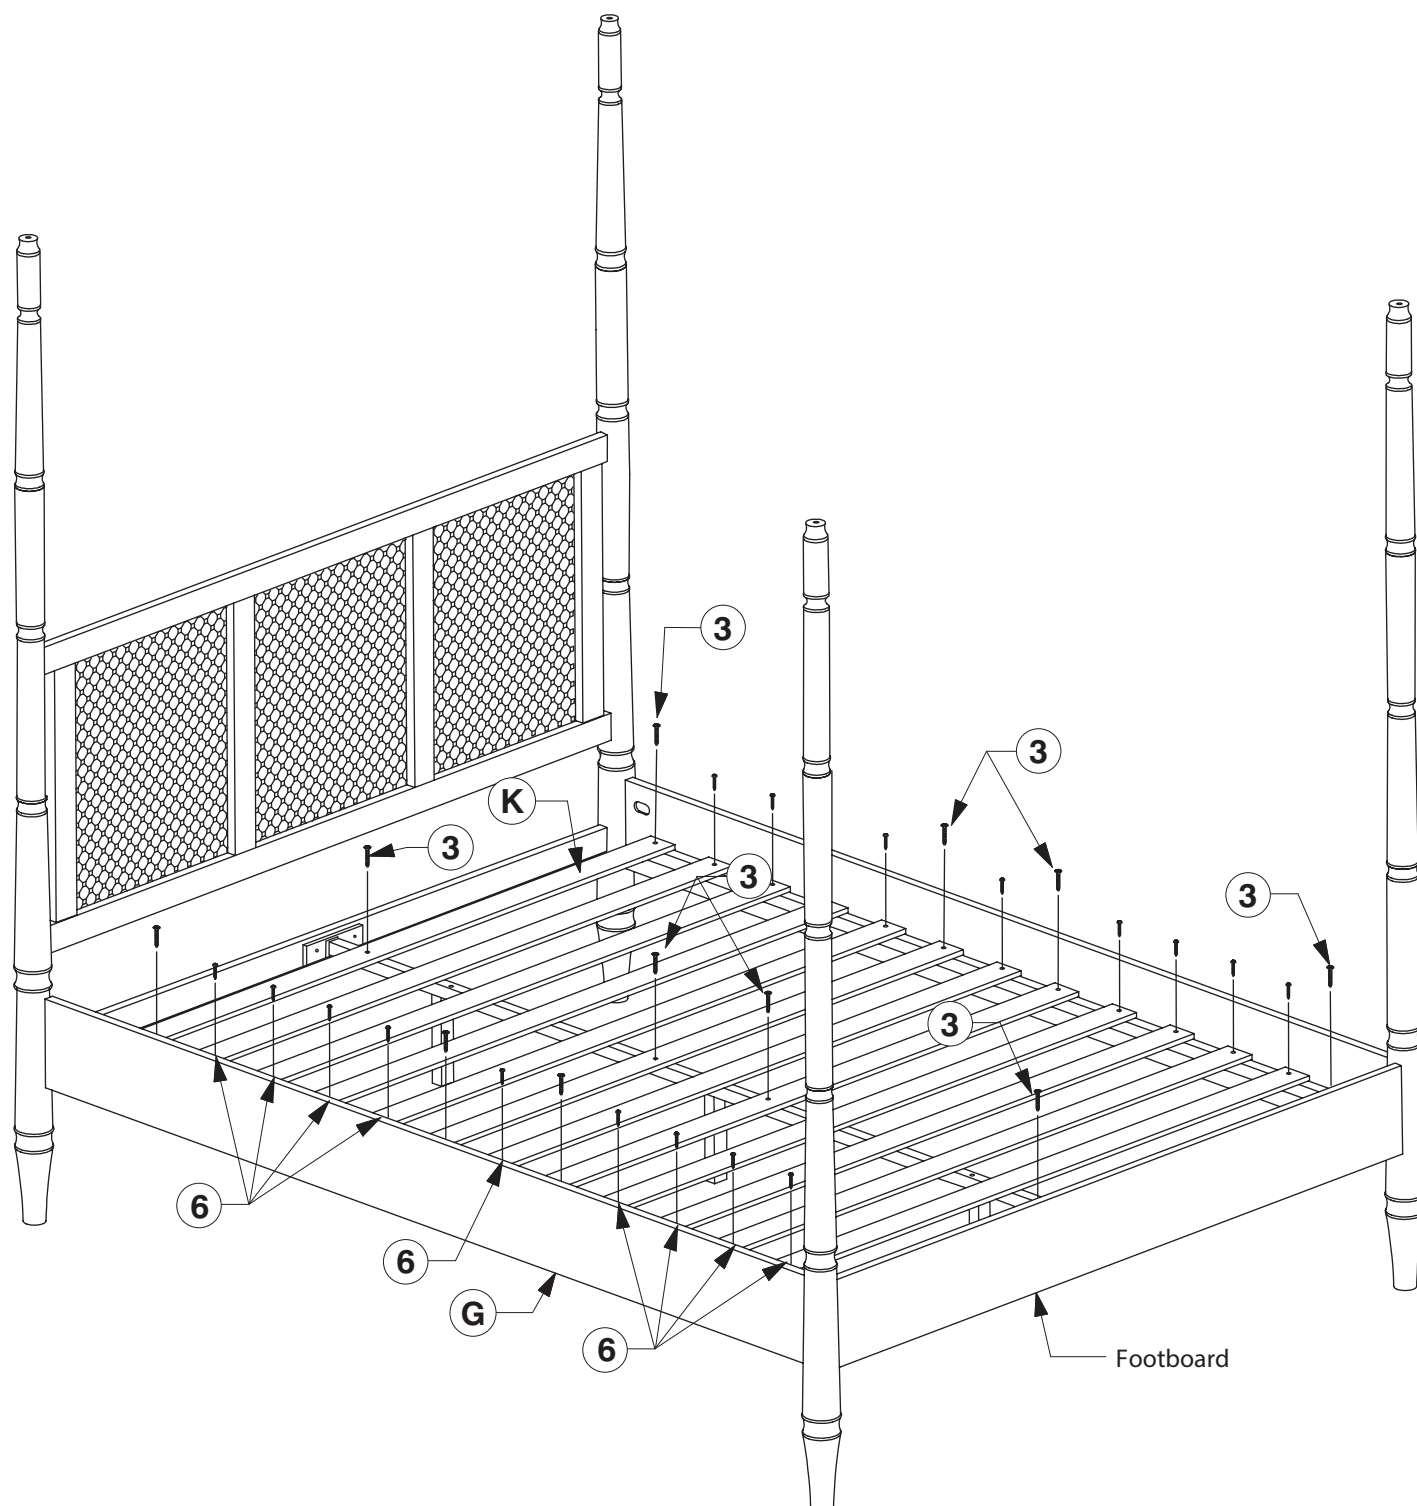


0246-2 Canopy Queen Bed

Assembly Instructions

WI-1124


- 13** Fit the Top Bar- Short & Long (D & F) on top of the Headboard and Footboard Post.

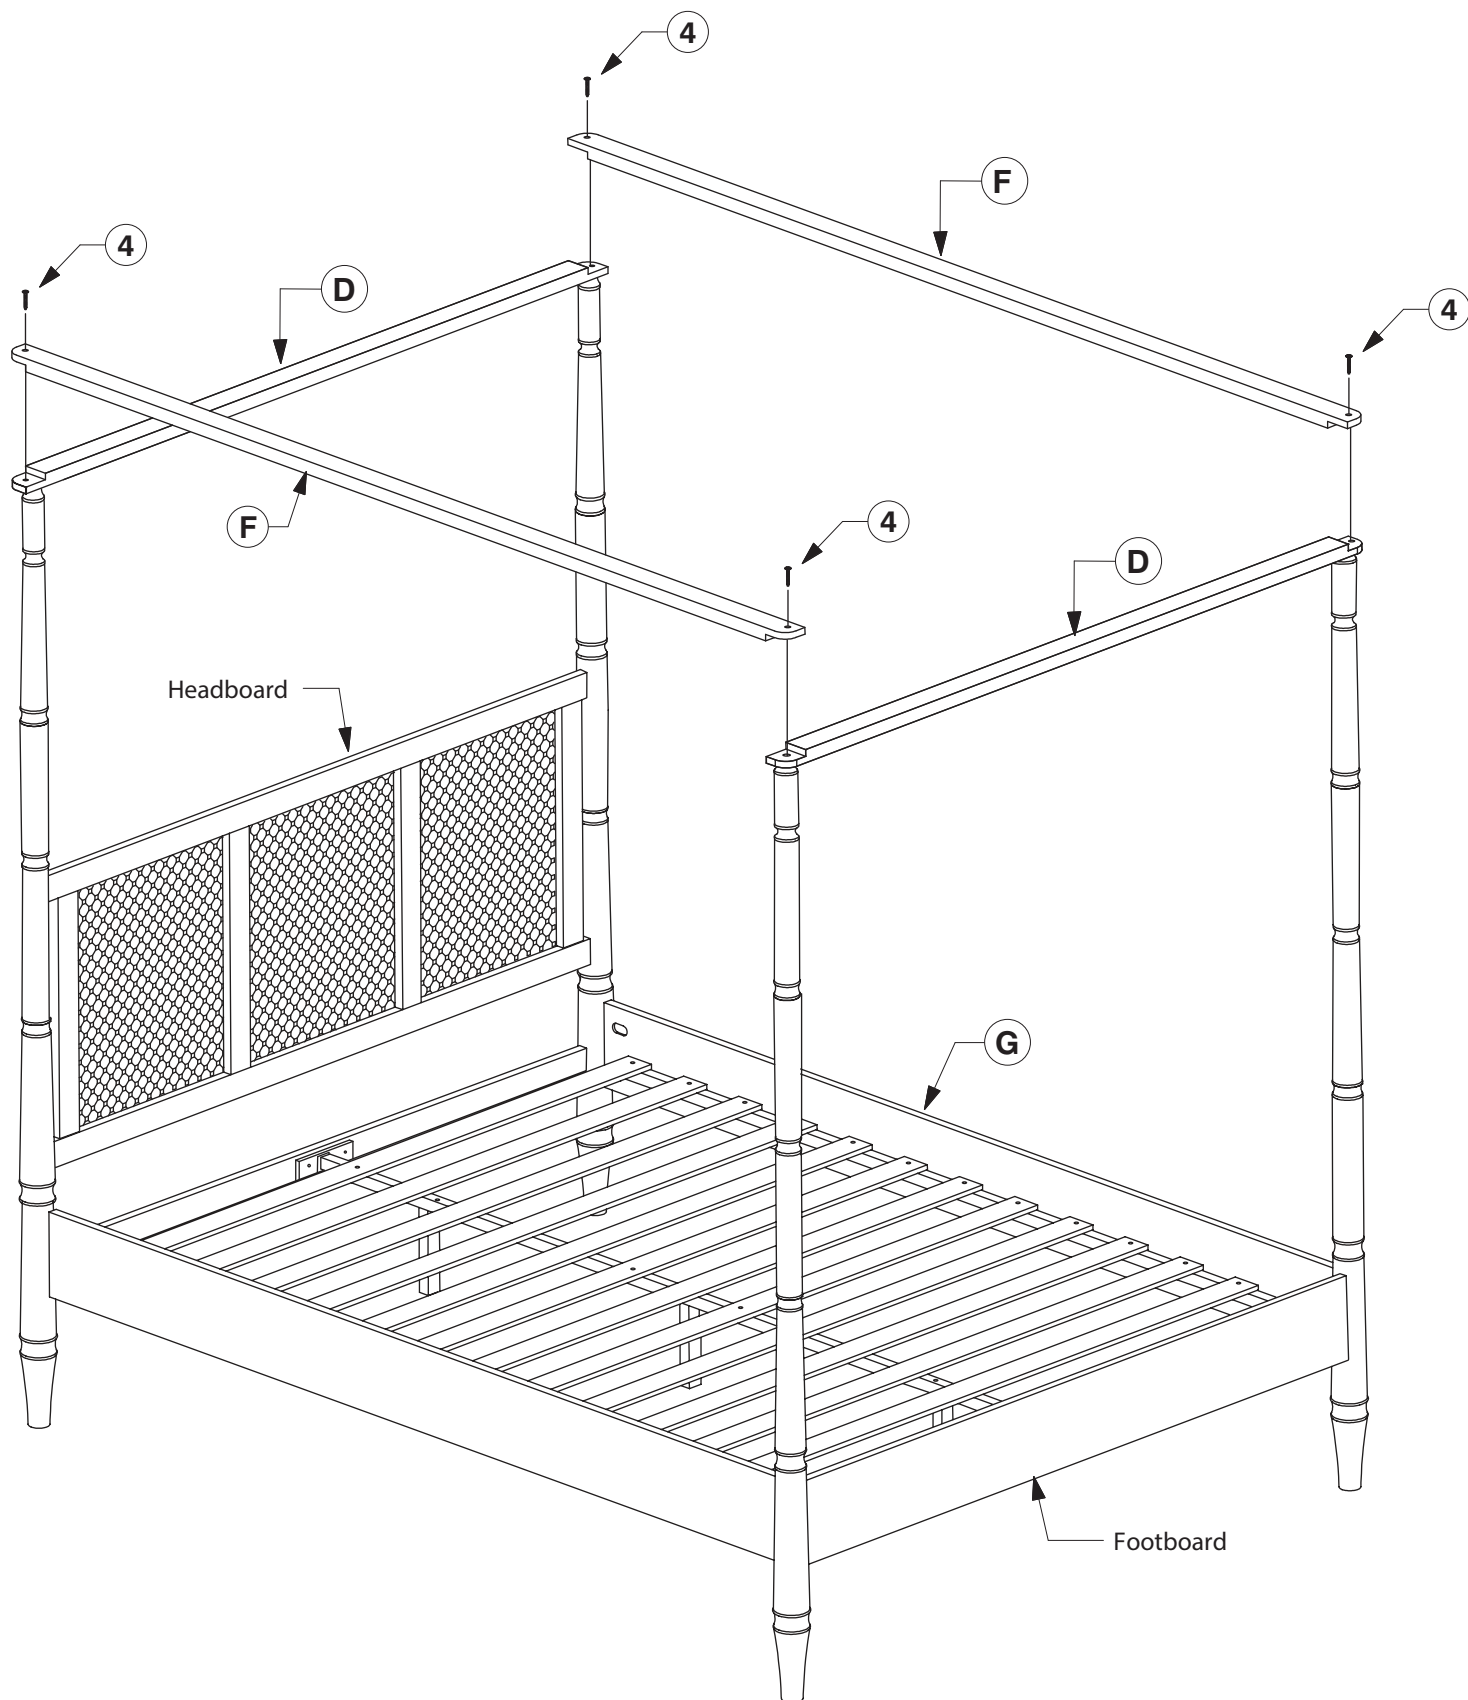

9014 6 Drawer Dresser


Assembly Instructions

WI-1024

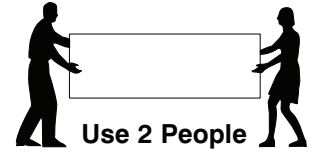

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

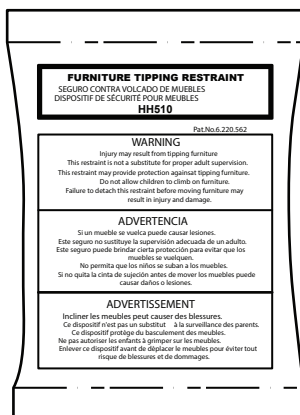

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9014 6 Drawer Dresser

Assembly Instructions


WI-1024

1 Parts List

Parts in Box A:




A Top Panel x 1

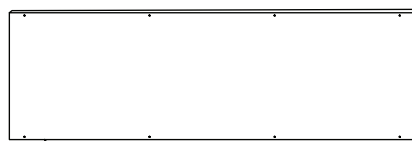

B Back Panel (Wider) x 1




C Drawer Bottom x 6




D Upper Support Bars x 2




E Back Panel (Narrow) x 1




F Drawer Face x 6



G Bottom Front Support Bars x 1



H Bottom Rear Support Bar x 1




J Drawer Back x 6




K Drawer Rail x 6


Parts in Box B:

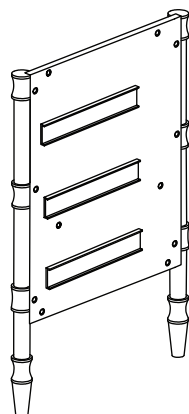

L Side Panel (Left Hand) x 1

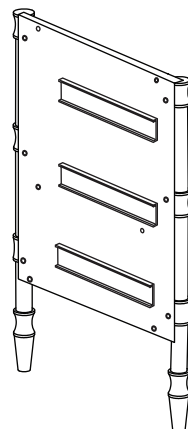


M Side Panel (Right Hand) x 1

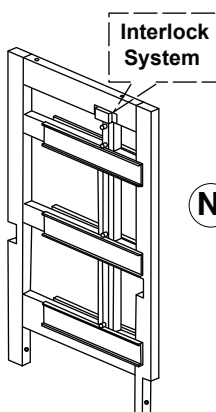


N Center Frame x 1

Parts for LEFT Side Drawer

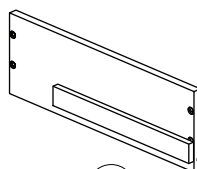


O LEFT Drawer Side (Left Hand) x 3

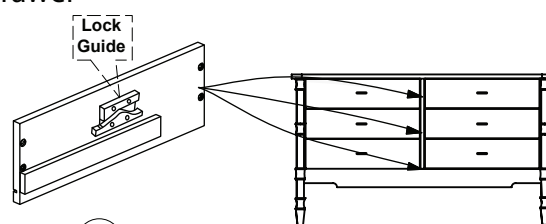


P LEFT Drawer Side (Right Hand) x 3

Parts for RIGHT Side Drawer

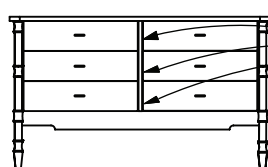

Q RIGHT Drawer Side (Left Hand) x 3

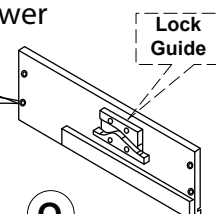





R RIGHT Drawer Side (Right Hand) x 3

9014 6 Drawer Dresser

Assembly Instructions

WI-1024



2 Hardware List

- | | | | |
|---|---|---|---|
|  |  |  |  |
| 1 M6 x
15mm JCB
x 24 | 2 M6 x
30mm JCB
x 4 | 3 M6 x
60mm JCB
x 2 | 4 'L' Bracket
(5005-3) x 12 |
|  |  |  |  |
| 5 Wood Screw
(M4 x 20mm)
x 24 | 6 Wood Screw
(M4 x 25mm)
x 60 | 7 Wood Screw
(M4 x 32mm)
x 16 | 8 M6 x 25mm
Wood Dowel
x 24 |
|  |  |  | |
| 9 Handle(3321-64)
x 6 | 10 M4 x 20mm
Wood Screw x 12 | 11 Allen Key
x 1 | |

3 Assemble the Drawers.

STEP 3.1

LEFT

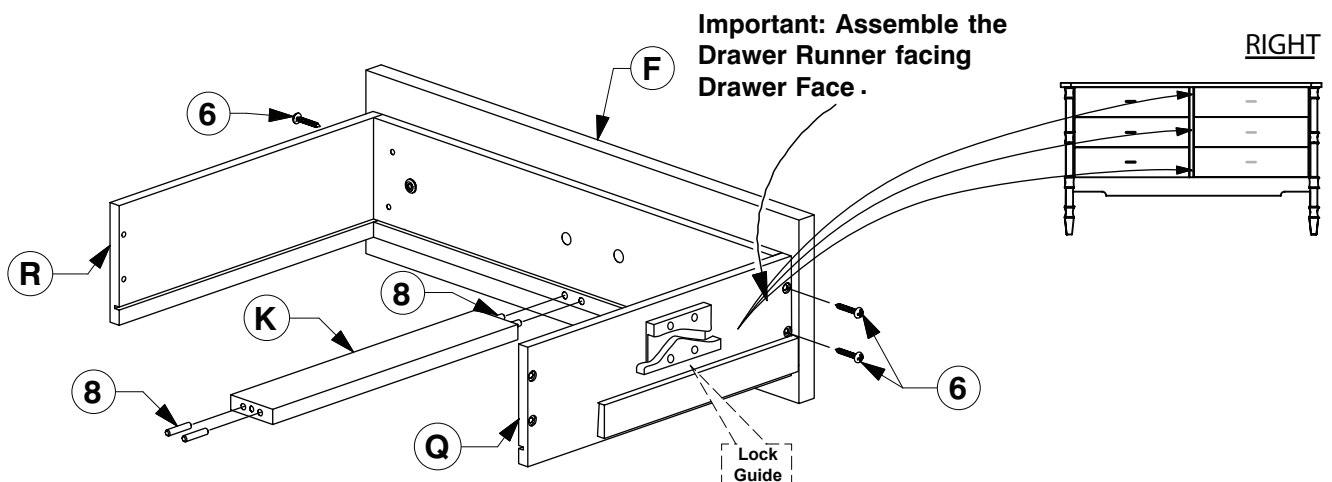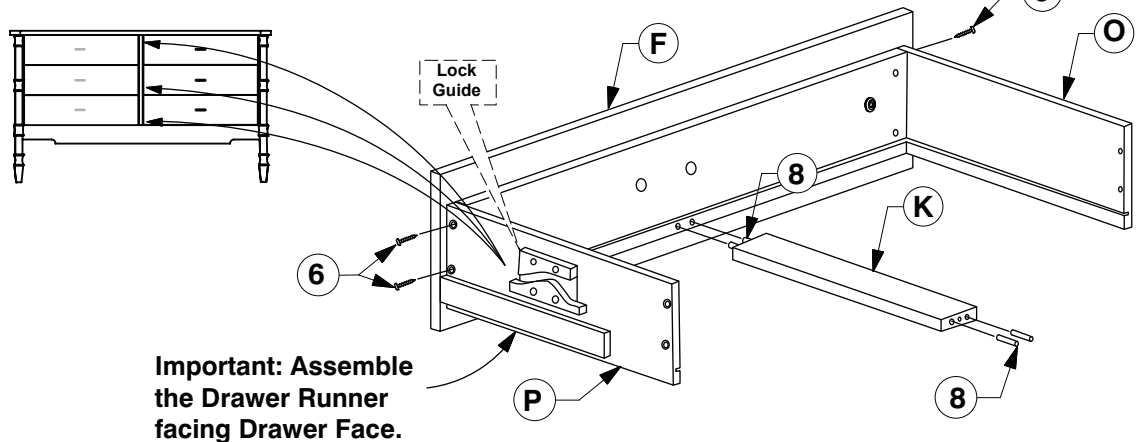

9014 6 Drawer Dresser

Assembly Instructions


WI-1024

3 Assemble the Drawers.

STEP 3.2


x6

* 3 Assemble the left and right drawers as shown below

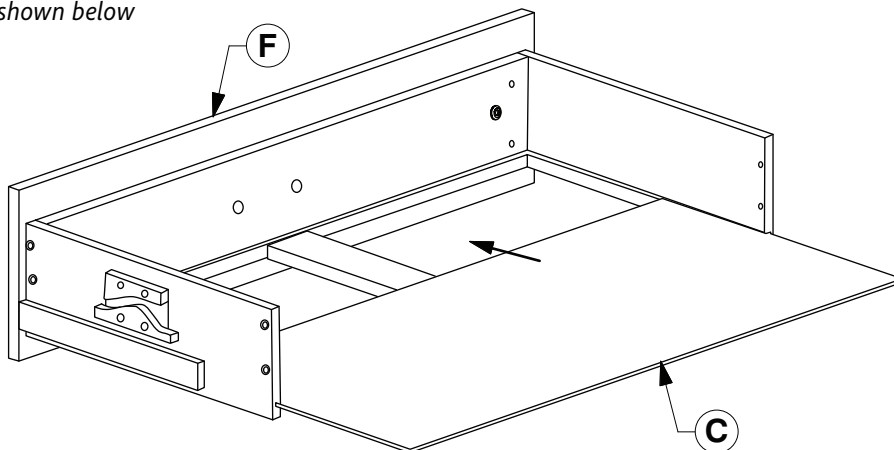


STEP 3.3

x6

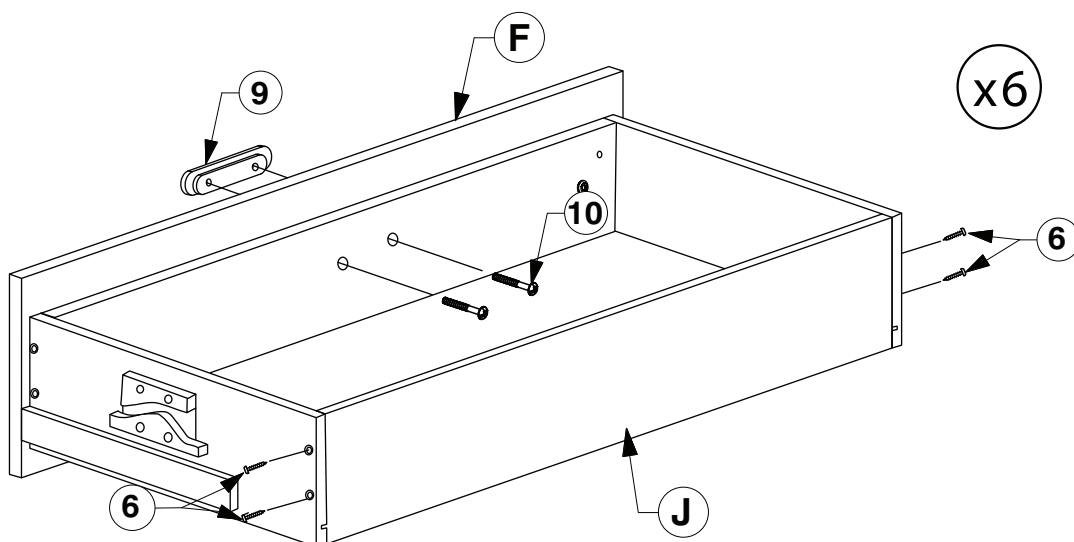

STEP 3.4

x6

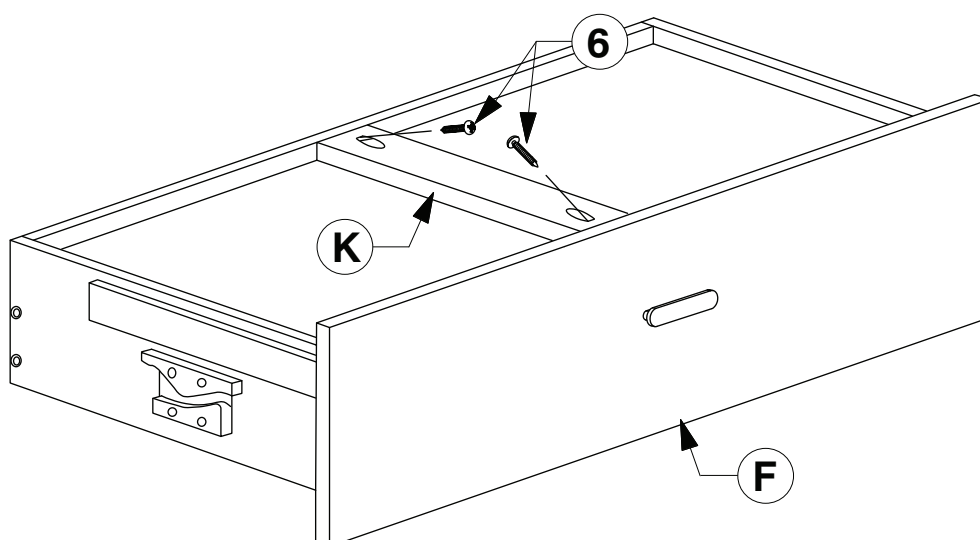


9014 6 Drawer Dresser


Assembly Instructions

WI-1024

4 Fit the 'L' Bracket to the Side Panel (L & M).

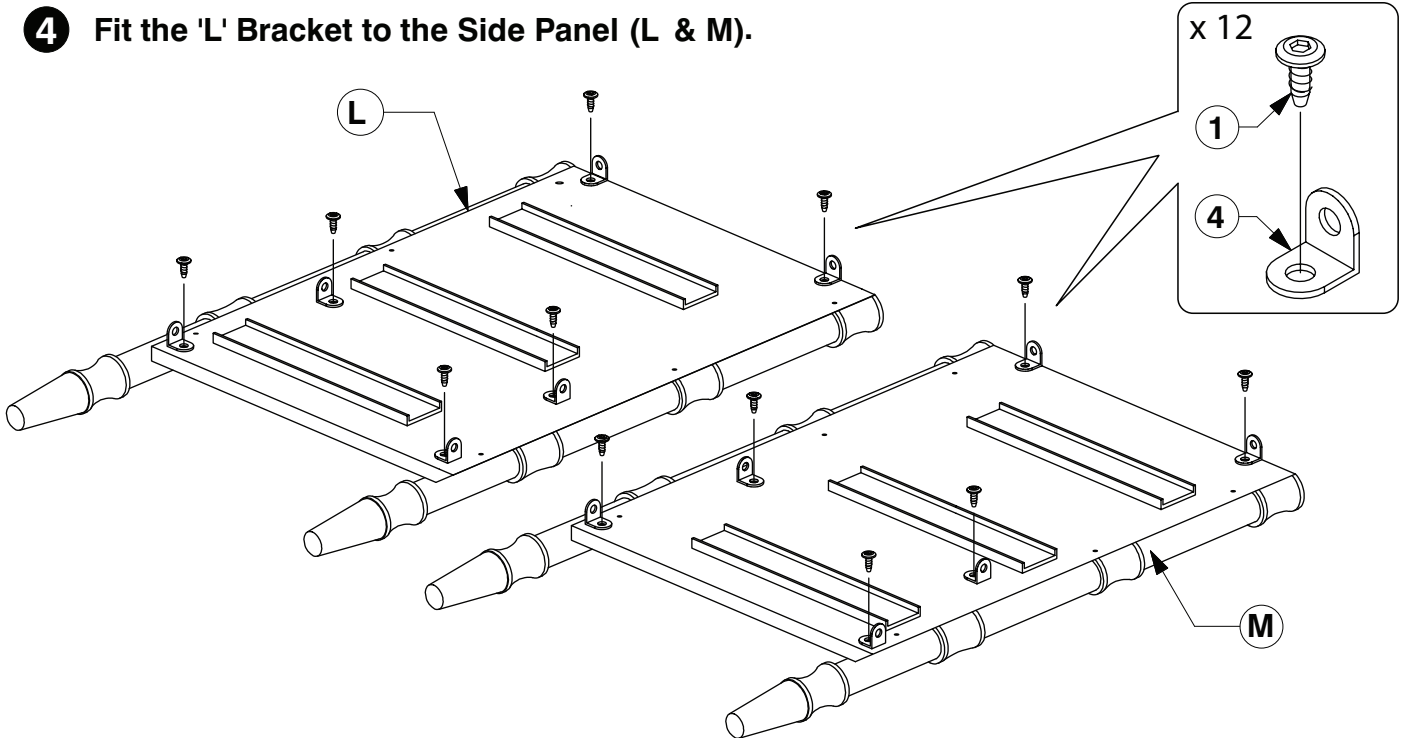

5 Fit the Side Panel- Right Hand (M) & Center Frame (N) to the Top Panel (A).

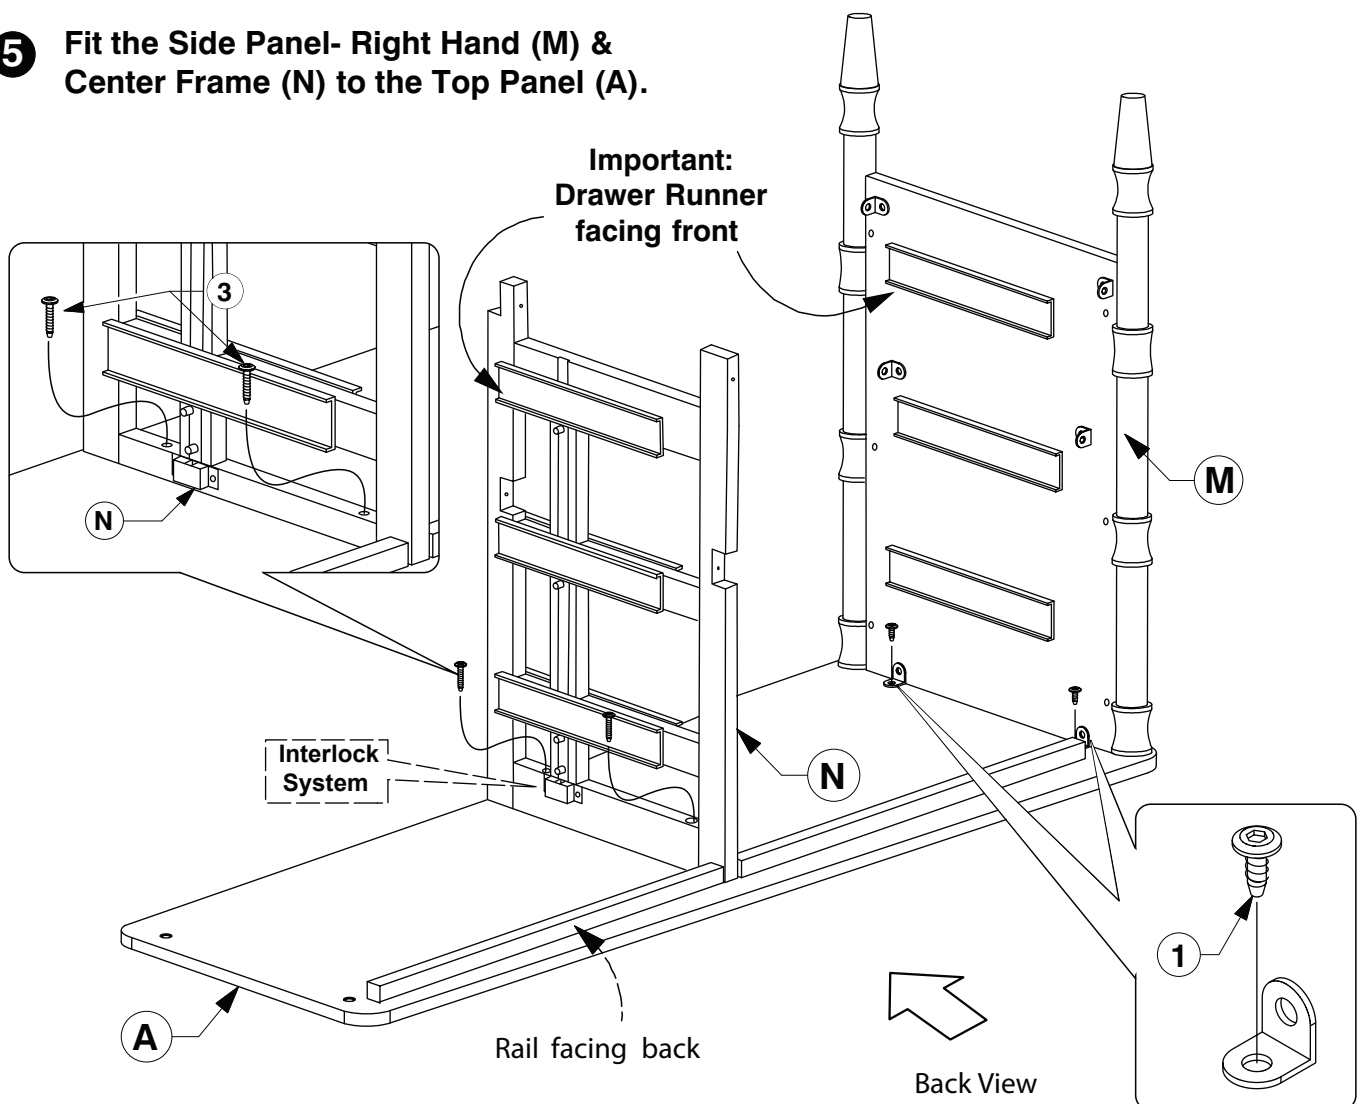


9014 6 Drawer Dresser


Assembly Instructions

WI-1024

- 6** Fit the Upper Support Bar (D) and Bottom Front & Rear Support Bars (G & H) to the Side Panel-Right Hand (M) & Center Frame (N) as shown.

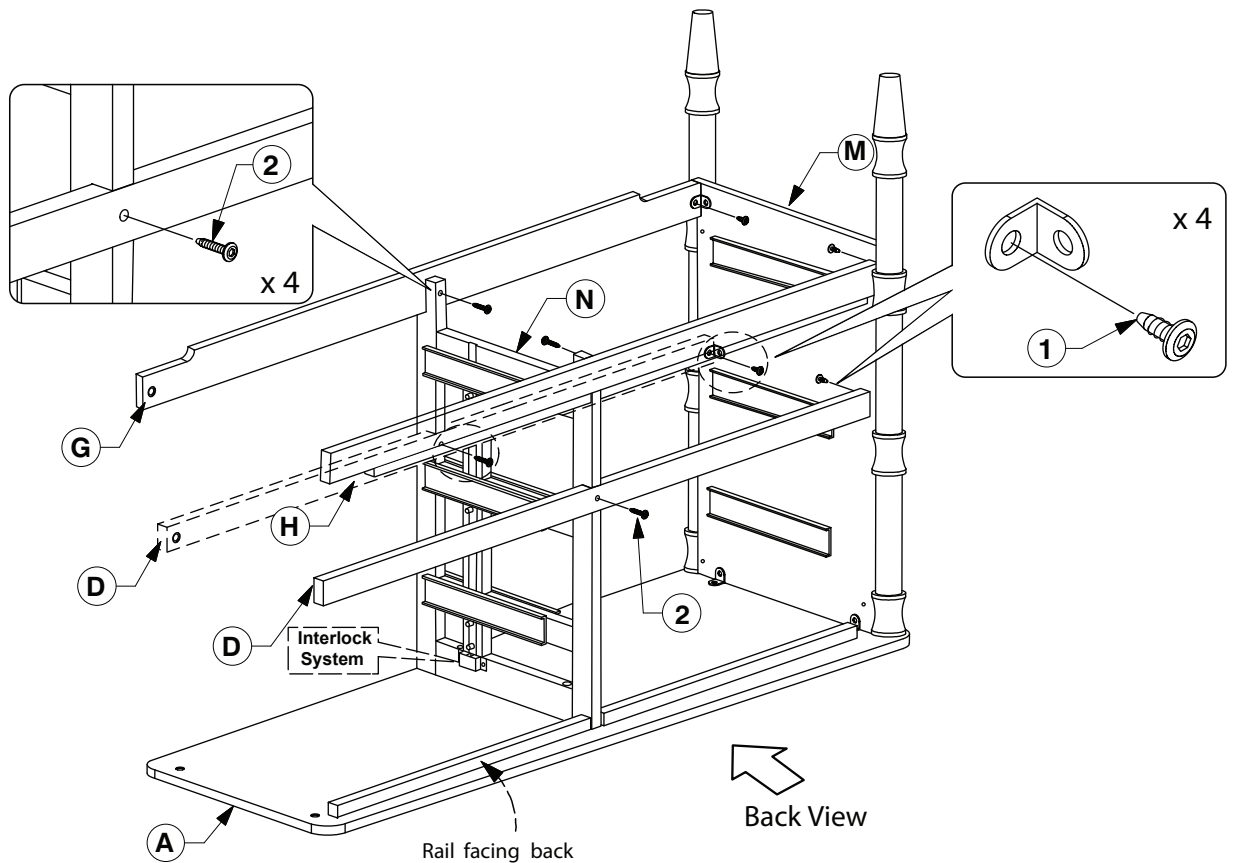

- 7** Fit the other side of Side Panel- Left Hand (L) to the Top Panel (A) & Support Bar Upper & Bottom (D & G & H).

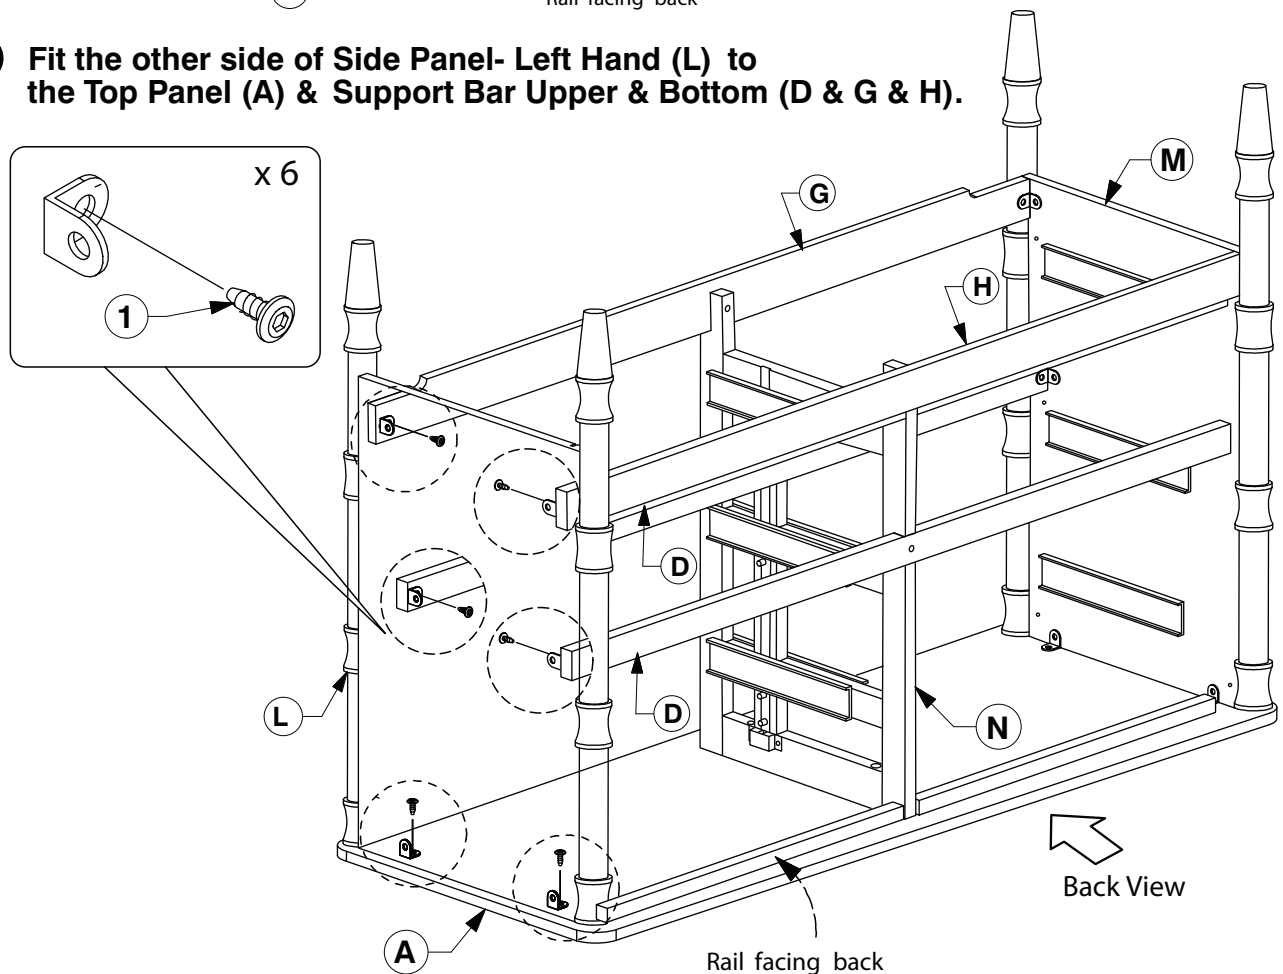


9014 6 Drawer Dresser


Assembly Instructions

WI-1024

- 8** Attached the Back Panel- wider (B) to the back of the Frame.

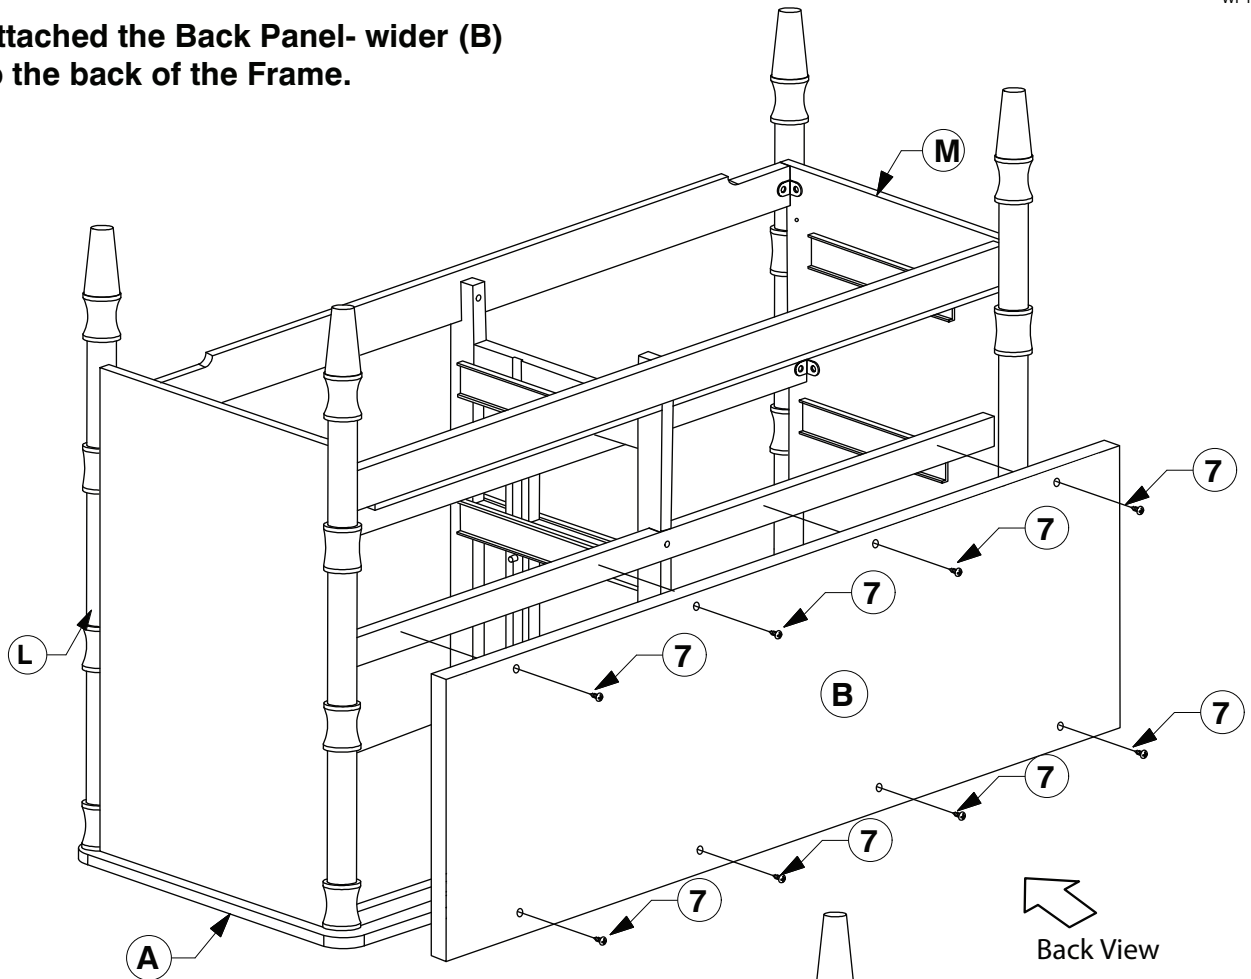

- 9** Attached the Back Panel- narrow (E) to the back of the Frame.

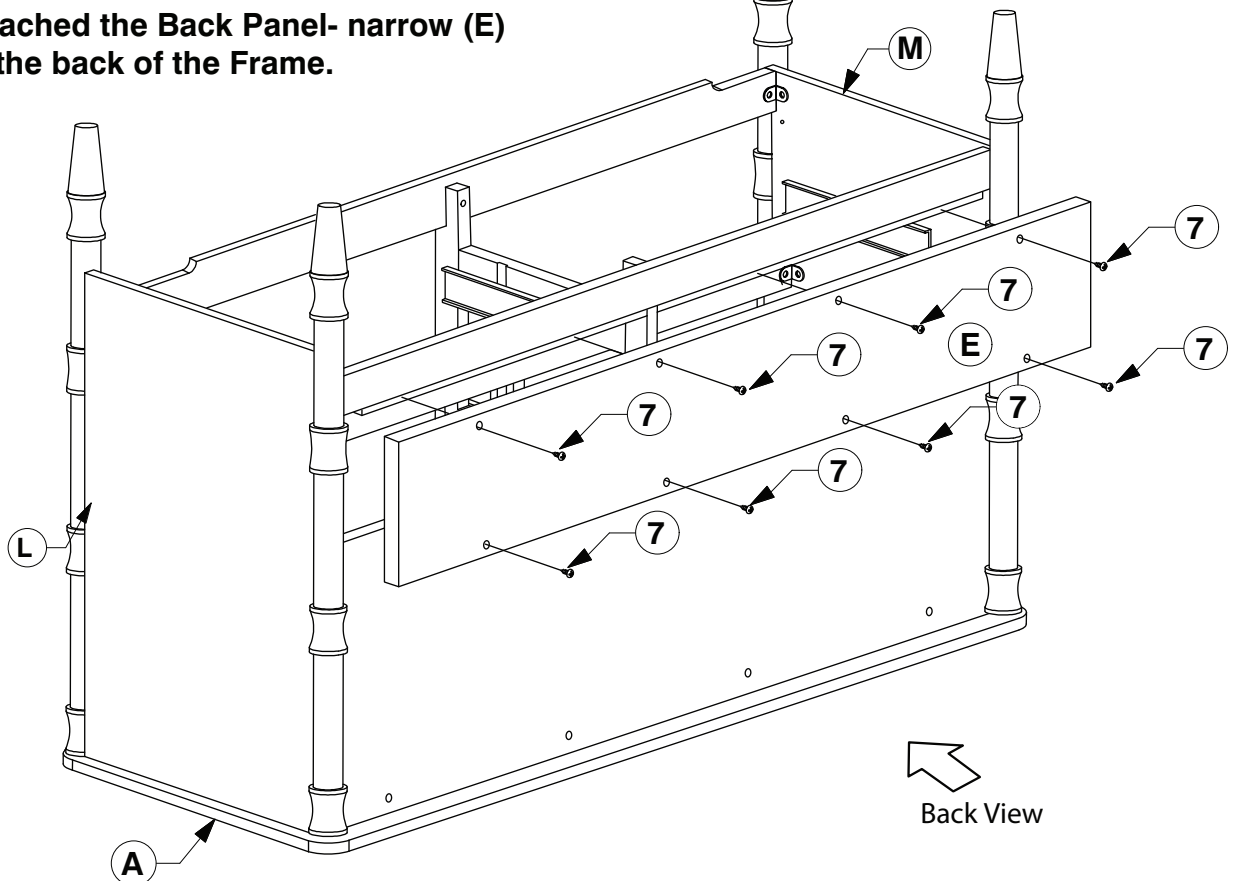

9014 6 Drawer Dresser



Assembly Instructions

WI-1024

10 Install the Drawers.


- Push the Interlock bar **upwards** before inserting the drawers.

LEFT

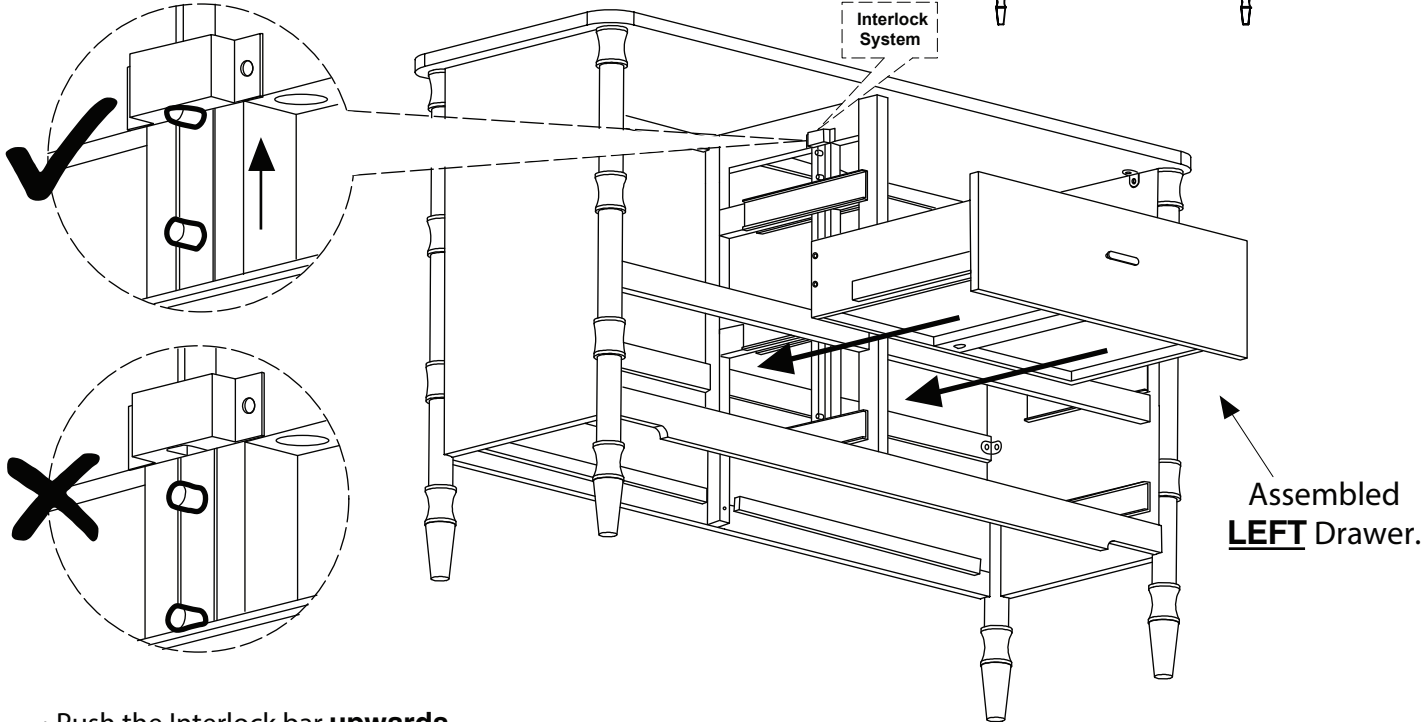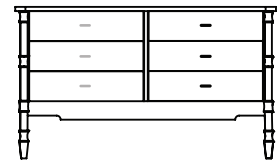

- Push the Interlock bar **upwards** before inserting the drawers.

RIGHT

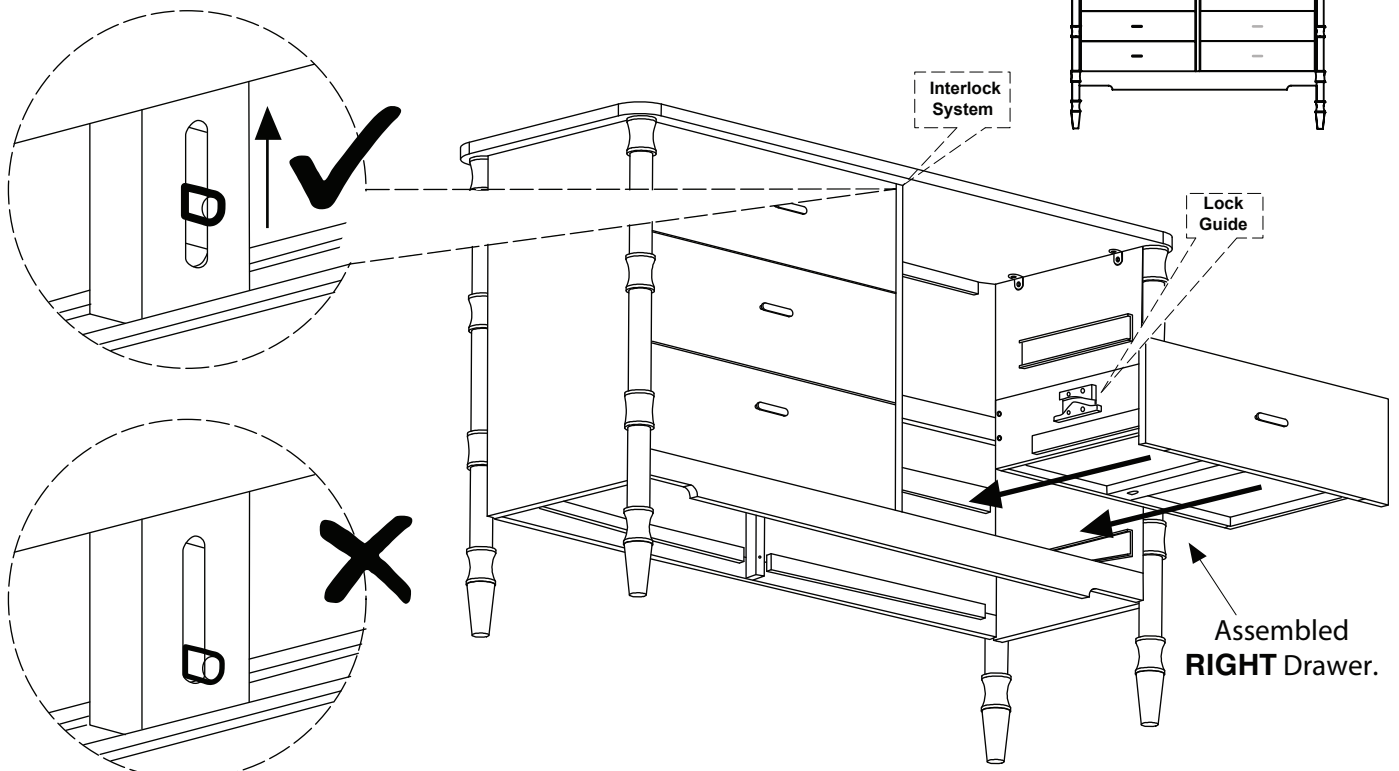


9014 6 Drawer Dresser

Assembly Instructions


WI-1024

11 Adjust the Drawer Face (F).


- * NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment.

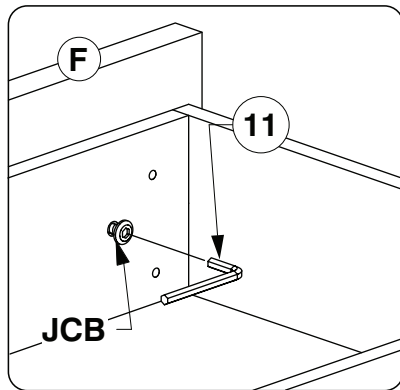


- * NOTE: Only one Drawer can be open
at a time.

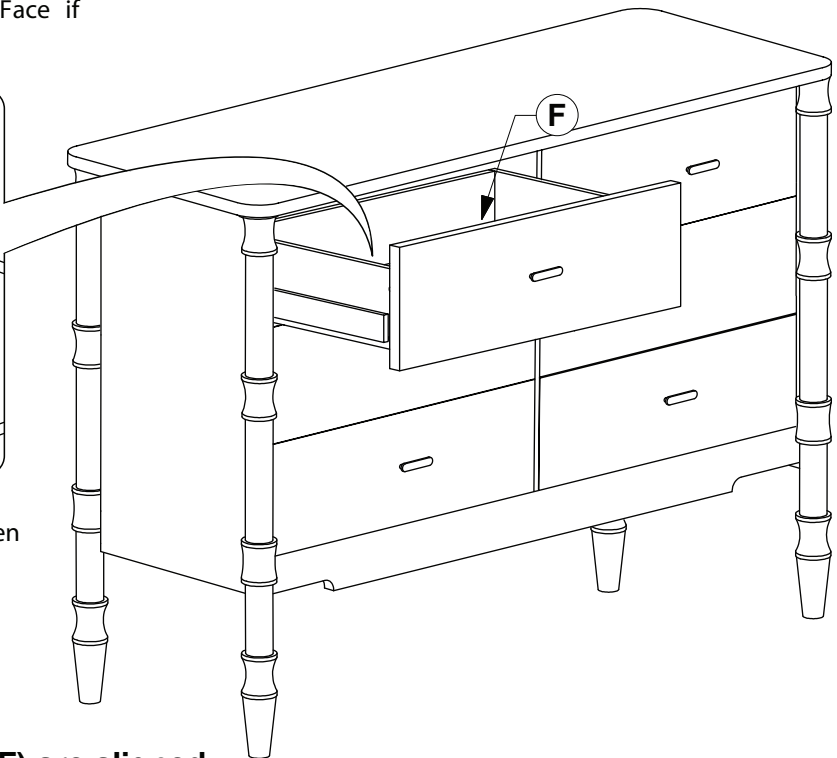

12 After the Drawer Faces (F) are aligned, secure with wood screws.

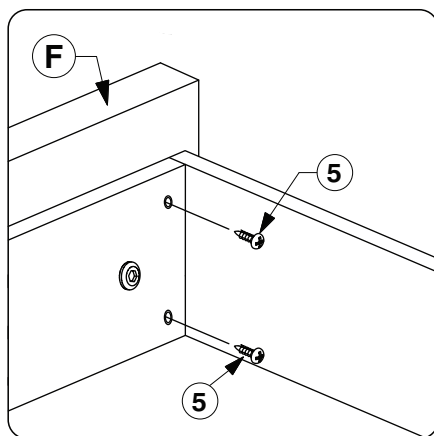

- * NOTE: Only one Drawer can be open
at a time.

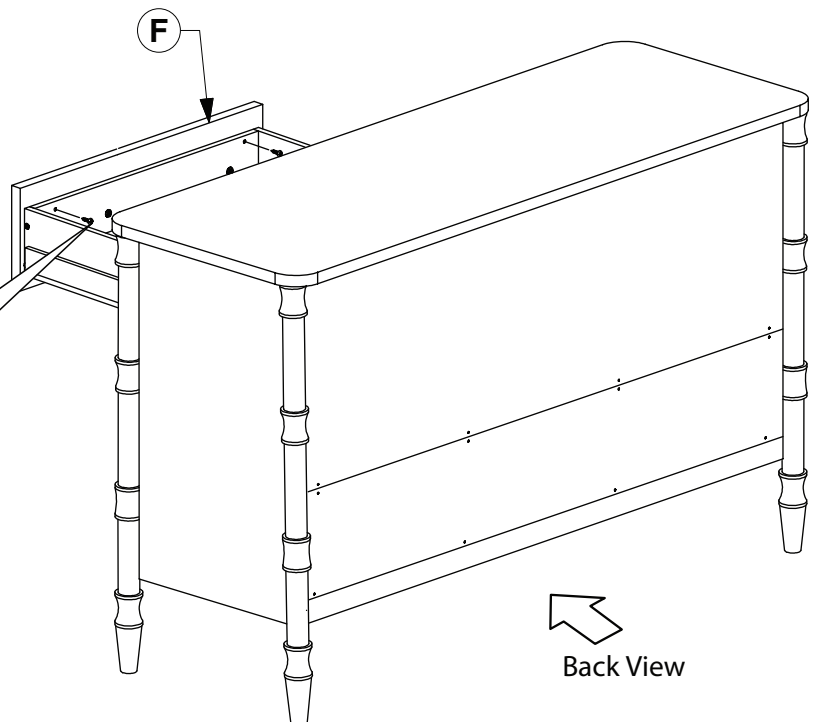




9014 6 Drawer Dresser

Assembly Instructions


WI-1024

13 Remove the Drawers.

- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

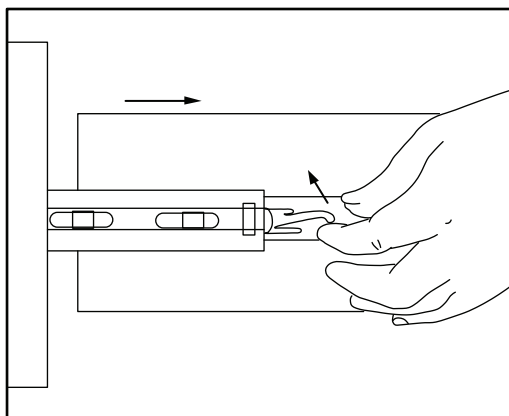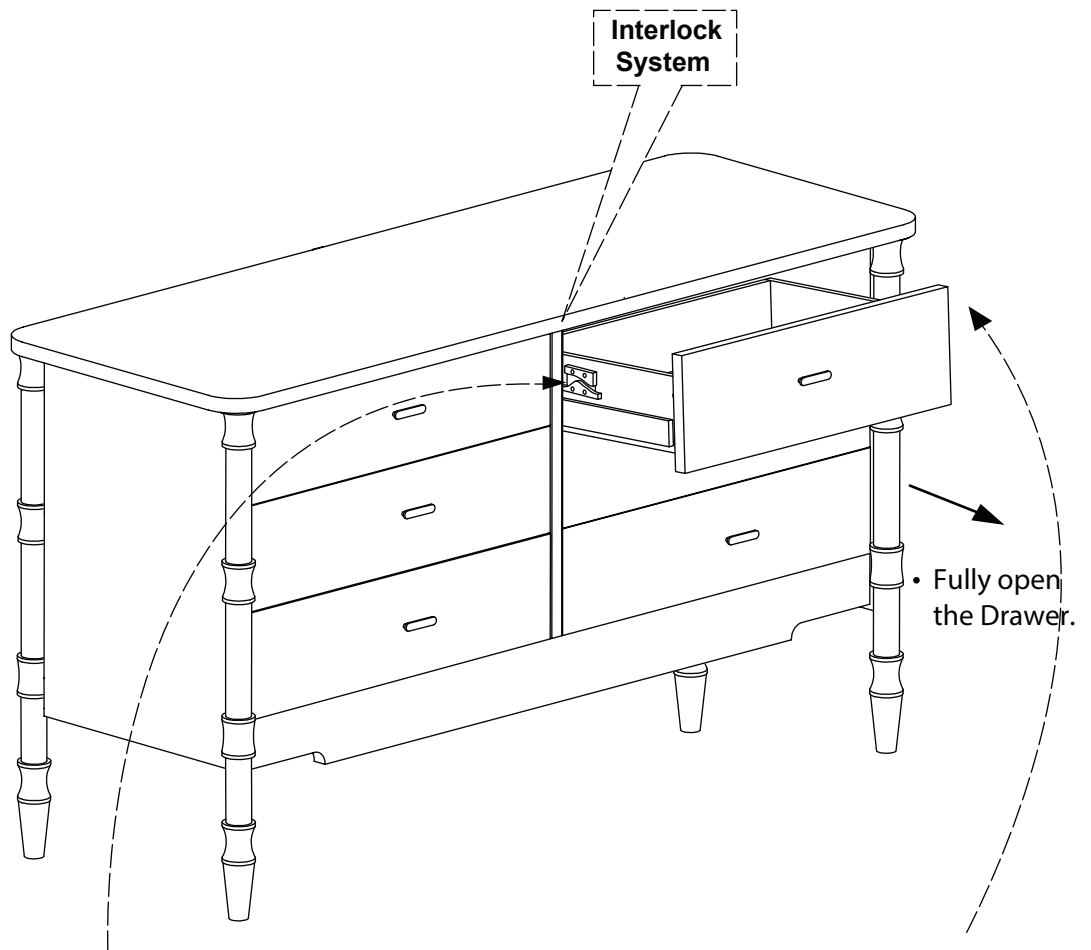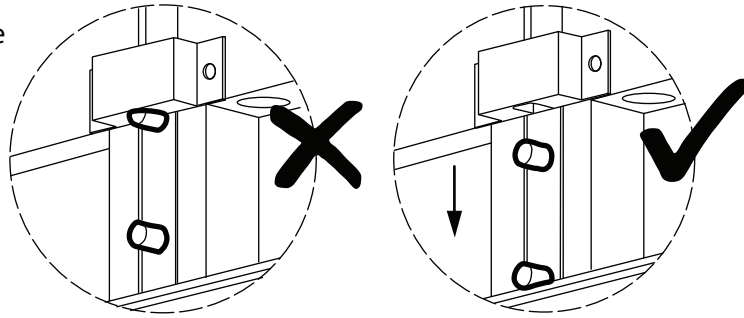

- Lift the **LEFT** side clip up.

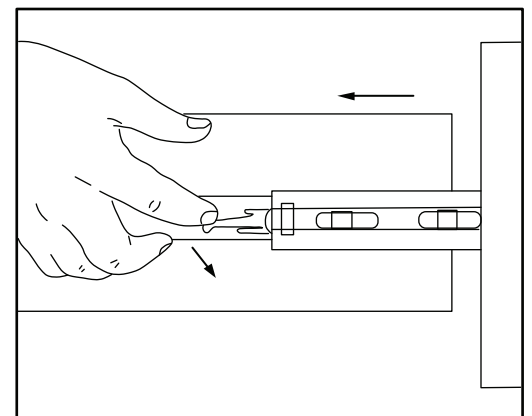


- Push the **RIGHT** side clip down.


9014 4 Drawer Chest

Assembly Instructions

WI-1024

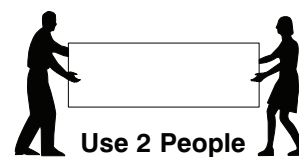


Use 2 People

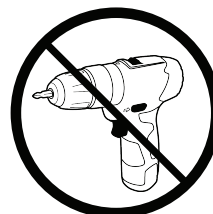

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

WARNING

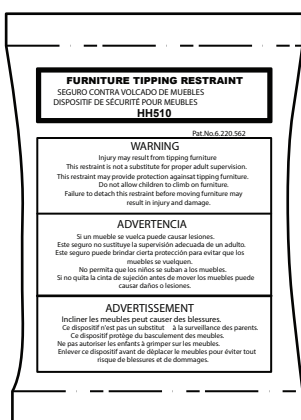

Anti Tipping Kit
Anti Tipping Kit x 1



Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.
- NEVER open more than one drawer at a time.
- DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.
- Place heaviest items in the lowest drawer.


9014 4 Drawer Chest

Assembly Instructions


WI-1024

1 Parts List


Parts in Box A:

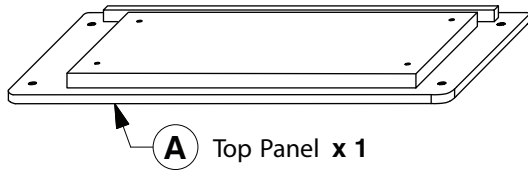

A Top Panel x 1



B Bottom Panel x 1




C Back Panel x 2




D Upper Support Bar x 2



E Bottom Front Support Bar x 1




F Bottom Rear Support Bar x 1



G Drawer Back x 4




H Drawer Bottom x 4



J Drawer Face x 4




K Drawer Rail x 4




L Bottom Support x 4

Parts in Box B:

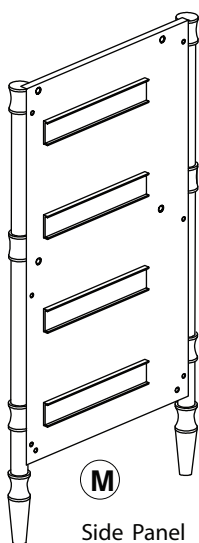


M Side Panel (Left Hand) x 1

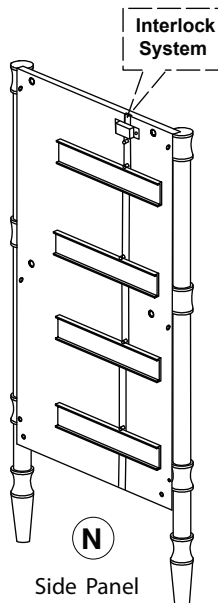


N Side Panel (Right Hand) x 1

Interlock System

O Drawer Side (Left Hand) x 4

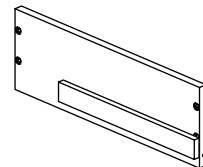

P Drawer Side (Right Hand) x 4

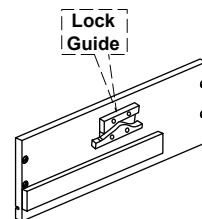


Lock Guide

9014 4 Drawer Chest


Assembly Instructions

WI-1024

2 Hardware List

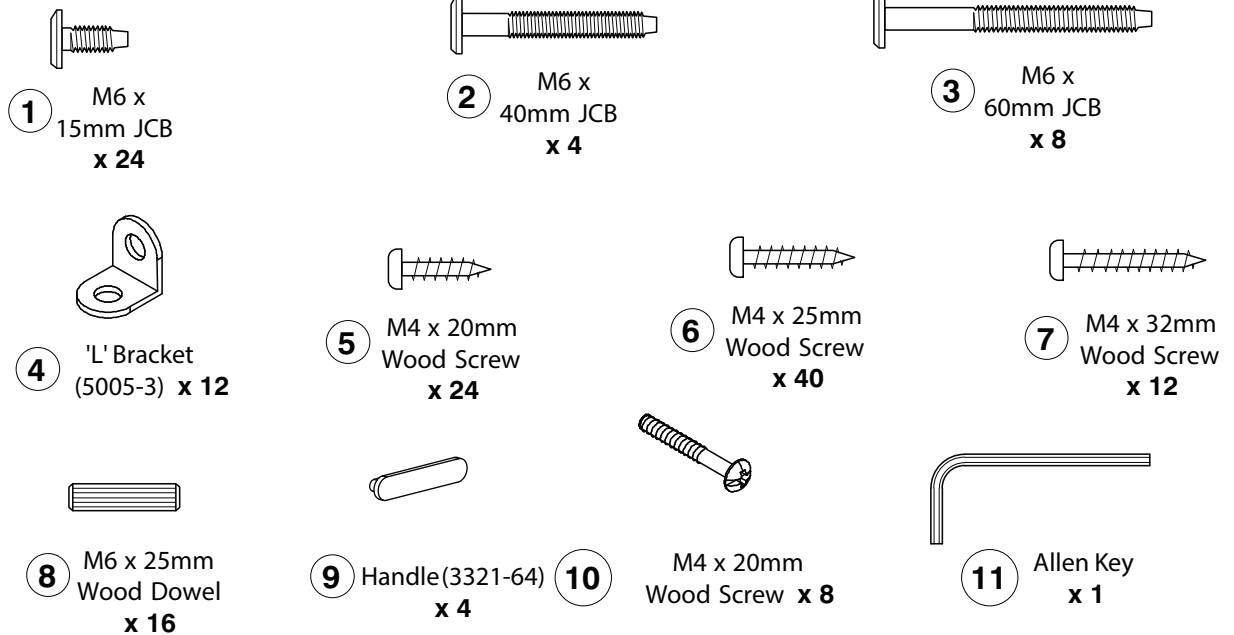

3 Assemble the Drawer Sides (O & P) & Drawer Rail (K) to the Drawer Face (J).

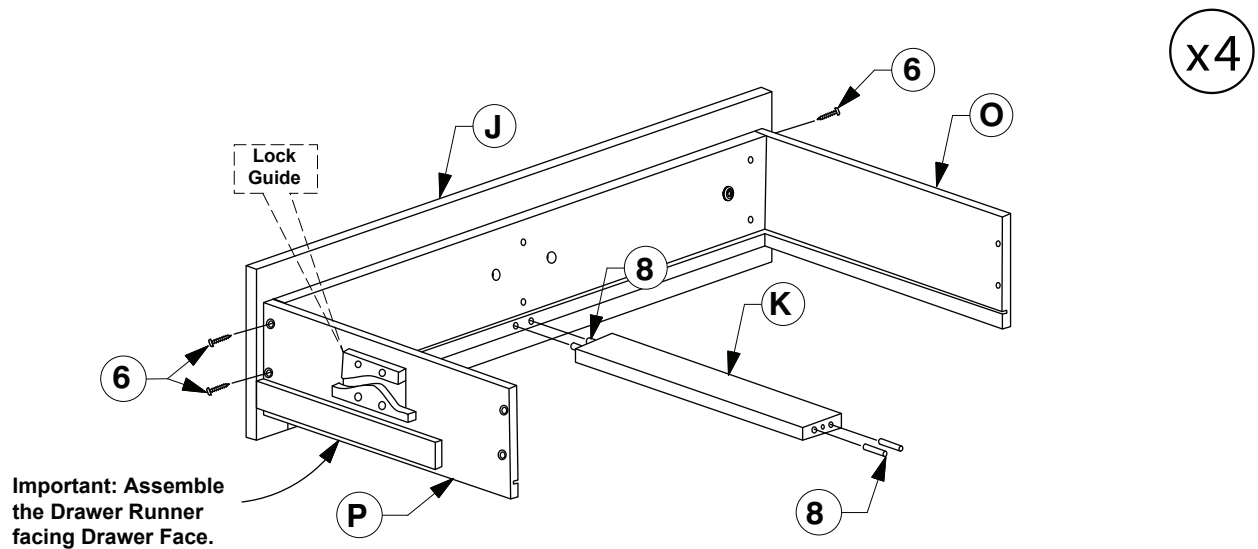


9014 4 Drawer Chest

Assembly Instructions

WI-1024


- 4** Slide the Drawer Bottom (H) into the groove on the Drawer Sides (O & P).

x4

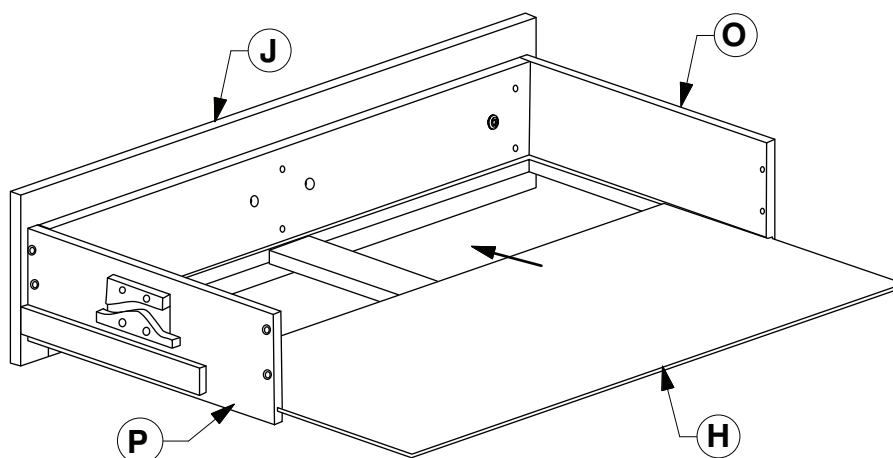


- 5** Assemble the Drawer Back (G) to the Drawer Sides (O & P).
Fit the Handle to the Drawer Face (J).

x4

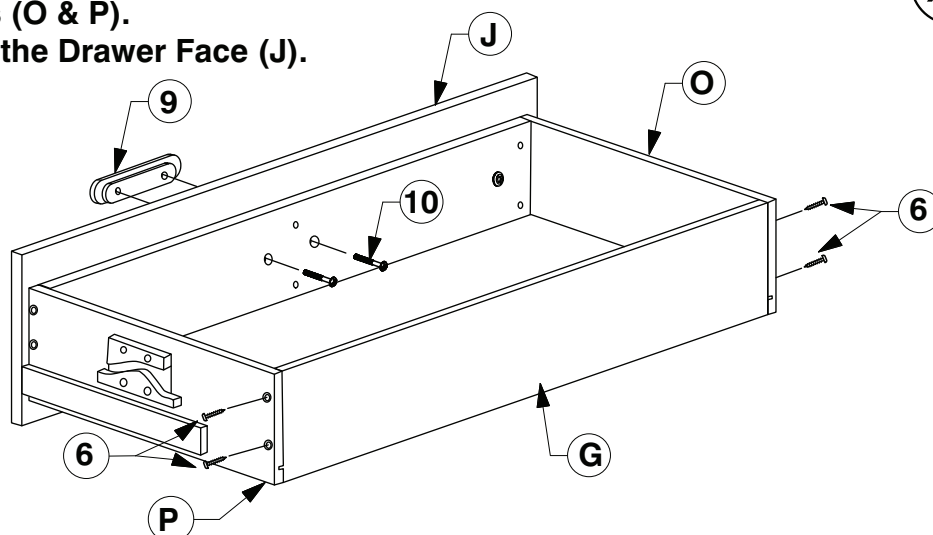

- 6** Turn the Drawer over to fit angled 25mm Wood screws (6) to the Drawer Rail (K).

x4

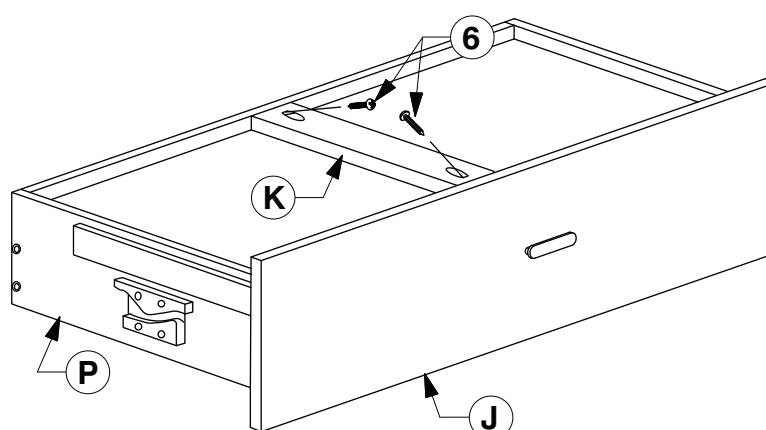


9014 4 Drawer Chest


Assembly Instructions

WI-1024

- 7** Fit the 'L' Bracket (4) to the Side Panel (M & N).

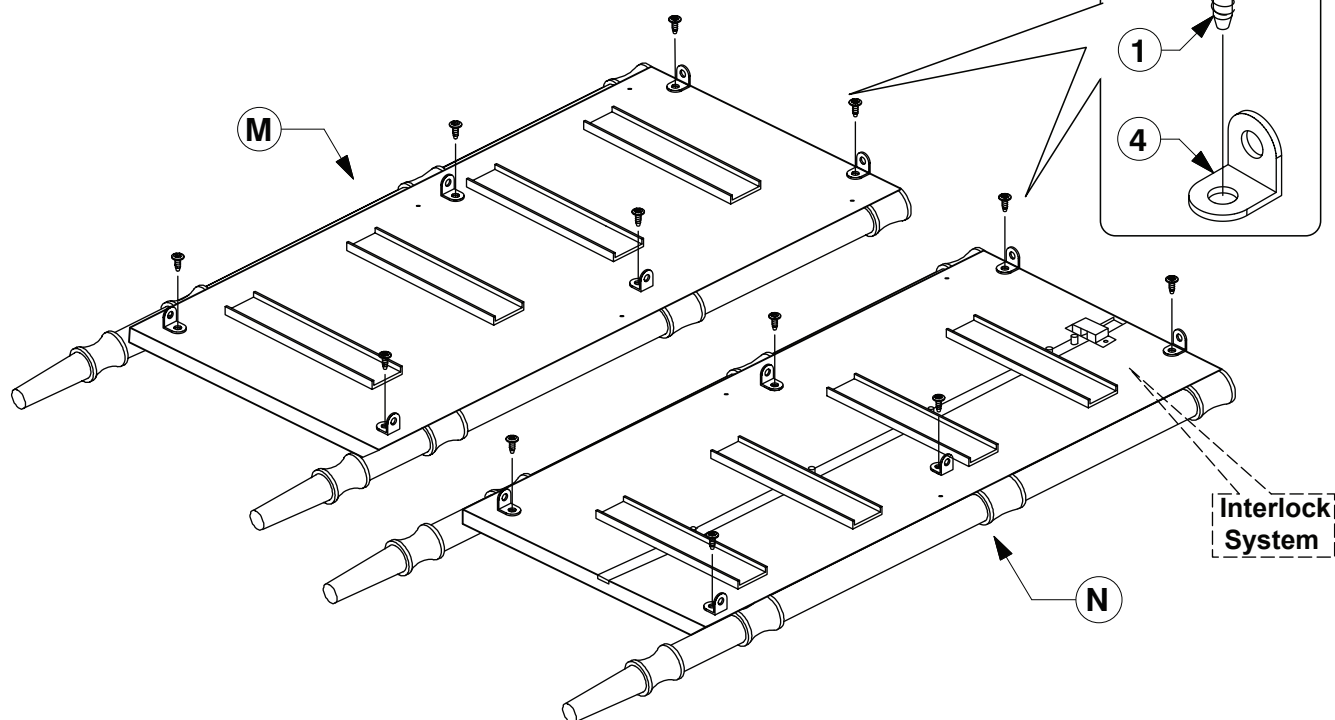

- 8** Assembled the Top Panel (A) to the Side Panel (M & N).

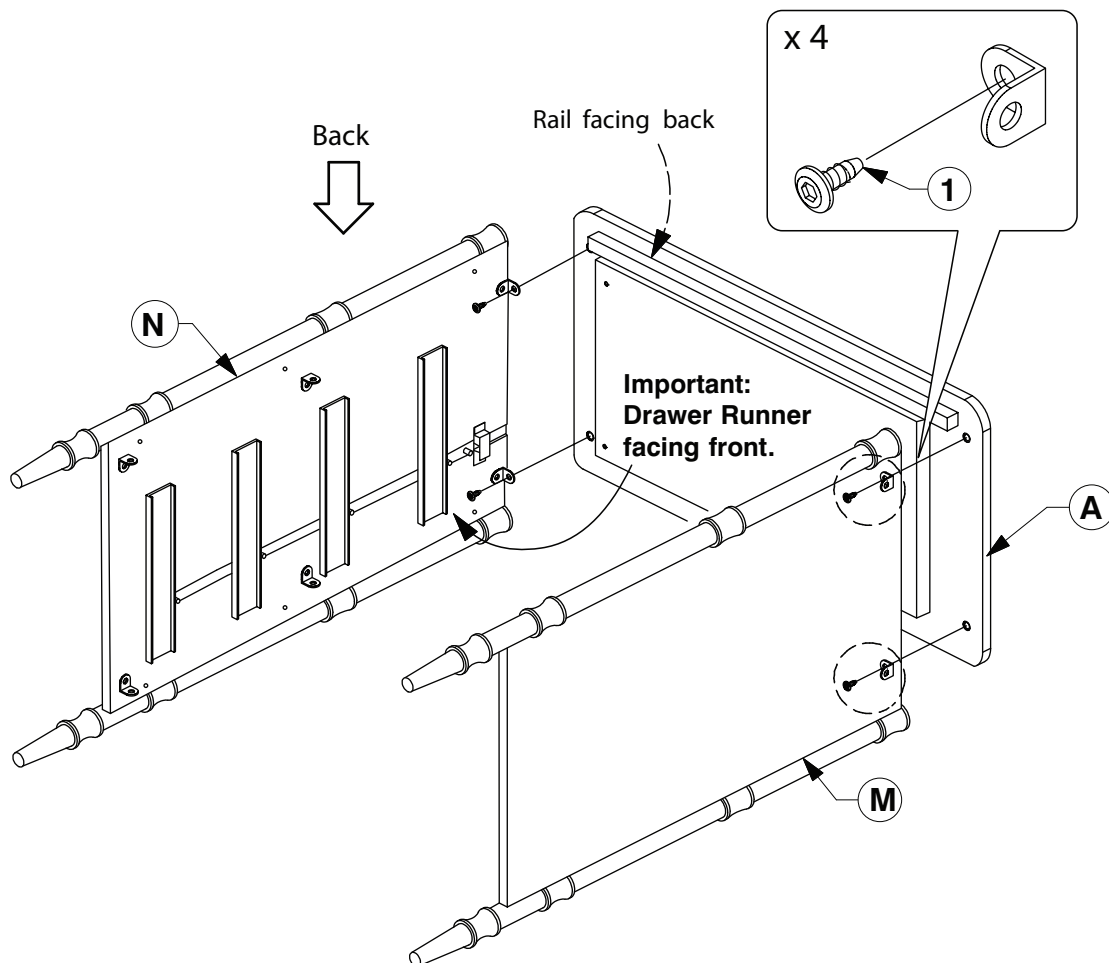


9014 4 Drawer Chest


Assembly Instructions

WI-1024

- 9** Fit the Support Bar Upper & Bottom (D & E & F) to the Side Panel (M & N) as shown.

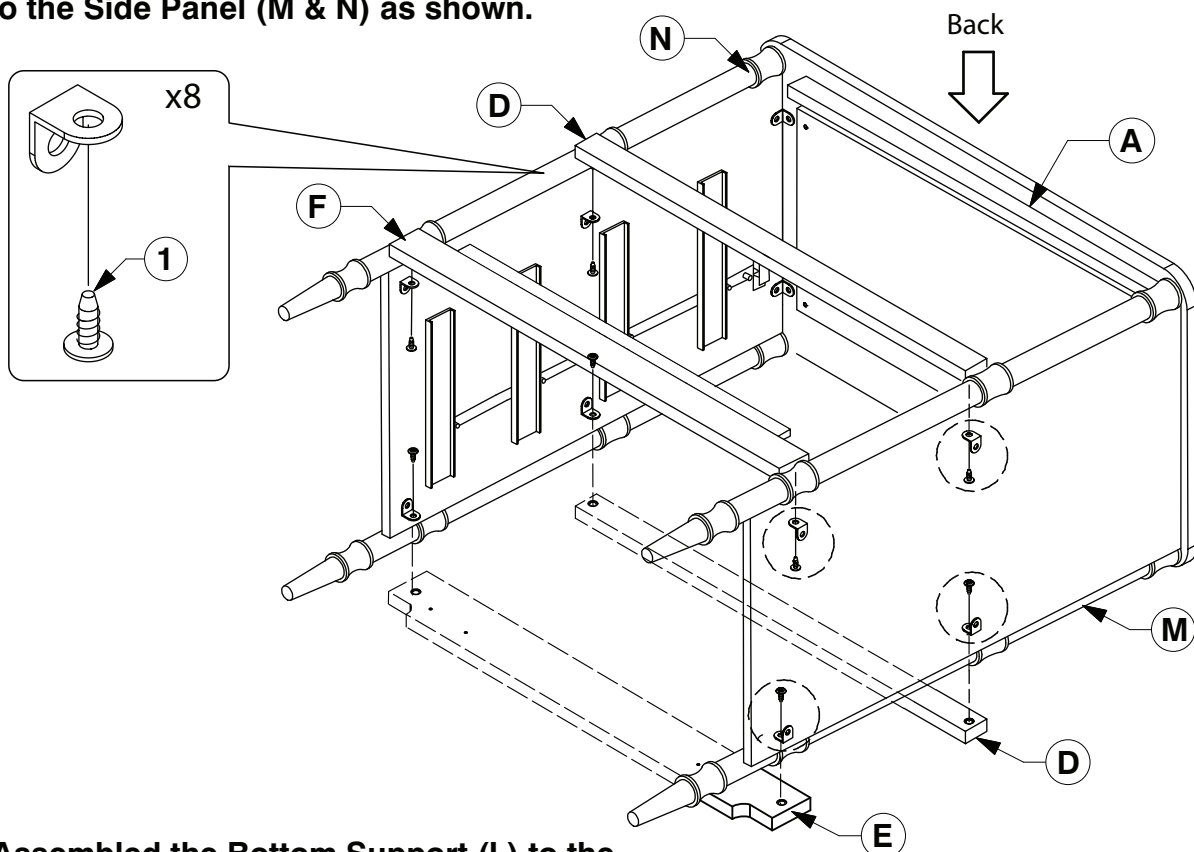

- 10** Assembled the Bottom Support (L) to the Bottom Front & Rear Support Bar (E & F) as shown.

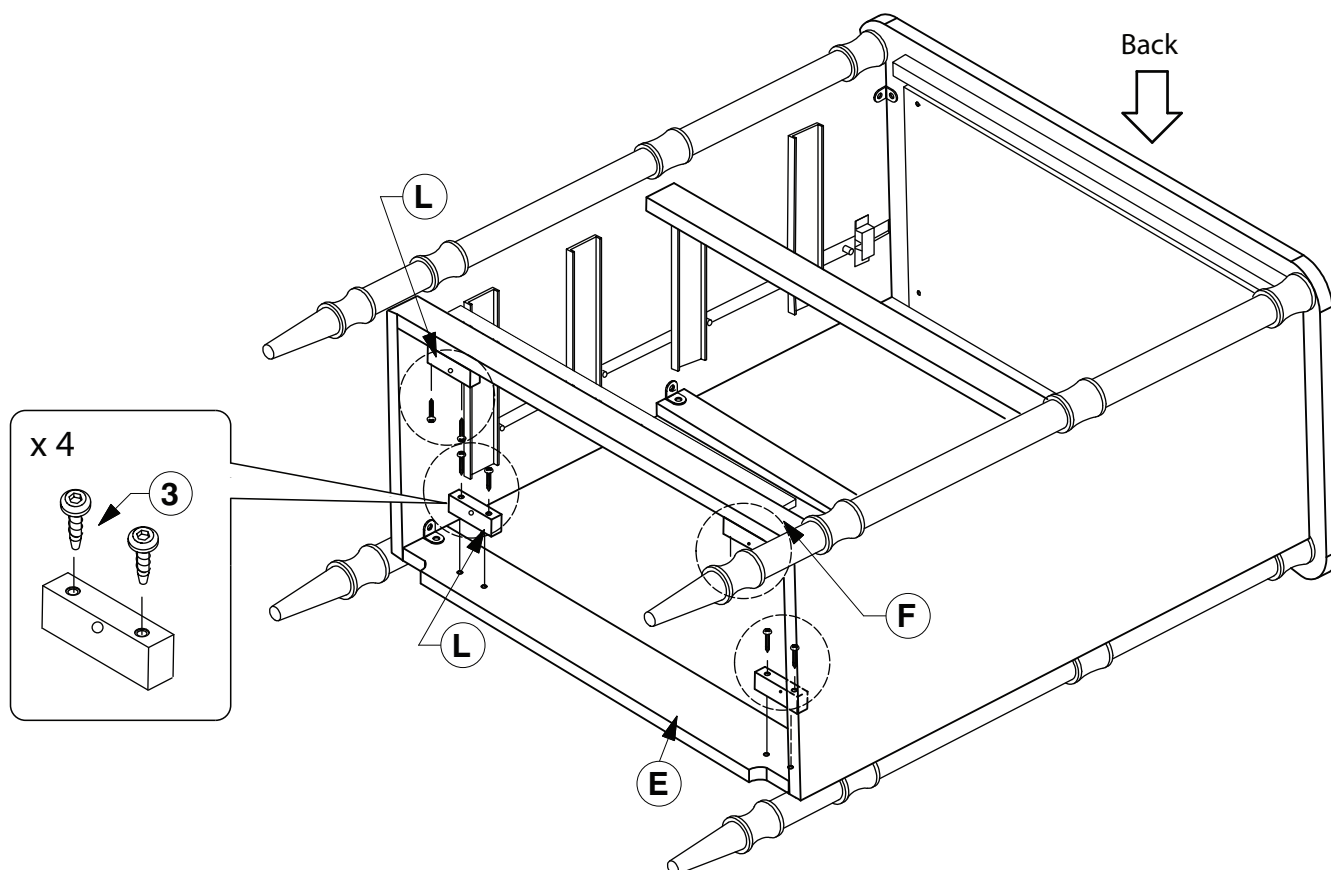


9014 4 Drawer Chest


Assembly Instructions

WI-1024

- 11** Bolt the Bottom Support (L) to the Bottom Panel (B) as shown.

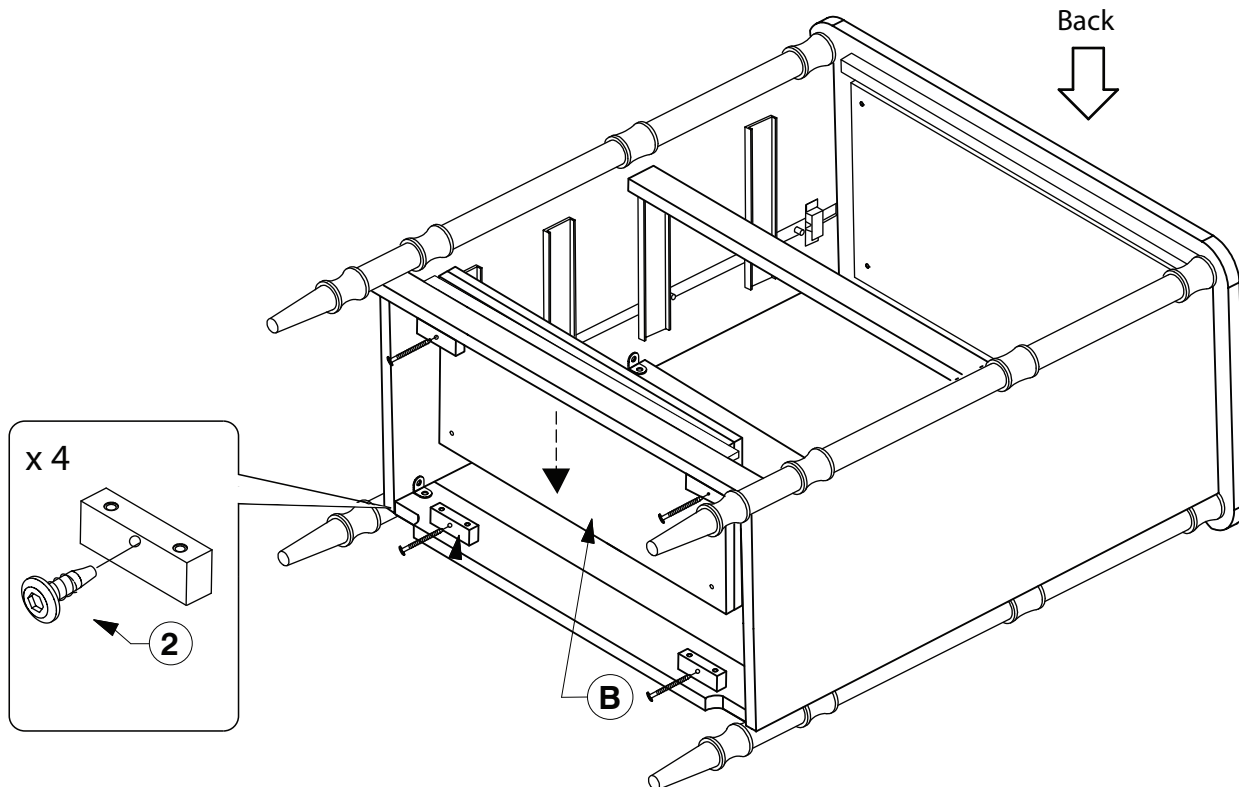

- 12** Attached the Back Panel (C) to the back of the frame.

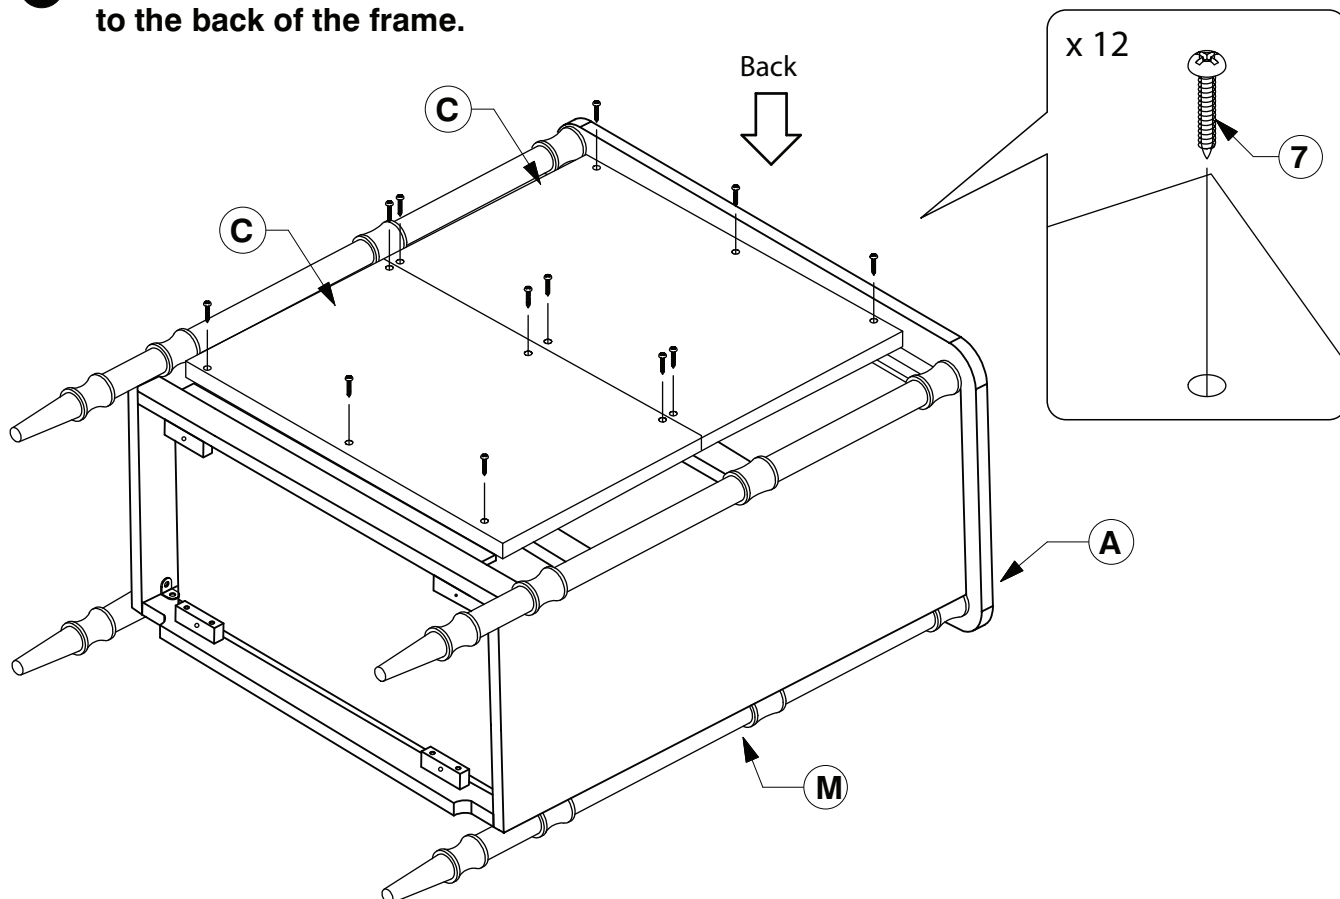


9014 4 Drawer Chest

Assembly Instructions

WI-1024


13 Install the Drawer.

- Push the Interlock bar **upwards** before inserting the drawers.

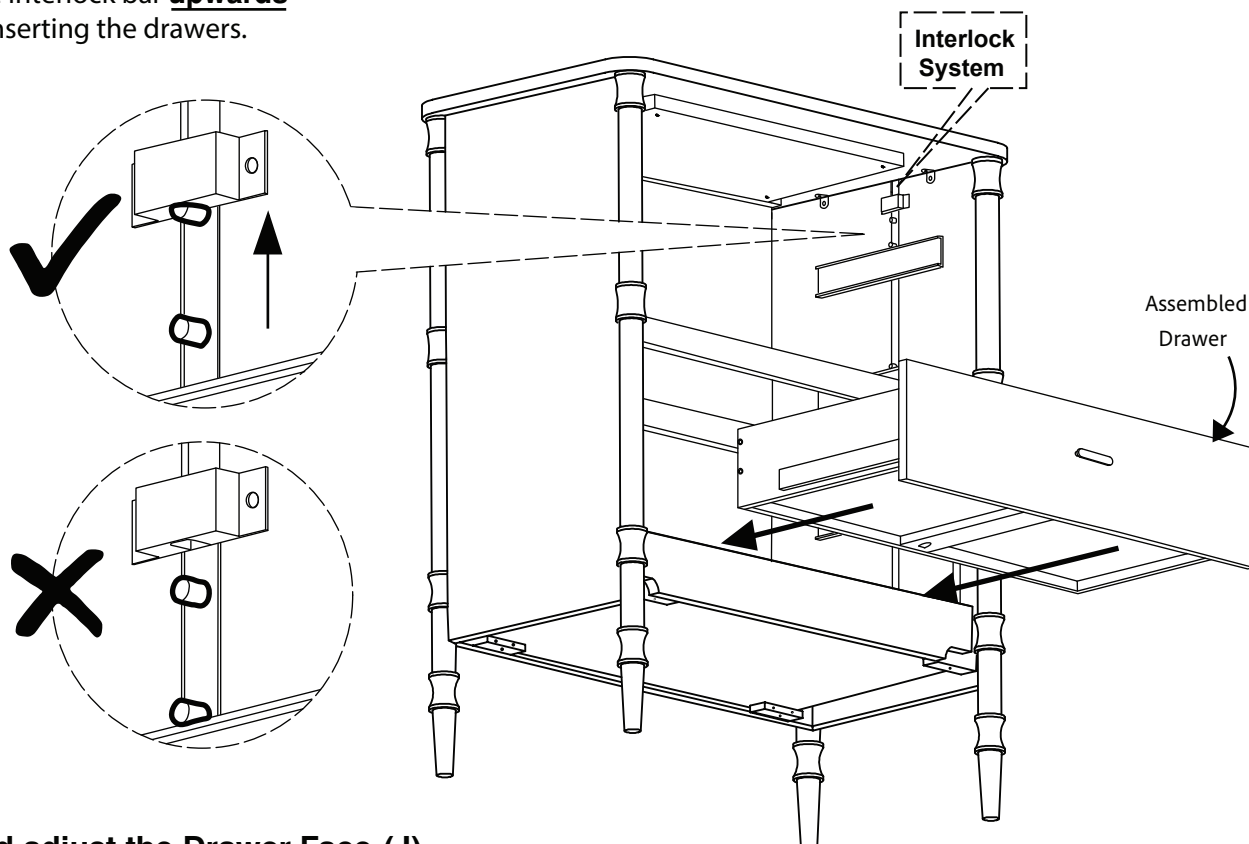


14 Fit and adjust the Drawer Face (J).

- * NOTE: Before fitting the Wood Screws .
Losen the JCBs on the Drawer Face if the face needs alignment.

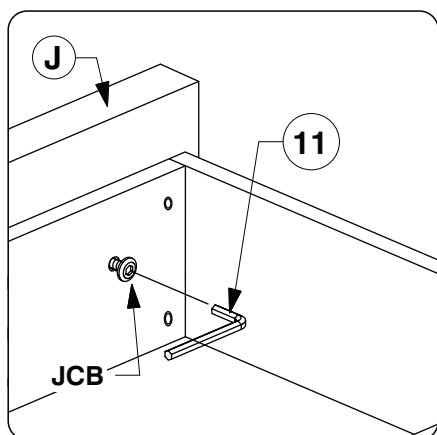

- * NOTE: Only one Drawer can be open at a time.

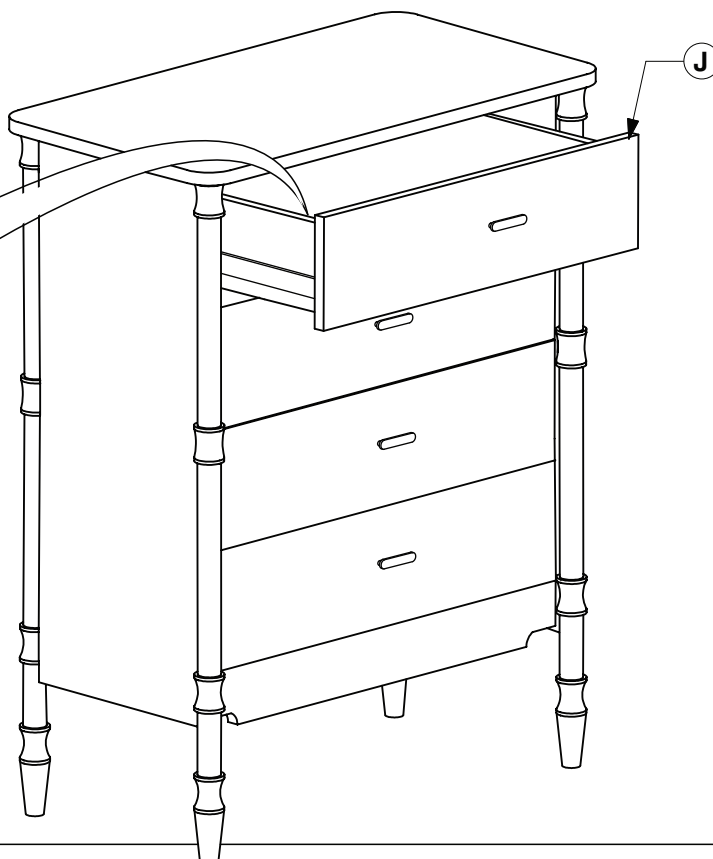


9014 4 Drawer Chest

Assembly Instructions

WI-1024

- 15** After the Drawer Faces (J) are aligned, secure with wood screws.

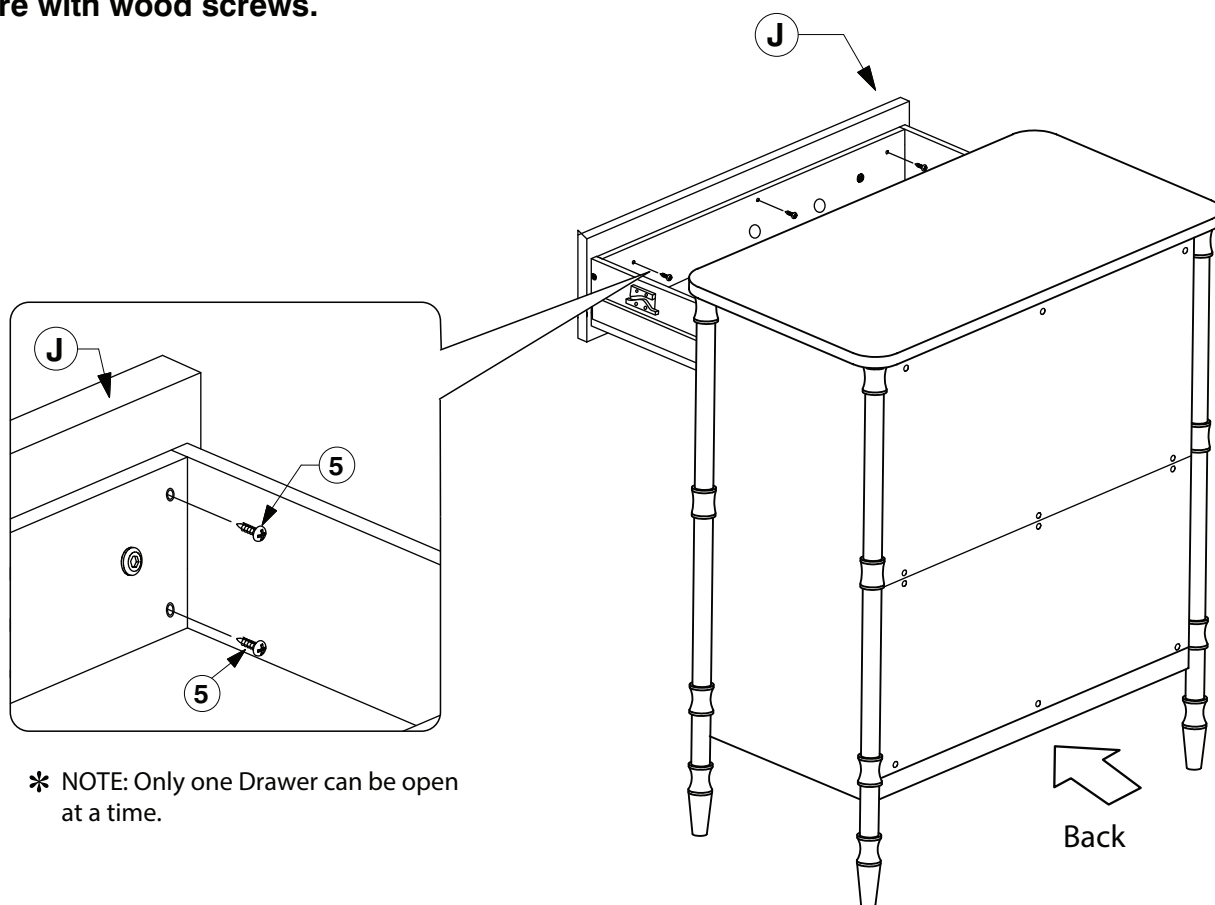


9014 4 Drawer Chest

Assembly Instructions



WI-1024

16 Remove the Drawers.


- After removing the top drawer, push the interlock bar **down**. Then remove the lower drawers.

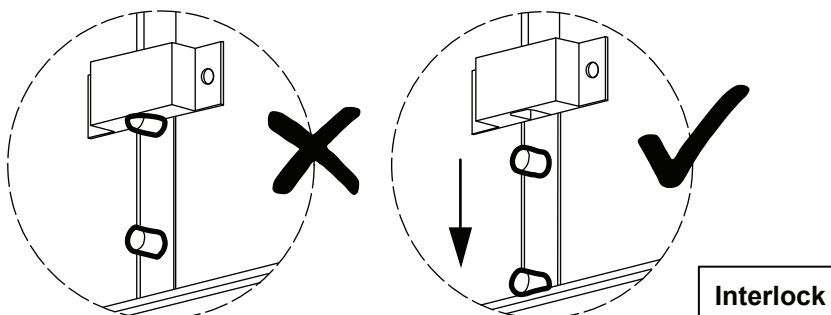

Interlock System

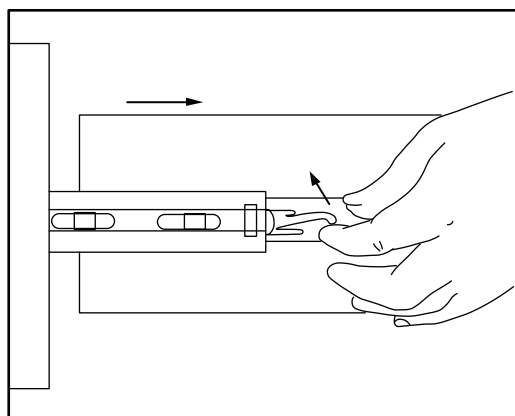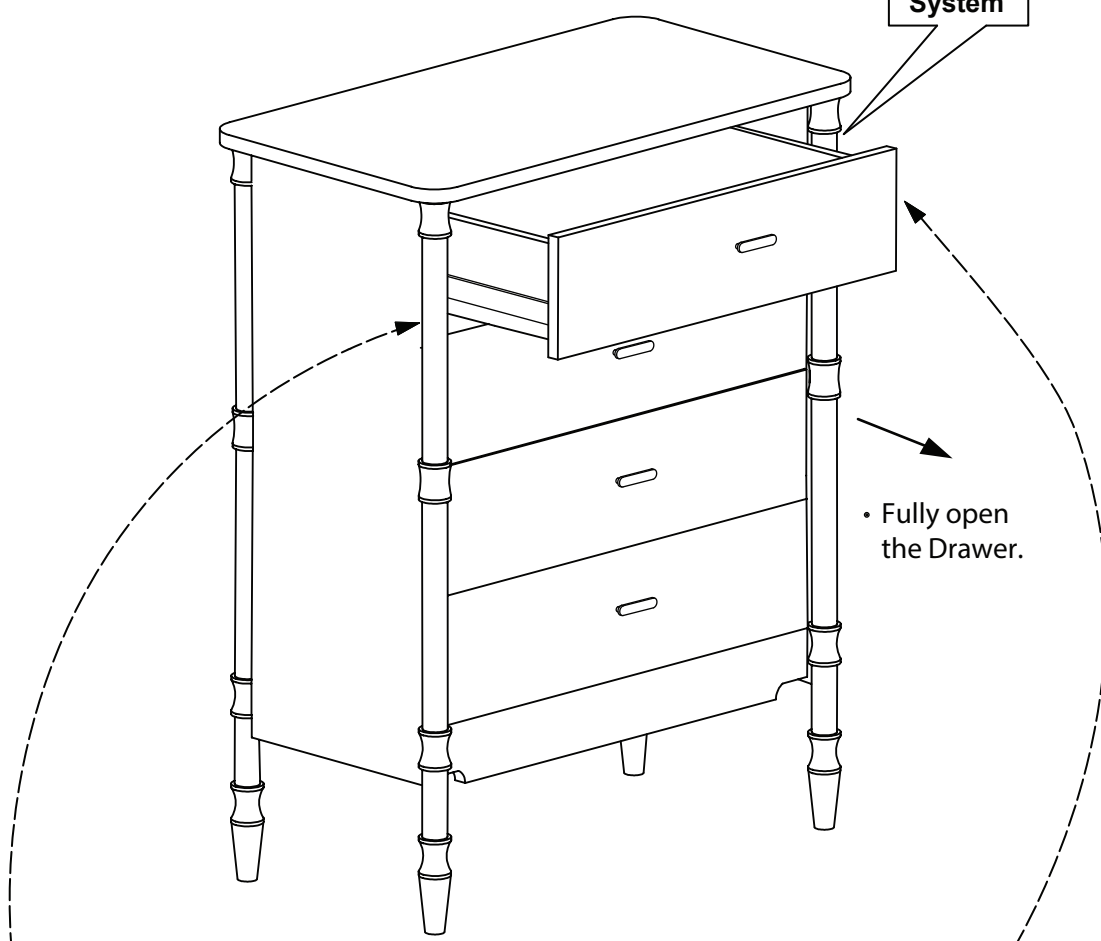

- Lift the **LEFT** side clip up.



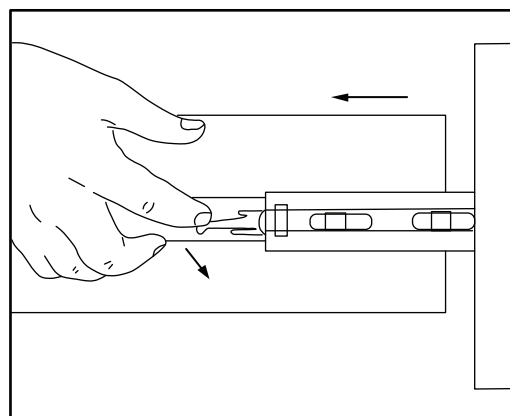


- Push the **RIGHT** side clip down.

9014 2 Drawer Night Stand


Assembly Instructions

WI-0924

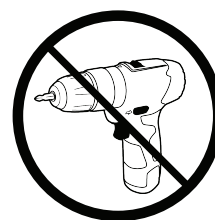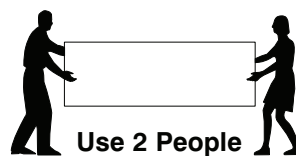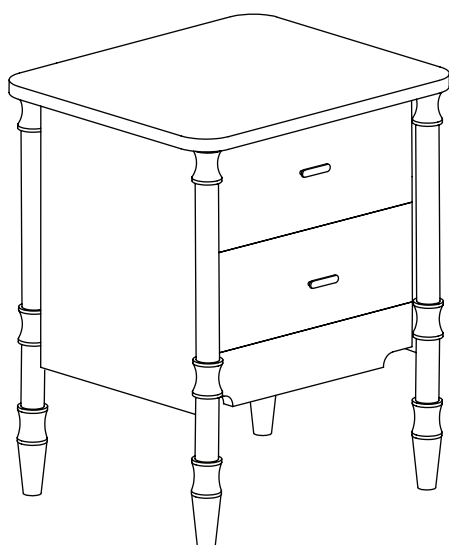


Note: Do not assemble using power tools. This can cause the bolts to be overtightened


1 Parts List

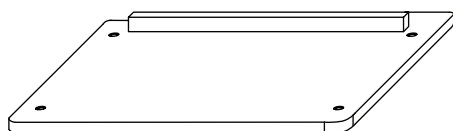


A Top Panel x 1




B Back Panel x 1

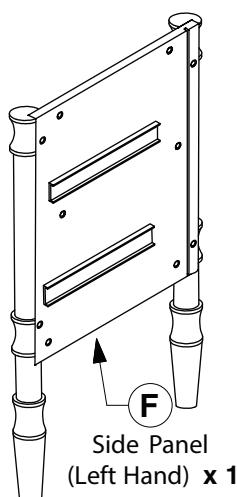


F Side Panel (Left Hand) x 1

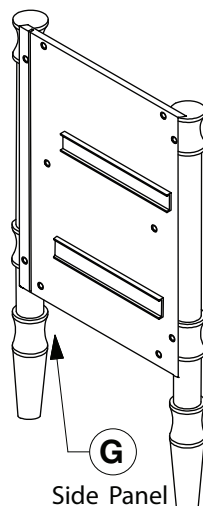


G Side Panel (Right Hand) x 1



K Drawer Side (Left Hand) x 2




L Drawer Side (Right Hand) x 2




C Support Bar (Upper) x 2




D Support Bar Front (Bottom) x 1



E Support Rear Bar x 1



H Drawer Back x 2

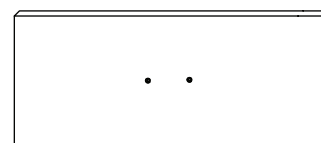

J Drawer Face x 2




M Drawer Bottom x 2

9014 2 Drawer Night Stand


Assembly Instructions

WI-0924


2 Hardware List

- | | | | |
|--|--|---|---|
| 
1 M6 x 15mm
JCB x 24 | 
2 'L' Bracket
(5005-3) x 12 | 
3 M4 x 16mm
Wood Screw x 6 | 
4 M4 x 20mm
Wood Screw x 8 |
| 
5 M4 x 25mm
Wood Screw x 16 | 
6 Handle(3321-64)
x 2 | 
7 M4 x 20mm
Wood Screw x 4 | 
8 Allen Key
x 1 |


3 Assemble the Drawer Sides (K & L) to the Drawer Face (J).

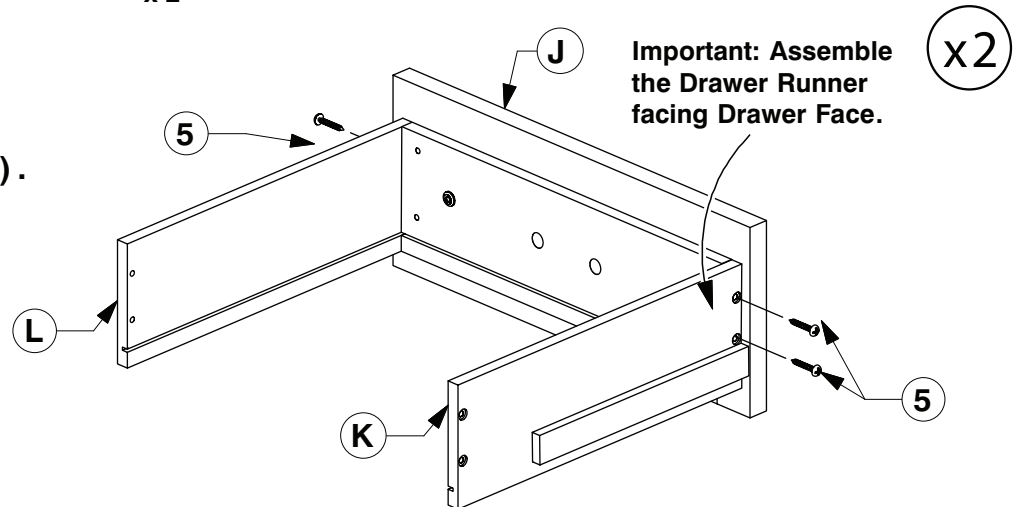

4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

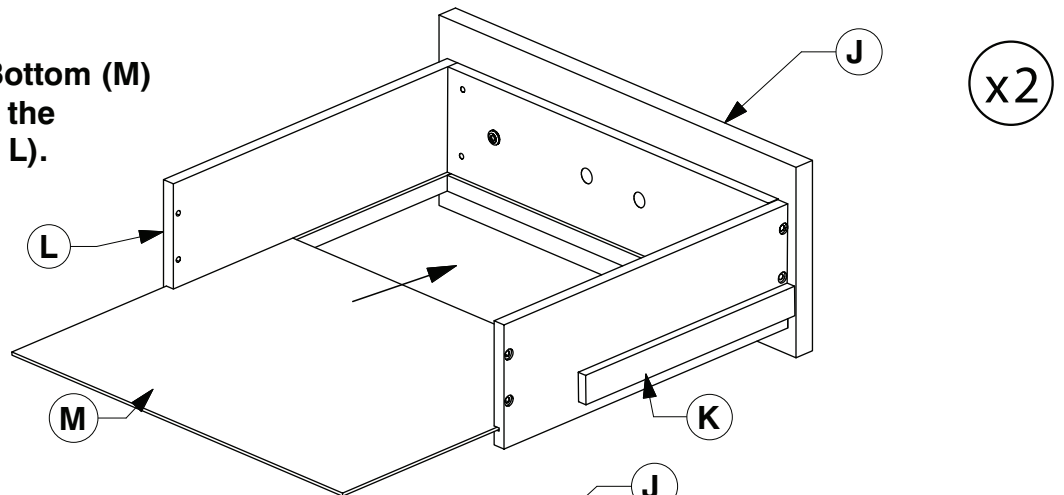

5 Assemble the Drawer Back (H) to the Drawer Sides (K & L). Fit the Handle to the Drawer Face (J).

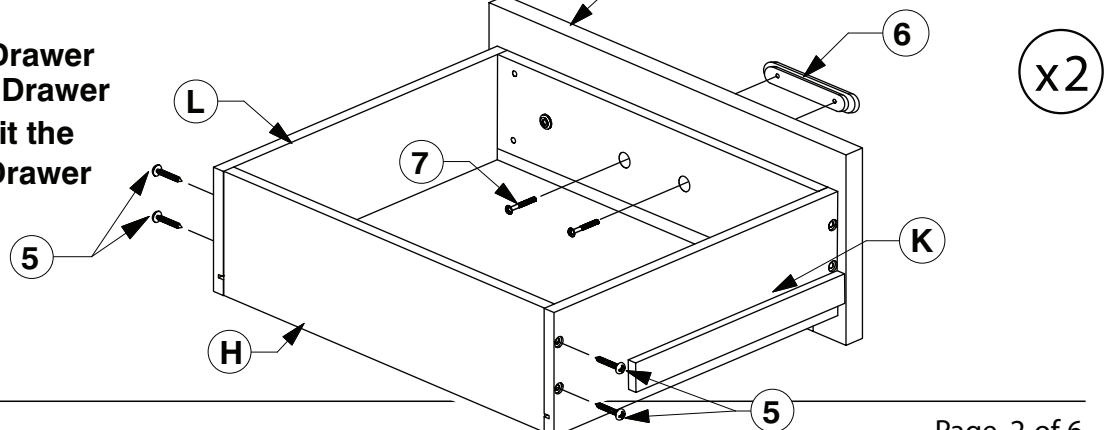


9014 2 Drawer Night Stand


Assembly Instructions

WI-0924

- 6** Fit the 'L' Bracket (2) to the Side Panel (F & G).

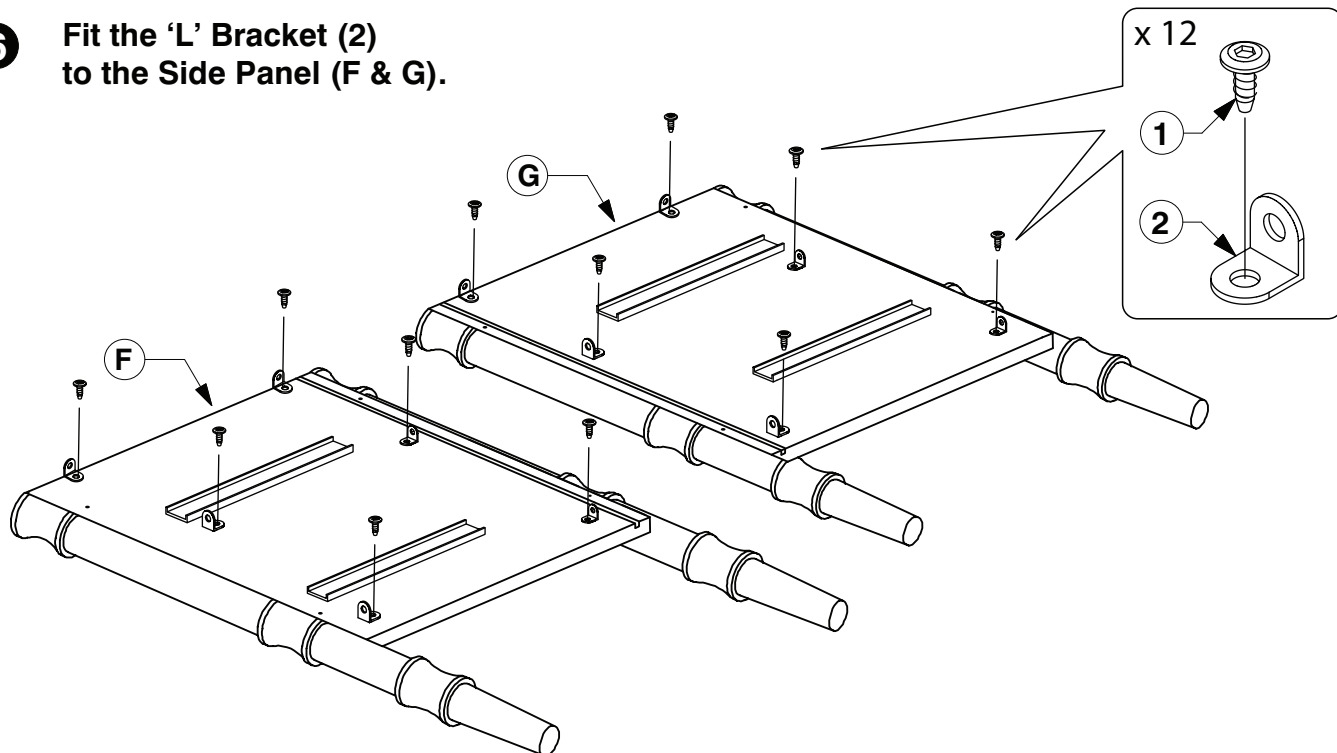

- 7** Assemble the Side Panel (F & G) to the Top Panel (A).

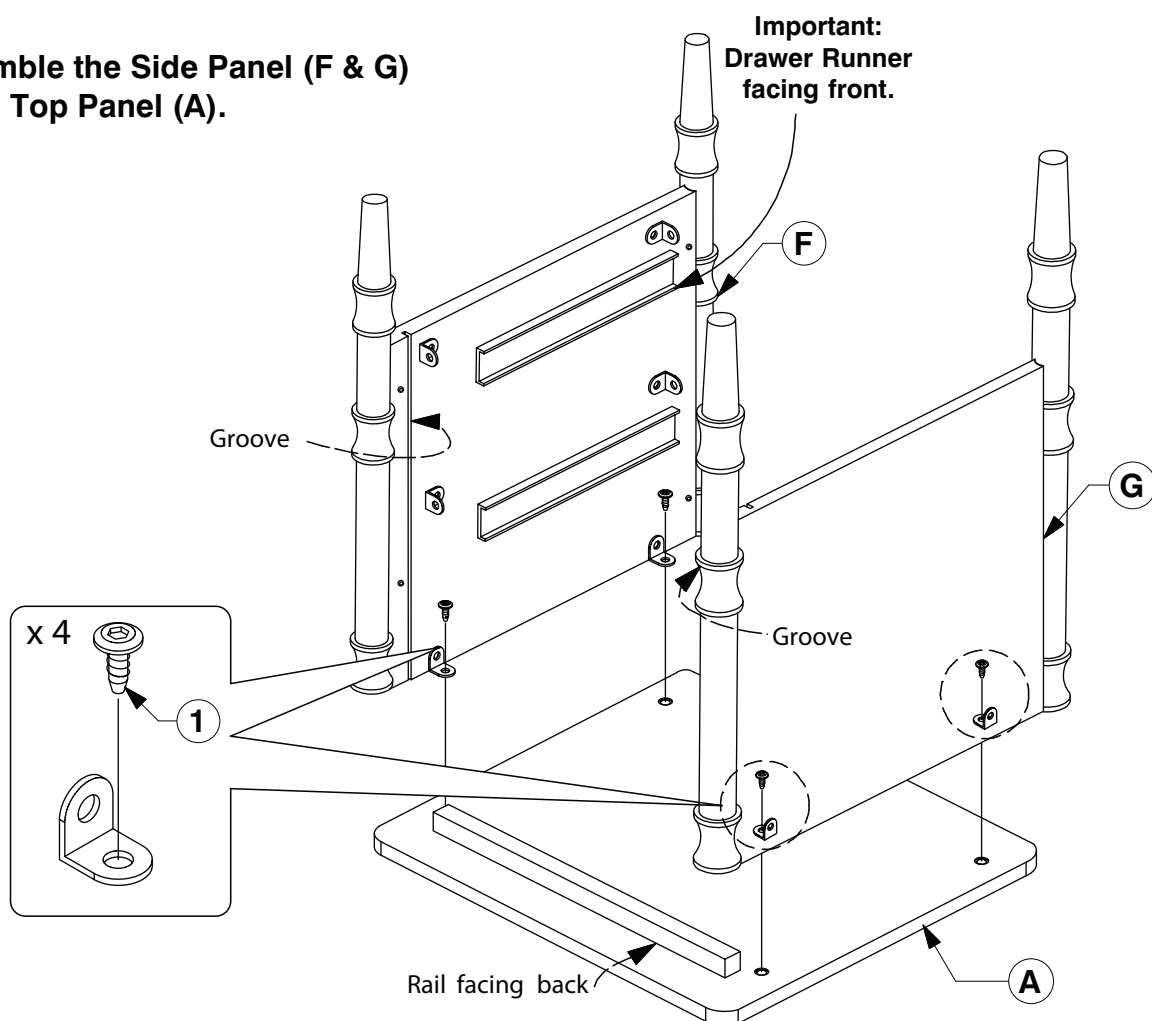


9014 2 Drawer Night Stand


Assembly Instructions

WI-0924

- 8** Fit the Support Bar (Upper) (C) and Support Bar Front & Rear (Bottom) (D & E) to the Side Panel (F & G).

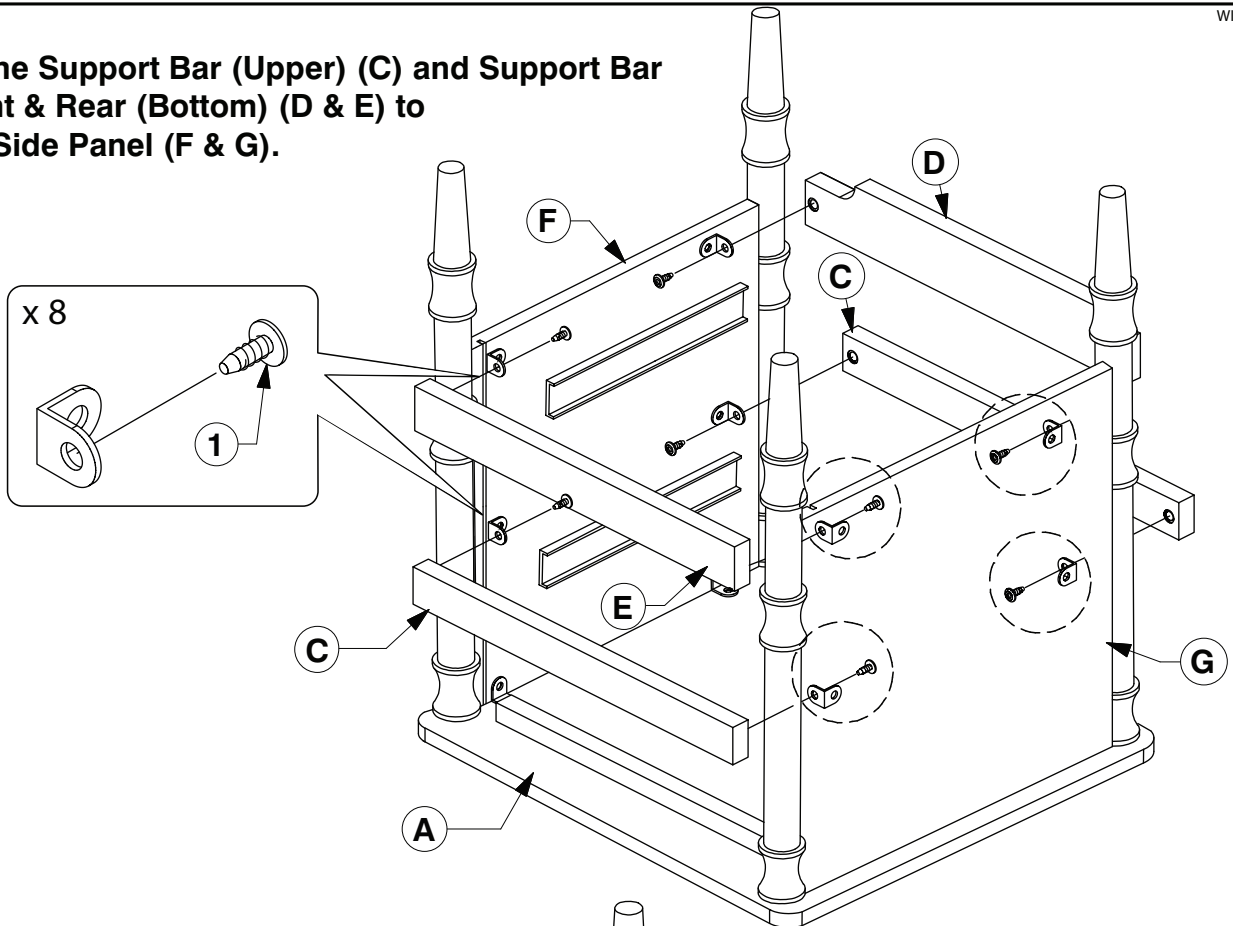

- 9** Slide the Back Panel (B) into the groove on the back of the Side Panel (F & G).

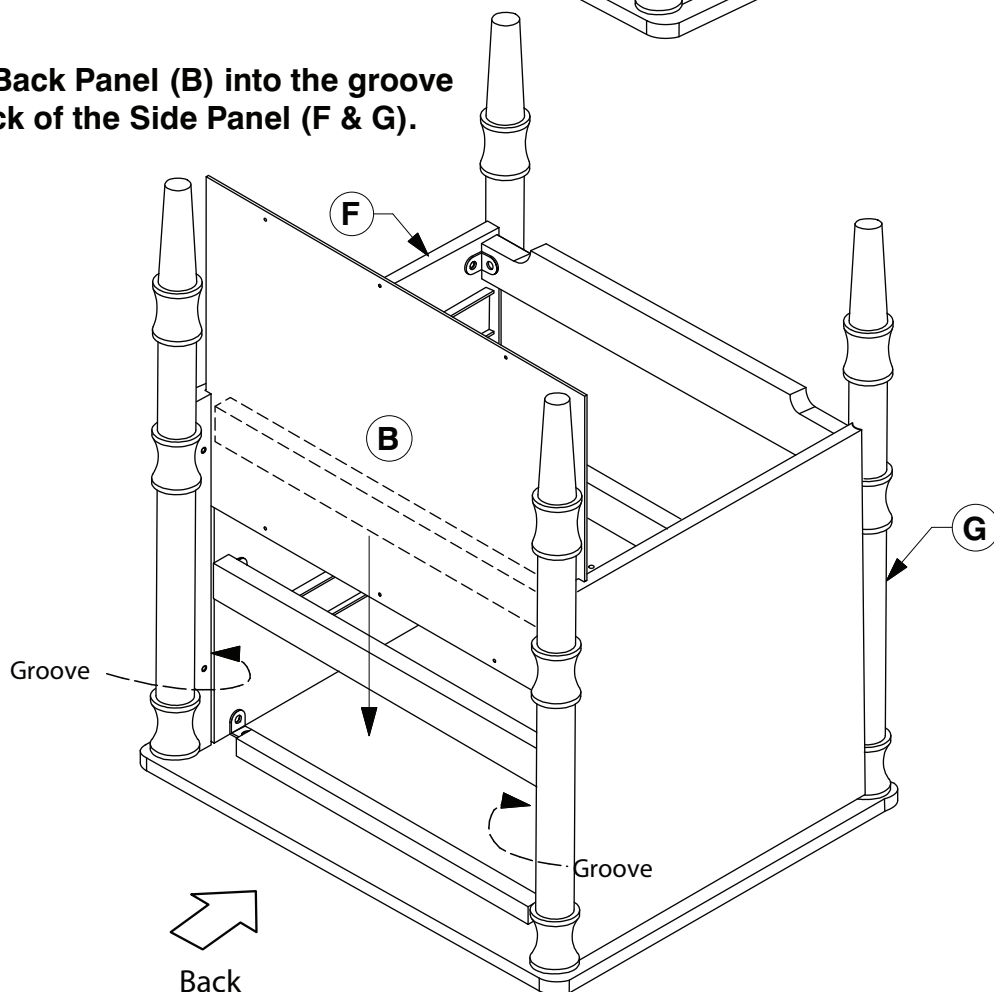


9014 2 Drawer Night Stand


Assembly Instructions

WI-0924

- 10** Use Screw to tighten the Back Panel (B) to the back of frame.

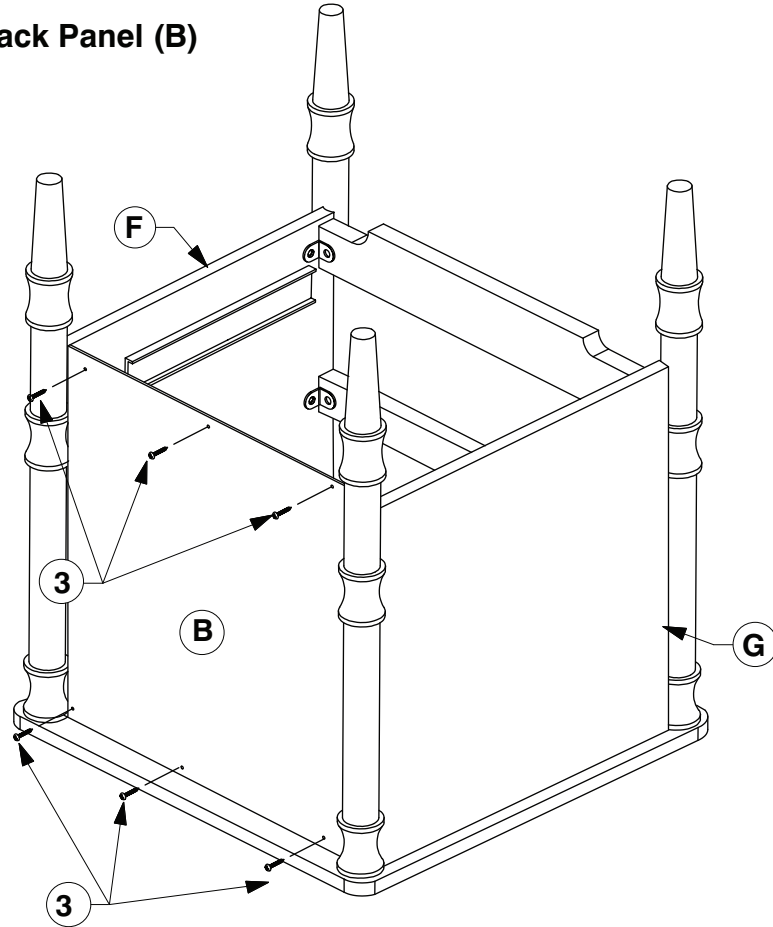

- 11** Fix the Drawer Box to the casegood body.

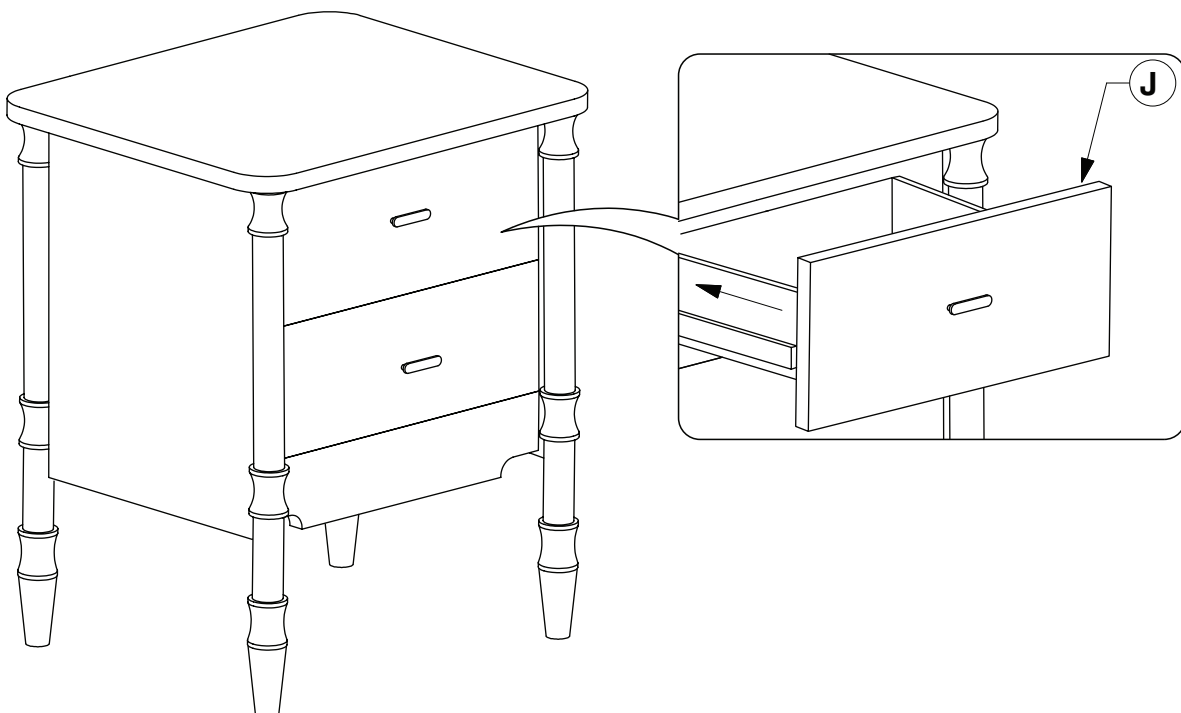


9014 2 Drawer Night Stand

Assembly Instructions

WI-0924

12 Fit and adjust the Drawer Face (J) .

* NOTE: Before fitting the Wood Screws .
Loosen the JCBs on the Drawer Face if
the face needs alignment .

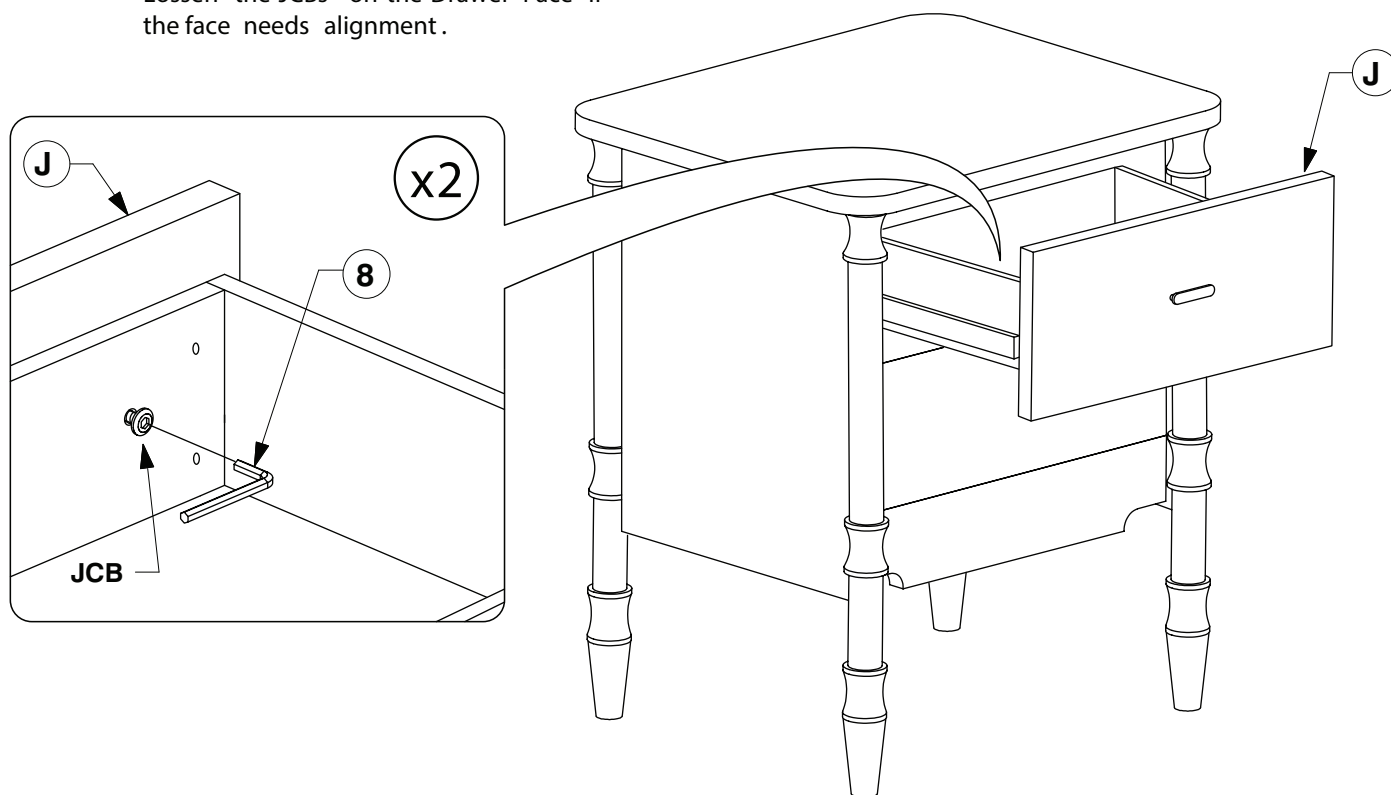

13 After the Drawer Faces (J) are aligned, secure with wood screws.

