


HEADBOARD HERMINE

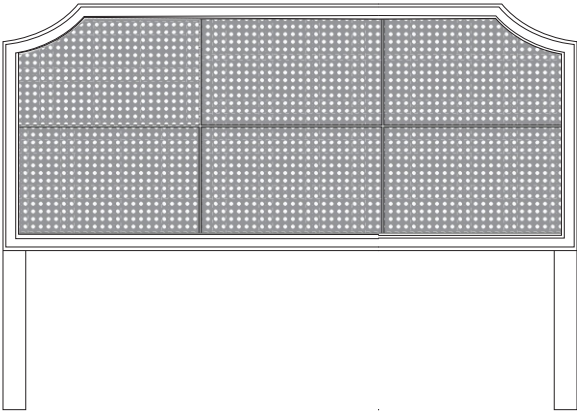




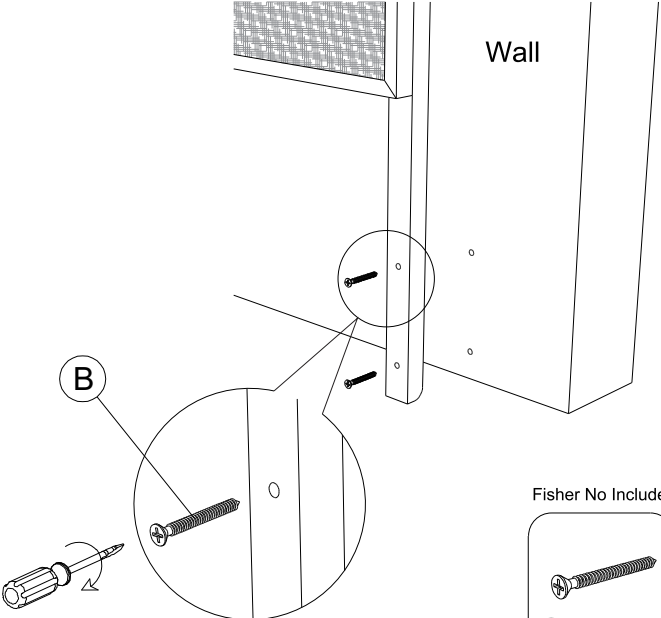

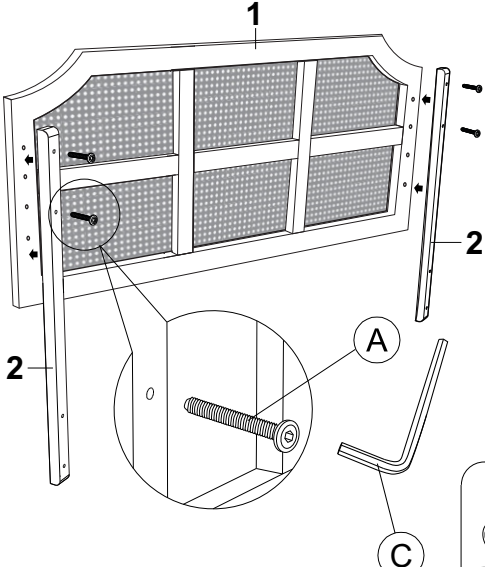







Tools:



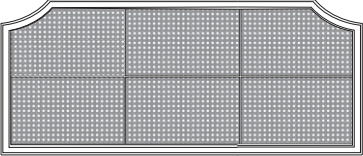HARDWARE LIST		PART LIST	
<div>A</div> <div>4 Pcs</div>		<div>C</div> <div>1 Pc</div>	
<div>B</div> <div>4 Pcs</div>			<div>1 Pc</div>
			<div>2 Pcs</div>
ASSEMBLY STEPS		2	<p>Attach the headboard to the wall with screws using a screwdriver and you're done.</p>  <div>Fisher No Include</div> 
1	<p>Attach part 2 to part 1 using bolt with a L key.</p>  <div></div> <div>A X 4</div>		