


HEADBOARD LOUVRE

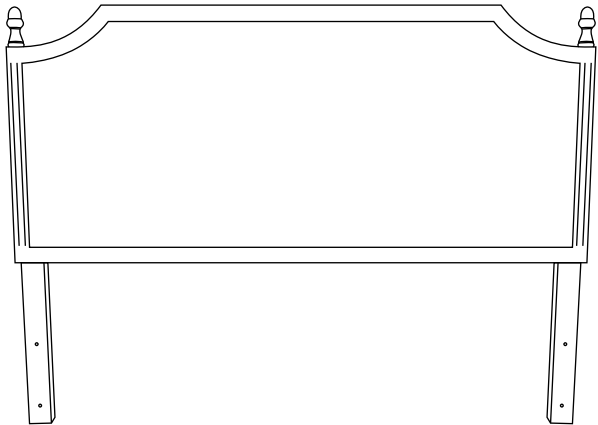










Tools:  
  


HARDWARE LIST

A		C	
4 Pcs		1 Pc	
B			
4 Pcs			

PART LIST

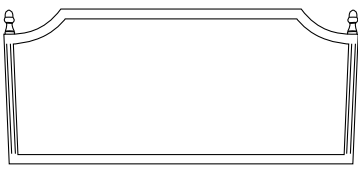
  
1 Pc


  
2 Pcs

ASSEMBLY STEPS

1


Attach part 2 to part 1 using bolt with a L key.

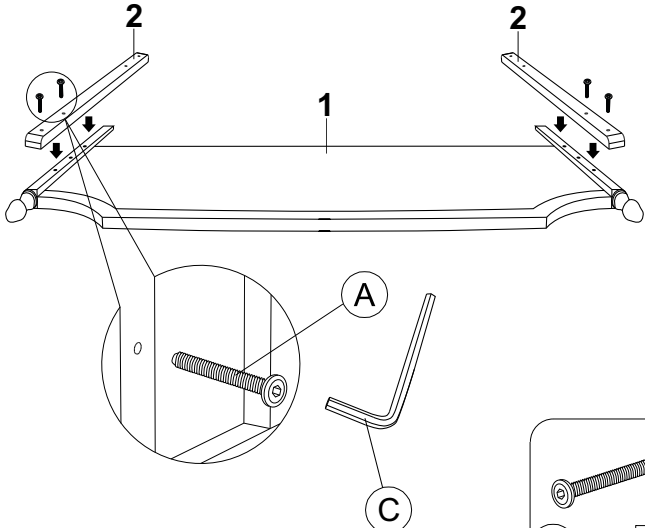


  
A X 4

2

Attach the headboard to the wall with screws using a screwdriver and you're done.

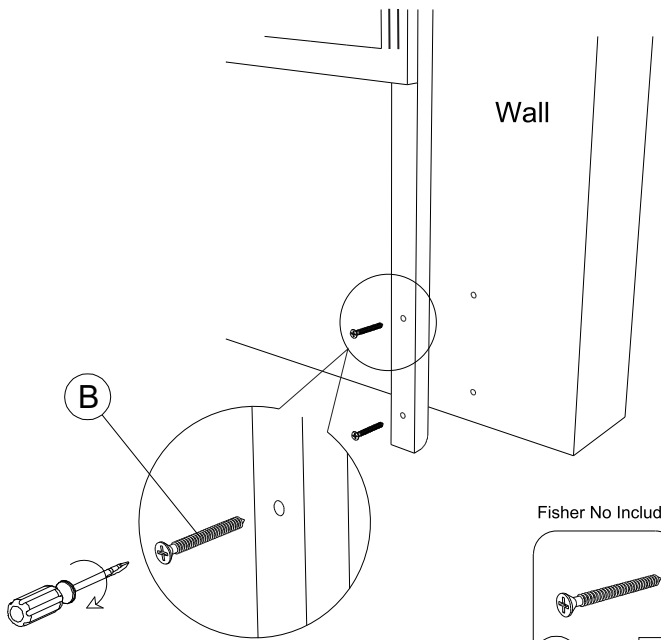

Fisher No Include

  
B X 4