
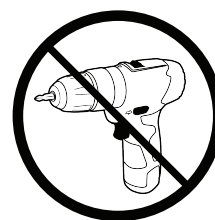
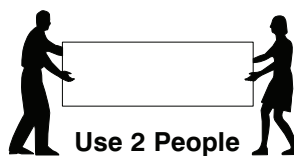


# 9014 2 Drawer Night Stand


## Assembly Instructions

WI-0924

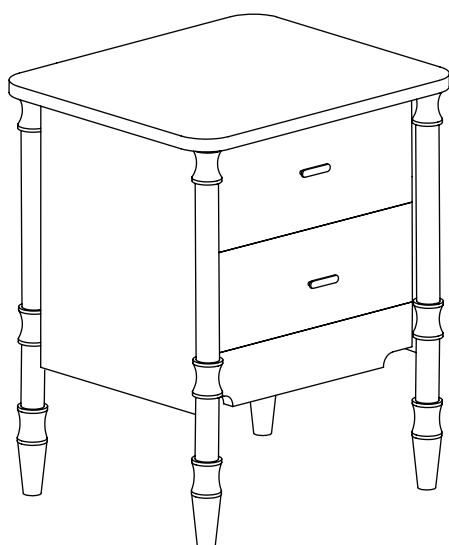


**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened


### 1 Parts List

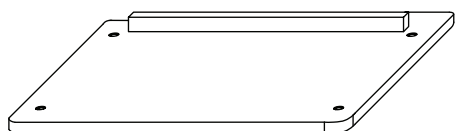


**A** Top Panel x 1




**B** Back Panel x 1

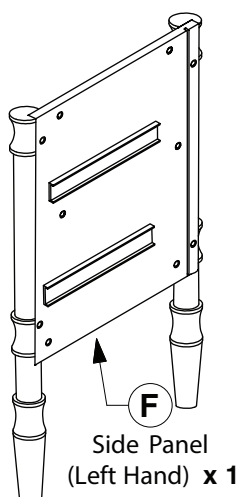


**F** Side Panel (Left Hand) x 1

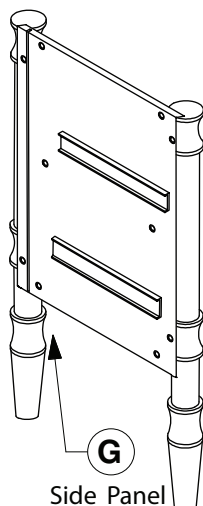


**G** Side Panel (Right Hand) x 1



**K** Drawer Side (Left Hand) x 2




**L** Drawer Side (Right Hand) x 2




**C** Support Bar (Upper) x 2




**D** Support Bar Front (Bottom) x 1



**E** Support Rear Bar x 1



**H** Drawer Back x 2

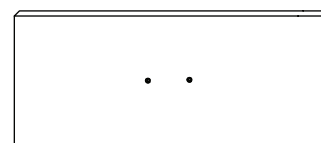

**J** Drawer Face x 2











**M** Drawer Bottom x 2

# 9014 2 Drawer Night Stand


## Assembly Instructions

WI-0924


### 2 Hardware List

- |  |  |   |   |
|--|--|---|---|
| <br><b>1</b> M6 x 15mm<br>JCB x 24        | <br><b>2</b> 'L' Bracket<br>(5005-3) x 12 | <br><b>3</b> M4 x 16mm<br>Wood Screw x 6 | <br><b>4</b> M4 x 20mm<br>Wood Screw x 8 |
| <br><b>5</b> M4 x 25mm<br>Wood Screw x 16 | <br><b>6</b> Handle(3321-64)<br>x 2       | <br><b>7</b> M4 x 20mm<br>Wood Screw x 4 | <br><b>8</b> Allen Key<br>x 1            |


### 3 Assemble the Drawer Sides (K & L) to the Drawer Face (J).

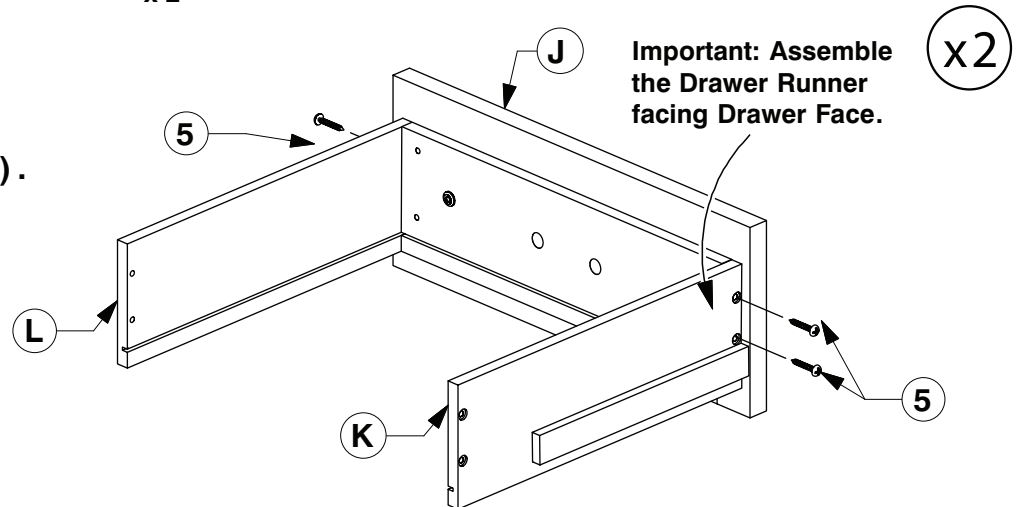

### 4 Slide the Drawer Bottom (M) into the groove on the Drawer Sides (K & L).

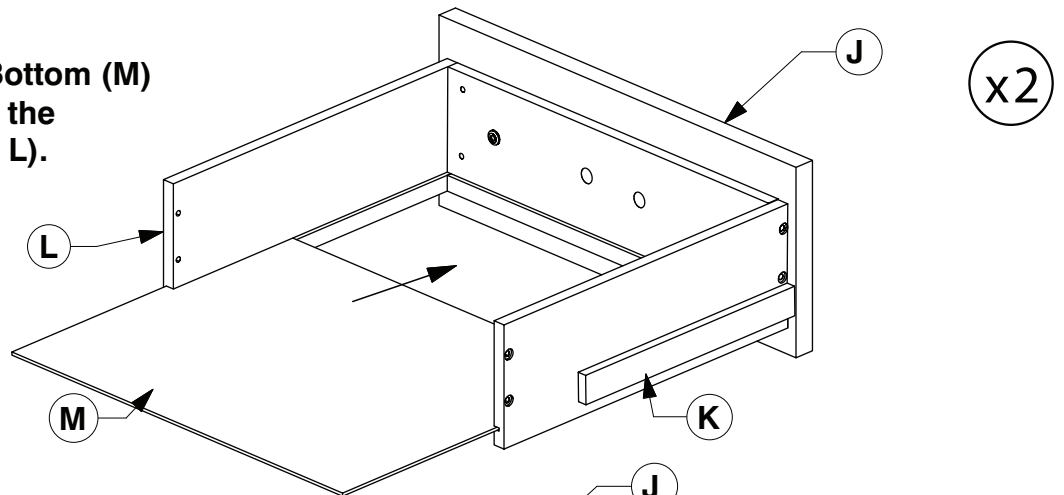

### 5 Assemble the Drawer Back (H) to the Drawer Sides (K & L). Fit the Handle to the Drawer Face (J).

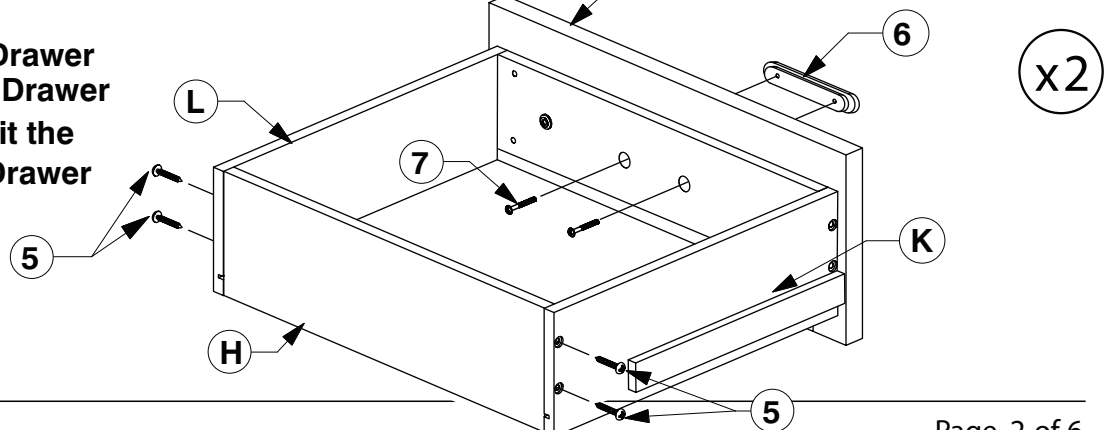


# 9014 2 Drawer Night Stand


## Assembly Instructions

WI-0924

- 6** Fit the 'L' Bracket (2) to the Side Panel (F & G).

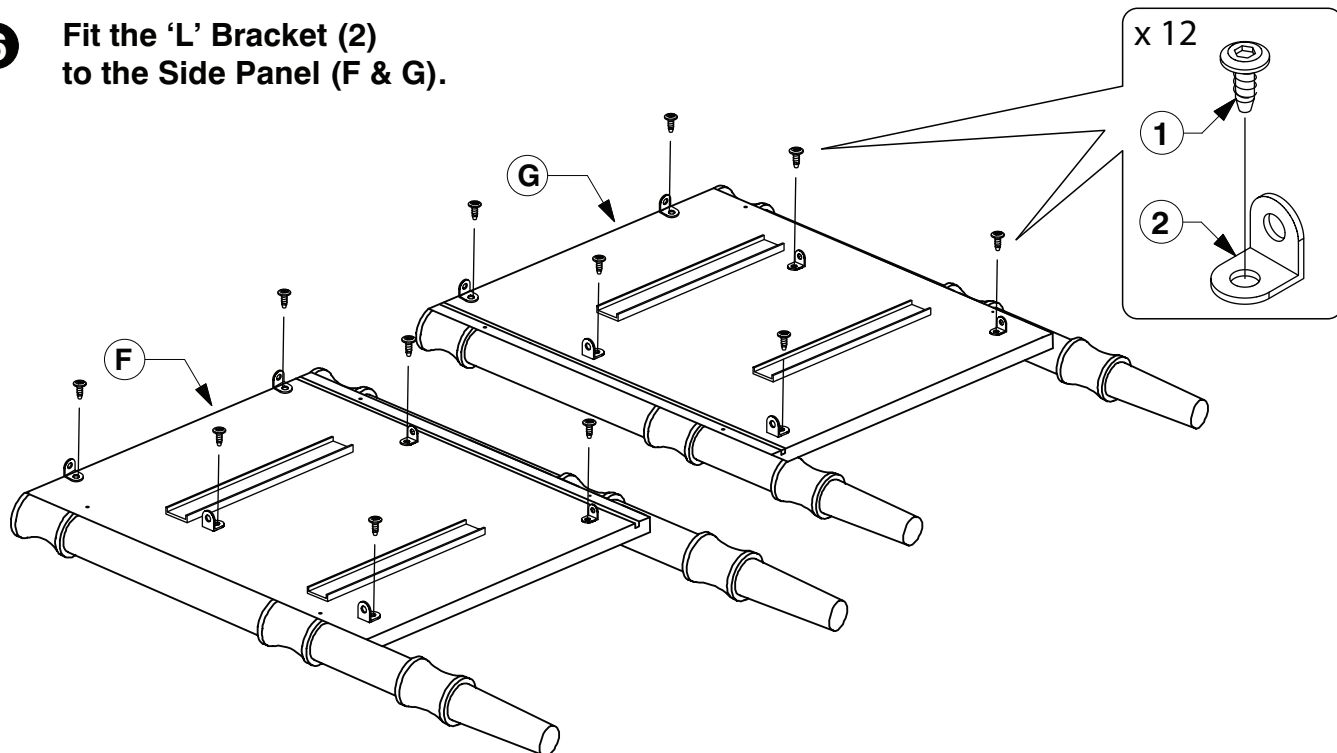

- 7** Assemble the Side Panel (F & G) to the Top Panel (A).

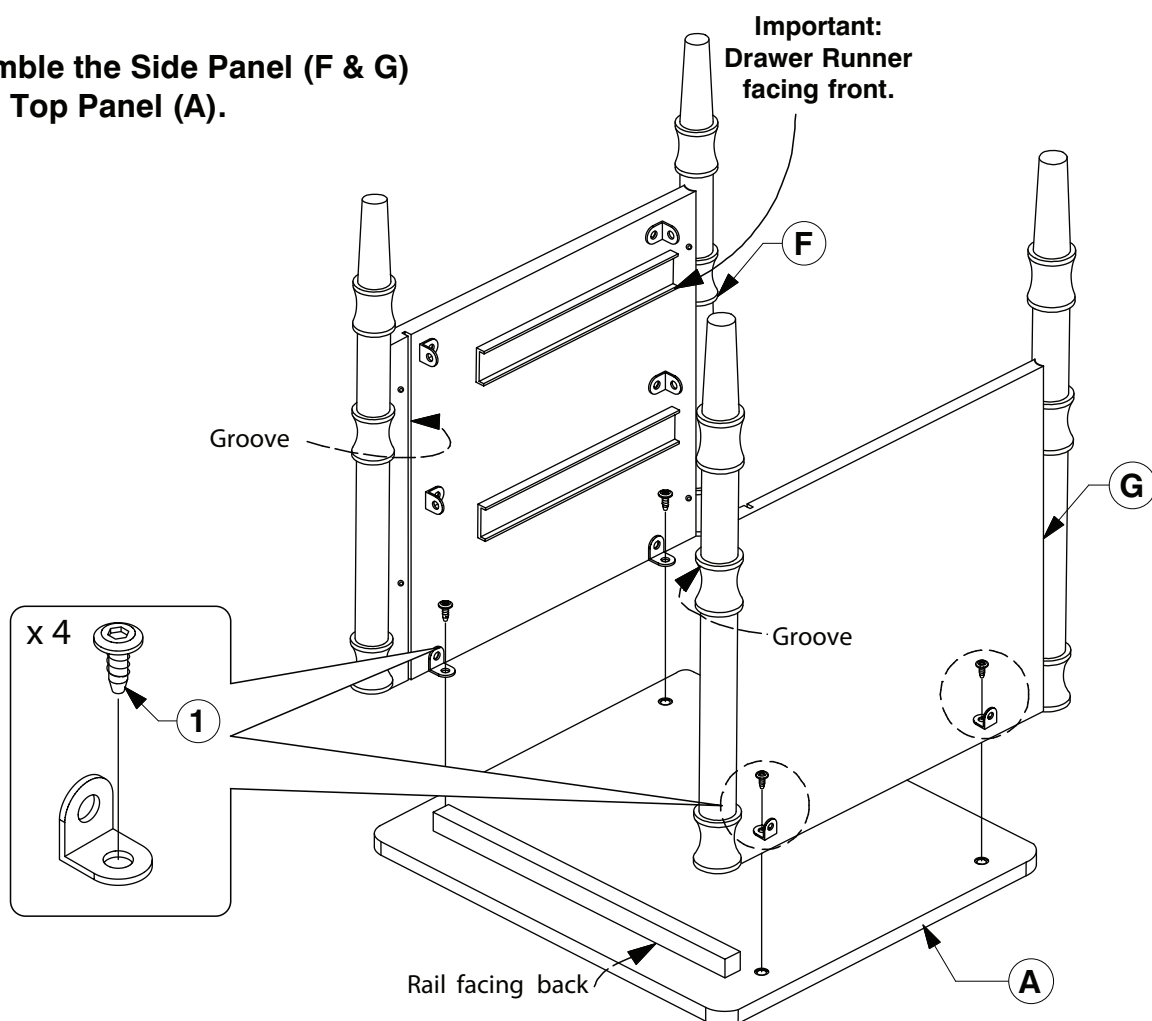


# 9014 2 Drawer Night Stand


## Assembly Instructions

WI-0924

- 8** Fit the Support Bar (Upper) (C) and Support Bar Front & Rear (Bottom) (D & E) to the Side Panel (F & G).

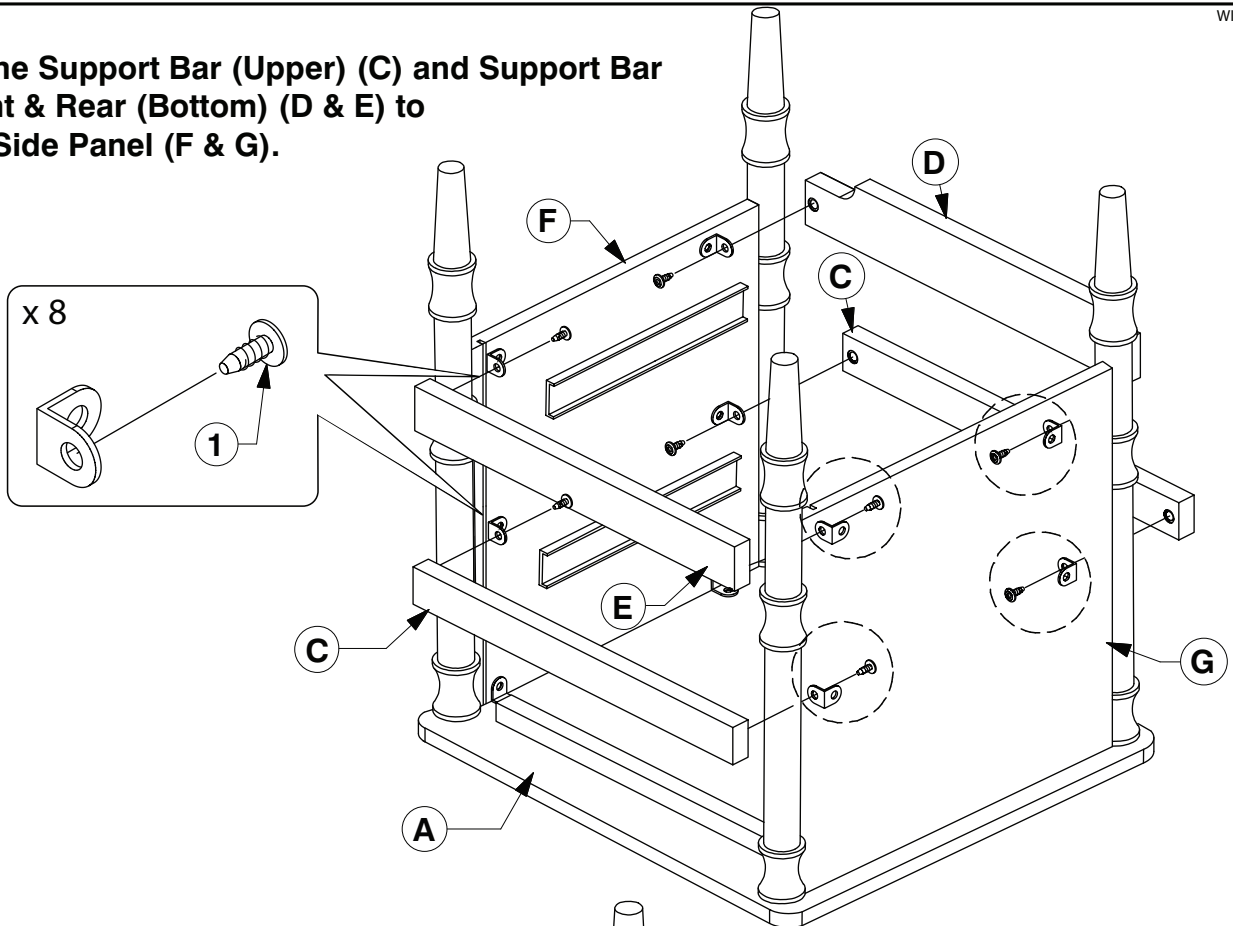

- 9** Slide the Back Panel (B) into the groove on the back of the Side Panel (F & G).

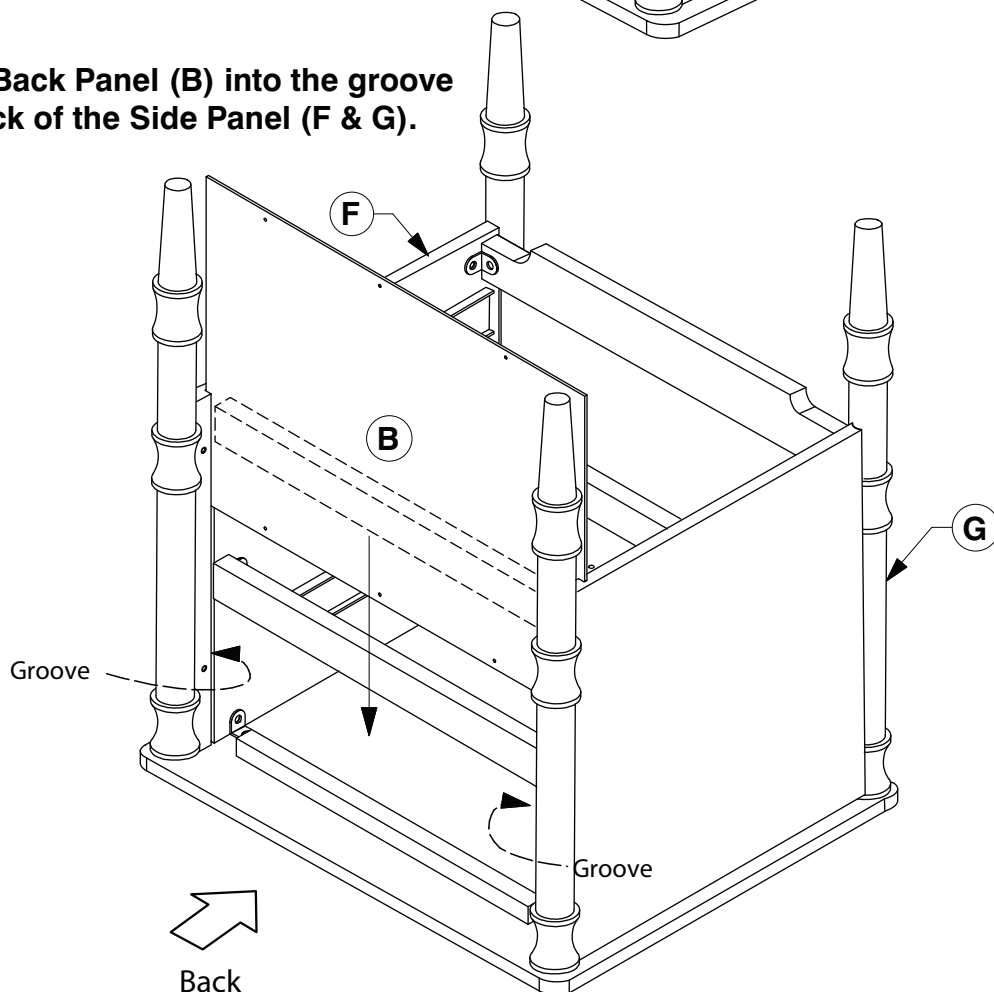


# 9014 2 Drawer Night Stand


## Assembly Instructions

WI-0924

- 10** Use Screw to tighten the Back Panel (B) to the back of frame.

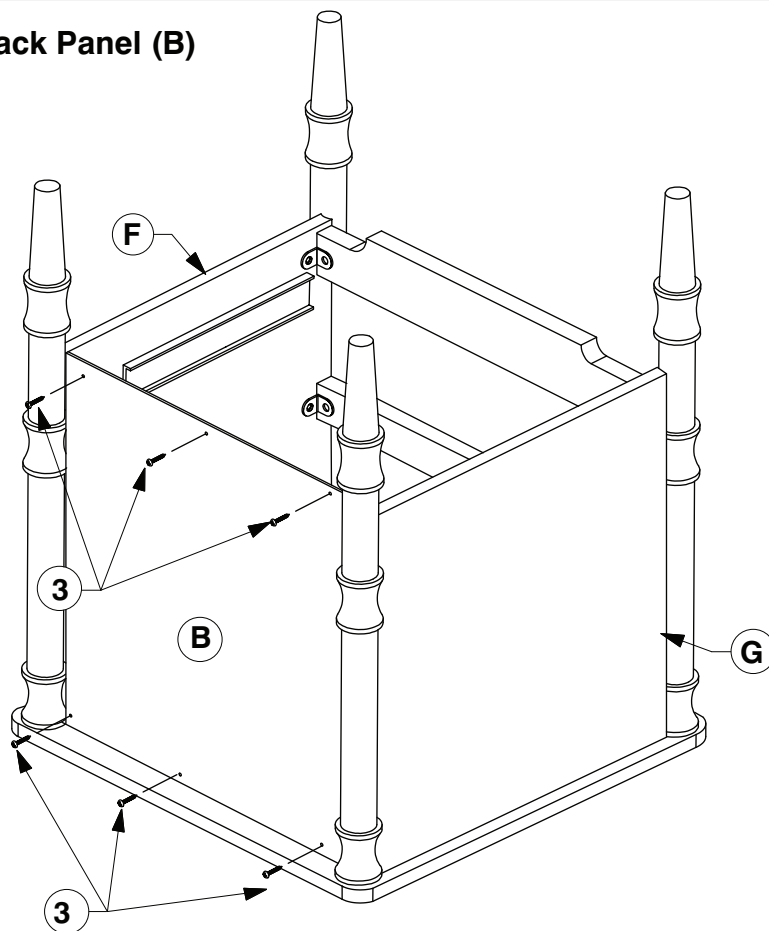

- 11** Fix the Drawer Box to the casegood body.

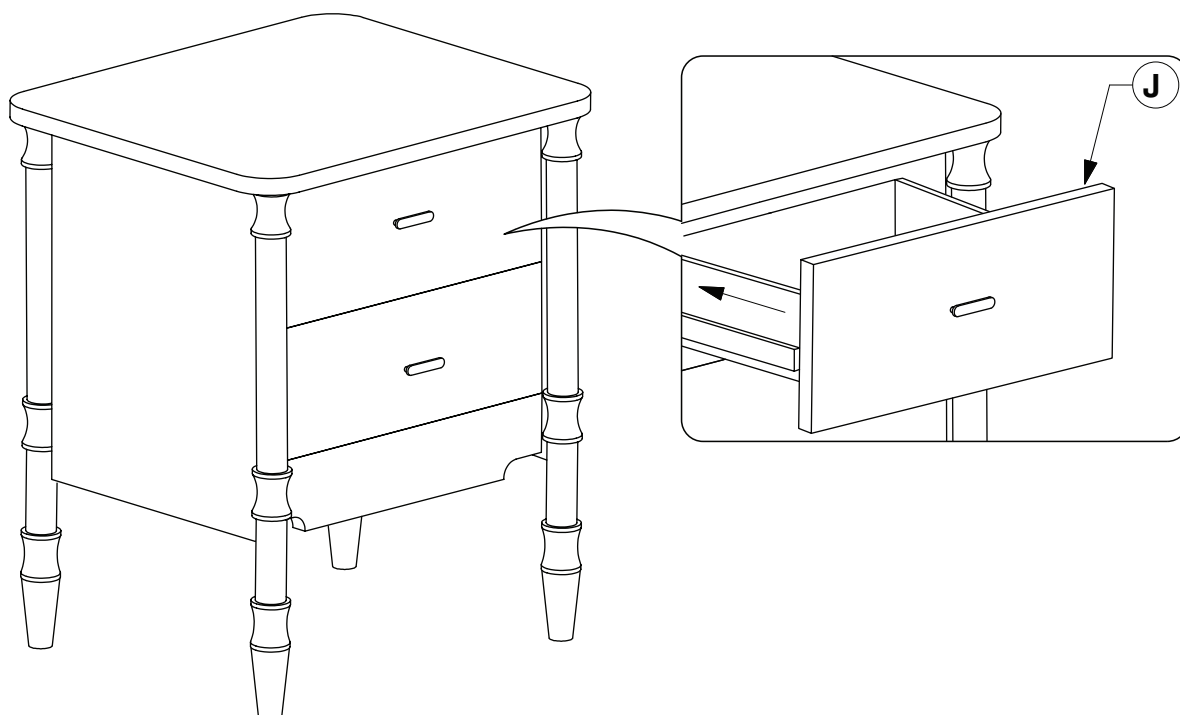


# 9014 2 Drawer Night Stand

## Assembly Instructions

WI-0924

### 12 Fit and adjust the Drawer Face (J) .

\* NOTE: Before fitting the Wood Screws .  
Loosen the JCBs on the Drawer Face if  
the face needs alignment .

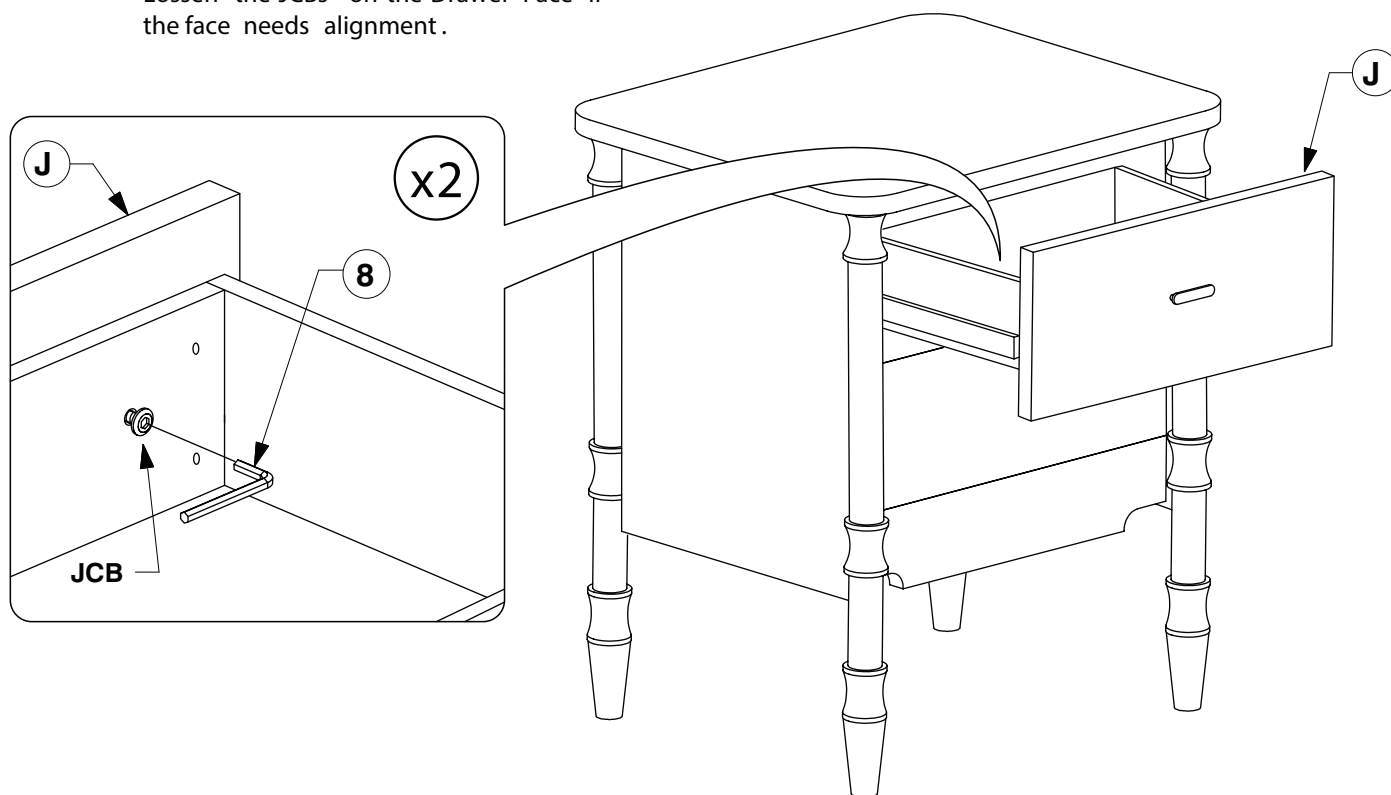

### 13 After the Drawer Faces (J) are aligned, secure with wood screws.

