




Assembly Instructions


0024

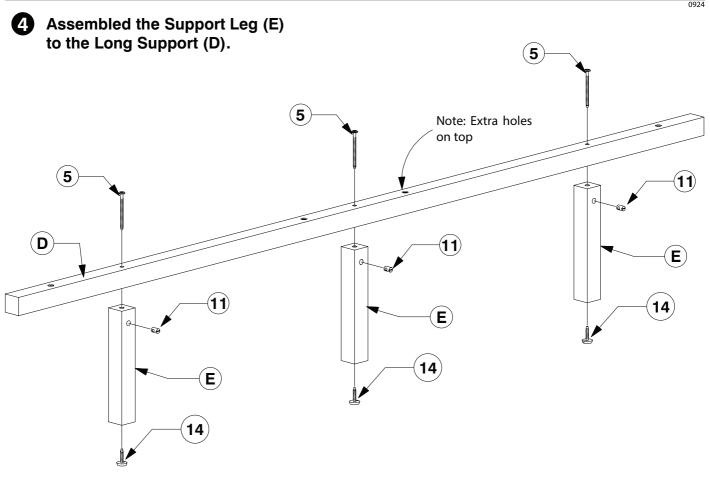




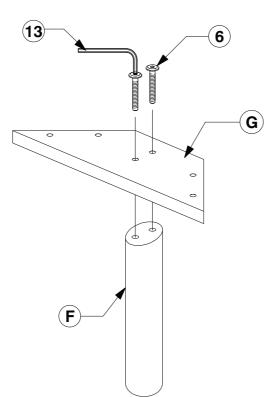




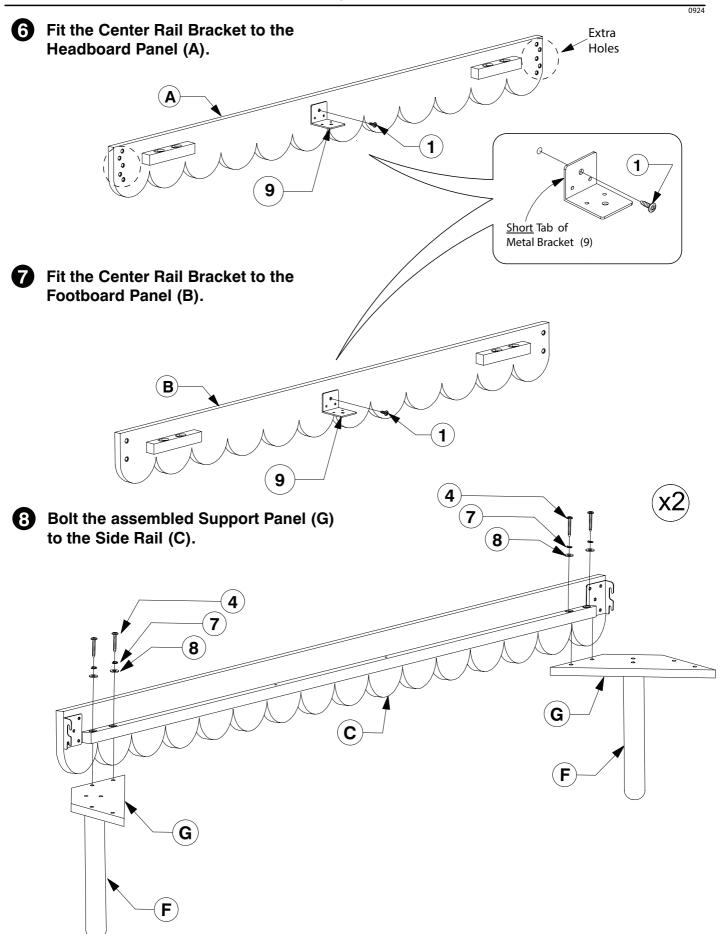


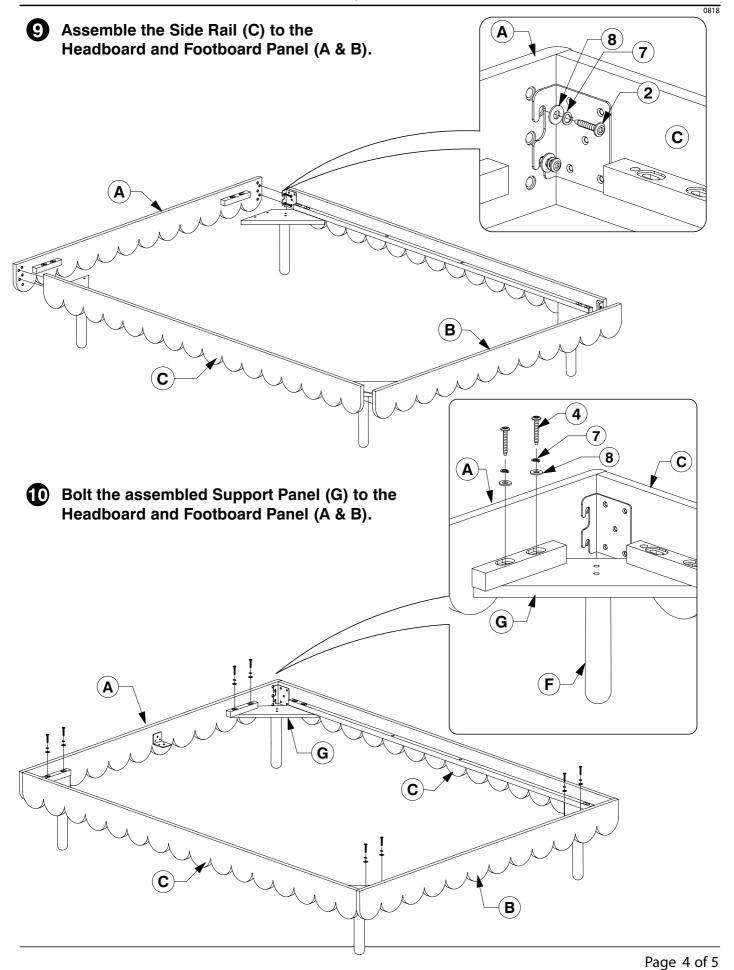

Assembly Instructions

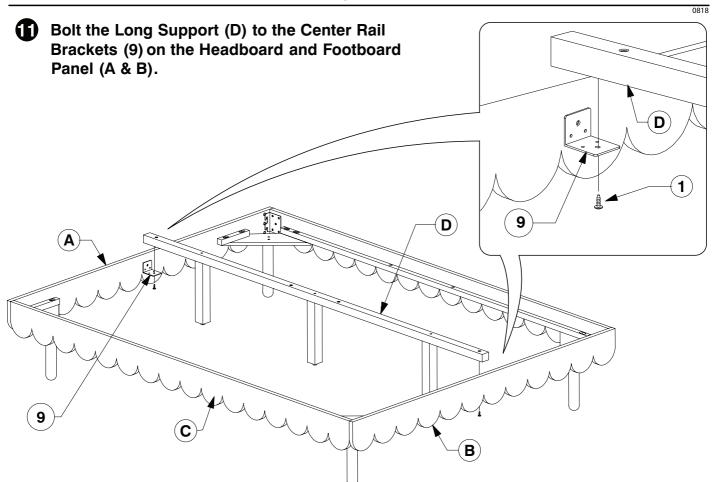

Bolt & screw the Bed Slats (H) to the Side Rail (C).

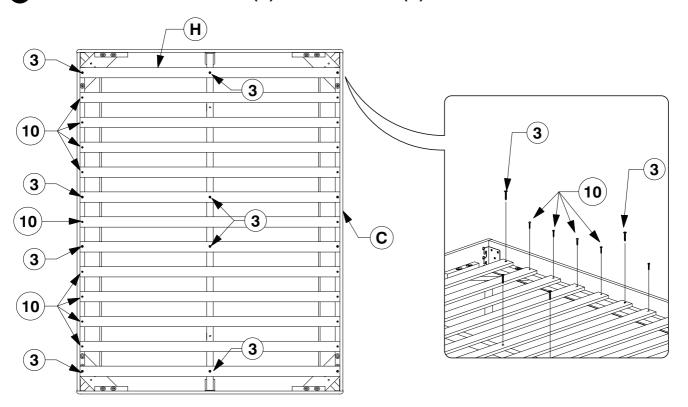

9811 Queen Headboard

