
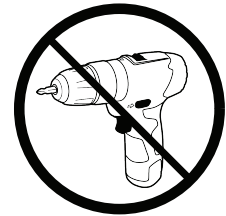
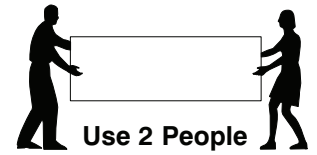


0110-4 Daybed

Assembly Instructions







WII-1224

1 Assembled View

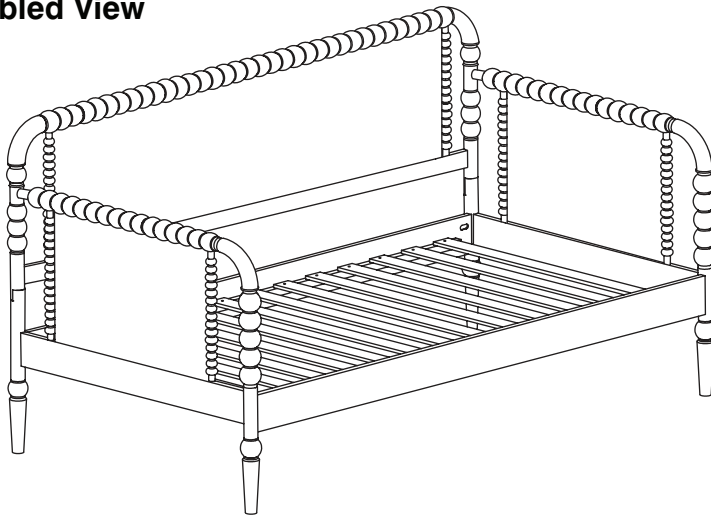


Note: Do not assemble using power tools. This can cause the bolts to be overtightened







2 Parts in this Box

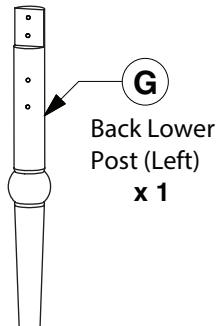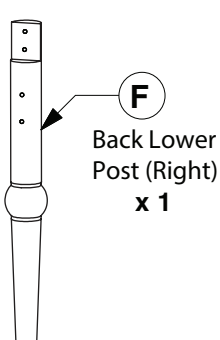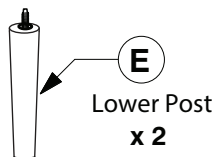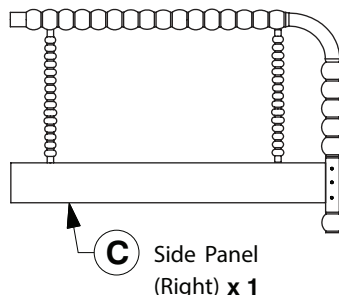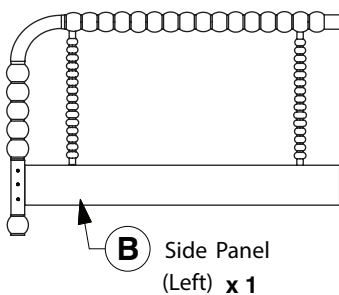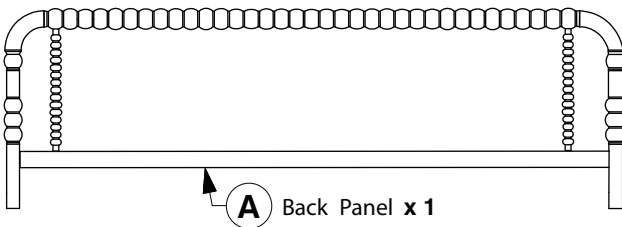

Slats are packed in separately in Box B

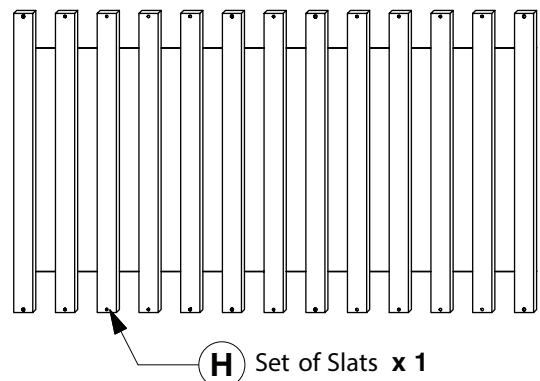

3 Hardware in this Box

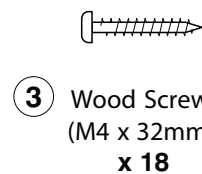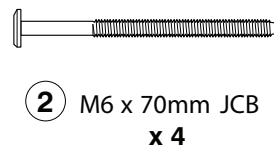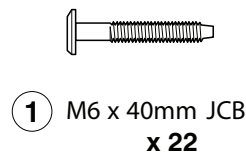


0110-4 Daybed


Assembly Instructions

WII-1224

- 4** Assemble the Back Lower Post (F & G) to the Side Panel (D).

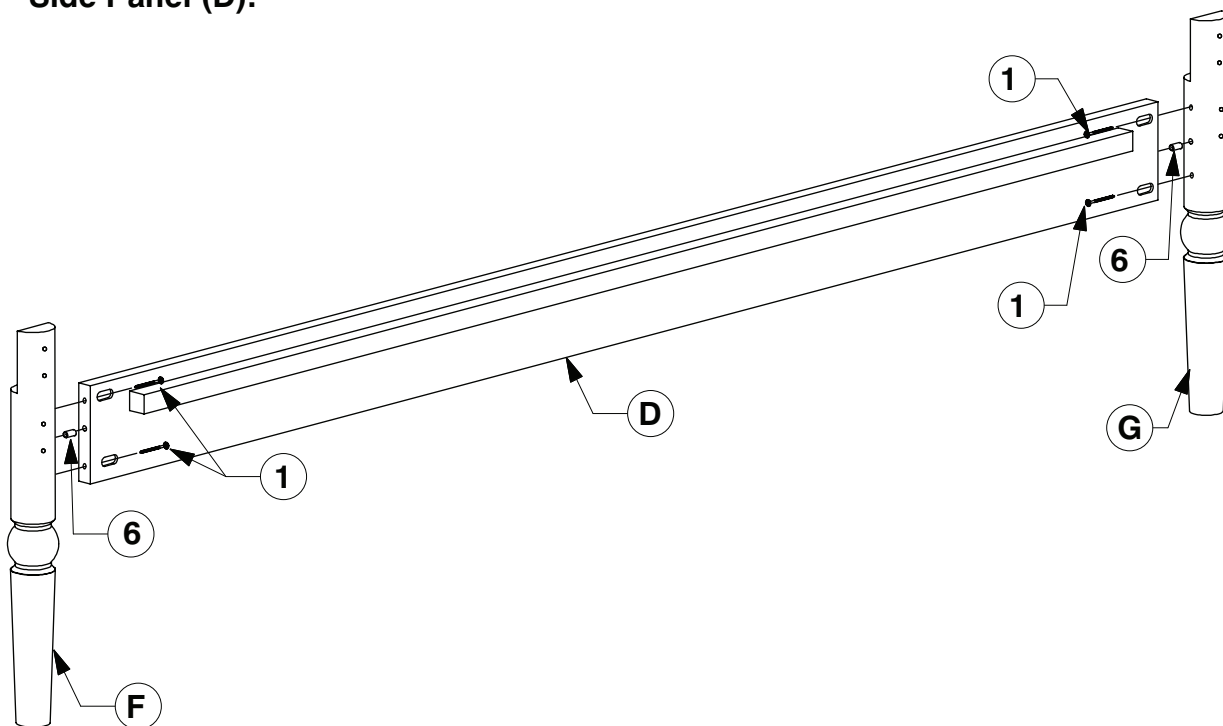

- 5** Assemble the Back Lower Post (F & G) to the the Back Panel (A).

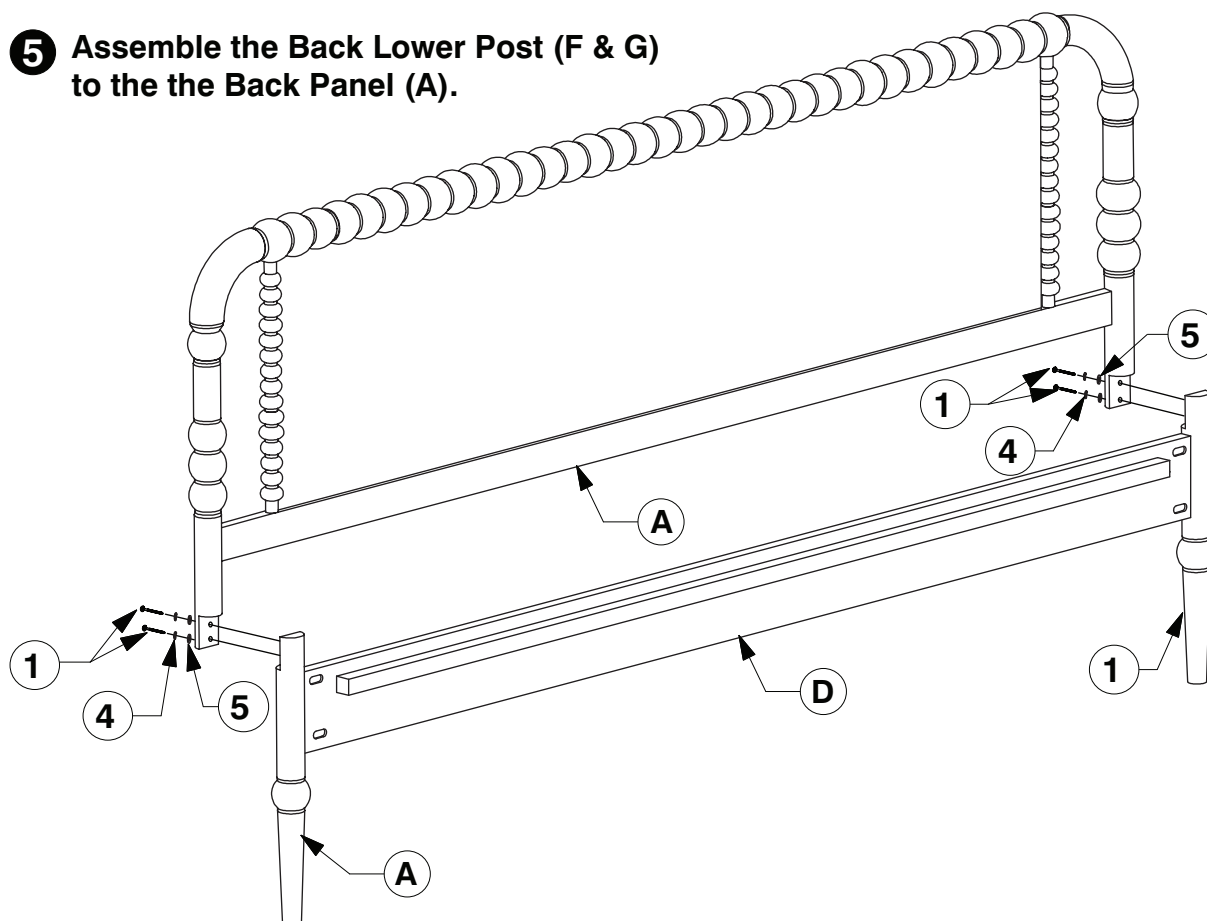


0110-4 Daybed

Assembly Instructions



WII-1224

- 6** Fit the Lower Post (E) to the Side Panel (B/C).

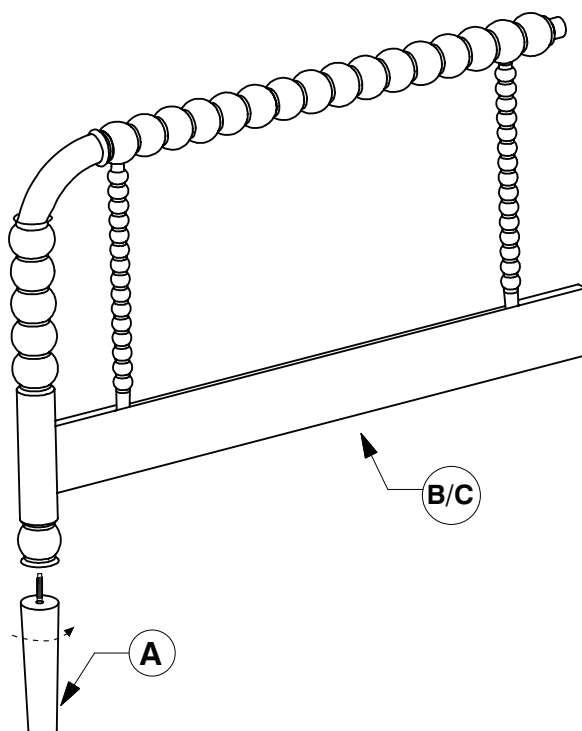

x2

- 7** Assemble the Side Rail (D) to the Side Panel (B & C).

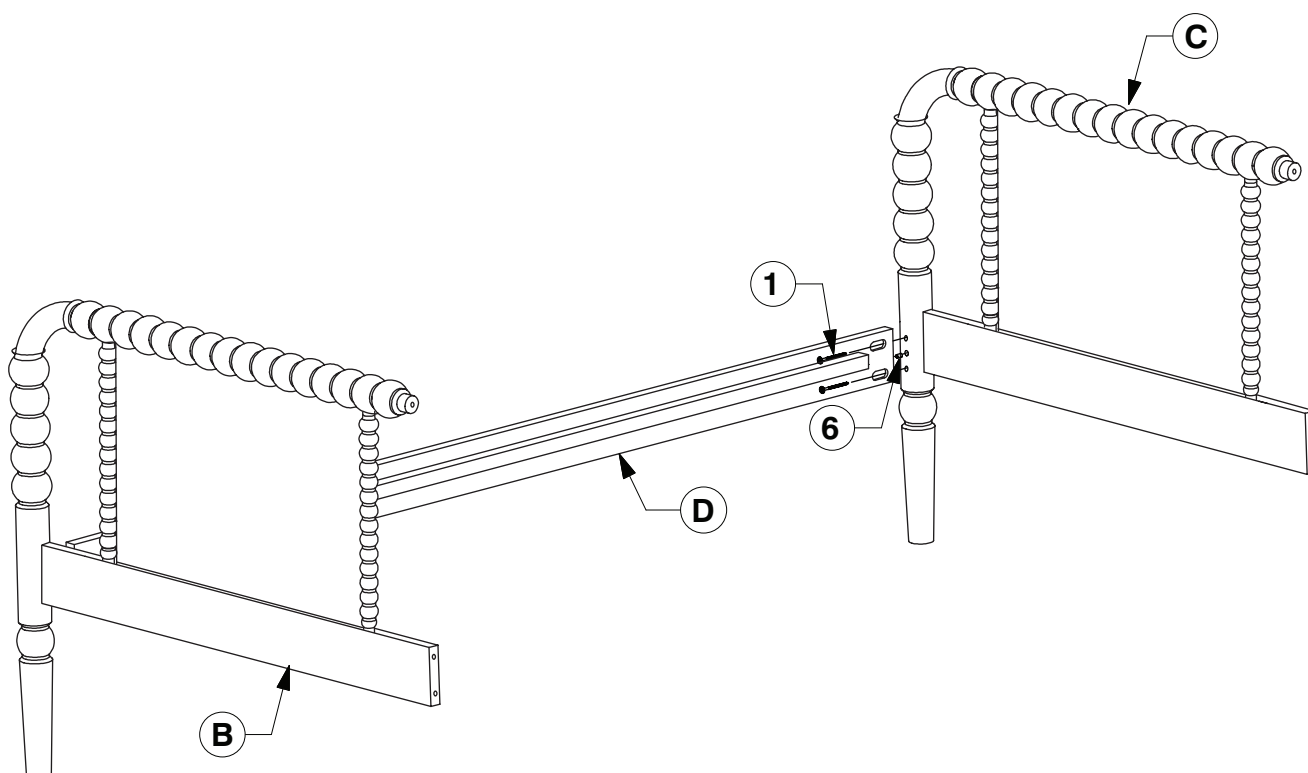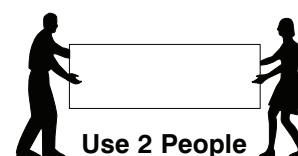


0110-4 Daybed


Assembly Instructions

WII-1224

- 8** Assemble Side Panel (B/C) to the Back Panel (A).

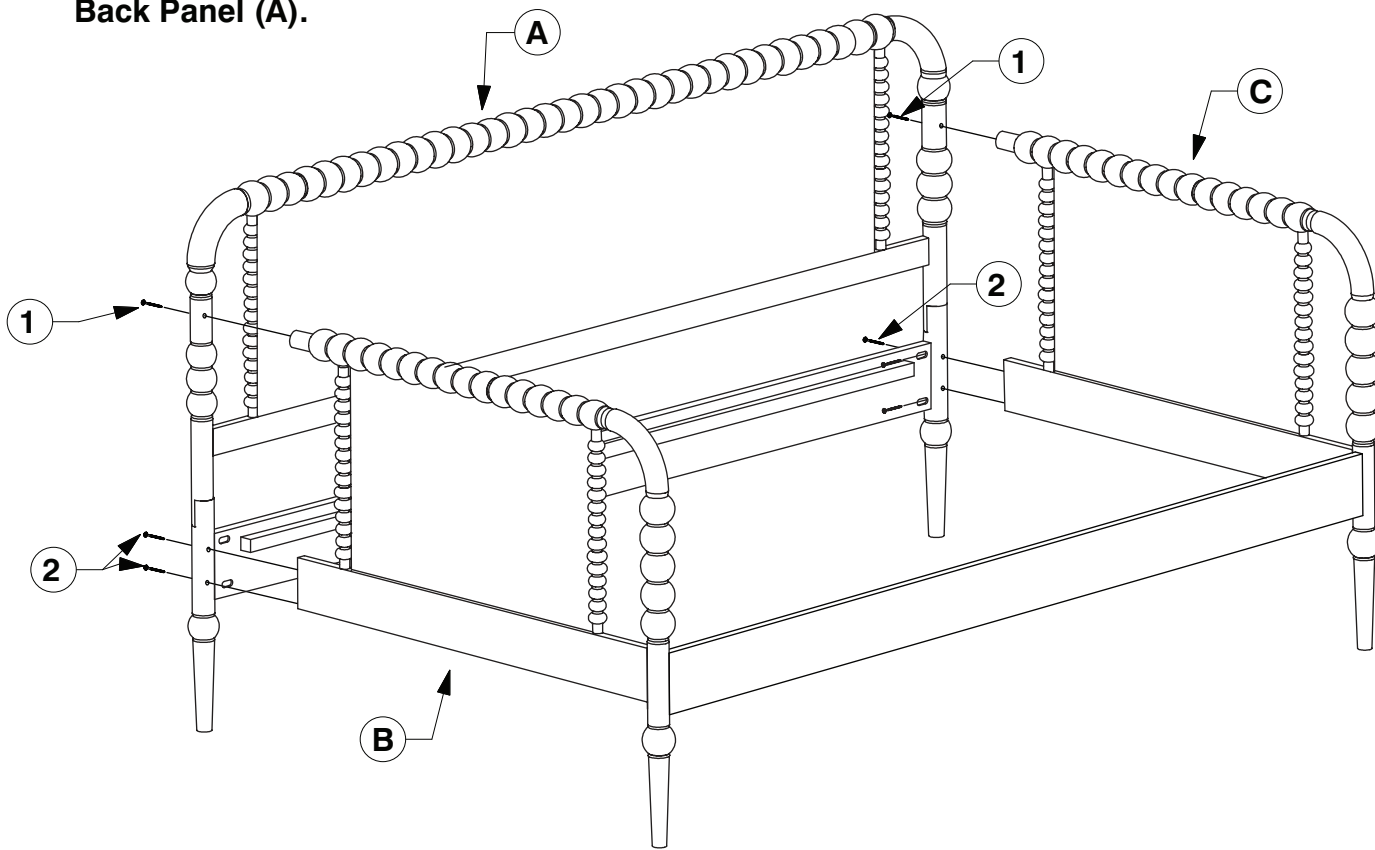

- 9** Bolt the Set of Slats (H) between the Side Rail (D).

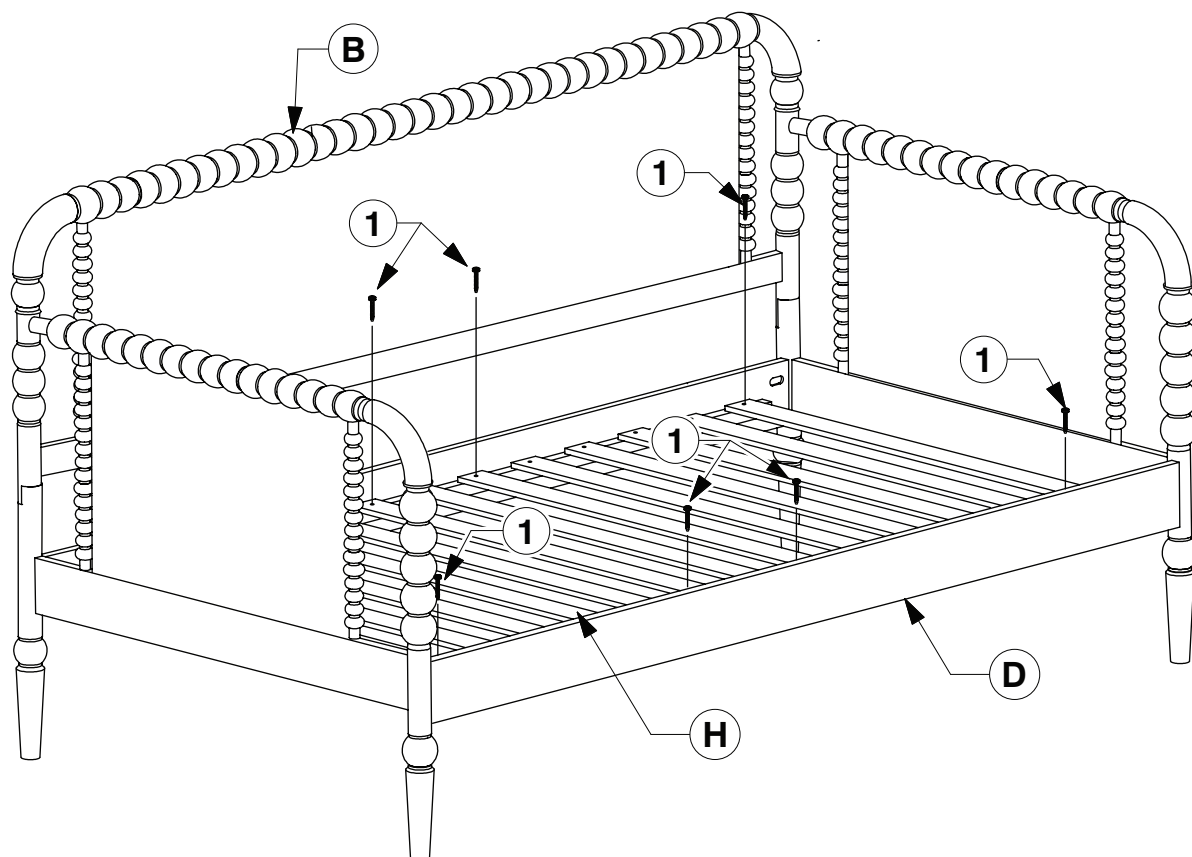

0110-4 Daybed

Assembly Instructions

WII-1124

- 10** Screw the Set of Slats (H) between the Side Rail (D).
Finally, fit the assembled Trundle.

