



SW 8650 - F/Q/K

1.

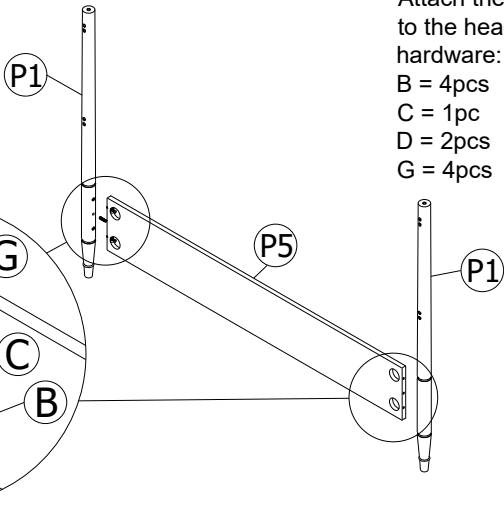


Attach the headboard post (P1)
to the headboard rail (P5) using
hardware:
B = 4pcs
C = 1pc
D = 2pcs
G = 4pcs

2.

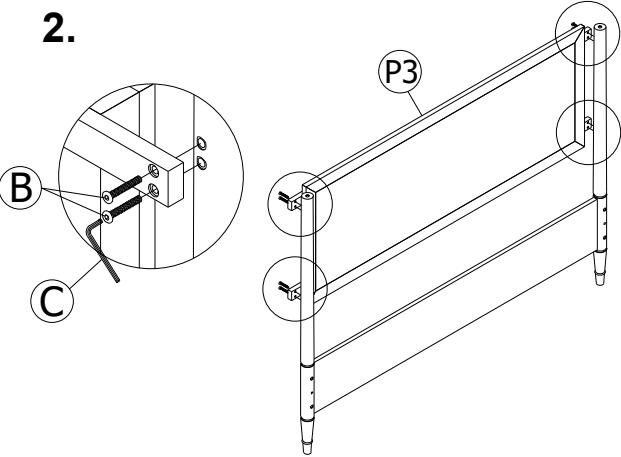


Attach the headboard panel (P3)
to the headboard post (P1) using
hardware:
B = 8pcs
C = 1pc

3.

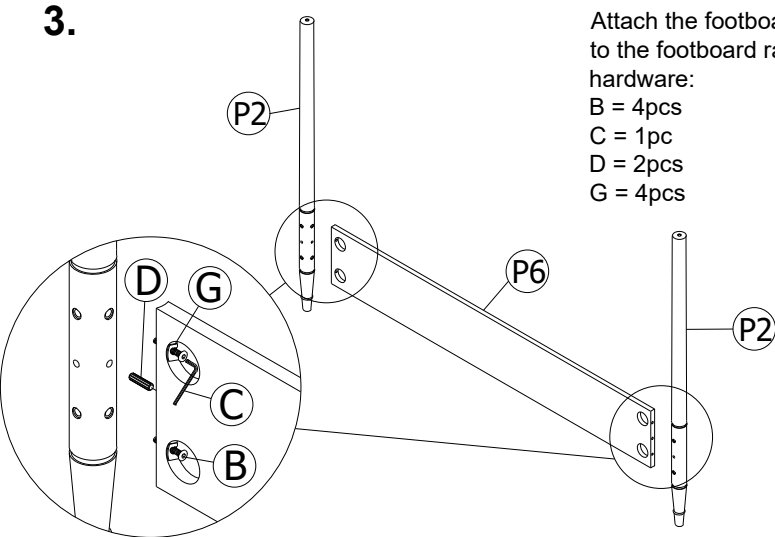

Attach the footboard post (P2)
to the footboard rail (P6) using
hardware:
B = 4pcs
C = 1pc
D = 2pcs
G = 4pcs

4.

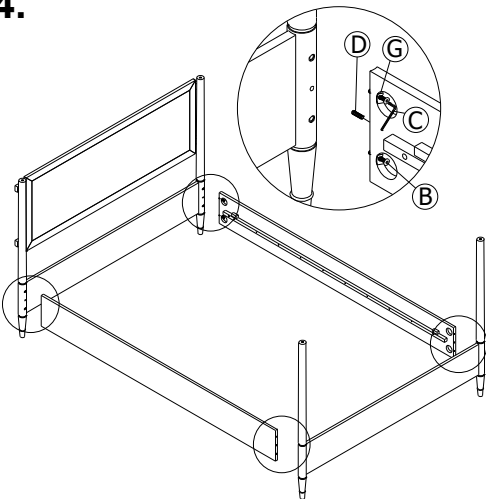

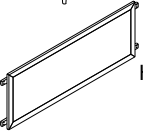









Attach the side rail(P7) to the
headboard post (P1) and
footboard post (P2). You
will need to use hardware:
B = 8pcs
C = 1pc
D = 4pcs
G = 8pcs








WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST


P1		Headboard Post	=	L - 1pc R - 1pc
P2		Footboard Post	=	L-1pc R-1pc
P3		Headboard Panel	=	1pc
P4		Headboard Upper Rail	=	4pcs
P5		Headboard Rail	=	1pc
P6		Footboard Rail	=	1pc
P7		Side Rail	=	2pcs
P8		Bed Slats	=	14pcs
P9		Center Support Rail	=	2pcs
P10		Support Leg	=	4pcs

HARDWARE LIST

A		M6 X 50MM JCBC	=	4pcs
B		M6 X 40MM JCBC	=	24pcs
C		ALLEN KEY M4 WITH BALL	=	1pc
D		Ø8 X 30 MM WOOD DOWEL	=	8pcs
E		M4 X 25MM SCREW	=	8pcs
F		ADJUSTER	=	4pcs
G		U WASHER	=	16pcs




5.

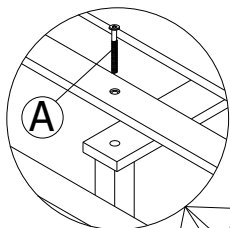


Attach the support leg (P10) to the center support rail (P9) and bed slats (P8) using hardware:
A = 4pcs
C = 1pc


Fix the adjuster (F) to the support leg (P10) using hardware:
F = 4pcs

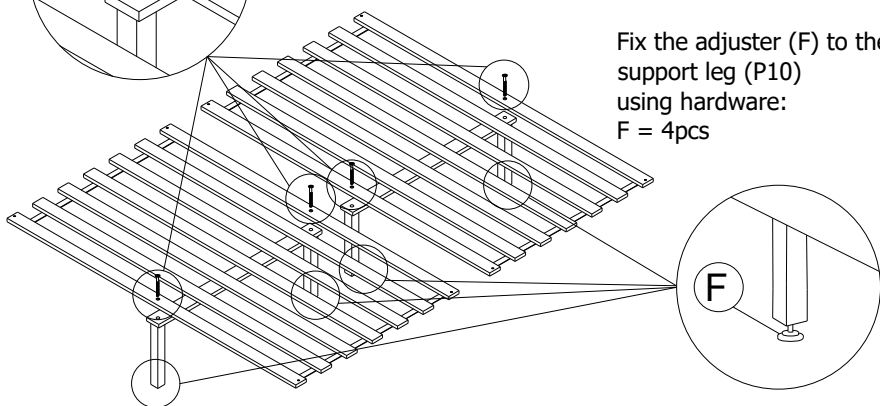

6.

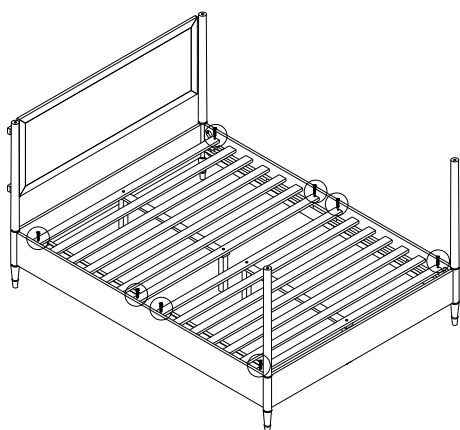


Lay the bed slats (P8) between the side rail (P7) using hardware:
E = 8pcs

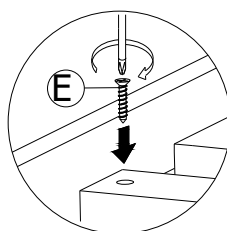


****Apply pressure with your knee to the side rail whilst attaching the slats to ensure that the slats are flush against the inside of side rail****

7.

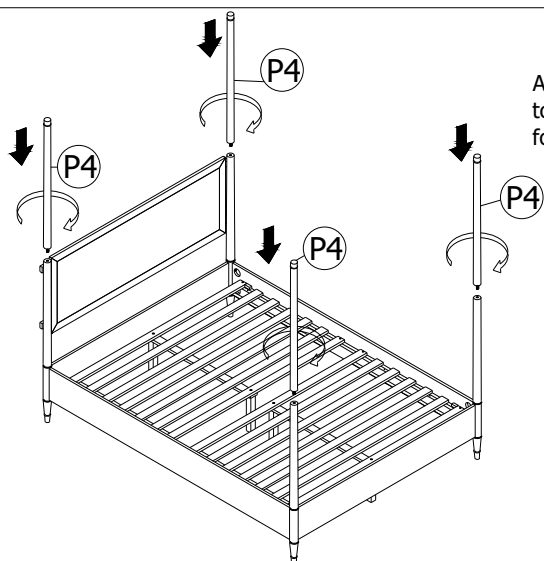

Attach the headboard upper rail (P4) to the headboard post (P1) and footboard post (P2)



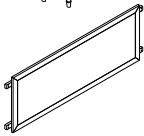





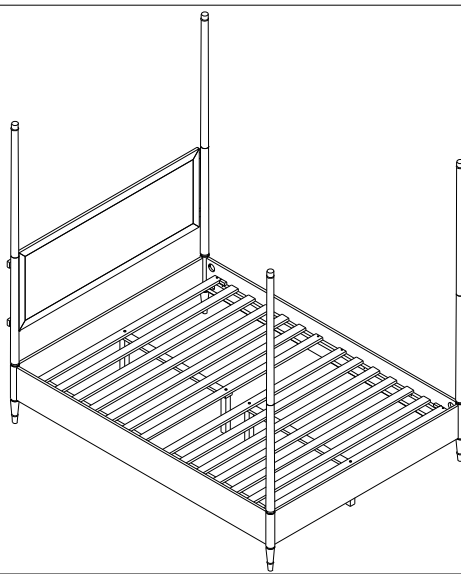

8. FULLY SET UP










WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST

P1		Headboard Post	= L - 1pc R - 1pc
P2		Footboard Post	= L-1pc R-1pc
P3		Headboard Panel	= 1pc
P4		Headboard Upper Rail	= 4pcs
P5		Headboard Rail	= 1pc
P6		Footboard Rail	= 1pc
P7		Side Rail	= 2pcs
P8		Bed Slats	= 14pcs
P9		Center Support Rail	= 2pcs
P10		Support Leg	= 4pcs

HARDWARE LIST


A		M6 X 50MM JCBC	= 4pcs
B		M6 X 40MM JCBC	= 24pcs
C		ALLEN KEY M4 WITH BALL	= 1pc
D		Ø8 X 30 MM WOOD DOWEL	= 8pcs
E		M4 X 25MM SCREW	= 8pcs
F		ADJUSTER	= 4pcs
G		U WASHER	= 16pcs



ASSEMBLY INSTRUCTION

SW 8000-90D6D















REAR

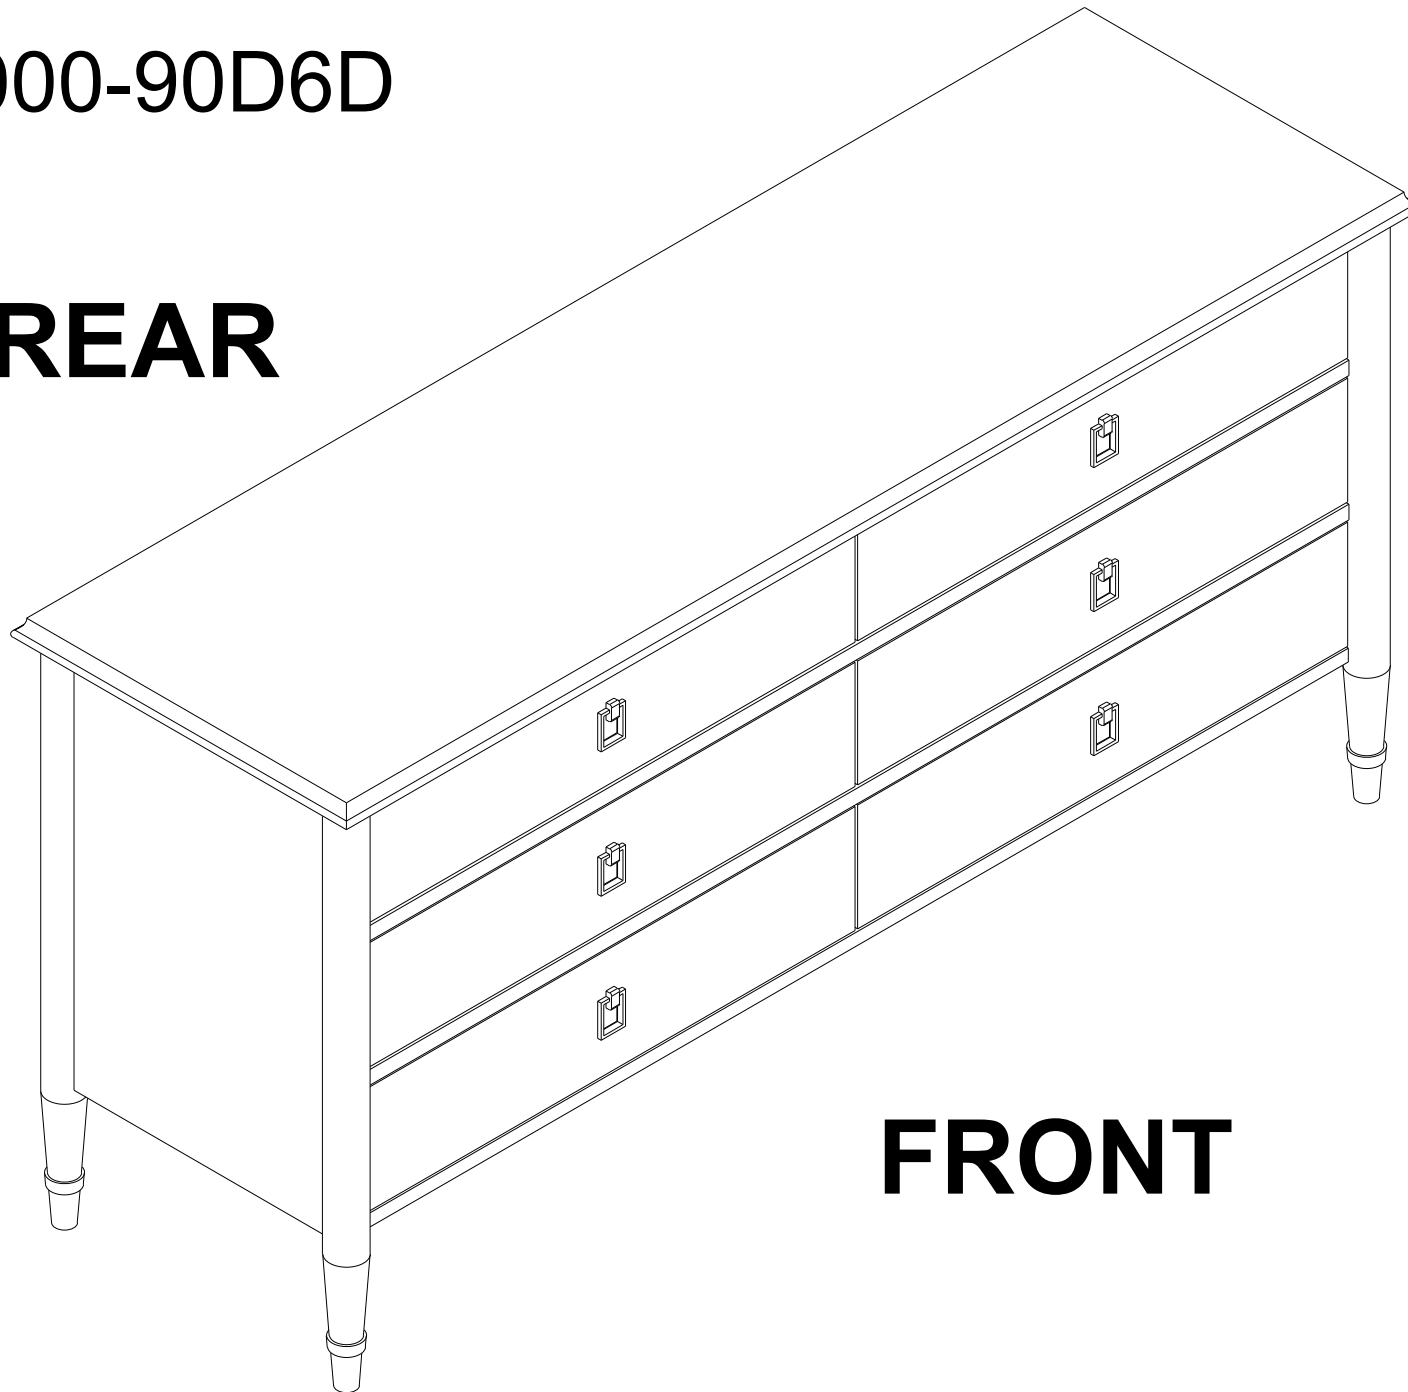










FRONT

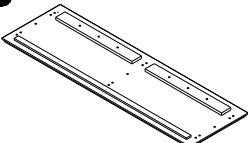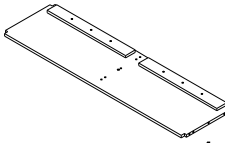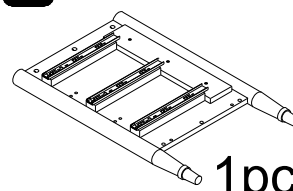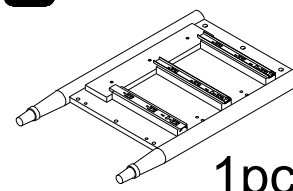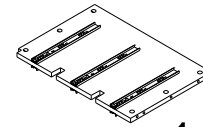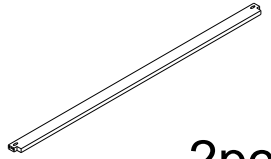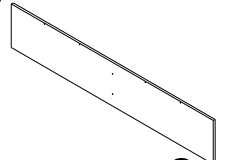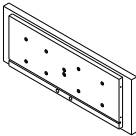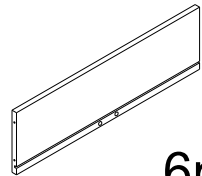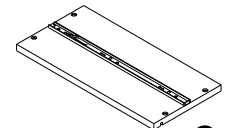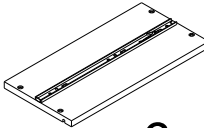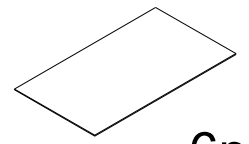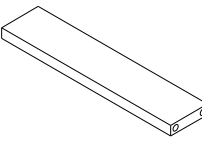


PART LIST

1 Top Panel  1pc	2 Bottom Panel  1pc	3 Side Panel(left)  1pc	4 Side Panel(right)  1pc	5 Division  1pc	6 Front Rail  2pcs
7 Back Panel  2pcs	8 Drawer Front Panel  6pcs	9 Drawer Rear Panel  6pcs	10 Drawer Side Panel(left)  6pcs	11 Drawer Side Panel(right)  6pcs	12 Drawer Base Panel  6pcs
13 Drawer Support Rail  6pcs	14 Drawer Support Rail  1pc				

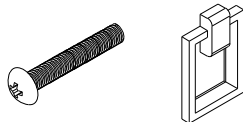
HARDWARE LIST

A MINI FIX SPREADING BOLT 24MM  18pcs	B MINIFIX HOUSING Ø15*12MM  18pcs	C WOOD DOWEL M8*30MM  44pcs	D CSK SCREW M4*30MM  16pcs	E CSK SCREW M4*25MM  48pcs	F HANDLE  6sets
G ADJUSTABLE  1pc	H JCBC M6*40MM  1pc	I ALLEN KEY M4  1pc			

STEP 1

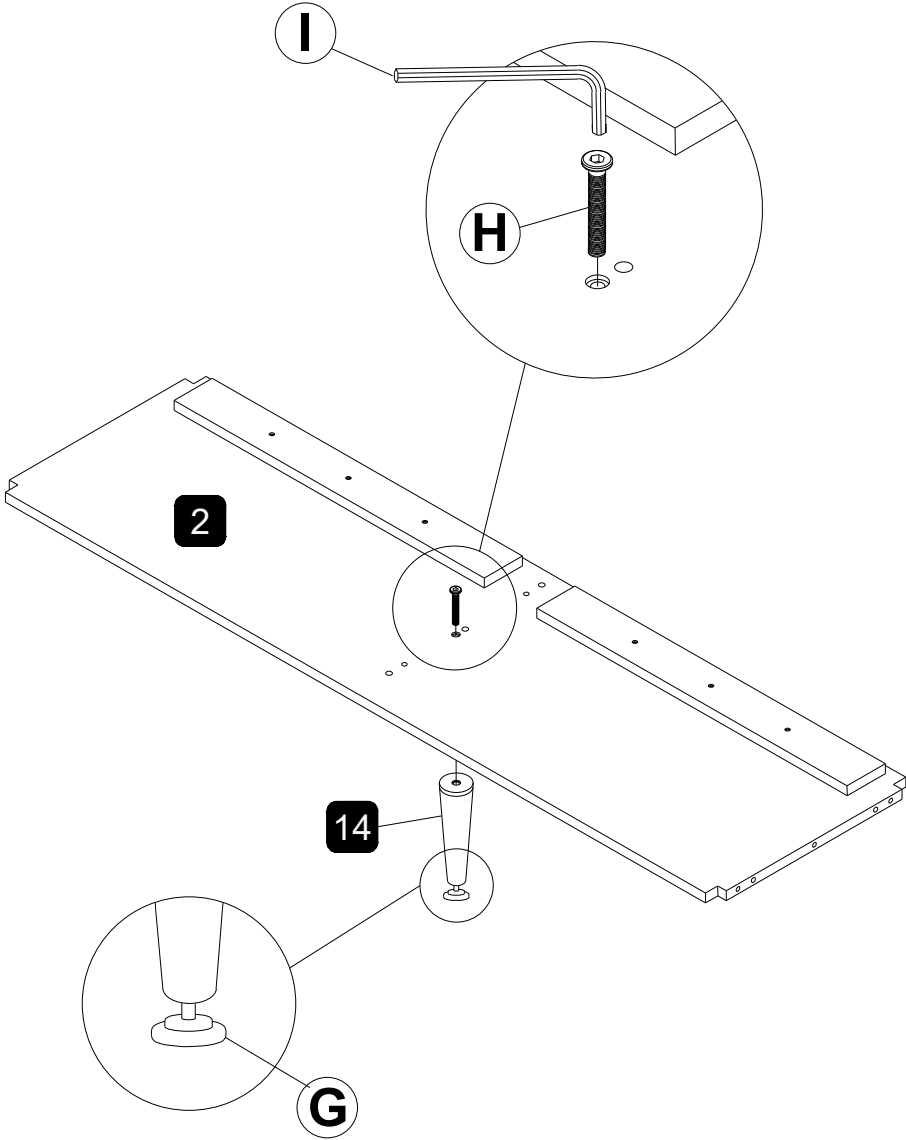

STEP 2

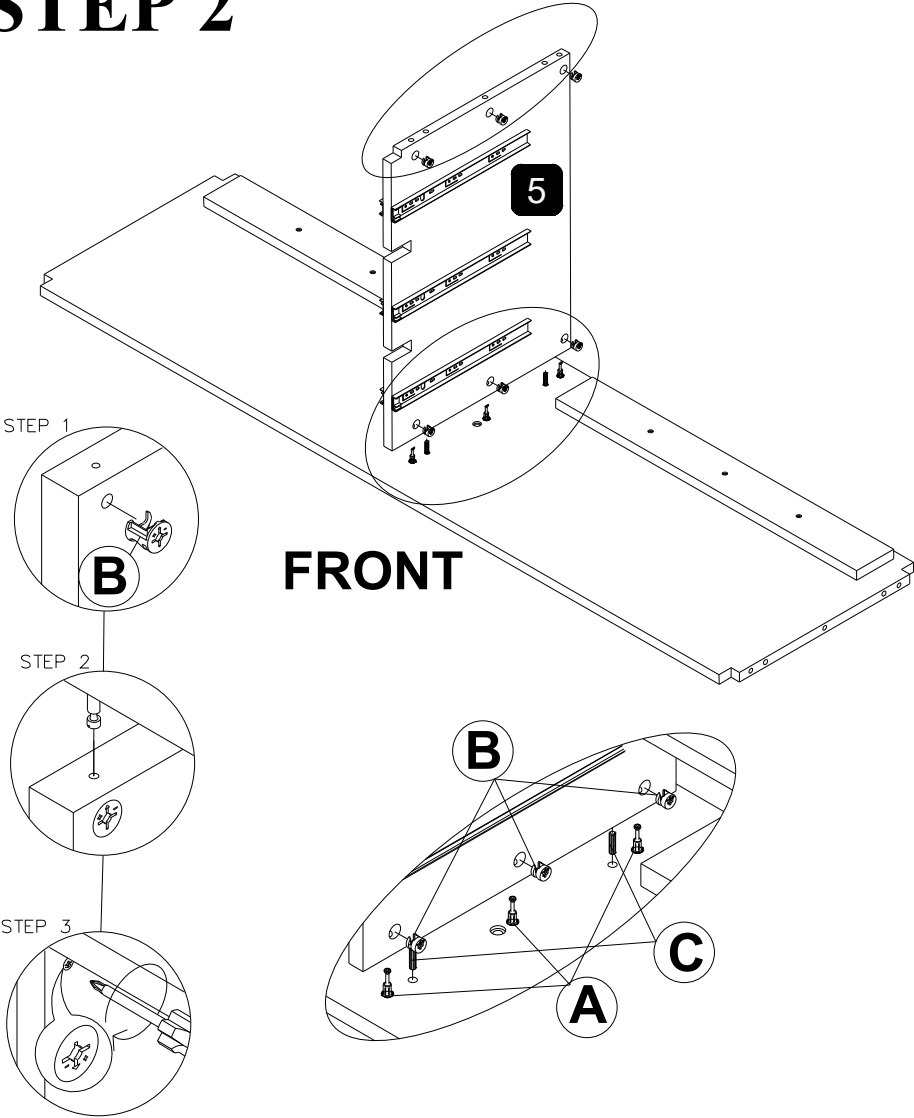

G X 1pc


H X 1pc

I X 1pc



A X 3pcs

B X 6pcs

C X 2pcs



STEP 3

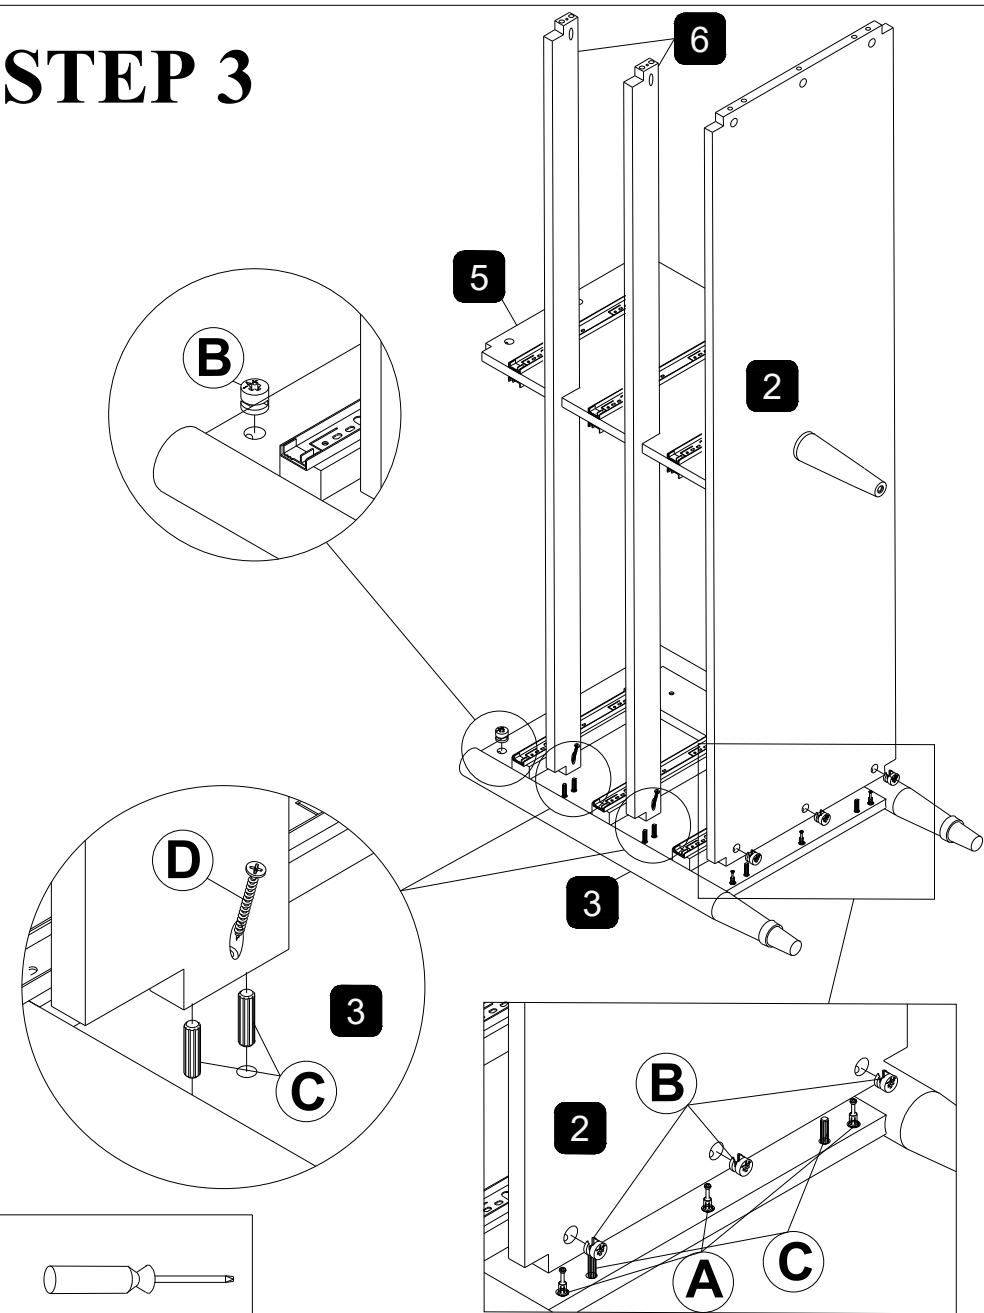



A X 3pcs

B X 6pcs

C X 6pcs

D X 2pcs

STEP 4

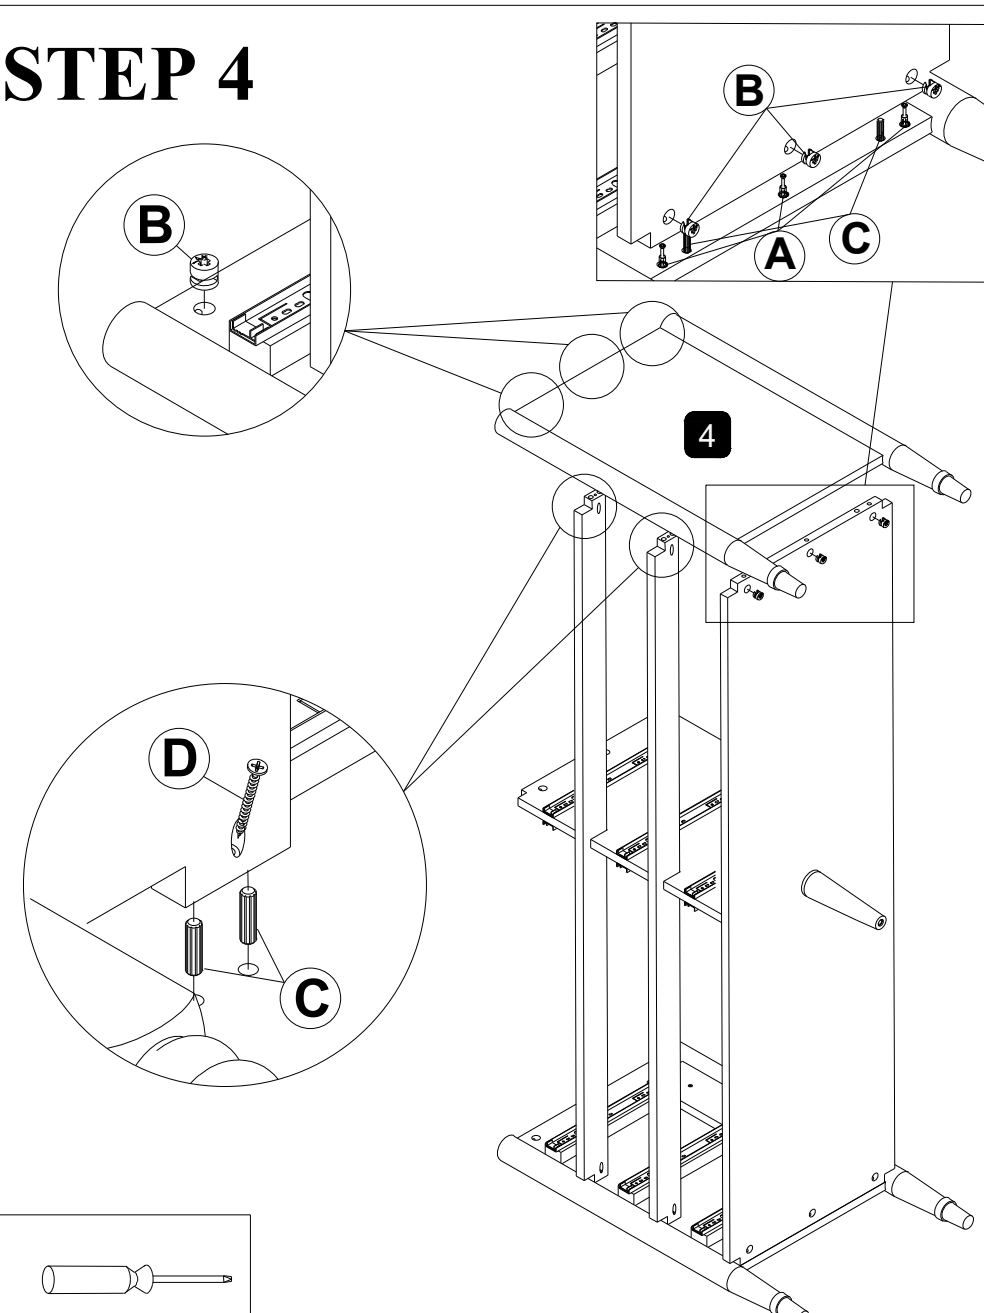






A X 3pcs

B X 6pcs



C X 6pcs

D X 2pcs

STEP 5

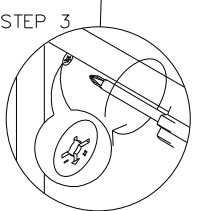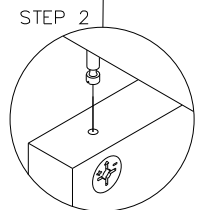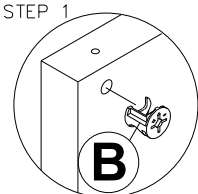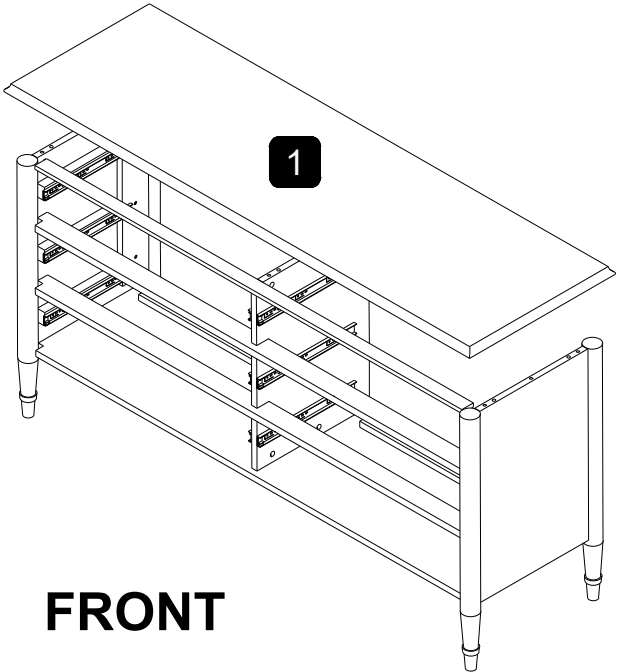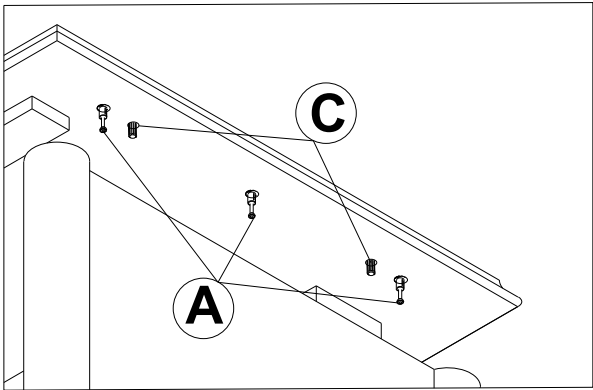


STEP 6

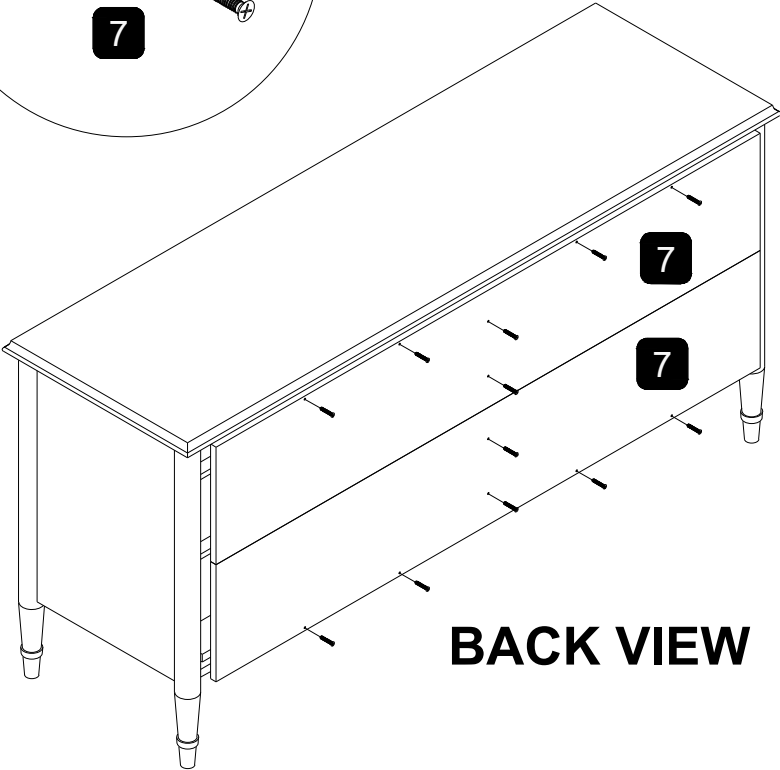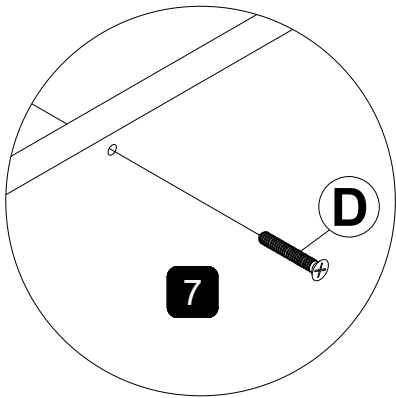

A X 9pcs




C X 6pcs



D X 12pcs


STEP 7



DRAWER X 6

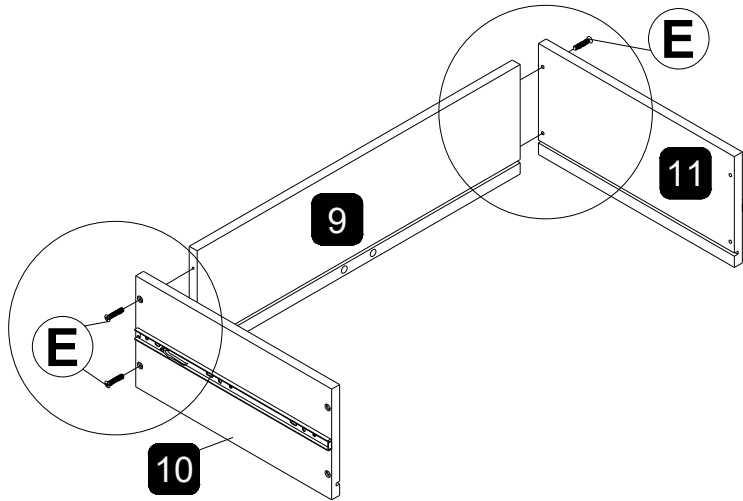

STEP 8


DRAWER X 6

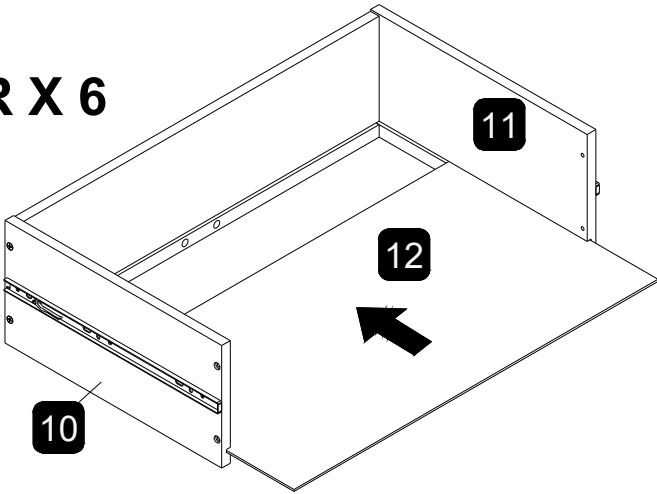

 E X 24pcs							
--	--	--	--	--	--	--	--

STEP 9



DRAWER X 6

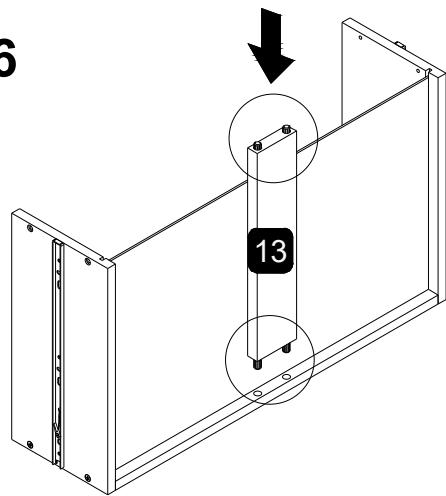

C X 24pcs

STEP 10

DRAWER X 6

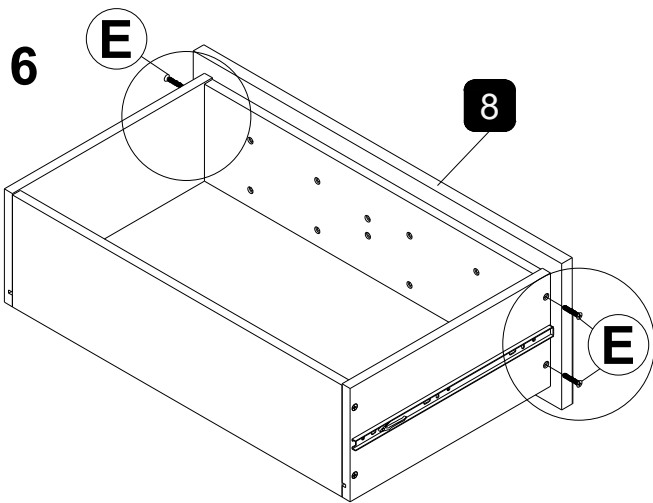


E X 24pcs




STEP 11


DRAWER X 6

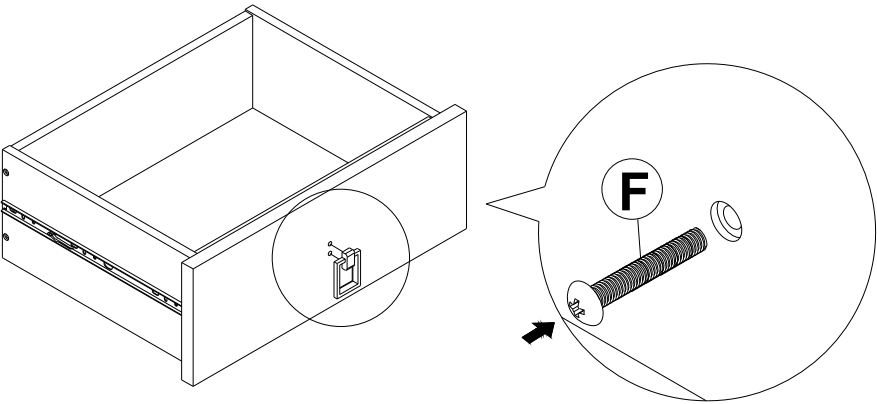

F X 6sets




STEP 12

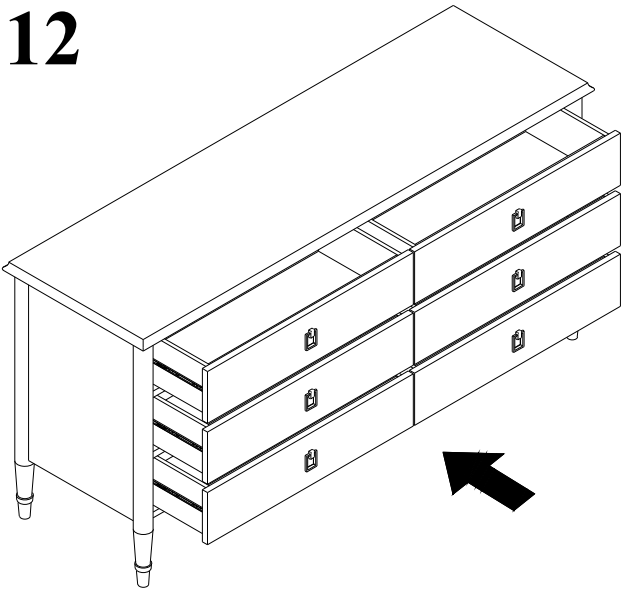

ASSEMBLY COMPLETE


**CONTINUE TO ASSEMBLY
ANTI TIPPING KITS**

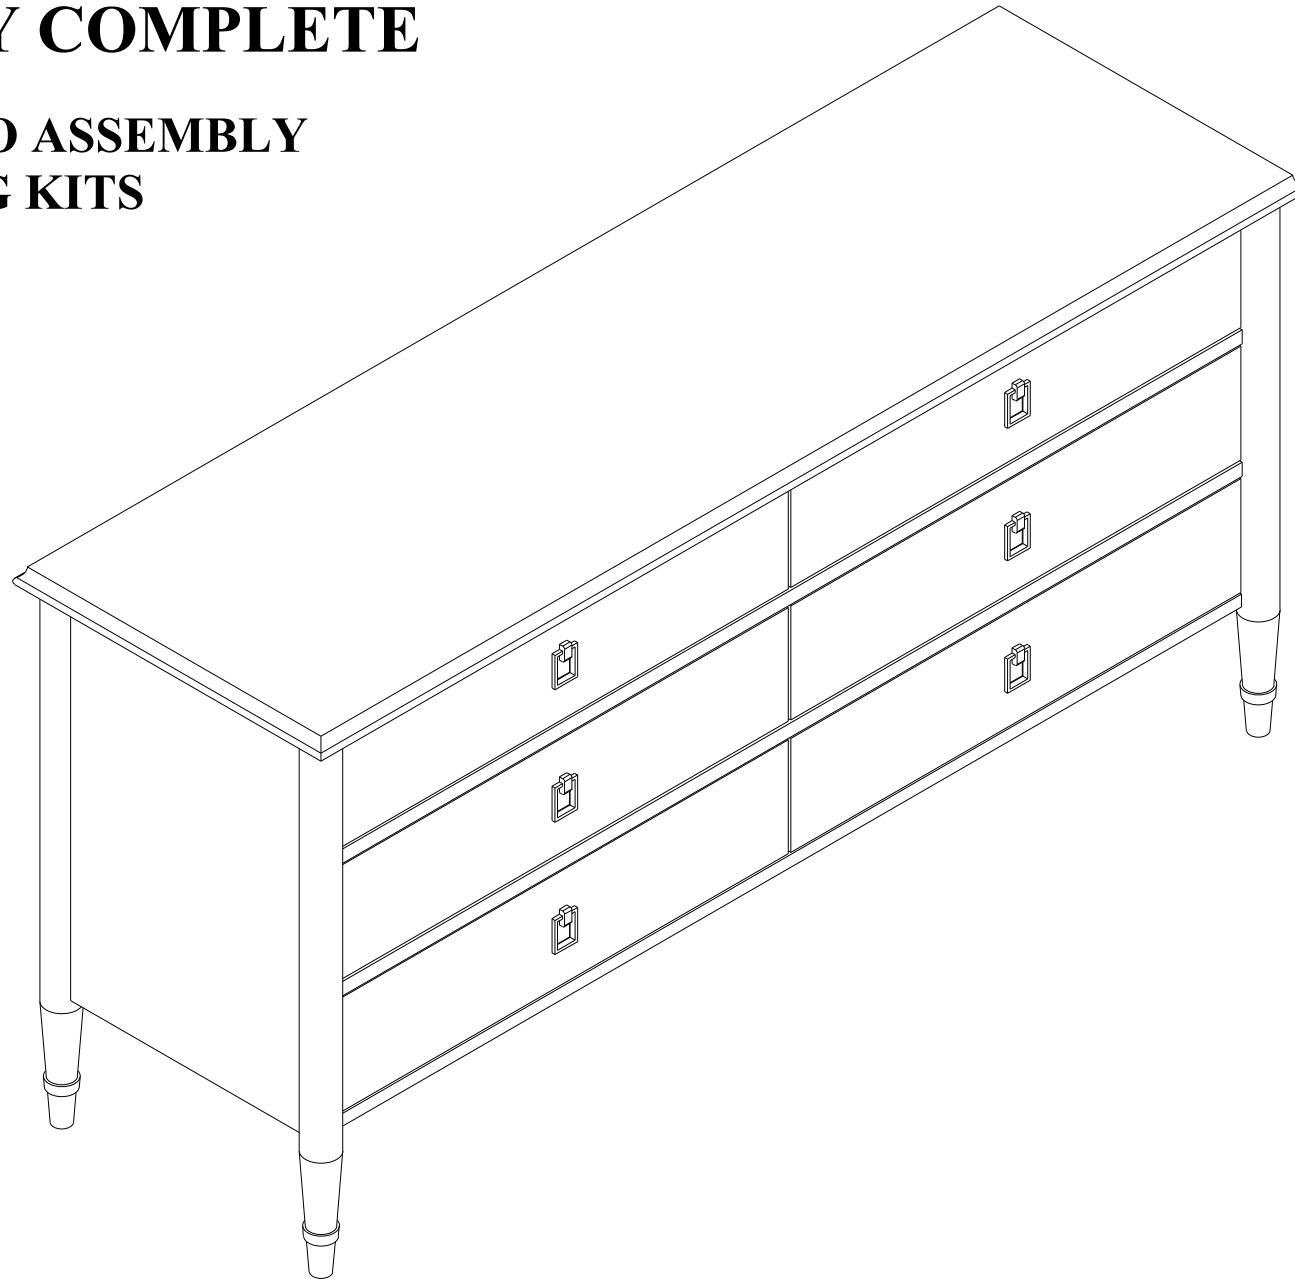

ASSEMBLY INSTRUCTION

SW 8000-90CH6D














REAR

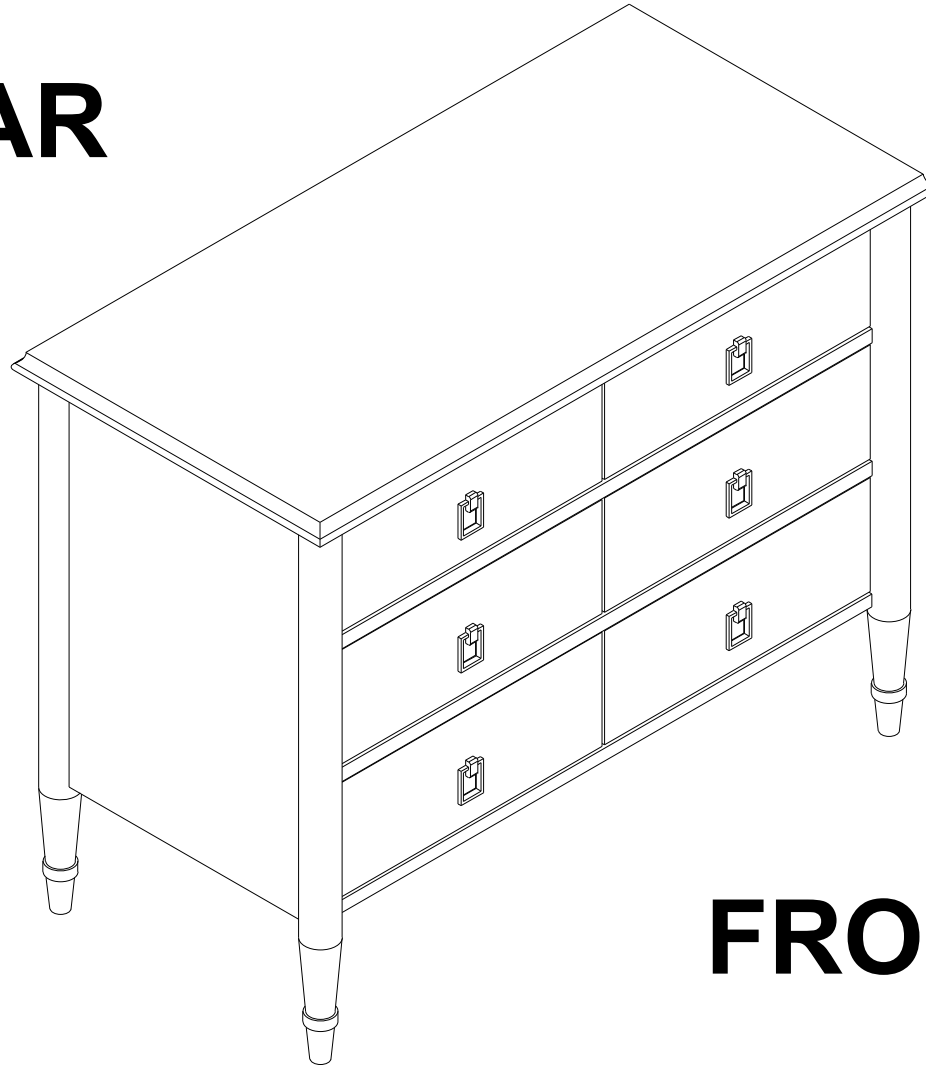







FRONT

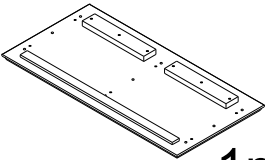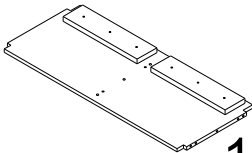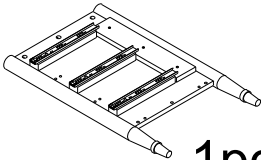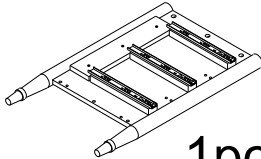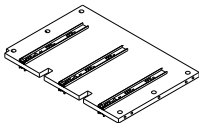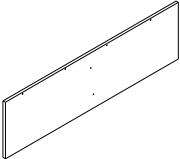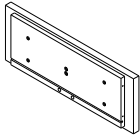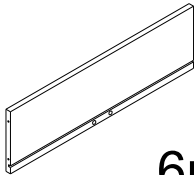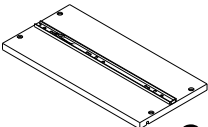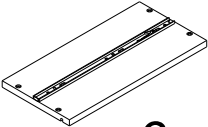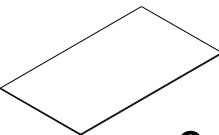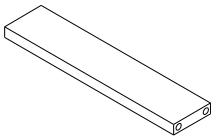


PART LIST

1 Top Panel  1pc	2 Bottom Panel  1pc	3 Side Panel(left)  1pc	4 Side Panel(right)  1pc	5 Division  1pc	6 Front Rail  2pcs
7 Back Panel  2pcs	8 Drawer Front Panel  6pcs	9 Drawer Rear Panel  6pcs	10 Drawer Side Panel(left)  6pcs	11 Drawer Side Panel(right)  6pcs	12 Drawer Base Panel  6pcs
13 Drawer Support Rail  6pcs					




HARDWARE LIST

A MINI FIX SPREADING BOLT 24MM  18pcs	B MINIFIX HOUSING Ø15*12MM  18pcs	C WOOD DOWEL M8*30MM  44pcs	D CSK SCREW M4*30MM  16pcs	E CSK SCREW M4*25MM  48pcs	F HANDLE  6sets
--	--	---	--	--	---

STEP 1

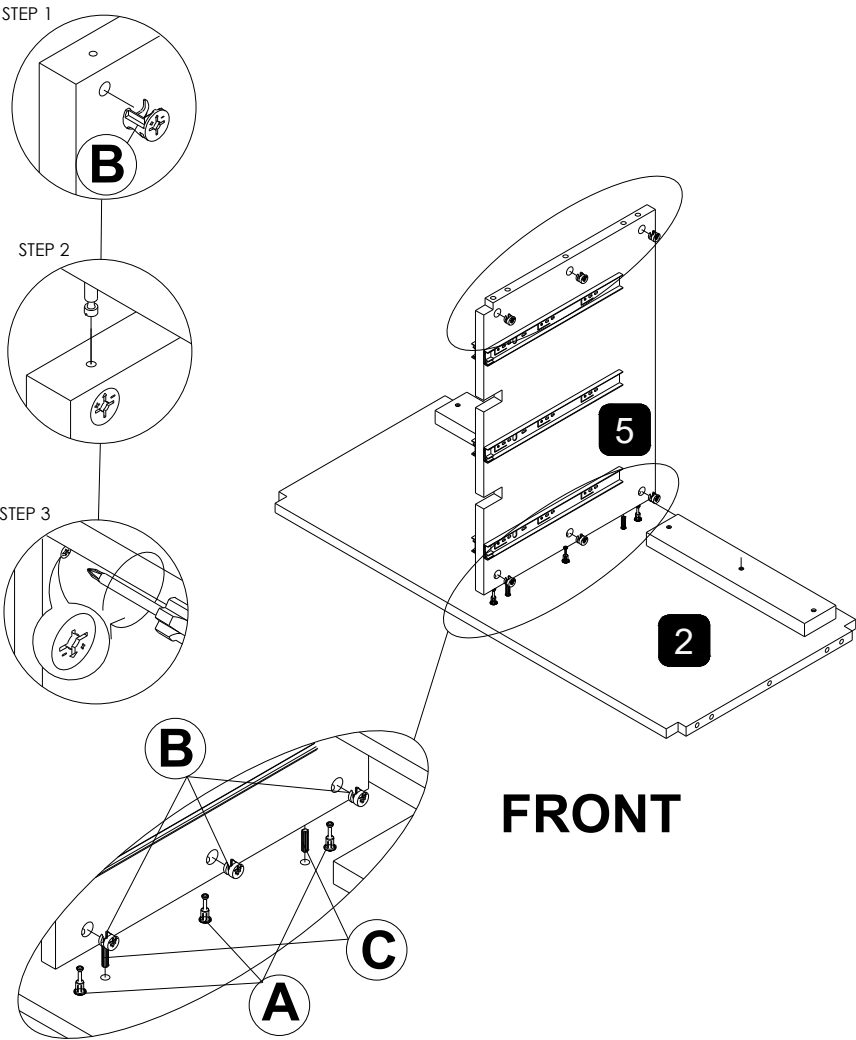

STEP 2

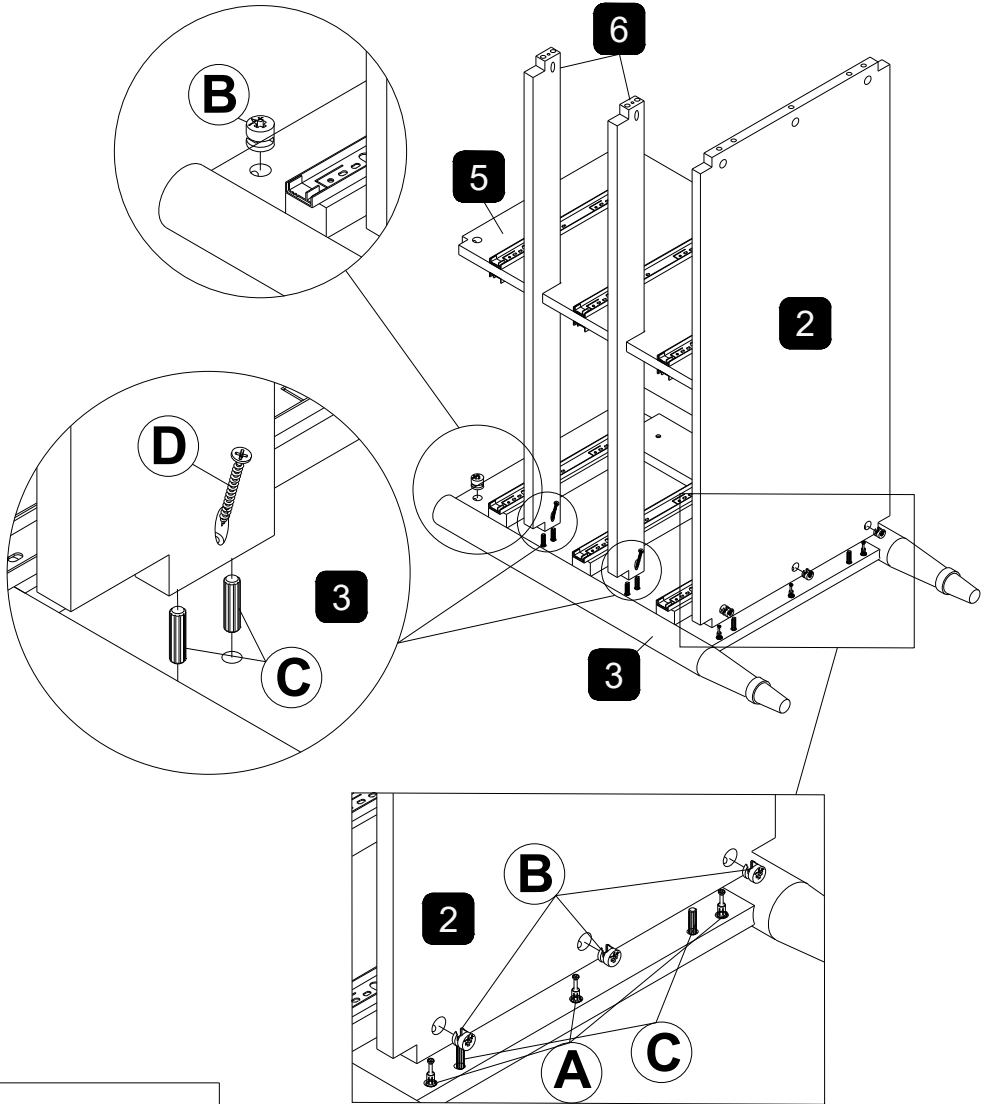

A X 3pcs



B X 6pcs





C X 6pcs



D X 2pcs

STEP 3

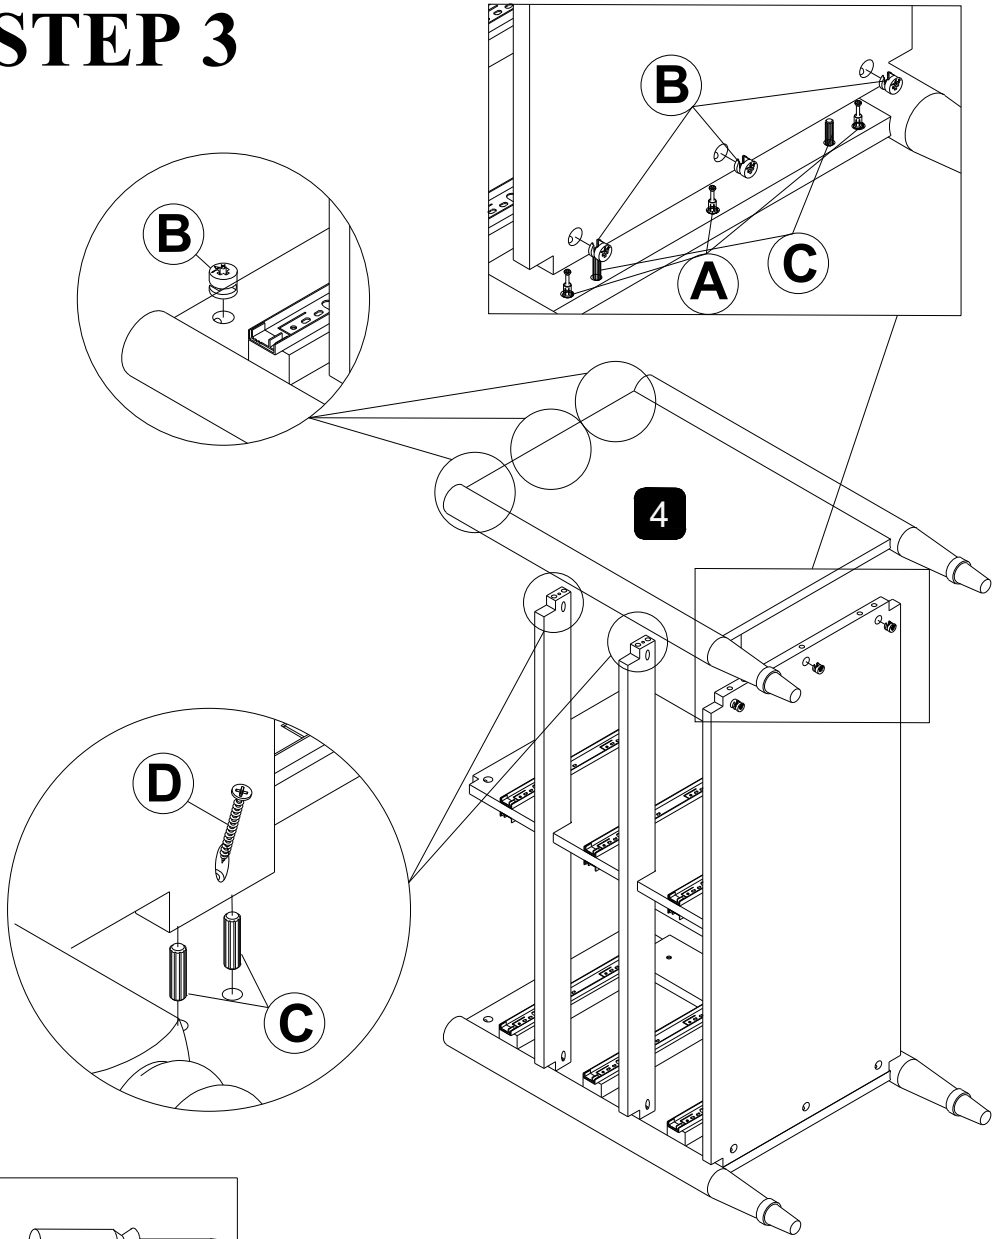





A X 3pcs

B X 6pcs

C X 6pcs

D X 2pcs

STEP 4

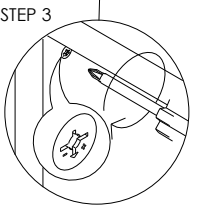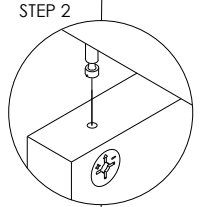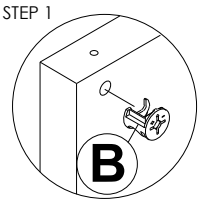
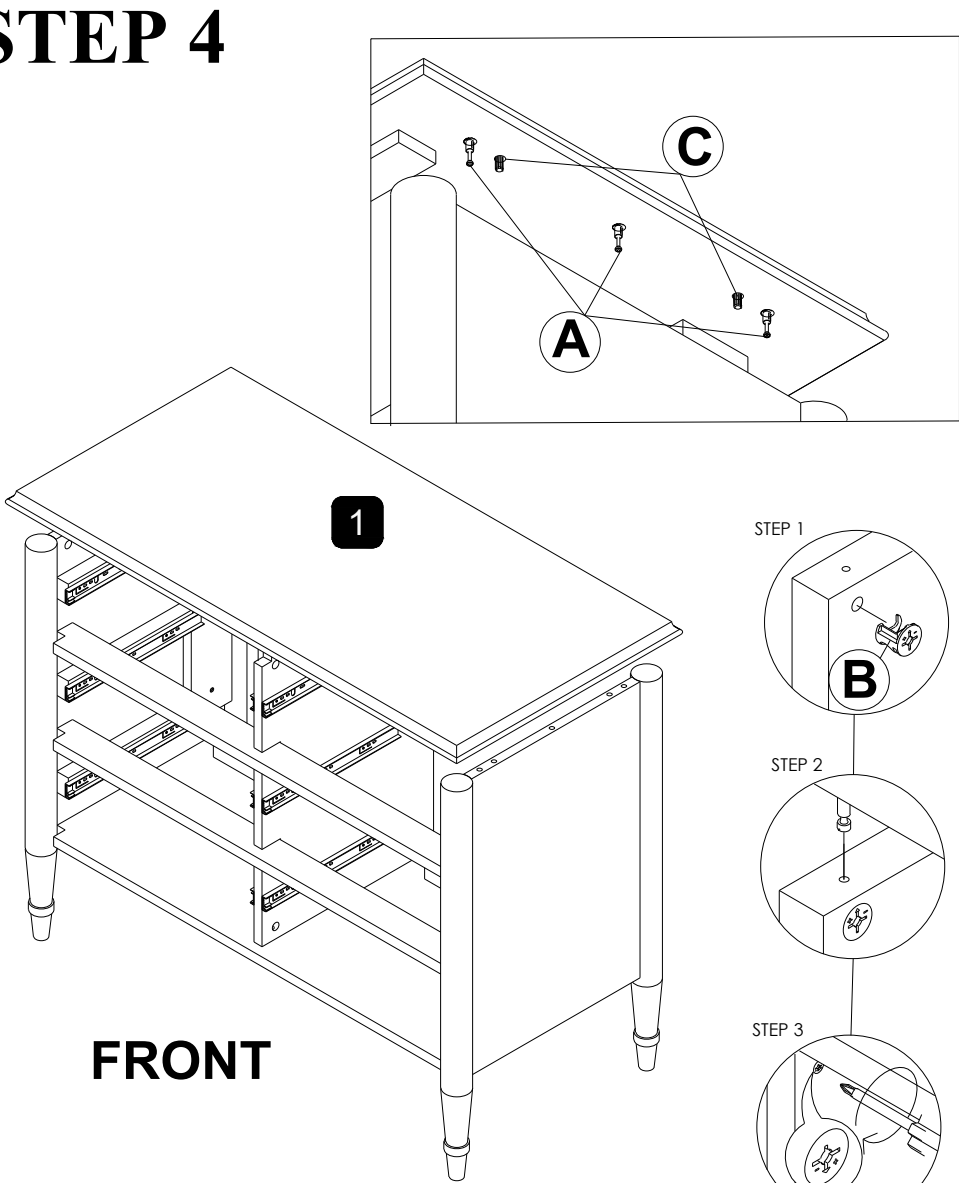


A X 9pcs

C X 6pcs




STEP 5


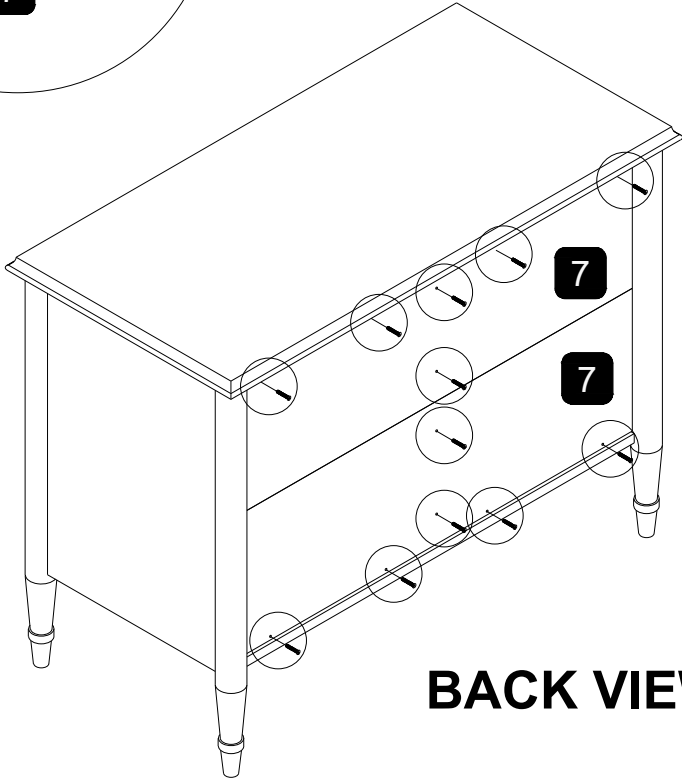
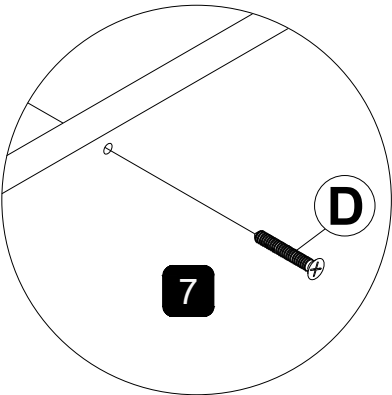



BACK VIEW

STEP 6


DRAWER X 6

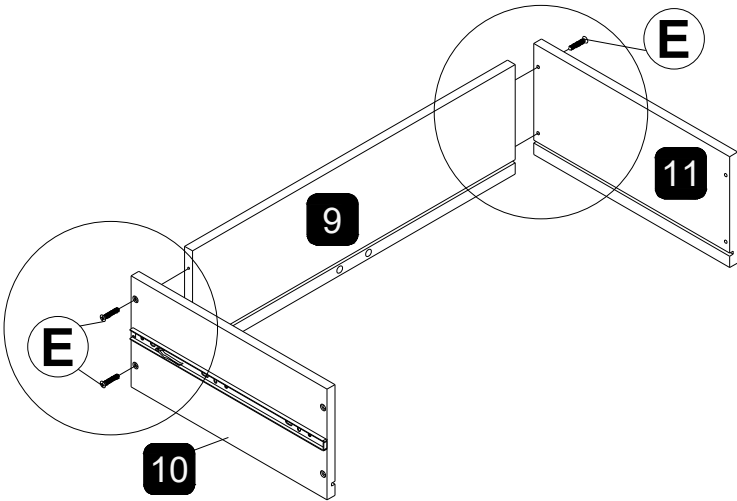

							
D X 12pcs				E X 24pcs			


STEP 7

DRAWER X 6

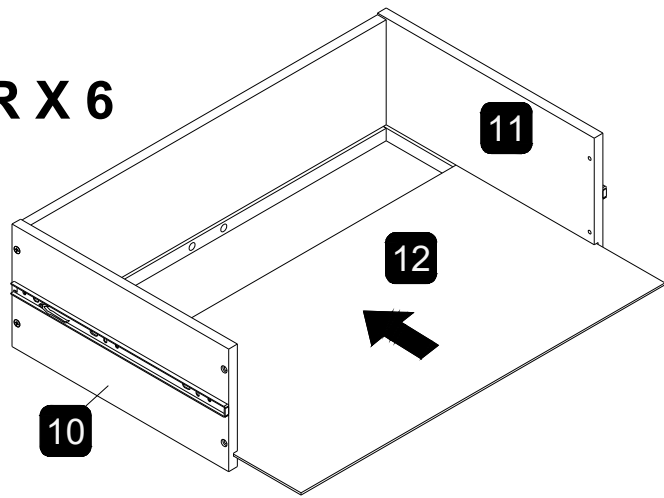


STEP 8

DRAWER X 6


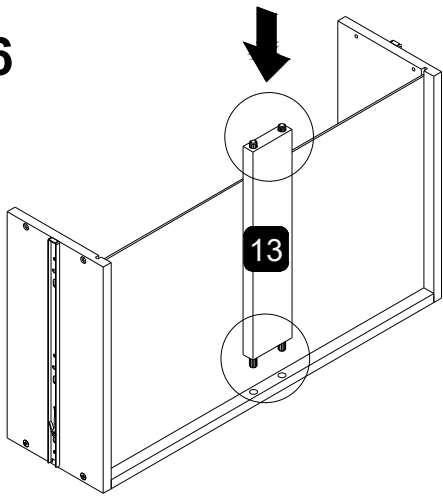


STEP 9

DRAWER X 6

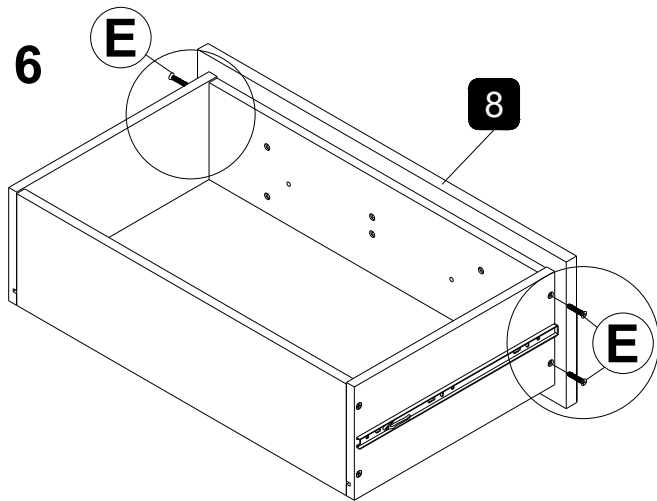

STEP 10

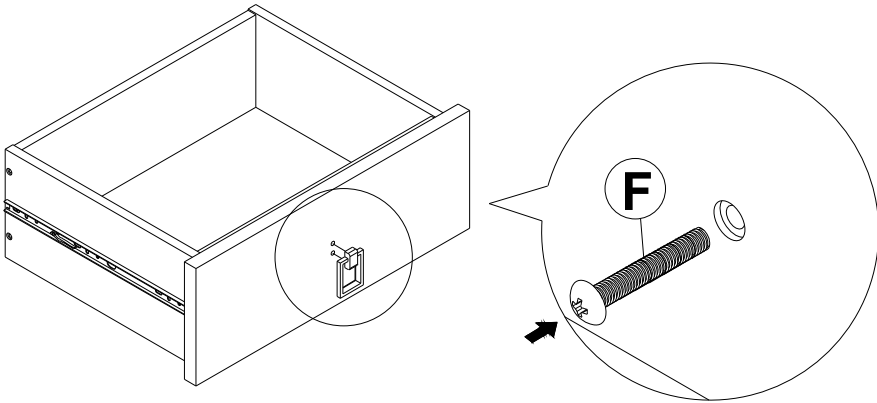


E X 24pcs



F X 6sets



STEP 11

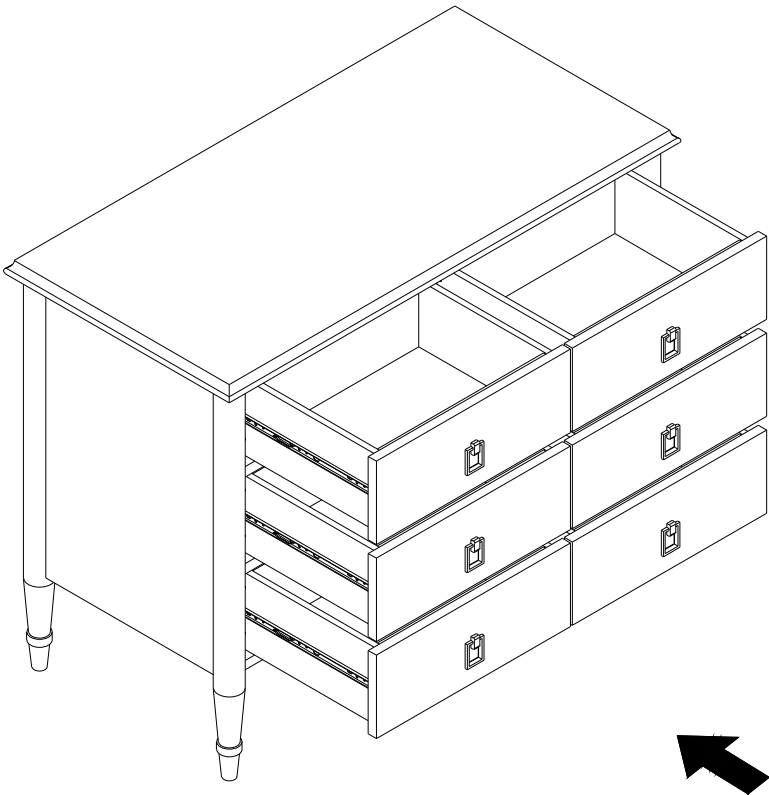

ASSEMBLY COMPLETE

CONTINUE TO ASSEMBLY
ANTI TIPPING KITS




--	--	--	--	--	--	--	--

ASSEMBLY INSTRUCTION

SW 8000-90NS














REAR

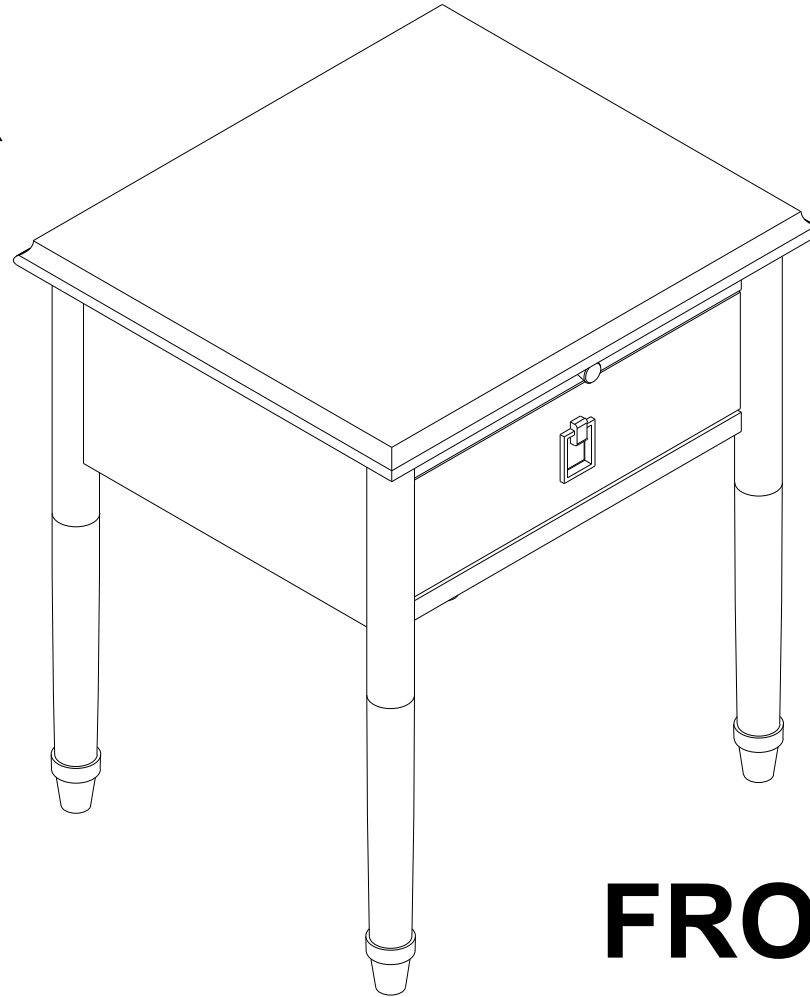









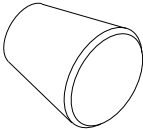




FRONT

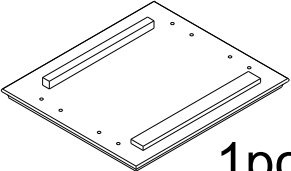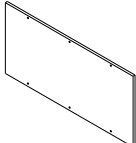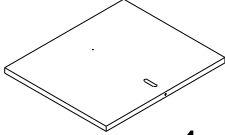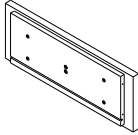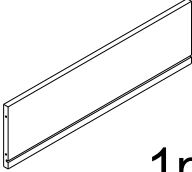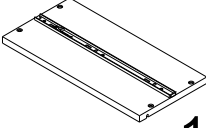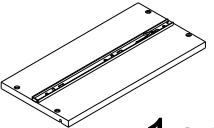


PART LIST

1 Top Panel  1pc	2 Side Panel(left)  1pc	3 Side Panel(right)  1pc	4 Center Rail  1pc	5 Support Rail  1pc	6 Rear Support Rail  1pc
7 Back Panel  1pc	8 Shelf Panel  1pc	9 Drawer Front Panel  1pc	10 Drawer Rear Panel  1pc	11 Drawer Side Panel(left)  1pc	12 Drawer Side Panel(right)  1pc
13 Drawer Base Panel  1pc					

HARDWARE LIST

A MINI FIX SPREADING BOLT 24MM  4pcs	B MINIFIX HOUSING Ø15*12MM  4pcs	C WOOD DOWEL M8*30MM  12pcs	D CSK SCREW M4*30MM  4pcs	E CSK SCREW M4*25MM  8pcs	F HANDLE 1   1set
G HANDLE 2   1set	H SHELF PIN  4pcs	I PAN HEAD M3.5*16MM  6pcs	J CSK SCREW M4*16MM  1pc	K STOPPER  1pc	

STEP 1

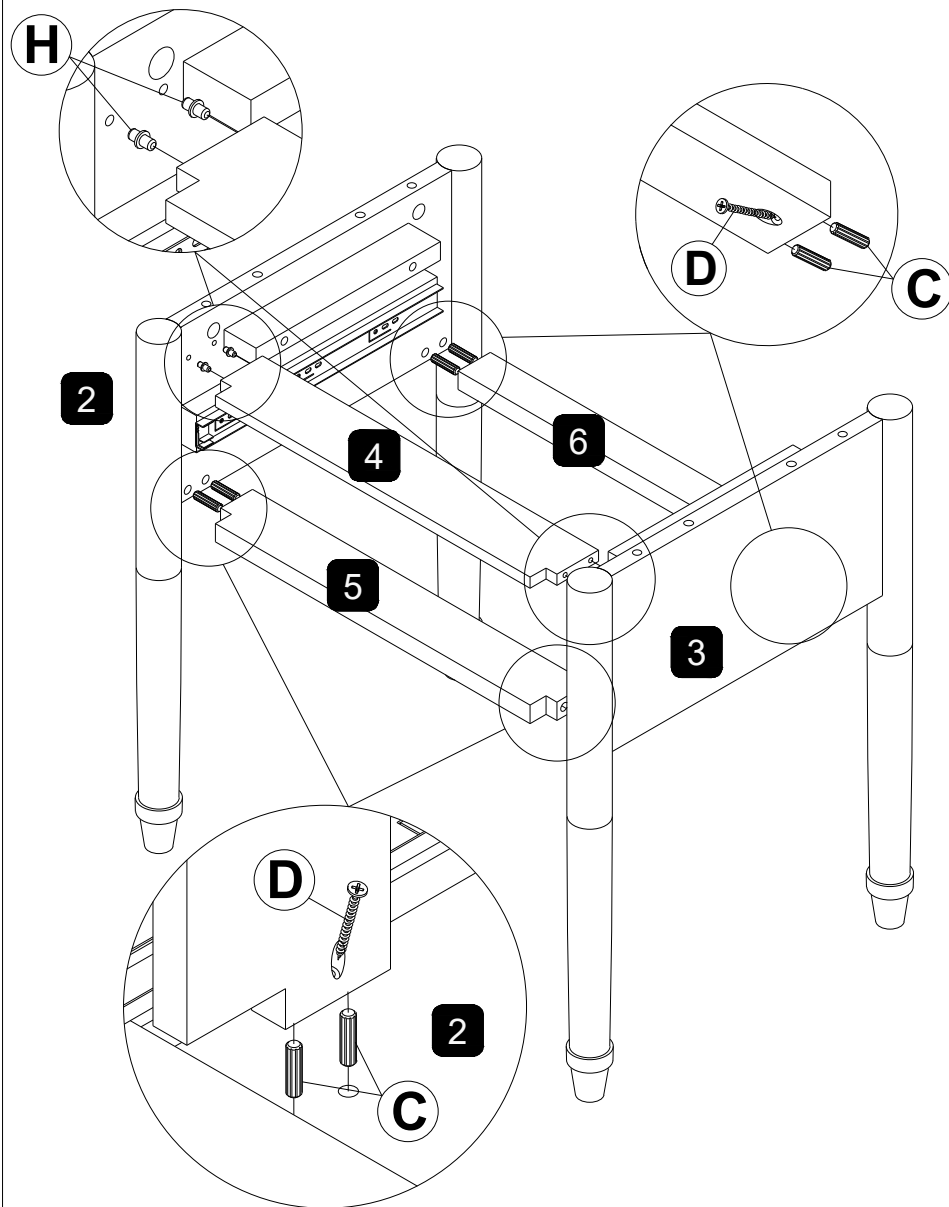


C X 8pcs


D X 4pcs

H X 4pcs

STEP 2

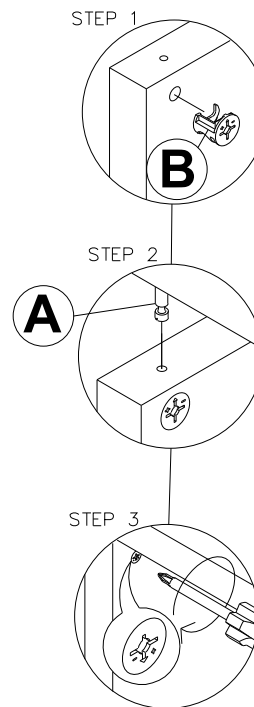

FRONT


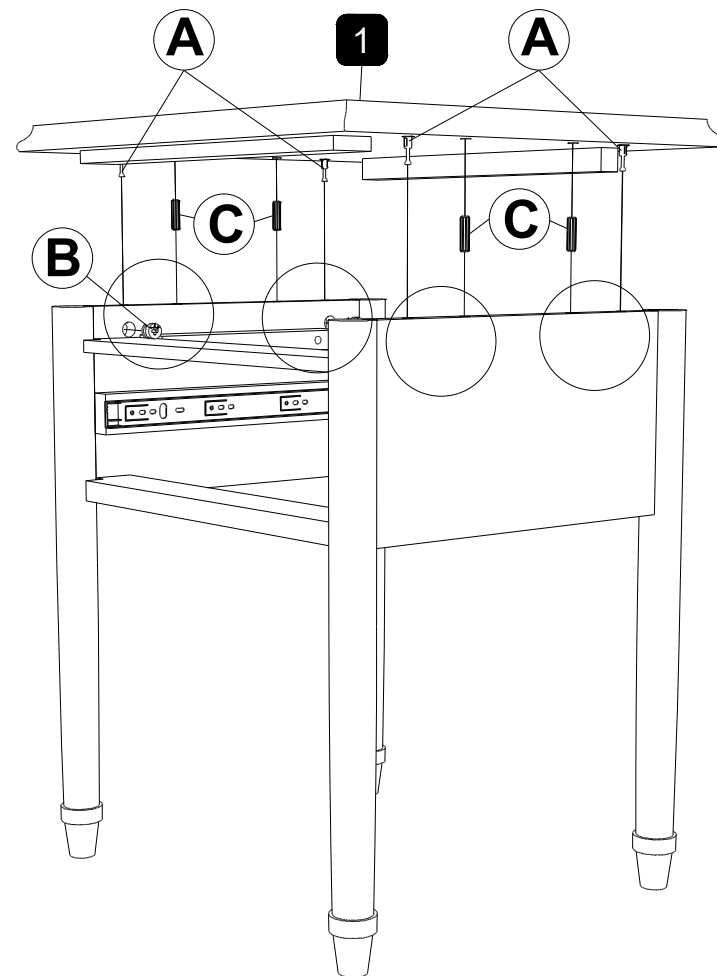


A X 4pcs

B X 4pcs



C X 4pcs

STEP 3

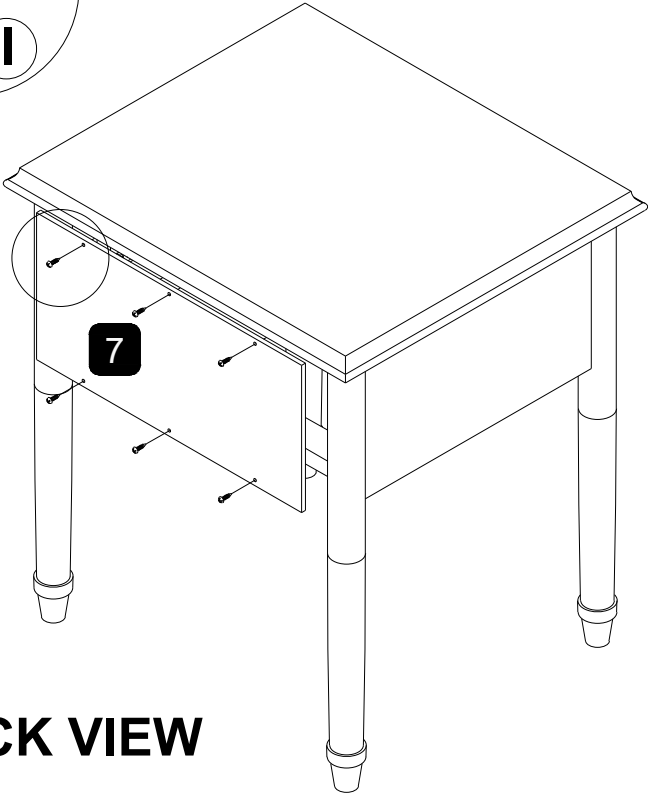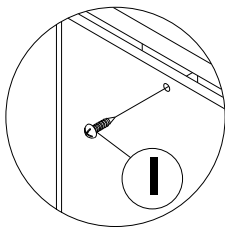

BACK VIEW


STEP 4

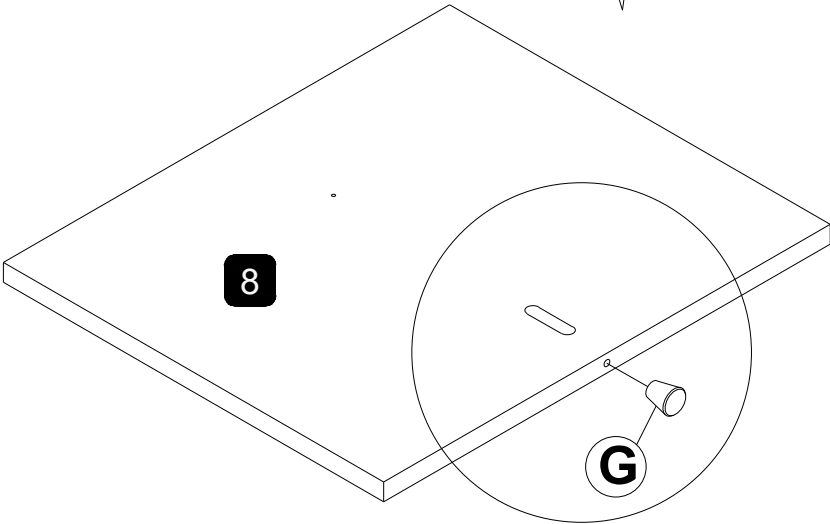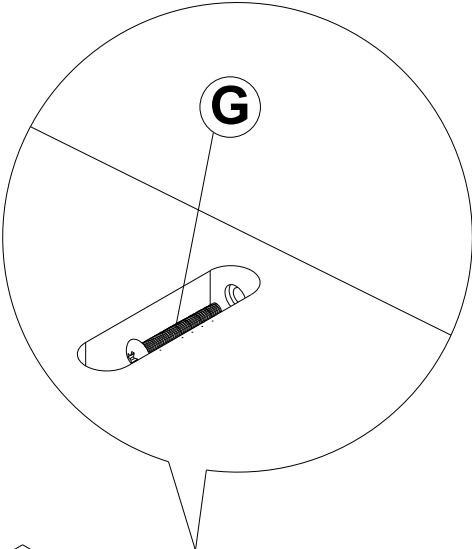



I X 6pcs





G X 1set

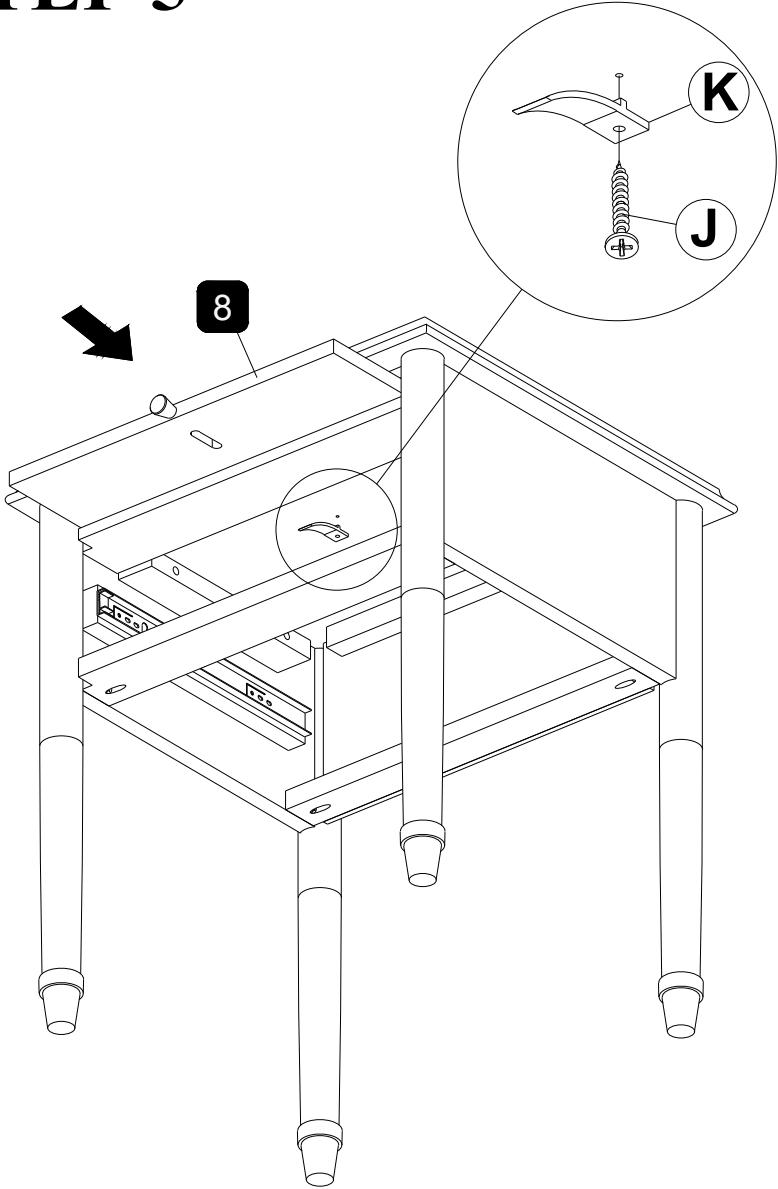STEP 5

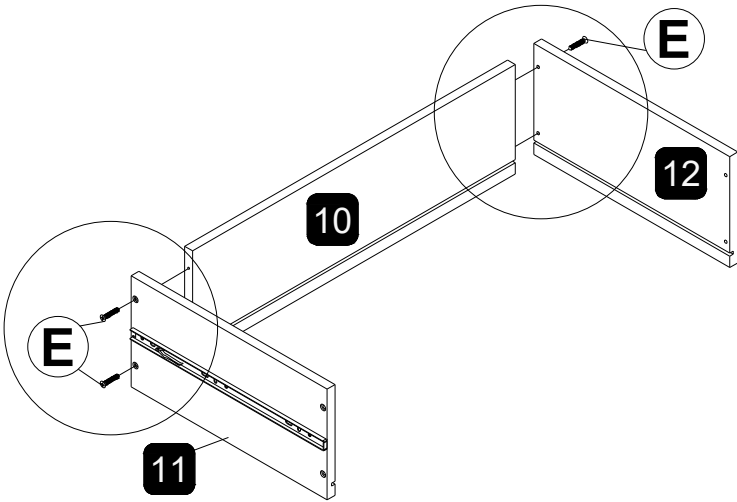


STEP 6




 J X 1pc	 K X 1pc			 E X 4pcs			
--	--	--	--	---	--	--	---

STEP 7

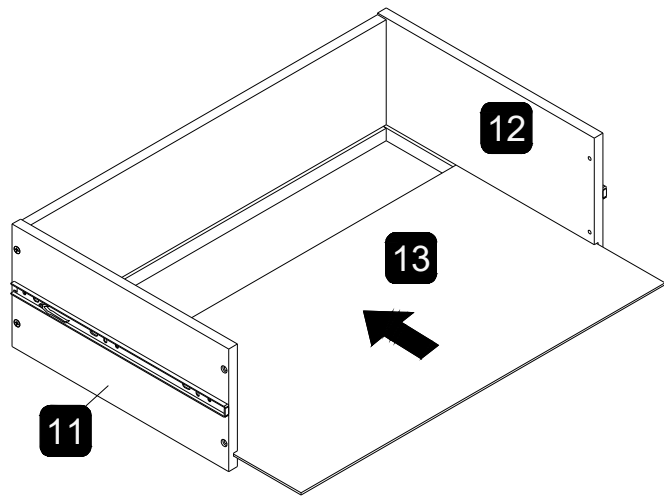


STEP 8

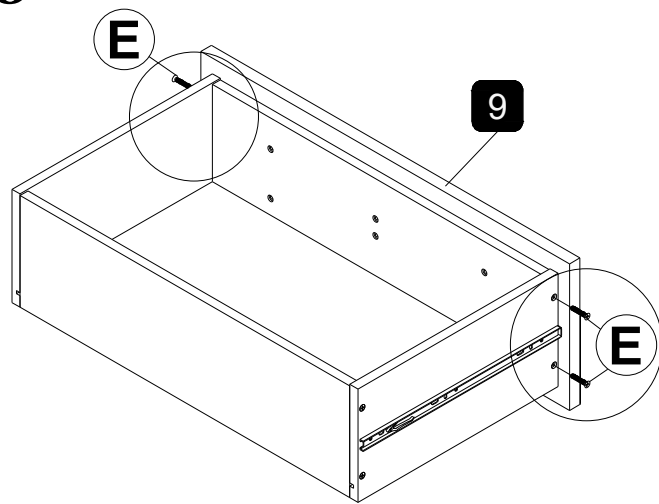


E X 4pcs


STEP 9

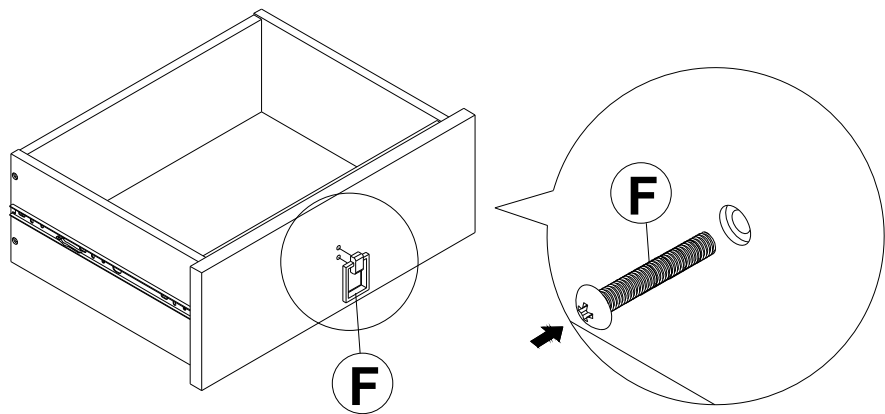

STEP 10

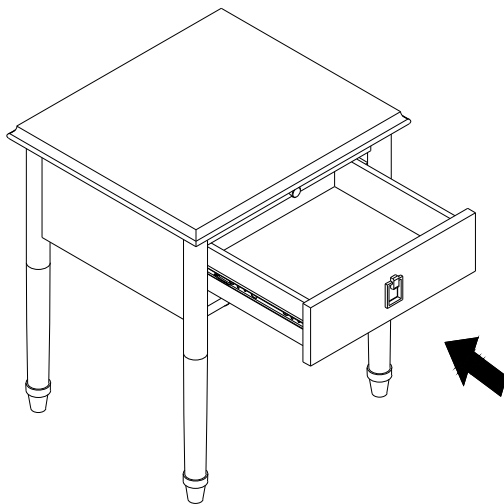

F X 1set



ASSEMBLY COMPLETE

