


9801 Full Headboard


Assembly Instructions

WI-0225


1 Parts List

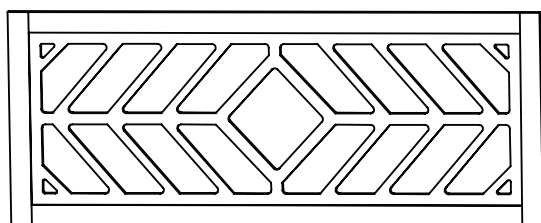


A
Headboard
Panel x 1



B
Support
Bars x 2

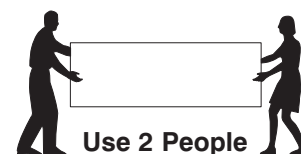

Use 2 People

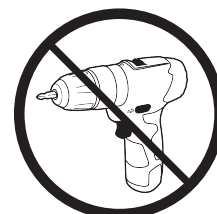

Note: Do not assemble
using power tools.
This can cause the bolts
to be overtightened

2 Hardware List



1 M6 x 35mm JCB
x 10



2 Spring Washer
x 10





3 Flat Washer
x 10



4 Allen Key
x 1

3 Assemble the Support Bars (B) to the Headboard Panel.

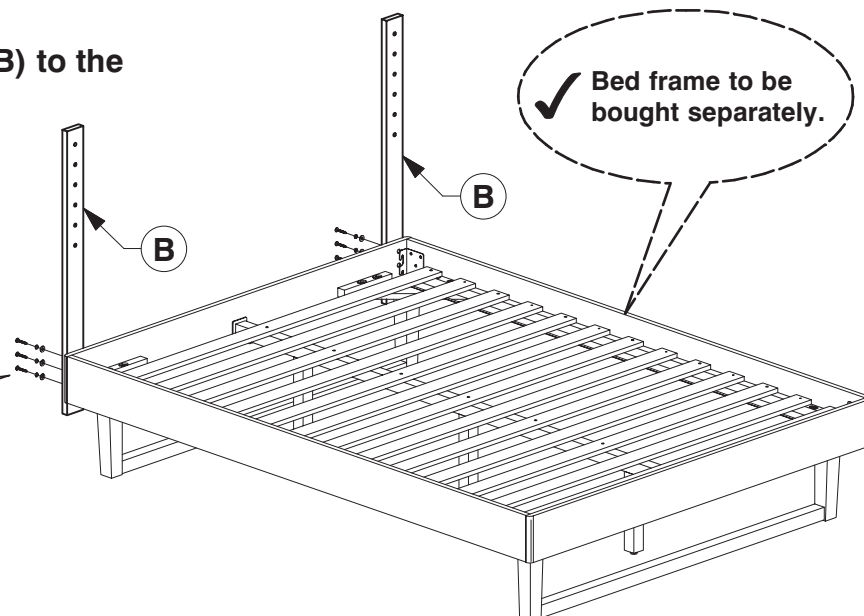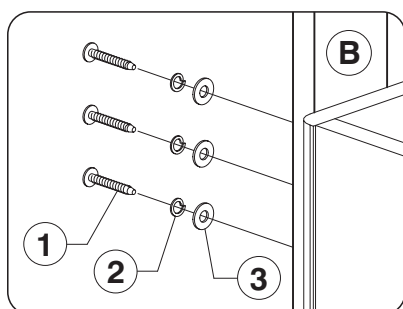

4 Assemble the Headboard Panel (A) to the Support Bars (B).

